

## Importing contact entries

You can import contact information by:

- Copying contacts stored on your SIM card.
- Transferring contacts from a computer application using the synchronize function.
- Transferring contacts from another phone using Bluetooth™ wireless technology.

## Updating software


When an improved software version for your phone is available, you can update the phone using the Sony Ericsson update Service on [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Sound

*To set the ear speaker volume during a phone call*


 
- Press the volume up and volume down keys.

*To set the volume for multimedia, alarm, ringtones and message alerts*

- 1 Select  > Volume.
- 2 Select the corresponding slider.
- 3 Adjust the volume using the stylus.

*To set the phone to silent*

- 1 Select  > Volume.
- 2 Mark the Silent mode check box.

 *From standby you can press and hold down  to switch silent mode on or off.*

**Transfer sound**

During an ongoing call or when listening to music, you can transfer the sound to a connected accessory such as a Bluetooth headset.

*To transfer sound*

- 1 Select  > Volume.
- 2 Select More > Transfer sound.

## Memory card

The phone has a slot for Memory Stick Micro™ (M2™) memory cards next to the connector. The phone supports up to 8GB memory cards. This memory

## Draft for Sony Ericsson Internal Use Only

behaves like a normal disk drive. You can access it as a USB mass storage device from a PC, to transfer files quickly.

### *To insert the memory card*

- Insert the memory card into the slot.



### *To remove the memory card*

- Press the edge of the memory card and then release it.




- ! Do not remove the memory card during file transfer.

## Notes


You can take notes by entering text or draw sketches, and set reminders for important events.

### *To create a new note*


- 1 Press  and select **New**.
- 2 Use the toolbar to create your note.
- 3 Select **File** to classify your note.

## Notes toolbar icons


---

 Scribble mode selected. Select to switch to text mode


---

 Text mode selected. Select to switch to scribble mode


---

 Use the stylus as an eraser for sketches

---



 Select a background colour

---

 Set a reminder

---


### *To edit a note*

- 1 Press  and select a note.
- 2 Edit the text by switching to text mode.
- 3 Edit the sketch by switching to scribble mode. Select  to use the stylus as an eraser.


## Managing your notes

You can classify your notes, show them in a grid or a list, or synchronize them with a remote server.


### *To change notes view*

- 1 Press  and select [More > Settings](#).
- 2 Select an option.

### *To view different notes folders*

- 1 Press  and select [More > View folder](#).
- 2 Select an option.

 
### *To search for notes*

- 1 Press  and select [More > Find](#).
- 2 Enter the search phrase and select [Find](#).

### *To synchronize your notes*

- Select [More > Notes manager > Synchronize](#).
- ! Only the text part of your notes will be synchronized.
- ! You need a remote synchronization account first. For more information, see the [Web guide](#), [Synchronizing data remotely](#).

## Connecting accessories

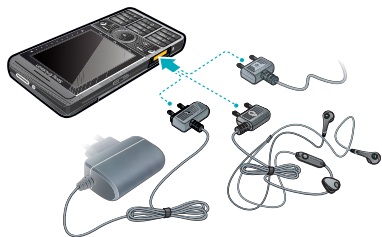

### *To connect an accessory*

- Connect the accessory to the side of your phone.

! Tilt the plug upwards when you disconnect the accessory.

## Entering text

You can enter text by using the keypad, handwriting recognition or on-screen keyboard.

### Entering text using the keypad

You can enter English by using keypad prediction or multitap:

- Keypad prediction – enter words by a single press of a key to input any of the characters associated with that key.
- Multitap – enter latin letters by pressing a key containing the letter, until the desired letter appears. You can enter Chinese characters by using Pinyin or Stroke:
- Pinyin – enter Chinese characters by pressing the keys containing its Pinyin letters.
- Stroke – enter Chinese characters by pressing the keys containing its strokes. Strokes are grouped into five categories and represented by

1 1234567890\* - 5 JKL .


### *To switch between keypad prediction and handwriting recognition*

- Press and hold down .

### *To switch input languages*

- Press and hold down .

### *To switch between upper case and lower case*


- 1 Select English as the input language.
- 2 Press .

## *To enter the word "large" using keypad prediction*

- 1 Switch to keypad prediction mode.
- 2 Select English as the input language.
- 3 Enter word "large" by pressing  ,  ,  ,  ,  .
- 4 Select the word "large" from the candidate list.

## *To enter the word "large" using multitap*

- 1 Switch to handwriting recognition mode.
- 2 Select English as the input language.
- 3 Enter letter "l" by pressing  three times.
- 4 Enter letter "a" by pressing  once.
- 5 Enter letter "r" by pressing  three times.
- 6 Enter letter "g" by pressing  once.
- 7 Enter letter "e" by pressing  twice.

 You cannot use multitap under keypad prediction mode.

## *To switch between Chinese input methods*

- 1 Select Chinese as the input language.
- 2 Press  .

## *To enter "信息" using Pinyin input*

- 1 Select Chinese as the input language.
- 2 Select Pinyin as the input method.
- 3 Enter "xin" by pressing  ,  ,  .

- 4 Select "xin" using the navigation key, and then select "信" from the candidate list.
- 5 Enter "xi" by pressing , .
- 6 Select "xi" using the navigation key, and then select "息" from the candidate list.

 
*To enter "信息" using Stroke input*


- 1 Select Chinese as the input language.
- 2 Select Stroke as the input method.
- 3 Enter "丿", "丨" and "丶" by pressing , , .
- 4 Use the navigation key to select "信".
- 5 Enter "丿", "丨" and "冫" by pressing , , .
- 6 Select "息" from the candidate list.

*To enter "互" using the wild card key*

- 1 Select Chinese as the input language.
- 2 Select Stroke as the input method.
- 3 If you only know that "一" is the first and the last stroke of the character "互" and that the total number of strokes is four, enter , , , .
- 4 Select "互" from the candidate list.

## To enter symbols

- 1 Open the symbol table by pressing .
- 2 Use the navigation key to select a symbol.

! This function is not available when you are under number input mode .

 
## Entering text using handwriting recognition

Handwriting recognition translates stylus gestures written directly on the screen into letters, numbers or other characters, and displays these characters as text.

For more information, see *To switch between keypad prediction and handwriting recognition* on page 22.

💡 You cannot use keypad prediction under handwriting mode.

The handwriting input mode screen consists of an upper and a lower part divided by an arrow in the middle on the right edge.

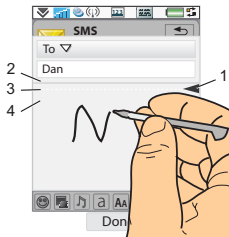

- 1 – arrow that splits the text mode screen into an upper part and a lower part.
- 2 – area to write the digits and symbols.
- 3 – area to write upper case letters and Chinese characters.
- 4 – area to write lower case letters and Chinese characters.

 
! Most letters can be written through different stroke patterns. The upper case and lower case depend on the location on the screen, and are unrelated to the pattern.


## To write Chinese characters

- 1 Select Chinese as the input language.
- 2 Write Chinese characters below or in line with the arrow. You can select characters from the candidate word list.

## To write Chinese punctuation

- 1 Select Chinese as the input language.
- 2 Write Chinese punctuation below or inline with the arrow.

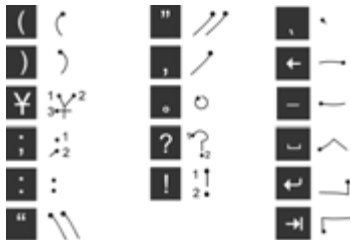

 Start each stroke at the dotted end.

## To write latin letters

- 1 Select English as the input language.
- 2 Write lower case letters below the arrow; upper case letters in line with the arrow.

 




# Draft for Sony Ericsson Internal Use Only

 
## To write numbers

- Write numbers above the arrow.

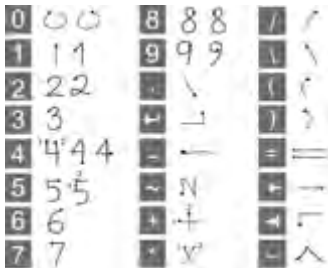

## To write accented letters

- 1 Select English as the input language.
- 2 Write the basic letter, then write the accent to form the accented letter. For example, to enter character "à", write "a" below the arrow, followed with a backward slash "\" above "a".




- ! You can only write accented characters under Single-character recognition.

## To write extended characters

- 1 Select English as the input language.
- 2 Draw a slash mark "/" from bottom up, followed with an extended character below the arrow. For example, to input "%", write "/%" below the arrow.



- 💡 You can also tap symbol icon  and select often-used symbols using your stylus.

## *To use special gestures*

- Use special gestures to perform functions like deleting characters and entering spaces.



Switch between single-character and multi-character recognition.



Switch between Chinese and English input languages.



Cut highlighted text.



Copy text.



Paste text.



Undo an action.

- ! For more information on how to highlight text, go to *To highlight the text with the stylus* on page 28.

## *To use multi-character recognition*

- 1 Switch to multi-character recognition by drawing .
- 2 You can enter several characters at one time. For example:
  - Write one English word like "hello" under English input mode.

- Write several Chinese characters like "你好" under Chinese input mode.
- Write several digits like "12345678" under any input mode.

## Entering text using on-screen keyboard

The on-screen keyboard enables you to select characters and symbols with the stylus. The on-screen keyboard can be set to different languages.

### *To use the on-screen keyboard*

- 1 Tap the on-screen keyboard icon located in the status bar.
- 2 Use your stylus to use the on-screen keyboard.

## Editing text

When in text entry mode, you can select [More > Text options](#) to find more options.

- ! You need to highlight text first before using copy or cut functions.

### *To highlight the text with the stylus*

- Hold the stylus at the end of the text for a short while then drag the stylus across the text.

### *To activate word suggestion*

- When in text entry mode, select [More > Text options > Word suggestions](#).

# Calling

## Networks

### Network coverage

To make or receive a phone call your phone must be within range of a network.

### Network settings


You can set how your phone should choose an available network when you are outside your operator's coverage area. From standby you find the settings in [Menu > Settings > Connectivity > Mobile networks](#).

## Making a call

### *To make a call from Standby*

- Enter the phone number (including the area number) on the keypad and select [Call](#).

### *To make an international call*

- 1 From Standby press and hold down  to get the international call prefix.
- 2 Enter the country/region code, area code (without the first zero) and phone number.
- 3 Select [Call](#).

### *To delete characters when dialling*

- When entering a number you can delete characters by pressing



### **Hide or show your phone number**

When calling, you can choose in the [More](#) menu whether to show or hide your phone number to the called party.

### Speed dial

You can save up to nine of your contacts as Speed contacts. This means that you can call them using abbreviated numbers (numbers 1 – 9).

### *To set a speed contact (number)*

- 1 From standby select [Menu > Organizer > Speed contacts](#).
- 2 Scroll to an empty position and select [Add](#).
- 3 Select a contact in the list and select [Save](#).

### *To make a call to a speed contact*

- 1 From Standby press one of the keys 1 to 9 that corresponds to the stored speed contact.
- 2 Select [Call](#).

## *To make an emergency call*

- 1 From Standby, enter the emergency number on the keypad.
- 2 Select **Call**.

## **Local SOS numbers**

When dialling, you can find local SOS numbers in the **More** menu.

- ! *Usually no SIM card or PIN code is required for emergency calls, but this can be operator-dependant. Contact your operator for more information.*

## **Receiving a call**

### *To answer a call*

- Select **Yes**.

### *To reject a call with busy tone*

- Select **No**.

## **Rejecting a call with an SMS text message**

This feature means that you can reject a call by sending a pre-defined SMS text message to the caller. Before you use it, enter the settings from standby in **Menu > Settings > Calls > Reject with SMS**. (You will be charged by your operator for the SMS message.)

## *To enable the speakerphone*

- During a call, select **More > Speakerphone on**.

## *To mute the microphone (shortcut)*

- During a call, press and hold down .

## *To un-mute the microphone (shortcut)*

- When the microphone is muted, press .

## *To mute the ringtone*

- Select **Mute** or press .

## **Handling two or more calls**

You can handle multiple calls at the same time:

- Put an ongoing call on hold and start a new one, or answer an incoming call.
- Start a conference call during an ongoing call (operator-dependent).
- Extract one party in a conference call for a private talk and put the conference call on hold.
- Retrieve a held call, or end it.

## Conference call

You can start a conference call if you have one active call and one on hold. The maximum number of conference parties is five.

### *To make a conference call*

- 1 Make a call and select [Hold](#).
- 2 Repeat the above step for each party.
- 3 Select [More > Start conference call](#).

## Call log

In the call log you can find call information, such as the type of call, time, date, phone number and call length. From Standby select [Calls](#) to open it. You can also make a call or a call note directly from this application.

## Handsfree

If you connect a handsfree or a Bluetooth <sup>TM</sup> headset to your phone, you will need to set how to answer an incoming call. From standby select [Menu > Settings > Calls > Handsfree](#).




## More features

Some of the features that your phone supports can be found in [Menu > Settings > Calls](#):

- Accept calls – caller filter.
- Add to contacts – add contact data from the last call.
- ALS – line settings, if your SIM card supports two lines.
- Call meter – service to keep track of your call costs.
- Calling cards – call via a calling card server.
- Call waiting – option to get alerted if there is another call on the line.
- Divert calls – divert calls to other numbers.
- Fixed numbers – only special numbers can be called.
- Flag call – reject a call and set a reminder to follow it up later.
- My number – option to save your own number.
- Restrict calls – options to set roaming and international call restrictions.
- Textphone accessory – use of a teletype writer.
- Voicemail – “answering machine”.



- Voice control – you can call and answer with voice commands.

 Many of these features are operator-dependent and may not be available. For more information about these, and other features, see *Calling and Settings in the Web guide*.

## Using contacts

### *To make a call using Contacts*

- 1 From standby select **Menu > Contacts** and scroll to the desired contact.
- 2 Select **View** to open the entry.
- 3 Scroll to the desired phone number and select **Call**.

 You can also press  on the 5-way navigation key to open **Contacts**.


### *To find service numbers on the SIM card*

- 1 From standby select **Menu > Contacts**.
- 2 Select **More > View folder > SIM**.
- 3 Select **More > Service numbers**.

## Creating contacts

### *To create a new contact*

- 1 From standby select **Menu > Contacts**.
- 2 Select **More > New contact**.
- 3 You can enter contact data on four tabs.
- 4 Select **Save**.

 If you save your contacts' phone numbers in the international number format, starting with +, you can call directly from **Contacts** when you are abroad.

## Editing contacts

### *To add a field to a contact*

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to a contact and select **More > Edit contact**.
- 3 Select **More > Add field** and mark a field.
- 4 Select **Add**.


### *To edit a contact on the SIM card*

- 1 From standby select **Menu > Contacts**.
- 2 Select **More > View folder > SIM**.
- 3 Scroll to a contact and select **More > Edit contact**.

## *To add a stored picture to a contact*

- 1 From standby select **Menu > Contacts** and scroll to a contact.
- 2 Select **More > Edit contact**.
- 3 Scroll to the **Picture** field and select **Edit**.
- 4 Choose **Select** and scroll to a picture you want to add.
- 5 Choose **Select > Save**.

## *To add a personal ringtone to a contact*

- 1 From standby select **Menu > Contacts** and scroll to the desired contact.
- 2 Select **More > Edit contact**.
- 3 Select the audio tab .
- 4 Scroll to the **Ringtone:** drop-down menu and select **Open > Find sound**.
- 5 Scroll to the sound you want to add.
- 6 Choose **Select**.
- 7 Select **More > Save**.

## Managing contacts

### *To copy a contact to another folder*

- 1 From standby select **Menu > Contacts** and scroll to a contact.

- 2 Select **More > Add to >** desired folder.

### *To delete a contact*

- 1 From standby select **Menu > Contacts** and scroll to a contact.
- 2 Select **More > Delete**.

### *To copy contacts to the SIM card*

- 1 From standby select **Menu > Contacts**.
- 2 Mark the desired entries in **Contacts**.
- 3 Select **More > Add to > SIM**.

### *To copy contacts from the SIM card*

- 1 From standby select **Menu > Contacts**.
- 2 Select **More > View folder > SIM** to open the SIM card.
- 3 Mark the desired entries.
- 4 Select **More > Copy to Contacts**.


# Messaging

## Before you use Messaging

Before you can send or receive any messages (except for SMS text messages) you need to set up the necessary accounts. You can use the Internet and Email wizards provided in the phone to download settings or do this manually. See *Setting up Internet, email and MMS* in the Web guide.

## Shortcut to Messaging

### To start Messaging

- Press  on the keypad.

## Messages

You can create, send, and receive different types of messages:



SMS (Short Message Service) – text messages



MMS (Multimedia Message Service) – picture messages that can include text, pictures and sound



Email messages



Beamed messages via Bluetooth

---

You can also receive:



Auto setup files for configuring Internet, email and MMS



Area information messages such as local road reports

---

## Folders

The different types of messages are handled by different accounts. The default account, Messages, handles all messages except email messages. Email messages are handled by email accounts you create yourself. All accounts consist of a number of folders. You can switch between folders by selecting the arrow beside the folder name:



- Inbox in Messages – contains all received messages except email messages. In [Menu > Settings > Sounds & alerts > Message alerts](#) you can set how you will be notified when a message is received.
- Inbox in an email account – contains the received email messages for that particular account.
- Outbox – contains messages ready to be sent.
- Drafts – contains messages that are not ready to be sent. When you are creating a message, and exit the message before sending it, you will be asked if you want to save it. If you select [Yes](#), the message will automatically be stored in this folder.
- Sent – contains sent messages.
- SIM – a folder located on your SIM card.

### SMS text message

*To create and send an SMS text message*

- 1 Press  on the keypad.
- 2 Select [Create new message > SMS](#).

- 3 Enter the phone number of the recipient using the keys, or tap [To:](#) > [Select contact](#) and browse to your contact.
- 4 Write the message and select [Send](#).

 
### MMS picture message

MMS picture messages can include pictures, video clips, animations and sound, organized like a slide presentation with time-based control of playback.

#### Before you use MMS

Before you can send and receive multimedia messages you need to download MMS settings. You can use the Internet wizard available in the phone in [Menu > Settings > Connectivity > Internet wizard](#) or, if your operator is not supported by this wizard, do this manually. See *Setting up Internet, email and MMS* in the Web guide.

## An overview of MMS

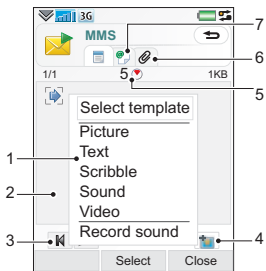

- 1 Menu options. You can select a template or what you want to add to the message, for example a picture or a sound. (If the menu is not open, select [Add.](#))
- 2 Entry field (on the detail tab) where you can create your message
- 3 Playback keys
- 4 New page icon

---

5 Time view icon. Opens a view where you can adjust when and for how long your added items will be shown

---

6 Attachments tab

---

7 Address tab for the recipient and other details

---

### *To create and send an MMS picture message*

- 1 Press on the keypad.
- 2 Select [Create new message > MMS.](#)
- 3 Add picture, text and sound as desired.
- 4 Select and fill in the recipient's details. To send a message to several recipients, type a comma between each address.
- 5 Select [Done.](#)
- 6 Select [More > Send.](#)

### *To read an MMS picture message*

- Select the new message.
- ! *The first time you open the message it plays automatically. After that, you have to use the playback keys to play it.*

## Email

### Before you use email

To use email you require an Internet account and will need to download the necessary email settings. You can use the Email wizard available in the phone under **Menu > Settings > Messaging > Email accounts** or, if your operator is not supported by this wizard, do this manually. See the Help in the phone or *Setting up Internet, email and MMS* in the Web guide.

### Sending email messages

You can create email messages from each email account.

#### *To create and send an email message*

- 1 Press **Ⓜ** on the keypad.
- 2 Select **New**.
- 3 Tap **To: > Select contact** and browse to your contact or tap to the side of **To:** and write the email address of the recipient. To send a message to several recipients, type a comma between each address.
- 4 Select **Subject:** and enter details.

- 5 Write your message and select **Done**.
- 6 Select **Send**. You will have the option to send the message immediately, or to save it to Outbox.

### Receiving email

Email messages are downloaded from the email server on the Internet or at your office. You can download your email manually or set when your phone should check for new email.

#### *To download email messages manually*

- 1 Press **Ⓜ** on the keypad.
- 2 Select your email account.
- 3 Select **More > Get & send**.

#### *To download messages automatically*

- 1 From standby select **Menu > Settings > Messaging > Email accounts**.
- 2 Select your email account.
- 3 Select **More > Scheduled download**.
- 4 Mark the **Schedule download** check box and enter the times when you would like to download email messages.

- 5 Select **Save**.

! For IMAP accounts you can also select **Push email** and have new email messages pushed to your phone.

### **To forward an email message**

- 1 From your email account in Messaging scroll to the message you wish to forward.
- 2 Select **More > Forward**.

! Large attachments increase the size of an email and the connection time needed to send it. It is possible to choose whether to forward the attachment.

### **Viewing messages**

You can choose not to receive large messages and only to receive a header.

### **To download headers**

- 1 From standby select **Menu > Settings > Messaging > Email accounts**.
- 2 Select your email account.
- 3 Select the **Inbox** tab.
- 4 From **Download restrictions**, select **Just headers**.
- 5 Select **Save**.

### **To view messages in full screen**

- 1 Press **⊖** on the keypad.
- 2 Select your email account.
- 3 Select **More > Settings > Always fullscreen**.

### **Viewing attachments**


To view an attachment you need a viewer for that type of file. Your phone comes with pre-installed viewers for Microsoft® Word, Microsoft® Excel®, Microsoft® PowerPoint®, and Adobe™ Acrobat™ files.

## **More about Messaging**

### **Deleting email**

You can delete a message both locally and on your email server. When you delete it locally, the message body and attachments are deleted but the heading remains. You can download the message again later with the **Get & send** option. When you delete the message on your server, it is deleted both in your phone and on your server.

### *To find a message*

- 1 Press  on the keypad.
- 2 Select **More > Find message** to search through the subject lines, sender details and the text of the message.

! In an open message, **Find** searches through the message.

### **Saving contact details**

When you receive a message, you can save the contact details of the person who sent the message.


#### *To save a sender's contact details*

- 1 Select the sender's phone number, name or email address in the details tab or **From:** in the address tab.
- 2 Select **Add to Contacts**.

### **Disconnecting from the Internet**

If your phone is already connected to the Internet when you send an email message or an MMS message it remains connected after sending.

#### *To disconnect from the Internet*

- 1 Select the connection icon, for example , in the status bar.

- 2 In Connections manager, mark the check box for your connection.
- 3 Select **Close**.

### **Invitations**

If you receive an invitation to an appointment via an email message, and you accept, your calendar will be updated automatically. You can also reply to and forward an invitation.

### **Push email**

With push email, email messages received in your ordinary mailbox will automatically be sent to your phone. You can send messages from your phone, and also use Calendar and Contacts as if you were using the ordinary email application in your computer.

Depending on your operator and market, you can have a different push email client installed on your phone.

IMAP Push email is also available on your phone.



### ***To set up IMAP Push email***

- From standby select **Menu > Settings > Messaging > Email accounts**.
- 2 Select your email account.
  - 3 Select the **Basic** tab.
  - 4 Select **IMAP** in **Connection type**.
  - 5 Mark the **Push email** check box.
  - 6 In Email accounts select **More > Always On push email**.
  - 7 Mark the **Always On** check box.
  - 8 Select **Save**.
  - 9 For more information on push email contact your operator, your service provider or your IT administrator.

For more information about push email see *More about Messaging* in the Web guide.

# Internet

## Internet browser


 

 
 
To use the browser you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

### To start the browser

- From standby select **Menu > Internet**.

### Navigation

 
All navigation commands and settings are available from the **More** menu. The most common operations are also available as keyboard shortcuts.

Key	Function
	Enter address
	Open the bookmarks list
	Close the current page
	Go to the homepage
	Switch between loading and not loading pictures

 
---

 Switch between normal and **Fullscreen** display

 
---

 Switch to the next page

 
---

 Open the **Configuration** menu


---

 Add a bookmark for the current page

---

 **Find** (on the Internet or on the current page)

---

 Go to the top or bottom of the page

---

 **Stop** or **Reload** the current page


---

## Settings

### To switch to landscape view

- With the browser open select **More > Settings** and mark the **Landscape** check box.

### To exit landscape view

- Select  **> Settings** and unmark the **Landscape** check box.

## RSS feeds

RSS feeds allow you to see when new content has been added to a Web site. You can, for example, get the latest headlines without having to visit the Web site.

You can add feeds directly in the RSS feeds application. An easier way is to add feeds from within the Internet browser.

### Before you use RSS feeds


To use RSS feeds you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

### To subscribe to an RSS feed

- 1 From standby select **Menu > Entertainment > RSS feeds**.
- 2 Select **More > Add feed** and enter the address to the feed.
- 3 Select a folder to add the feed to.

### *To subscribe to an RSS feed from the Internet browser*

- 1 From standby select **Menu > Internet**.
- 2 Navigate to a page that offers RSS feeds.

- 3 Select  and choose between the available feeds.
- 4 Select a feed and which folder to add it to.

### *To view an RSS feed*

- 1 From standby select **Menu > Entertainment > RSS feeds**.
- 2 Select a feed and select **Open**.

## Blog

Use the Blog function to publish, for example, your photos on Internet.

### *To send a photo to a blog*

- 1 Navigate to your photo and select it.
  - 2 Select **More > Send as > Blog**.
  - 3 Enter a title and text.
  - 4 Select **Publish**.
- The first time you will get a bookmark added in your phone and information about how to edit the blog on the internet.




## Media

With the Media application you can handle all your media files, such as photos and pictures, music, other audio tracks and video clips.

*To open the Media application*

- From standby select **Menu > Media** .

## Shortcut to Media

You can also press the dedicated key  on the right side of your phone to open Media.

## Main functions

In Media you can use these main functions:

- **Photo** – view, edit, send or blog your photos and pictures.
- **Music** – categorize and play your music files or other audio tracks.
- **Video** – play and handle your video clips.
- **Settings** – change application orientation, update your libraries or use the encoding function.

## Transferring media files

Media Manager computer software and USB drivers are included on a CD that comes with the phone. Use Media Manager to transfer media files from CDs or your computer to your memory card in the phone. See the Web guide for more information.

## Updating media libraries

The first time you use the Media application, or when you have transferred media files to your phone with the USB cable, your media libraries automatically update.

*To manually update media files*

From standby select **Menu > Media > Settings > Update library** .

## Photos and pictures

### Viewing and using pictures

In Photo you can view, send and use all pictures saved in your phone memory or on a memory card. From standby select **Menu > Media > Photo** to select either of these viewing options:

- **Latest photo** - the latest captured photo/video saved in your phone or on a memory card .
- **Camera album** - photos and videos captured with a camera, presented in chronological order, by month.
- **Photo tags** - view your photos that you have tagged .
- **Pictures** - pictures that are not captured with a camera.

### *To view pictures in a slide show*

- 1 From standby select **Menu > Media > Photo** and select one of the viewing options.
- 2 Select **View > Start** to run an automatic slide show.
- 3 Select one of the pre-defined sounds or choose your own by selecting **Edit**.

### *To send a picture*

- 1 From standby select **Menu > Media > Photo** and select one of the four viewing options.
- 2 Select a picture.
- 3 Select **More > Send as** and choose to send the file by Bluetooth™, in an MMS message or to a blog.

### **Remote screen**

You can use a compatible Bluetooth™ accessory to view pictures on a remote screen, such as a TV. For a list of compatible accessories go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### *To send pictures to a remote screen*

- 1 From standby select **Menu > Media > Photo** and select one of the viewing options.
- 2 Select **More** and mark **Remote screen**.
- 3 Select the desired remote screen.
- 4 Select **Yes** to enable the Bluetooth™.
- 5 Open a picture. It will automatically be sent to the remote screen.

! *Make sure you are in full screen play view and tap the screen if the slideshow options are not showing.*

### **Editing pictures**

Using the editor, you can photo fix, pan, zoom and rotate your image. There are also filters for effects and picture correction.

***To edit a picture***

- 1 From standby select [Menu > Media > Photo](#).
- 2 Select a picture.
- 3 Select [More > Edit](#).

For more information about the features and how to use them, see the Web guide in your phone or on the Sony Ericsson Webpage.

**Music and audio tracks**

The music player supports formats such as MP3, WMA, WAV, AAC, AAC+ and eAAC+. For a list of all supported media formats, see the Web guide.

***To play music or other audio tracks***


- 1 From standby select [Menu > Media > Music](#).
- 2 Browse for music/tracks by [Albums](#), [Artists](#), [Tracks](#), [Compilations](#), [Auto playlists](#), [Playlists](#), [Audiobooks](#), [Podcasts](#) and [My recordings](#).
- 3 Scroll to the desired track and select [Play](#).

**Playback controls**



---

 Play


---

 Stop

---



 Skip to previous track

---

 Skip to next track
***To adjust the volume***

- Press the Volume keys.

***To minimize the music player***

- When the music player is open press and hold down . The music will continue to play. To return to the music player, press  in the Status bar.

**Playlists**

A playlist describes which tracks to play, and in which order. The playlist only contains links to the tracks, so when you remove tracks from the playlist, the actual sound files are not deleted.

***To create a playlist***

- With [Media](#) open, select [Music > Playlists > New playlist](#).

## *To add songs to a playlist*

- 1 With **Music** open, mark one or more tracks.
- 2 Select **More > Add to playlist**.

## **Auto playlists**

The music player creates automatic playlists based on, for example, how often you listen to the tracks.

## **Bookmarks**

If you stop the playback of an audiobook or a podcast channel, a bookmark is automatically set on this position. For more information, see *Media* in the Web guide.

## **Video**

With **Video**, you can watch clips stored on your phone. Video can play MPEG-4, H.263, H.264, WMV9 and Real Video formats.

## *To play a video clip*

- 1 From standby select **Menu > Media > Video**.
- 2 Navigate to the clip you want to watch and select **Play**.

## **Playback controls**

During playback, you can use the playback controls. See *Playback controls* on page 45.

## *To move within a video clip*

- Tap on the progress bar.

## *To change screen orientation*

- During playback, tap the screen in the video playback area to switch between landscape and portrait view.

## Entertainment



### PlayNow™

PlayNow™ is an entertainment download service. You can preview content before purchase.

! *This service is not available in all countries/regions.*

#### Before you use PlayNow™

To use PlayNow™ you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

#### Previewing content

You can download a preview sample for most content available at PlayNow™ before deciding to purchase.

#### *To preview PlayNow™ content*

- 1 From Standby select [Main menu > Entertainment > PlayNow™](#).
- 2 Select [Preview](#) or [Play](#) for the content you wish to preview.

#### Purchasing content

When purchasing content from PlayNow™, the cost of this service will be displayed in your phone. The cost will be debited to your prepay card or your phone bill.

#### *To purchase PlayNow™ content*

- Select [Buy](#) next to the content you want to purchase and follow the on-screen instructions.

## FM radio

To listen to the radio you need to insert the handsfree, since the radio uses the handsfree cable as antenna. However, you can still listen to the sound through the speaker or through a Bluetooth™ connected headset.


#### *To listen to the radio*

- 1 Connect the handsfree to the phone.
- 2 From Standby select [Main menu > Entertainment > FM radio](#).

#### *To automatically find and store radio channels*

- From Standby select [Main menu > Entertainment > FM radio > More > Auto store](#).


## *To transfer the sound*

- When the FM radio is open select  and select, for example, the built-in speaker or a Bluetooth™ headset.

## *To minimize the radio*

- When FM radio is open press the back key. The radio will continue playing in the background.

## *To return to the radio*

- Select  in the status bar.

## *To turn the radio off*

- When the FM radio is open select **Off**.




## Tuning and presets

### *To search for radio channels*

- When FM radio is open select  or .

### *To tune manually*


- 1 When FM radio is open select **More > Set frequency**.
- 2 Enter the frequency using the keys.


 
 
 
 You can also press  or  to change the frequency in 0.1 MHz steps.

## *To store a preset*

- 1 When FM radio is open tune to the desired channel and select **More > Save**.
- 2 Select a preset number between 1 and 20 and select **Insert**.


## *To recall a preset*

- 1 When FM radio is open select **Presets**.
- 2 Scroll to the desired channel and press .

 You can use presets 1 to 10 by pressing  to  and . Press and hold down to store, press briefly to recall.

## RDS (Radio Data System)


The RDS functionality lets you set the radio to automatically switch to a channel when it is broadcasting **Traffic announcements**, **TA**, or **News announcements**, **NEWS**. The radio can also re-tune to the **Alternative frequency** **AF** that gives the best reception for the station you have selected.

 *Not all radio channels transmit RDS information.*

### *To access RDS settings*

- When FM radio is open select [More > Settings > RDS options](#).

### *To identify a song played on the FM radio*

- When the radio is open, tap  .



## TrackID™

You can use TrackID™ to find out the name of a song. You record a few seconds of music using the microphone or from the built-in FM radio. The sample is then sent to the TrackID™ database. If a match is found you will see the name of the artist, the album and the title of the song. The TrackID™ service is free, but your service provider may charge for the data traffic.

- ! *This service is not available in all countries/regions.*

### **Before you use TrackID™**

To use TrackID™ you need an Internet connection. See *Setting up Internet, email and MMS* in the Web guide.

### *To identify a song using the microphone*

- 1 From Standby select [Main menu > Entertainment > TrackID™](#).
- 2 Hold the phone close to the speaker and select [Start](#).

## Connectivity

To exchange information between your phone and another device you can use, for example, a USB or a Bluetooth™ connection.

### PC Suite

When connecting your phone to a computer, certain tasks require that you have PC Suite for Sony Ericsson installed on your computer. Install it from the CD delivered with your phone or go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) for the latest version.

You can use PC Suite for many things, including synchronizing phone data with Microsoft® Outlook® in your computer or making backups of phone data. See *PC Suite* in the Web guide for more information.

PC Suite requires a USB cable connection, but for certain applications you can alternatively use a Bluetooth connection.

### USB connection

With a USB connection you can, for example, transfer files between your phone and a computer, synchronize and make backups of phone data.

When you connect your phone and computer using the USB cable two options appear, [File transfer mode](#) and [Phone mode](#).

- ! To transfer files in file transfer mode you do not need PC Suite installed on your computer. For phone mode, PC Suite is required.

#### File transfer mode

In file transfer mode you can transfer files to and from your computer substantially faster compared to phone mode. However, in file transfer mode Microsoft® Windows® Explorer will only show the memory card (if inserted).

- ! Do not remove the USB cable from your phone or computer during file transfer as this may cause a loss of data.



## *To use file transfer mode*

- 1 Connect the USB cable to your phone and computer.
- 2 **Phone:** Select **File transfer**.
- 3 **Computer:** Wait until the memory card appears as an external disk, “PHONE CARD”, in Windows Explorer.
- 4 Use Windows Explorer as usual to transfer files between phone and computer.

## *To disconnect the phone safely from your computer*

- 1 **Computer:** Right-click the removable disk icon in Windows Explorer and select *Eject*.
- 2 **Phone:** Remove the USB cable from your phone.

## **Phone mode**

In phone mode you can use your computer to synchronize contacts and calendar items, transfer files, use the phone as a modem and more. Applications supported in phone mode include:

- Synchronization
- File Manager
- Mobile Networking Wizard
- Backup Manager
- Download Language
- Application Installer

## *To use phone mode*

- 1 **Computer:** Install the PC Suite for Sony Ericsson software.
- 2 Select *Start/Programs/Sony Ericsson/PC Suite for Sony Ericsson*. The application starts.
- 3 Connect the USB cable to your phone and computer.
- 4 **Phone:** Select **Phone mode**.
- 5 **Computer:** Wait while Windows installs the required drivers.

! *All phone mode applications are marked with green in PC Suite. Only synchronization is described here. For other applications, see PC Suite in the Web guide.*

## **Synchronization**


### *To synchronize your phone using PC Suite*

- 1 Connect the USB cable to your phone and computer.
- 2 **Phone:** Select **Phone mode**.
- 3 **Computer:** Start PC Suite.
- 4 Wait until your phone is connected, that is, the *Synchronize Now* button turns green.

- When you have made all the synchronization settings, click *Synchronize Now*.

## Bluetooth connection


### *To turn on Bluetooth connection*

- From Standby select [Main menu > Settings > Connectivity > Bluetooth](#).
- Select the Settings tab  and mark the [Bluetooth On](#) check box.

### Pairing

For all tasks, except for a single file transfer, it is necessary to set up a permanent and trusted relationship between your phone and the other device. This is called pairing (or bonding).

### *To pair with another Bluetooth device*

- From Standby select [Main menu > Settings > Connectivity > Bluetooth](#).
- Select the Devices tab  > [New device](#).
- Select the device in the list.
- If you are asked to, enter the passcode (also called passkey).

## Connections manager

Connections manager is where you control your Internet connections. You can open and close connections, and you can reset the logs for the connections.

### *To open Connections manager*

- From Standby select [Main menu > Organizer > Connections mgr.](#)

### *To reset logs*

- From Standby select [Main menu > Organizer > Connections mgr.](#)
- Select the log you want to reset.
- Select [More > Reset log](#).

## Wap push

### *To set up your phone to handle incoming WAP push messages*

- From Standby select [Main menu > Settings > Messaging > WAP push](#).
- Select [Automatically](#) to receive Wap push service loading messages without being prompted.

## Certificate manager and Java certificates

Digital certificates are used to verify the origin of the Web pages you visit or any software you install.

### *To view user and CA certificates in your phone*

- From Standby select [Main menu > Settings > Security > Certificate manager](#).



### *To view Java certificates in your phone*

- From Standby select [Main menu > Settings > Security > Java certificates](#).

## More features

### Managing files and applications

#### File manager


With File manager you can view, rename, copy, move and delete files and folders in the phone memory and on the memory card. The File manager view has two tabs – the  tab for the phone memory and the  tab for the memory card.

#### *To open File manager*

- From Standby select **Main menu > Organizer > File manager**.

#### Protected files

Downloaded or received files may be copyright-protected.

Copyright-protection may prevent content from being copied, modified or transferred. If a file is copyright-protected  is displayed next to the file name. If the key symbol is crossed the file has no valid licence, for example, the licence may have expired or there is a pending licence for the file.

#### Transferring files from a computer

You can access a memory card in the phone as a USB mass storage device from a computer. This way you can browse the memory card folders and transfer files to them.

#### Launching media files

You can launch media files directly from **File manager** by selecting them.

#### Renaming memory cards

You can rename the memory card.

#### *To rename a memory card*

- 1 From Standby select **Main menu > Organizer > File manager**.
- 2 Select **More > Device > Format Memory Stick > Rename**.

#### Formatting memory cards

- ! *All information on the memory card will be deleted during formatting.*

#### *To format a memory card*

- 1 From Standby select **Main menu > Organizer > File manager**.
- 2 Select **More > Device > Format Memory Stick > Format**.

## Installing applications

Install applications and other content you use often, for example, ringtones in the phone memory since the memory card is sometimes unavailable when the phone is connected to a computer.

 In *Main menu > Entertainment > More applications* there are links to additional applications for your phone. Some of the applications are free of charge or free to try out.

## To install an application

- 1 From Standby select *Main menu > Settings > General > Install*.
- 2 Select the application and choose *Details* to view information about the certificate.
- 3 If the certificate details are OK, select *Install* and follow the instructions in the phone. The application is installed in the *Entertainment* folder.


## Removing applications


Sometimes it is necessary to remove installed applications to free up storage space.

## To remove an application

- 1 From Standby select *Main menu > Settings > General > Uninstall*.
- 2 Select the application and select *Uninstall > Yes*.

## Master reset

 All user data, as well as preinstalled media files (including, for example, backgrounds, ringtones and pictures), will be deleted and factory settings restored.

 If you back up your user data using PC Suite for Sony Ericsson, you can restore it after a master reset.

## To reset the phone

- 1 From Standby select *Main menu > Settings > General > Master reset*.
- 2 If you want to keep installed applications, unmark *Delete all user installed applications*.
- 3 Select *Delete > Yes*.
- 4 Enter the phone lock code and select *Done*.

## Power save

To save power, you can set the display to go blank after a period of inactivity.

## *To enable power save*

- 1 From Standby select **Main menu > Settings > Display > Backlight**.
- 2 Mark the **Power save enabled** check box.

## Screen saver

You can use a picture as a screen saver.

### *To set a screen saver*

- From Standby select **Main menu > Settings > Display > Screen saver**.
- Select **Open** and choose a type.

## Important information

### Sony Ericsson Consumer Web site

On [www.sonyericsson.com/support](http://www.sonyericsson.com/support) there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your phone more efficiently.

### Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support

- A global network of Call Centers
- An extensive network of Sony Ericsson service partners
- A warranty period. Learn more about the warranty conditions in the Important information. On [www.sonyericsson.com](http://www.sonyericsson.com) you will find the latest support tools and information. For operator-specific services and features, please contact your network operator.

You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number).

If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

### Country

### Phone number

Anguilla	1-800-080-9518 (Toll Free)
Antigua	1-800-081-9518 (Toll Free)
Argentina	0800-333-7427 (Toll Free)
Australia	1300-650-050 (Toll Free)
Austria	0810 200 245
Bahamas	1-800-205-6062 (Toll Free)
Barbados	1-800-082-9518 (Toll Free)
Belarus	8 82 00 361 0001
Belgium	02-0745 1611
Belize	AN 815, PIN 5597 (Toll Free)
Bermuda	1-800-083-9518 (Toll Free)
Bolivia	800-100-542 (Toll Free)
Brazil	4001-0444 (Toll Free)
Bulgaria	0800 18 778
Canada	1 866 766 9374 (Toll Free)
Cayman Islands	1-800-084-9518 (Toll Free)
Central and Southern Africa	+27 11 506 0123
Chile	1230-020-0656 (Toll Free)

### Email address

[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.AU@support.sonyericsson.com](mailto:questions.AU@support.sonyericsson.com)  
[questions.AT@support.sonyericsson.com](mailto:questions.AT@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)  
[questions.CO@support.sonyericsson.com](mailto:questions.CO@support.sonyericsson.com)

# Draft for Sony Ericsson Internal Use Only

China	+86 400 810 0000	questions.CN@support.sonyericsson.com
Colombia	01800-0966-080 (Toll Free)	questions.CO@support.sonyericsson.com
Costa Rica	0 800 011 0400 (Toll Free)	questions.CO@support.sonyericsson.com
Croatia	062 000 000	questions.HR@support.sonyericsson.com
Cyprus	0800 90 909	questions.CY@support.sonyericsson.com
Czech Republic	0844 550 055	questions.CZ@support.sonyericsson.com
Denmark	3331 2828	questions.DK@support.sonyericsson.com
Dominica	1-800-085-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Dominican Republic	1-800-751-3370 (Toll Free)	questions.CO@support.sonyericsson.com
Ecuador	1-800-0102-50 (Toll Free)	questions.CO@support.sonyericsson.com
Egypt	16727	questions.EG@support.sonyericsson.com
El Salvador	800-6323 (Toll Free)	questions.CO@support.sonyericsson.com
Estonia	06 032 032	questions.EE@support.sonyericsson.com
Finland	09 299 2000	questions.FI@support.sonyericsson.com
France	0825 383 383	questions.FR@support.sonyericsson.com
Germany	0180 534 2020 (Local rate)	questions.DE@support.sonyericsson.com
Greece	0801 11 810 810 +30 210 899 19 19 (from mobile phone)	questions.GR@support.sonyericsson.com
Guatemala	1-800-300-0057 (Toll Free)	questions.CO@support.sonyericsson.com
Haiti	AN 193, PIN 5598 (Toll Free)	questions.CO@support.sonyericsson.com
Honduras	AN 8000122, PIN 5599 (Toll Free)	questions.CO@support.sonyericsson.com
Hong Kong	+852 8203 8863	questions.HK@support.sonyericsson.com
Hungary	01 880 47 47	questions.HU@support.sonyericsson.com
India	1800 11 1800 (Toll Free) +91 (011) 39011111	questions.IN@support.sonyericsson.com
Indonesia	021 2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888 (Local rate)	questions.IE@support.sonyericsson.com
Italy	06 48895206 (Local rate)	questions.IT@support.sonyericsson.com
Jamaica	1-800-442-3471 (Toll Free)	questions.CO@support.sonyericsson.com
Jordan	+971 4 3919 880	questions.JO@support.sonyericsson.com
Kuwait	+971 4 3919 880	questions.KW@support.sonyericsson.com
Latvia	67 21 43 01	questions.LV@support.sonyericsson.com
Lithuania	8 700 55030	questions.LT@support.sonyericsson.com
Malaysia	1800-88-9900 (Toll Free)	questions.MY@support.sonyericsson.com
Mexico	0 1800 000 4722 (Toll Free)	questions.MX@support.sonyericsson.com
Morocco	+212 2 2958 344	questions.MA@support.sonyericsson.com



# Draft for Sony Ericsson Internal Use Only

Netherlands	0900 8998318	questions.NL@support.sonyericsson.com
Netherlands Antilles	001-866-509-8660 (Toll Free)	questions.CO@support.sonyericsson.com
New Zealand	0800-100-150 (Toll free)	questions.NZ@support.sonyericsson.com
Nicaragua	AN 1800-0166, PIN 5600 (Toll Free)	questions.CO@support.sonyericsson.com
Norway	Standard Support: 815 00 840 (local rate) Premium Support: 820 59 040	questions.NO@support.sonyericsson.com
Pakistan	021 - 111 22 55 73	questions.PK@support.sonyericsson.com
Panama	00800-787-0009 (Toll Free)	questions.CO@support.sonyericsson.com
Paraguay	009 800 54 20032 (Toll Free)	questions.CO@support.sonyericsson.com
Peru	0800-532-38 (Toll Free)	questions.CO@support.sonyericsson.com
Philippines	+63 2 7891860	questions.PH@support.sonyericsson.com
Poland	+48 22 691 6200	questions.PL@support.sonyericsson.com
Portugal	808 204 466 (Local rate)	questions.PT@support.sonyericsson.com
Romania	+40 21 401 0401	questions.RO@support.sonyericsson.com
Russia	+7 495 7870986	questions.RU@support.sonyericsson.com
Saudi Arabia	800-8200-727	questions.SA@support.sonyericsson.com
Singapore	+65 6744 0733	questions.SG@support.sonyericsson.com
Slovak Republic	02 5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
Spain	902 180 576 (Local rate)	questions.ES@support.sonyericsson.com
St. Kitts	1-800-087-9518 (Toll Free)	questions.CO@support.sonyericsson.com
St. Vincent	1-800-088-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Sweden	Standard Support: 013 24 45 00 (local rate) Premium Support: 0900 20 44 500	questions.SE@support.sonyericsson.com
Switzerland	0848 824 040	questions.CH@support.sonyericsson.com
Taiwan	+886 2 25625511	questions.TW@support.sonyericsson.com
Thailand	02 2483 030	questions.TH@support.sonyericsson.com
Trinidad and Tobago	1-800-080-9521 (Toll Free)	questions.CO@support.sonyericsson.com
Turkey	+90 212 473 77 77	questions.TR@support.sonyericsson.com
Ukraine	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
Middle East & North Africa	+971 4 3919 880 (UAE)	questions.AE@support.sonyericsson.com
United Kingdom	08705 237 237 (Local rate)	questions.GB@support.sonyericsson.com
United States	1 866 766 9374 (Toll Free)	questions.US@support.sonyericsson.com
Uruguay	000-401-787-013 (Toll Free)	questions.CO@support.sonyericsson.com
Venezuela	0-800-1-00-2250 (Toll Free)	questions.CO@support.sonyericsson.com
Vietnam	1900 1525 (Toll Free)	questions.VN@support.sonyericsson.com
1900 1525 (Toll Free)	questions.VN@support.sonyericsson.com	

## Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



## Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.



- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

## Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others.

Products may contain small parts that could become detached and create a choking hazard.



## Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged.

Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

## Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for intended purpose only. Charge the battery in temperatures between +5°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

## Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm (6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

## Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your mobile phone or Bluetooth handsfree will not affect the electronic systems in your vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

## GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings. Caution: Do not use GPS functionality in a manner which causes distraction from driving.

## Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communications. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

## Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

## Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and

# Draft for Sony Ericsson Internal Use Only

when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to: [www.sonyericsson.com/health](http://www.sonyericsson.com/health).

## Malware

Malware (short for malicious software) is software that can harm your mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your mobile phone from known, reliable sources.

## Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF Exposure, radio performance, sound loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

## Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to [www.sonyericsson-snc.com](http://www.sonyericsson-snc.com).

## Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.



## Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information. Never use municipal waste.



## Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the mobile phone purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

## Warning!

If your device requires an adapter for insertion into the mobile phone or another device, do not insert the card directly without the required adapter.

## Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dust or foreign objects get into the insert part of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, or turn off the power while formatting, reading or writing data, or when you use the memory card in locations subject to static electricity or high electrical field emissions.

## Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

## Loudness warning!

Avoid volume levels that may be harmful to your hearing.

## End User Licence Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited license to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this License.

This license exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the license immediately.

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that

The Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

This license is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

## Limited warranty

Sony Ericsson Mobile Communications AB, Nya Vattentorget, SE-221 88 Lund, Sweden (Sony Ericsson), or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit [www.sonyericsson.com](http://www.sonyericsson.com) to get further information.

## Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

## What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country/region\* where you purchased the Product, will, at their option, either repair or replace

the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

## Conditions

- 1 This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number\*\*, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
- 3 This warranty does not cover any failure of the Product due to normal tear and wear, or due to misuse, including but not limited to use in other

than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and colour may occur between the phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
- 7 Tampering with any of the seals on the Product will void the warranty.
- 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN

THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/regions/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

## \*Geographical scope of the warranty

If you have purchased your Product in a country/region member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country/region or in Switzerland or in Turkey, under the warranty conditions prevailing in the country/region in which you require servicing, provided that an identical Product is sold in such country/region by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country/region you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country/region of

original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries/regions. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

\*\* In some countries/regions additional information (such as a valid warranty card) may be requested.

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.





## Declaration of Conformity for G700 Business Edition

We, Sony Ericsson Mobile Communications AB of  
Nya Vattentorget

SE-221 88 Lund, Sweden

 
declare under our sole responsibility that our  
product

Sony Ericsson type FAD-3880001-BV

and in combination with our accessories, to which  
this declaration relates is in conformity with the  
appropriate standards EN 301 511:V9.0.2, EN 301  
908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 300  
328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-  
17:V1.2.1, EN 301 489-24:V1.3.1 and EN 60950-  
1:2006, following the provisions of, Radio  
Equipment and Telecommunication Terminal  
Equipment Directive 1999/5/EC.

Lund, February 2008

CE 0682

A handwritten signature in black ink, appearing to read "Shoji Nemoto", is written over a horizontal line.

Shoji Nemoto,  
Head of Product Business Group GSM/UMTS

We fulfil the requirements of the R&TTE Directive  
(1999/5/EC).

# Index

<b>B</b>		Flight mode .....	14
Backup of phone data .....	50	FM radio .....	47
Battery .....	10	Folders in messaging .....	34
Blog .....	42	<b>H</b>	
Bluetooth™ wireless technology ..	52	Handsfree settings .....	31
<b>C</b>		Handwriting	
Call log .....	31	accented letters .....	27
Certificates .....	53	Chinese characters .....	26
Connections manager .....	52	Chinese punctuations .....	26
Contacts .....	32	extended characters .....	27
<b>E</b>		latin letters .....	26
Email .....	37	multi-character recognition ...	28
Emergency call .....	30	numbers .....	27
Entering		special gestures .....	28
symbols .....	25	Handwriting recognition .....	25
Example		<b>I</b>	
using keypad prediction .....	22	IMEI number .....	12
using multitap .....	23	Import contacts .....	19
using Pinyin input .....	23	input	
using Stroke input .....	24	text .....	22
using wild card key .....	24	Installing applications .....	55
<b>F</b>		International call .....	29
File manager .....	54	Internet browser .....	41
File transfer mode .....	50	Internet wizard .....	13

<b>K</b>		Pinyin input	
Keylock .....	12	example .....	23
Keypad prediction		PlayNow™ .....	47
example .....	22	Power save .....	55
<b>M</b>		Protected files .....	54
Main menu .....	16	Push email .....	39
overview .....	17	<b>R</b>	
Master reset .....	55	RSS feeds .....	42
Memory card .....	19	<b>S</b>	
Messaging .....	34	Screen in text mode .....	25
MMS .....	35	Screen saver .....	56
Multitap		Selecting	
example .....	23	text .....	28
Music .....	45	Silent mode .....	19
<b>N</b>		SIM card .....	10
Navigation .....	15	Slide show .....	44
Notes .....	20	SMS .....	35
<b>O</b>		Sounds and alerts .....	19
On/off .....	14	Speed dial .....	29
<b>P</b>		Standby .....	14
Pairing .....	52	Status bar .....	18
Panels .....	15	Stroke input	
PC Suite .....	50	example .....	24
Photo		Switching	
view .....	43	input languages .....	24
Picture editor .....	44	Pinyin and Stroke .....	23

to handwriting recognition mode	play .....	46
25		
to keypad prediction mode ....		22
switching		
keypad prediction mode .....		22
Symbols		
entering .....		25
Synchronization .....		51
<b>T</b>		
Text		
selection, highlight .....		28
Text input .....		22
switching between Pinyin and		
Stroke .....		23
using handwriting recognition		25
using on-screen keypad .....		28
text input		
using the keypad .....		22
TrackID™ .....		49
Transferring files .....		50
<b>U</b>		
Update software .....		19
Updating software .....		19
USB file transfer .....		50
<b>V</b>		
Video		