SONY

Startup guide

Xperia™ V LT25i

XPERIA

Sony Mobile Communications AB SE-221 88 Lund, Sweden www.sonymobile.com

Welcome

Important Information

Before you use your device, please read the *Important Information* provided in your device or in the box.

 
Assembly

To remove the battery cover



To insert the micro SIM card

Do not insert a memory card into the micro SIM card holder.



- Remove the battery cover and the battery, then pull out the micro SIM card holder.
- 2 Place the micro SIM card into the micro SIM card holder, with the gold-coloured contacts facing down.
 3 Push the micro SIM card and the holder back into the

To insert a memory card

phone.

 Do not insert a micro SIM card into the memory card slot.

 


The memory card may not be included at purchase in all markets.

To insert the battery



To attach the battery cover



Press down firmly on all edges of the battery cover to make sure it gets attached tightly.

 
Water and dust resistance

 
Your phone has IP (Ingress Protection) ratings of IP5X, IPX5 and IPX7. This means that your phone is dust protected and protected against the effects of immersion in water in depths of between 0 to 100 cm for up to 30 minutes, and is also protected against the effects of a low pressure water stream. The covers for the micro USB port and the headset connector must be firmly closed in order for the phone to meet the stated IP rating. More information about IP codes and important details about your phone's resistance to water can be found in your phone User guide, and on the Sony Mobile support website.

support website.

Phone basics

Phone overview





- Front camera lens
 Ear speaker
 Proximity sensor 1
 Headset connector

- 5. Light sensor6. Notification light

- 7. Proximity sensor 2 8. Volume/Zoom key 9. Power key


- 10. Strap hole
 11. Main microphone
 12. Camera lens
 13. Second microphone
 14. Connector for charger/USB
- cable
 - 15. Connector for charging dock 16. Camera light 17. Water sensor (factory use

 - only) 18. Speaker

Use the accessories provided with your phone, or other compatible accessories, for optimal performance.

Turning on the phone

To turn on the phone

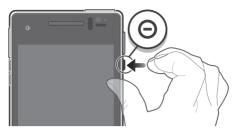

- 1 Press and hold down the power key (1) until the
- phone vibrates.

 Wait a while for the phone to start.

Waking up the screen

To activate the screen

Briefly press the power key (1).

To unlock the screen



Drag f
 to the right across the screen.

Using the keys





Go back to the previous screen Close the on-screen keypad, a dialog box, an options menu, or the Notification panel



Home Go to the Home screen



Task Tap to open a window showing your most recently used applications and a small apps

Set up your phone

What is Android™?



Android is your phone's operating system. Since it's developed by Google™, your phone is preloaded with seviceral Google™ services, such as Google Maps™ and Google™ web search. To use some of the services provided by Google™, you need a Google account.

What is different about Android?

Android™ is an open system, which means that you're not limited to using applications and services from only one provider.

Google™ account

With a Google™ account, you can use Gmail™ to send emails, Google Talk™ to chat with friends, and Google Play™ to download applications and games, music, movies and books.

To set up a Google™ account in your phone

You can also sign in or create a Google™ account from the setup guide the first time you start your phone. Or you can go online and create an account at www.google.com/accounts.

Basic settings

The first time you start your phone, a setup guide explains basic phone functions and helps you enter essential settings. You can also access the setup guide later.

To access the setup guide manually 1 From the Home screen, tap

2 Find and tap Setup guide.

Transferring contacts to your new phone



Transferring contacts to your new phone can sometimes be complicated, but help is available. You can transfer contacts from several phone brands, including iPhone, Samsung, HTC and Nokia.

You need:

- An Internet-connected PC running Windows®
- A USB cable for your old phone
 A USB cable for your new Android™ phone
 Your old phone
- Your new Android™ phone
- If you don't have access to all of the items listed above. ile.com to find out about other ways to transfer your contacts.

Get started transferring your contacts

Use the PC Companion program to transfer your contacts. It's free, and the installation files are already saved on your new phone. PC Companion also offers a range of other features, including help to update your phone software.

- To install PC Companion

 New phone: Turn on your new Android™ phone and connect it to a PC using a USB cable.

 New phone: Tap Install to install PC Companion on the
- Computer: If a popup window appears, select Run Startme.exe. In the new popup window that appears, click Install to start the installation and then follow the instructions to complete the installation.

To transfer contacts to your new phone using PC Companion

- Make sure that PC Companion is installed on your PC.
 Onen the PC Companion program on the PC, then click
- Open the PC Companion program on the PC, then cli
 Contacts Setup and follow the instructions to transfer your contacts.

Finding your way

Home screen

Your phone Home screen is the equivalent of the desktop on a computer. You can customise your Home screen with widgets, shortcuts, folders, themes, wallpaper and other items.

The Home screen extends beyond the regular screen display width, so you need to flick left or right to view content in one of the screen's four extensions.



The items in the bar at the bottom of the screen are always available for quick access.

To go to the Home screen Press ப்.

To browse the Home screen

Flick right or left.

To change your Home screen wallpaper

1 Tap an empty area on your Home screen, then tap ②. 2 Tap Wallpaper and select an option.

Widgets

Widgets are small applications that you can use directly on your Home screen. For example, the Music player widget allows you to start playing music directly. Some widgets are resizable, so you can expand them to

view more content or shrink them to save space on your Home screen.

Application screen

The Application screen, which you open from your Home screen, contains the applications that come installed with your phone as well as the applications you download.
The Application screen extends beyond the regular screen width, so you need to flick left and right to view all content.

To open the Application screen



From your Home screen, tap

To open an application

 From your Home screen or the Application screen, tap the application.

Applications

An application is a phone program that helps you perform a task. For example, there are applications to make calls, take photos and download more applications.

Status and notifications

The status bar at the top of your screen shows what's going on in your phone. For example, new message and calendar notifications appear here.



A notification light also gives you battery status information and some notifications. For example, a flashing blue light means there is a new message or a missed call. The notification light may not work when the battery level is low.



Checking notifications and ongoing activities

You can drag down the status bar to open the Notification panel and get more information. For example, you can use the panel to open a new message or view a calendar event. You can also open some applications that run in the background, such as the music player.

To open the Notification panel



Drag the status bar downwards.

Phone settings menu

View and change your phone settings from the Settings menu.

- To access the phone settings
 1 From your Home screen, tap
 2 Tap Settings.
- You can also drag the status bar downwards on the Home screen and tap to access the phone settings.

More basics

Calling

To make a call by dialling 1 From your Home screen, tap 2 Find and tap Phone.

3 Enter the number of the recipient and tap Call. To delete a number, tap <a>.

To end a call
Tap

To answer a call



Drag to the right across the screen.

Multimedia and text messaging

To create and send a message

1 From your Home screen, tap , then find and tap 1.2 Tap ...

then select the desired recipients from the

2 Tap ...
3 Tap ...
4 Tap ...
5 Tap ...
6 Tap ...
7 Tap ...
8 Tap ...
9 Tap ...
10 Tap ...
10 Tap ...
10 Tap ...
11 Tap ...
12 Tap ...
13 Tap ...
14 When you are finished adding recipients, tap ...
15 Tap ...
16 If you want to add a media file, tap ...
16 If you want to add a media file, tap ...
17 Tap ...
18 Tap ...
19 Tap ...
19 Tap ...
10 Tap ...
<l

option.
7 To send the message, tap Send.

Troubleshooting

The phone does not recognise my wired headset

- Make sure the wired headset that you are using complies to the CTIA standard. Your phone supports the CTIA standard, and may not be fully compatible with other standards such as OMTP.
 If you have a wireless headset that is compatible with your phone, try using that instead.

Legal information

Sony LT25i
Google Play™ is not available in all countries. Some of the services and features described in this Startup guide are not supported in all countries/regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

reature and wnether additional access or usage rees apply.

This Startup guide is published by Sony Mobile Communications AB or its local
affiliated company, without any warranty. Improvements and changes to this
Startup guide necessitated by typographical errors, inaccuracies of current
information, or improvements to programs and/or equipment, may be made by
Sony Mobile Communications AB at any time and without notice. Such changes
will, however, be incorporated into new editions of this Startup guide. © 2012 Sony Mobile Communications AB. All rights reserved. Publication number: 1268-9298.1

Publication number: 1268-9298.1 Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony be liable in any way for your improper use of additional content or other third party content.

This Startup guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony does not warrant or guarantee the availability or performance of any third-party websites or offered services.

Remove the battery to see regulatory information such as the CE mark. nemove the battery to see regulatory information such as the CE mark. All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners. Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual

Get support



User guide

A User guide is available in the Help application in your phone and at www.sonymobile.com.



Support in the phone

Get user support directly in your phone using the Help application.

From your Application screen, find and tap Prom your Application screen, find and tap Prom 2 Find and tap the required support item.



Support on the web

Visit www.sonymobile.com to access a range of support and get the most from your phone.



Customer support

Customer support – if all else fails. Access the relevant support number at www.sonymobile.com by clicking the Contact us link at the bottom of the page. You can also find the relevant support number in the supplied <a href="https://www.mbc.number.