

Important Information

Before you use your device, please read the *Important Information* provided in your device regarding warranty, safety and handling information.

 
Protecting your device from water and dust

 
Your device has IP (Ingress Protection) ratings of IP55 and IP58. These ratings mean that your device is dust resistant and is protected against low pressure water stream as well as against the effects of submersion for 30 minutes in fresh (non-saline) water up to 1.5 metres deep.

Always firmly attach all covers to ensure the water and dust resistance of the device. If liquid is detected inside the device, for example, underneath one of the covers, your warranty will be void.

Before using your device in water and in dusty conditions, refer to the relevant section of the User guide for your device for more detailed information. An online User guide as well as a downloadable version is available at www.sonymobile.com/support.

Overview

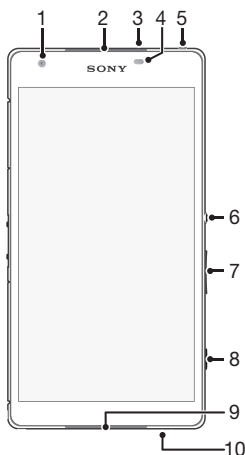

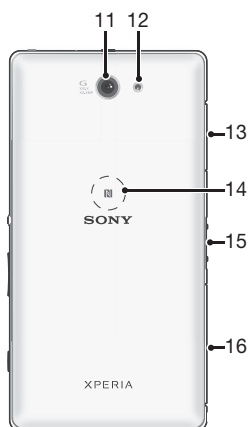

- | | |
|--|--|
| 1. Front camera lens | 9. Speaker |
| 2. Speaker/Charging light/Notification light | 10. Microphone |
| 3. Second microphone | 11. Main camera lens |
| 4. Proximity/Light sensor | 12. Camera light |
| 5. Headset jack | 13. Charger/USB port cover |
| 6. Power key | 14. NFC™ detection area |
| 7. Volume/Zoom key | 15. Charging dock connector |
| 8. Camera key | 16. Cover for micro SIM/memory card slot |

Assembly



- ! Make sure you insert the micro SIM card into the SIM card holder before inserting the card into the device. Also, don't confuse the SIM card slot with the memory card slot.

To insert the micro SIM card

- ! If you insert the SIM card while the device is powered on, the device restarts automatically.
- 1 Detach the cover for the micro SIM card holder.
 - 2 Using a fingernail or other similar object, drag out the SIM card holder.
 - 3 Place the micro SIM card in the SIM card holder, then reinsert the holder.

4 Re-attach the cover.

! Make sure you reinsert the SIM card holder in the correct orientation. When you drag the holder out to insert the micro SIM card, do not turn it around.

To insert the memory card

- 1 Remove the memory card slot cover.
- 2 Insert the memory card into the memory card slot with the gold coloured contacts facing down, then reattach the memory card slot cover.

 
Basics


Turning on the device

Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

To turn on the device

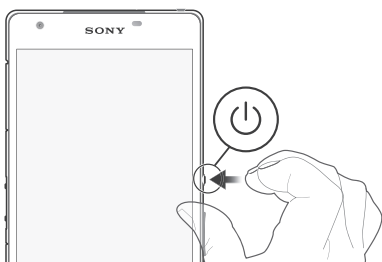

! Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.



- 1 Press and hold down the power key  until the device vibrates.
- 2 Wait a while for the device to start.

Waking up the screen

To activate the screen


- Briefly press the power key .
 - If Tap to wake up mode is enabled, double-tap the screen.
- 💡 To enable Tap to wake up mode, go to the Home screen, then tap  > Settings > Display > Tap to wake up.

Setting up your device

Basic settings

The first time you start your device, a setup guide explains basic device functions and helps you enter essential settings. You can also access the setup guide later.


To access the setup guide manually

- 1 From the Home screen, tap .
- 2 Tap Settings > Setup guide.

Accessing settings

View and change settings for your device from the Settings menu. The Settings menu is accessible from both the Notification panel and the Application screen.

To access your device settings

- 1 From your Home screen, tap .
- 2 Find and tap Settings.

Transferring your contacts

Xperia™ Transfer and Contacts Setup are applications within the PC Companion and the Sony Bridge for Mac computer programs that help you to collect contacts from your old device and transfer them to your new device. These applications support several device brands, including iPhone, Samsung, HTC, BlackBerry, LG, Motorola and Nokia. You need:

- An Internet-connected computer.
- A USB cable for your old device.
- A USB cable for your new Android™ device.
- Your old device.
- Your new Android™ device.

 
To transfer contacts to your new device





- 1 Search and download PC Companion (on a PC) or Bridge for Mac (on a Mac computer) from www.sonymobile.com if the application is not already installed.
- 2 After successful installation, open the PC Companion application or the Sony Bridge for Mac application, then click *Xperia™ Transfer* or *Contacts Setup* and follow the relevant instructions to transfer your contacts.

Finding your way

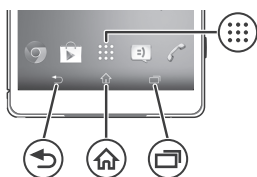





Using the keys



-  Back navigation key
 - Go back to the previous screen within an application or close the application.
-  Home navigation key
 - Exit an application and go back to the Home screen.
-  Task navigation key
 - Open the recently used applications window and the small apps bar.
-  Application screen
 - Open the Application screen.


Basic applications and settings

-  Make phone calls by dialling the number manually or by using the smart dial function.
-  Use the Messaging application to send and receive text and multimedia messages.
-  Go to Google Play™ to download free and paid applications for your device.
-  Optimise the device settings to suit your own requirements.

Status and notifications

To open or close the Notification panel



-  Drag down two fingers instead of one to open the Quick settings panel instead.

Support on the web



Visit www.sonymobile.com/support to access a range of support options for your device, including downloads, troubleshooting tips and a User guide.

Legal information

Sony D6563

Publication number: 1274-4575.1

This Startup guide is published by Sony Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

 
See regulatory information such as the CE mark in the relevant label tray in the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit www.sonymobile.com/us/legal/ for more information.

Product compliance: This product has been manufactured by or on behalf of Sony Mobile Communications, Mobilvägen, SE-221 88 Lund, Sweden. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Officer, Sony Mobile Communications AB, Mobilvägen, SE-221 88 Lund, Sweden. For any service or guarantee matters, please refer to the contact details provided in the separate service or guarantee documents.

© 2014 Sony Mobile Communications AB. All rights reserved.
FCC Caution: Operation in the 5.15 GHz to 5.25 GHz frequency band is only permitted for indoor use. For indoor and outdoor operation, connect your device to an FCC approved 5 GHz WLAN access point.

To view the CE mark and the FCC ID

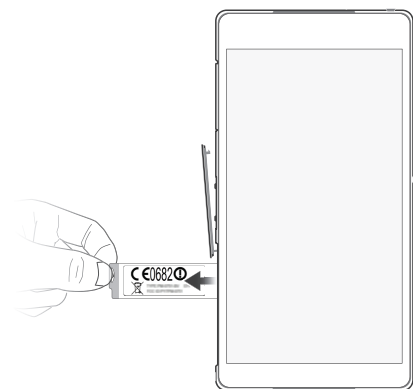

- 1 Detach the cover of the SD card slot.
- 2 Place a fingernail under the right or left edge of the label tray, then drag the tray outwards. The information is displayed on the tray.

SONY[®]

Startup guide

Xperia™ Z2a
D6563

XPERIA

Sony Mobile Communications AB
SE-221 88 Lund, Sweden
www.sonymobile.com