



**ninja 20**  
专业摄影补光灯  
产品说明书


感谢您选用Weeylite补光灯！  
请仔细阅读本说明书，以便能够了解和使用补光灯的全部功能。  
[www.weeylite.com](http://www.weeylite.com)

**1.产品特点**

ninja 20 采用高显色指数COB LED灯珠,光效高,色温准,长寿命,适用于摄影,摄像,演播厅,展厅及化妆等,对光源要求高的场景补光。

- APP联控,操作更便捷
- LCD液晶显示屏,显示更直观
- 一键式静音模式,零噪音,无干扰
- 双通道恒流LED驱动器,无频闪,色温更稳
- 钢管散热器,使LED芯片工作于较低温度,确保LED更长的使用寿命

**2.部件识别**

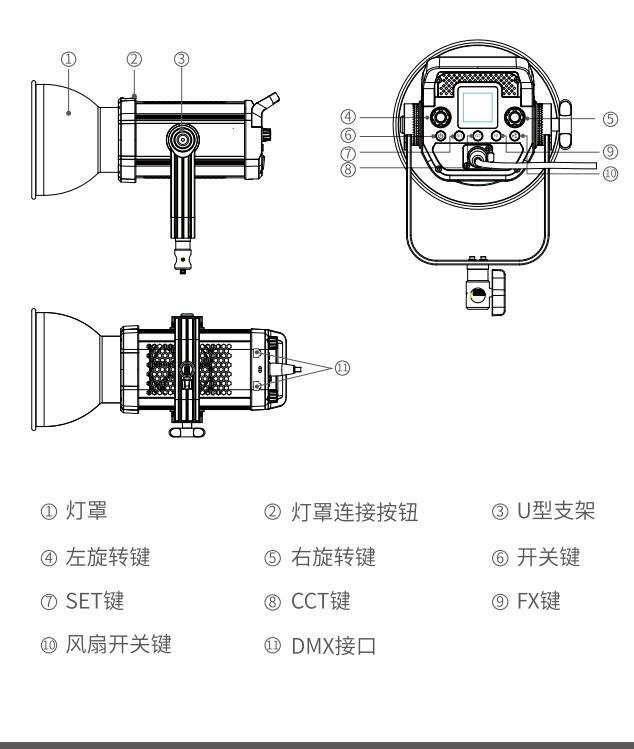


(1) 灯罩 (2) 灯罩连接按钮 (3) U型支架  
(4) 左旋转键 (5) 右旋转键 (6) 开关键  
(7) SET键 (8) CCT键 (9) FX键  
(10) 风扇开关键 (11) DMX接口

**3.操作与使用**

**3.1 使用外接电源**

1. 将电源转换器接入充电电源端(如图A1所示的接口上)。

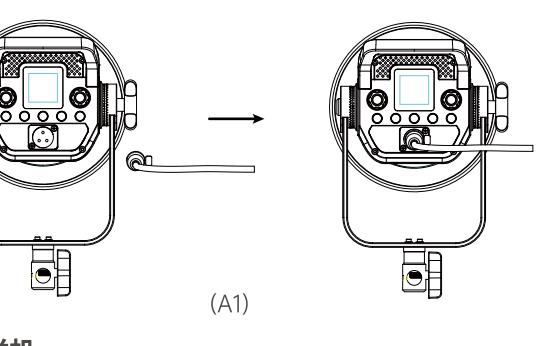


(A1)

**3.2 开关机**


长按⑩开启补光灯,可设置补光灯相关参数。

**3.3 连接蓝牙/DMX**

**蓝牙模式**  
短按:(SET键)进入蓝牙模式,频道调节:转动(4.左旋转键)调节参数,组号调节:转动(5.右旋转键)调节。

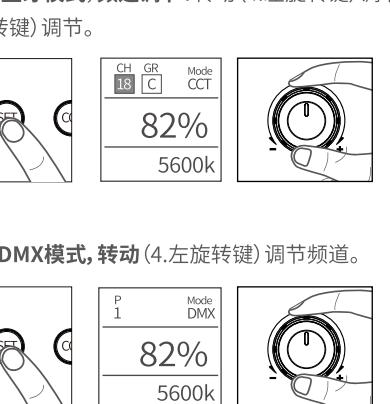


**DMX模式**  
长按:(SET键)进入DMX模式,转动(4.左旋转键)调节频道。

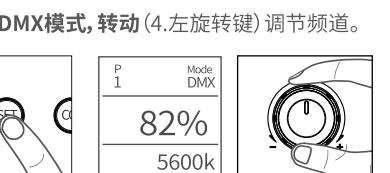

**3.4 CCT模式**

转动(5.右旋转键)可左右调节功率大小。  
该设备为单色温,只能调节功率大小。

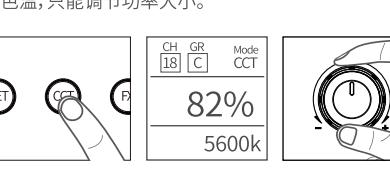

**3.5 FX模式**

按⑨切换该模式下的项目,按下(4.左旋转键)切换项目,转动(5.右旋转键)可左右调节模式与功率大小。



**3.6 风扇模式**

按下⑩键,可进行全速模式与静音模式下切换,转动(5.右旋转键)可调节功率(0~20%)静音模式下功率降到20%。




**4.手机APP控制。**

1.将手机蓝牙保持开启状态后打开手机APP“Weeylite Pro”将APP的频道号设置为被控灯的频道号一致,组号也设置为被控灯的组号一致。(如果被控灯频道号为1则手机APP频道号也为1,为被控灯组号为A则手机APP也需要为A,参数不一致则无法控制)注:升级固件请关闭机器并断开连接,或者会报坏机。

**安卓客户端下载** 


**苹果客户端下载** 

**APP界面预览**

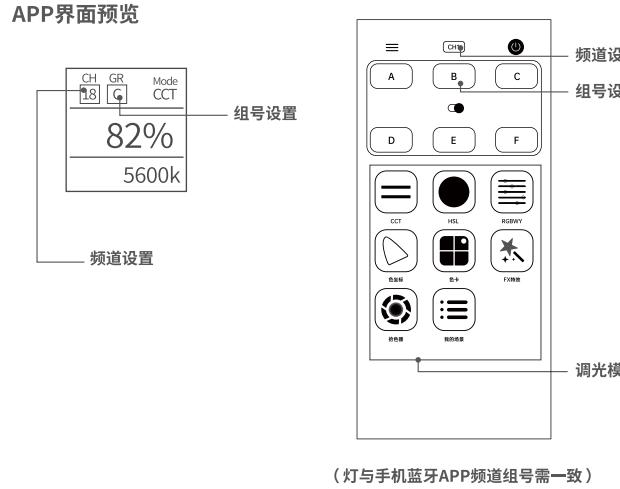

(灯与手机蓝牙APP频道组号需一致)

**5.遥控器控制(RC-11遥控器)(图例)**

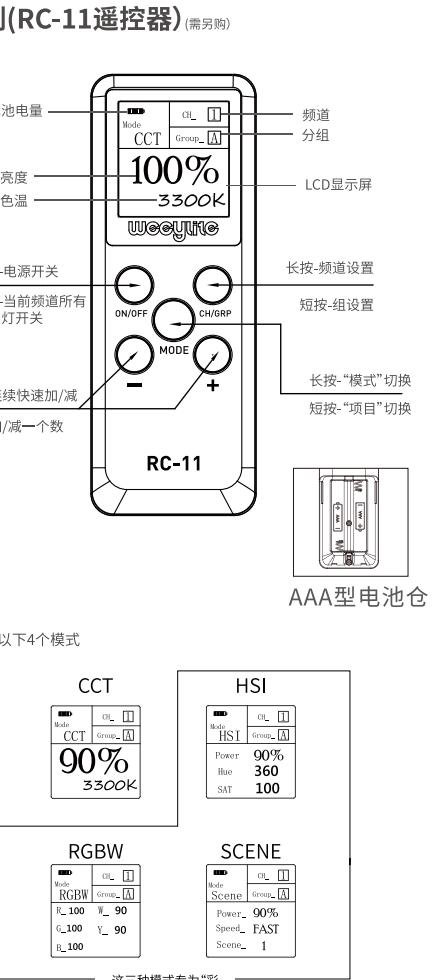

长按“电源开关”2秒,RC-11电源开启,显示屏点亮。  
2.参考“被控灯”设置相同的“频道”和“组”,“频道”和“组”是不能操控LED摄影灯的。  
设置频道:—长按CH/GRP 2秒,+/-键选择需要的频道,再按“MODE键”确认设置组。—短按“CH/GRP”,可以在A/B/C/D/E/F中自由选择。  
3.长按“MODE”可以进入CCT/HSL/RGBW/SCENE 4种模式中转换,HSL/RGBW/SCENE为白色RGB模式,部分机型支持这种模式来控制它。  
4.按+/-键以调节功率/色温数值大小,按“MODE”可以在功率/色温等选项中切换  
5. RC-11开机后,在30分钟不操作电源会自动关机

**6.遥控器操作说明**

**7.常见问题及注意事项**

1.请勿将灯直接照入人眼,否则可能造成视觉损伤。  
2.长时间高温(超过50℃以上)时,温度可能影响灯的长寿命,注意烫伤。  
3.禁止将毛巾、衣物等物品覆盖在灯具之上,这样灯具温度过高,会造成机体损坏及火灾。  
4.请勿使灯体受到强烈振动,否则可能引起故障,导致元件损坏。  
5.若长时间不使用请断开电源,请将遥控器内的电池取出保存。  
6.请勿试图拆卸或维修灯具,否则可能引起触电或补光灯故障。  
7.安装时请确保灯具垂直,避免灯具重压导致掉落伤害,避免儿童接触本灯具。  
8.如发现灯具冒烟或异味,应立即停止操作并掉电源,以防发生光灯着火或烧灼。  
9.严禁将灯具浸入水中或接触水蒸气,如遇进水,则可能造成补光灯着火或发生触电,在潮湿中,应切断断电。  
10.禁用有可燃性气体(包括丙烷、汽油及易燃粉尘)的场所使用补光灯,否则可能引起爆炸或火灾。  
11.开启静音模式,风扇噪音,补光灯功率降到20%,且D-20%可调,退出静音模式,风扇全速运转,补光灯功率恢复当前值,且功耗0-100%可调。  
RC-11 通常长时间不使用请取出电池另外保存,以免电池漏液损坏元件。  
**8.产品参数**

型号	RC-11 遥控器(南向)
无线频率	2.4GHz 蓝牙无线控制系统
通信距离(蓝牙)	30M
无线遥控分组	A, B, C, D, E, F
频道	1~19
待机时间	30分钟无操作后,自动关机
环境温度	-10~50°
电源	AAA 1.5V 7号电池
尺寸	101mm×38mm×18mm
重量	约37g(不含电池)

执行标准:Q/JYKJ002-2019  
深圳市爵鹰科技有限公司  
地址:深圳市龙华区观澜街道牛湖社区新村村工业区10号厂房

**Weeylite 微 律  
产品保修卡**  
Weeylite 国际保修卡作为重要文件,为享有产品的  
保修服务,在保修登记期间请出示本保修卡与发票  
正本,须有本公司授权经销商盖章。



**ninja 20**  
Professional LED light  
Product Manual


Thanks for choosing Weeylight Fill Light!  
Please read the Manual carefully to understand  
and use all the functions of the fill light.  
[www.weeylite.com](http://www.weeylite.com)

**1.Product Features :**

Ninja 20采用高显色渲染指数COB LED灯珠,具有高发光效率,准确颜色还原和长寿命。它用于摄影,视频,工作室,展览和化妆等对光源要求高的场景补光。

- APP联控,操作更便捷
- 16点阵LCD显示屏,显示更直观
- 一键式静音模式,零噪音,无干扰
- 双通道恒流LED驱动器,无频闪,色温更稳
- 钢管散热器,使LED芯片工作于较低温度,确保LED更长的使用寿命

**2.Part identification**

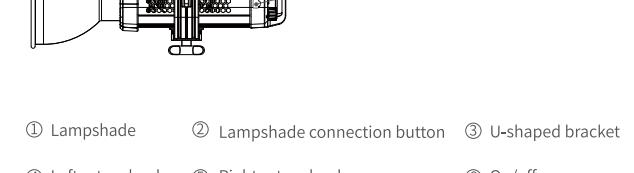


(1) 灯罩 (2) 灯罩连接按钮 (3) U型支架  
(4) 左旋转键 (5) 右旋转键 (6) 开关键  
(7) SET键 (8) CCT键 (9) FX键  
(10) 风扇开关键 (11) DMX接口

**3.Instructions**

**3.1 Use external power supply**

1. Connect the power adapter to the charging power terminal (On the interface shown in Figure A1)

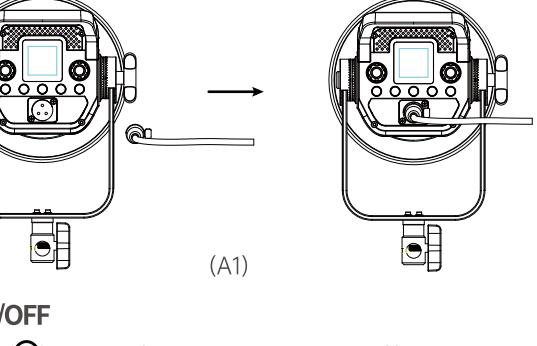


(A1)

**3.2 ON/OFF**


Long press⑩ turn on the fill light, relevant parameters of fill light can be set.

**3.3 Connect Bluetooth/DMX**

**Bluetooth mode**  
Short press(SET Key) enter Bluetooth mode and adjust the channel; Turn(4.左旋转键) to adjust the parameters, group number Adjust; turn(5.右旋转键) to adjust.

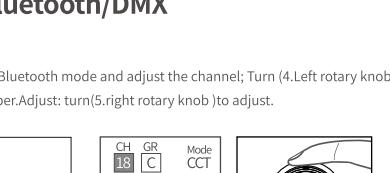


**DMX mode**  
Long press(SET Key) enter DMX mode, turn(4.左旋转键) to adjust the channel.

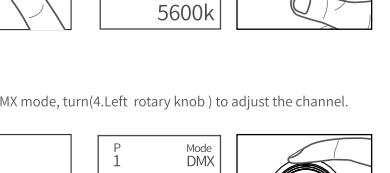


**3.4 CCT MODE**

Press ⑨ key to switch between full speed mode and silent mode, and turn ⑤ button on the right to adjust power (0~20%) and reduce the power to 20% in silent mode.

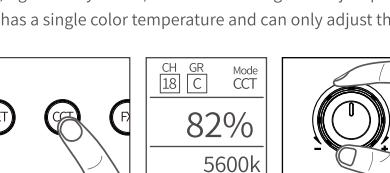


**3.5 FX MODE**

Press ⑨ key to switch the items in this mode, press (4.左旋转键) to switch items, turn(5.右旋转键) to adjust mode and power level.

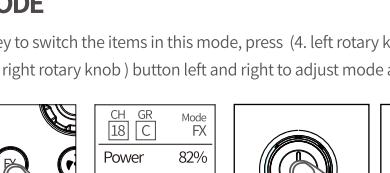

**3.6 Fan MODE**


Press the ⑩ key to switch between full speed mode and silent mode, and turn ⑤ button on the right to adjust power (0~20%) and reduce the power to 20% in silent mode.

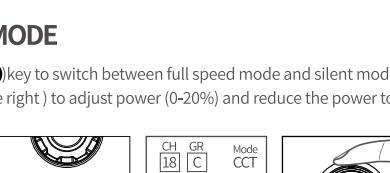


**4.Smartphone App for Light Adjustment**


1. Keep the Bluetooth of your phone on, and then open the App, “Weeylite Pro”, to set the channel number and group number, which shall be the same as those of the designated lights.  
If the channel number of the designated lights is 1, the channel number of the App shall be 1. If the group number of the designated lights is A, the group number of the App shall be A. The App will control the lights if the parameters are inconsistent.)

Note: Do not turn off the power or disconnect ninja 500 with your computer during upgrade, otherwise the product will be damaged.

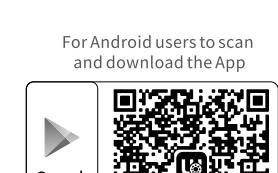For Android users to scan and download the App 

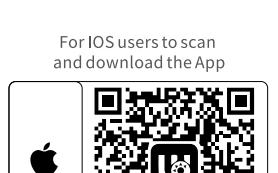
For iOS users to scan and download the App 

**APP界面预览**

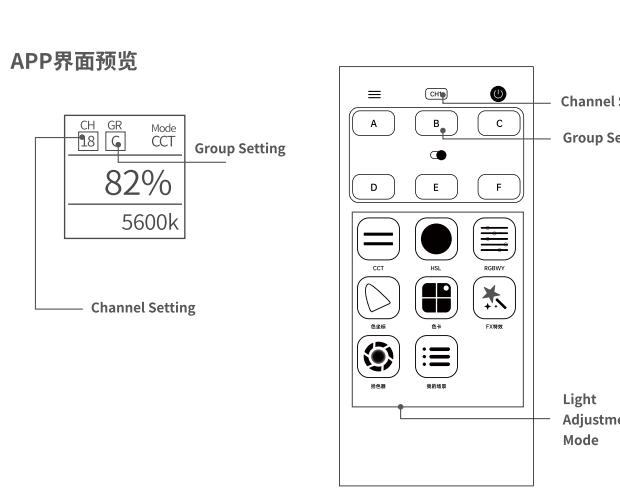

(The channel number and the group number of the lights and the smartphone App shall be the same)

**5.Light Adjustment by Remote Control**  
(need to be purchased separately)

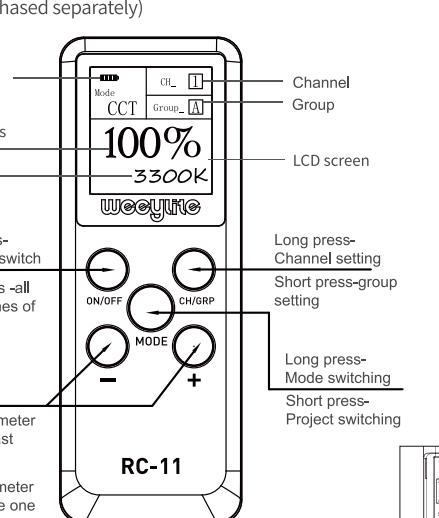

Battery level  
Brightness  
Color temperature  
Channel  
Group  
LCD screen  
Long press+power switch  
Short press+all lights off  
Short press+current channel  
Long press-parameter continuous and fast increase/decrease  
Short press+parameter increase/decrease one number  
Long press-Mode key to switch the following 4 modes  
CCT HSI RGBW SCENE  
These three modes are designed for color RGB, non-RGB mode do not need to enter in these three modes

**6.Operation instructions of the remote control**

1.Mantenga presionado el “interruptor de encendido” del RC-11 durante 2 segundos, se enciende el RC-11 y se enciende la pantalla.  
2.Consule “Luz de video controlada” y configúrela en el mismo “Canal” y “Grupo”.  
(Si el “Canal” y “Grupo” son diferentes, no pueden controlar la luz LED)  
Ajustar “Canal”: Presione y sostenga CH / GRP 2 segundos, teclea +/- para seleccionar el canal deseado, luego presione tecla “MODE” para confirmar.  
Ajustar “Grupo”: Presione brevemente CH / GRP, puede elegir libremente entre 6 grupos (A, B, C, D, E, F).  
3.Mantenga presionado la tecla “MODE” para cambiar entre los 4 modos:  
CCT / HSI / RGBW / HSL / RGB / SCENE con un modo de color RGB, es posible que algunos modelos no admitan estos 3 modos, utilicelos en modo CCT.  
4.Presione +/- para ajustar potencia/número de temperatura de color. Presione “MODE” para cambiar entre opciones como potencia/número de temperatura color.  
5.Después de encender el RC-11, se aparecerá automáticamente después de 30 minutos de inactividad.

**△ Precautions:**

Si el control remoto RC-11 no se usa durante mucho tiempo, retire la batería y guárde la para evitar que la fuga de la batería dañe los componentes.

**Consejos:**

Siempre usamos varias luces para disparar, no cambie la configuración del canal al azar después de arreglar el canal. Las diferentes luces se configuran en diferentes “grupos”, por favor, ajuste el grupo A para la luz A y el grupo B para la lámpara B, etc. Especial, por favor, ajuste los diferentes grupos para ajustar las luces será muy conveniente. Cambiar frecuentemente entre diferentes canales para ajustar las luces será muy conveniente. También puede ocupar los canales de otras personas, lo que fácilmente puede causar interferencia mutua. Esta es la forma incorrecta de usarlo.

**7.Common problems and notes**

1.Do not use the fill light directly on other people's eyes at close range, otherwise it may damage their eyes.  
2.After long time use, the temperature may exceed 60 degrees, pay attention to burns.  
3. It is forbidden to cover totes, tapes and other objects on the lamp body, otherwise the high temperature of the lamp body may cause damage to the lamp body.  
4. Do not subject the lamp to water or steam, otherwise it may cause malfunctions and cause component damage.  
5. The lamp body will not be used for a long time, please remove the battery from the remote control.  
6. After attempting to disassemble or repair the fill light by yourself, otherwise it may cause electric shock or malfunction.  
7. Make sure the lamp is stable during installation, avoid heavy lamps frontalling, and avoid children and the elderly to touch this lamp.  
8. If smoke or burning odor is found, immediately stop operation and unplug the power supply to prevent fire.  
9. The fill light must not be immersed in water or exposed to rain or water vapor water into the lamp, it may cause the fill lamp to catch fire or electric shock this is the power should be cut off immediately.  
10. Prohibit to use the fill light in places with flammable gas (including propane, gasoline and dust), may cause explosion.  
11. Turn on the silent mode, the fan is silent, the power of the LED light is reduced to 20%, and 0-20% is adjustable. Be the full speed mode, the fan runs at full speed, the power of the LED light returns to the current value of the power supply, the power is adjusted from 0-100%.

**8.Product Parameters**

Model	ninja 20
Dimming method	Host control APP/Bluetooth/DMX
Color temperature	5600K(固定)
Brightness	1~100%(可调)
Max Brightness	22000lm
Max Illuminance	Naked light>7800lux/1m, Reflector >79000lux/1m 20 meters (the distance will increase or decrease because of obstacles in the operating environment)
Remote-controlled distance	Constant Power output up to 200W
Lamp beads	6 Group (A,B,C,D,E,F)
Channel	1~19
Color rendering index	> 95 (RA) > TLCI 97
Power Adapter	Output:DC 36V/38A Three-pin Cannon port Input:AC 100-240V, 5.5A 50-60Hz
Size	282x290x83mm
Weight	>2390(g)

Operational Standard: Q/JYKJ002-2019  
Shenzhen Jueying Technology Co., Ltd.  
Address: No. 100, Building 2, Beidu Science and Technology Park, Beidu Street, Beihuan Subdistrict, Shenzhen City, China  
Telephone: +86-755-28719024 Fax: 0755-28717370  
Email: info@weeylite.com  
Weeylite International Warranty Card as an important document, in order to enjoy the product warranty service, in the warranty registration period please show this warranty card and invoice to the authorized dealer.  
The original must be stamped by the company's authorized dealer.

**Weeylite Warranty Card**

尺寸:400x320mm

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.