



Inside EUT with bottom cover removed, bottom of main board.

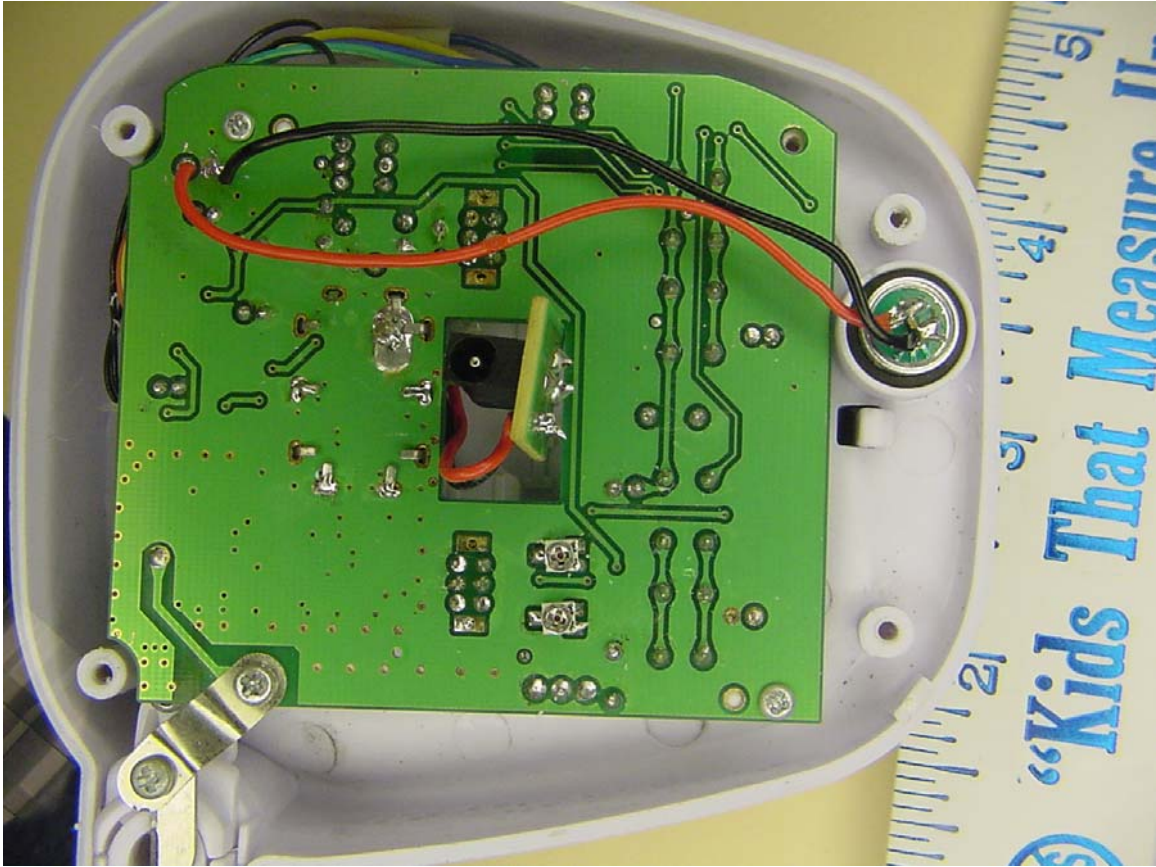


02110 Tx

top of main board

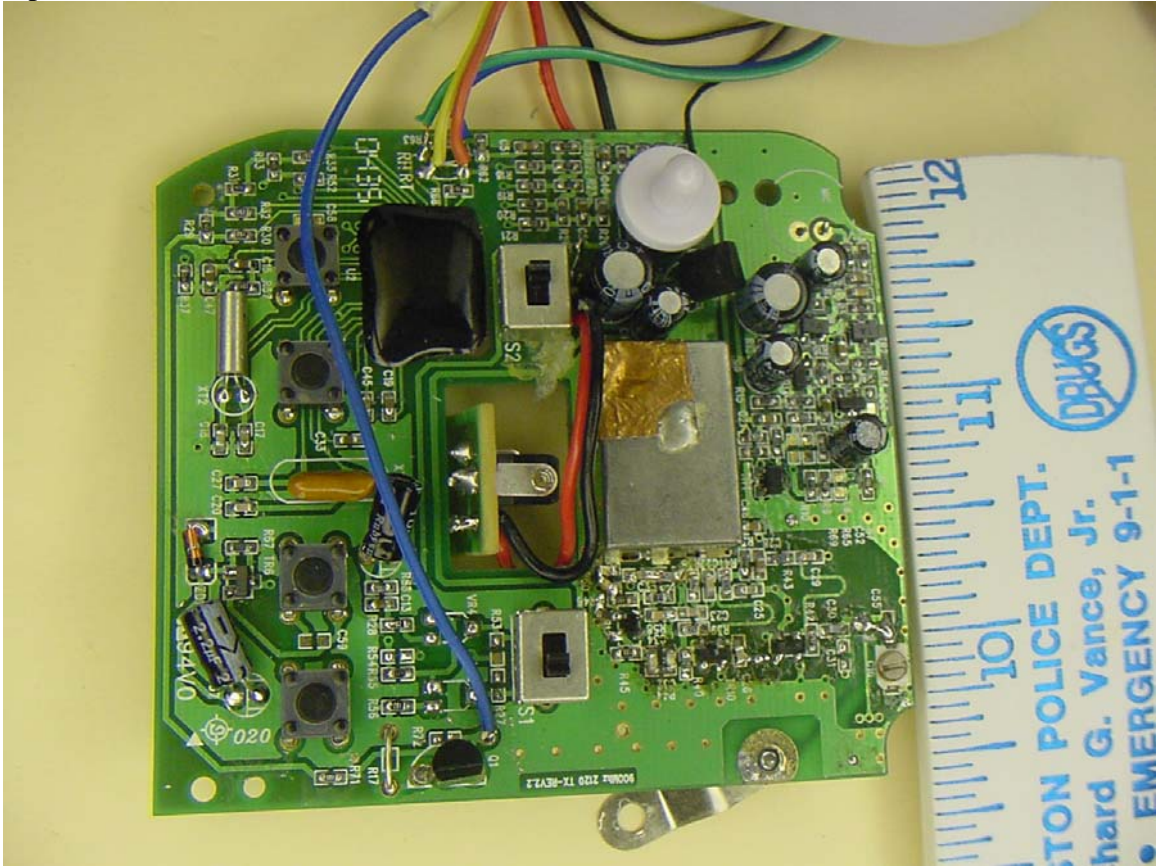

02110 Tx


Temperature and humidity sensor board, simple connections to thermistor and humidity sensor. Located inside nightlight/cover enclosure.

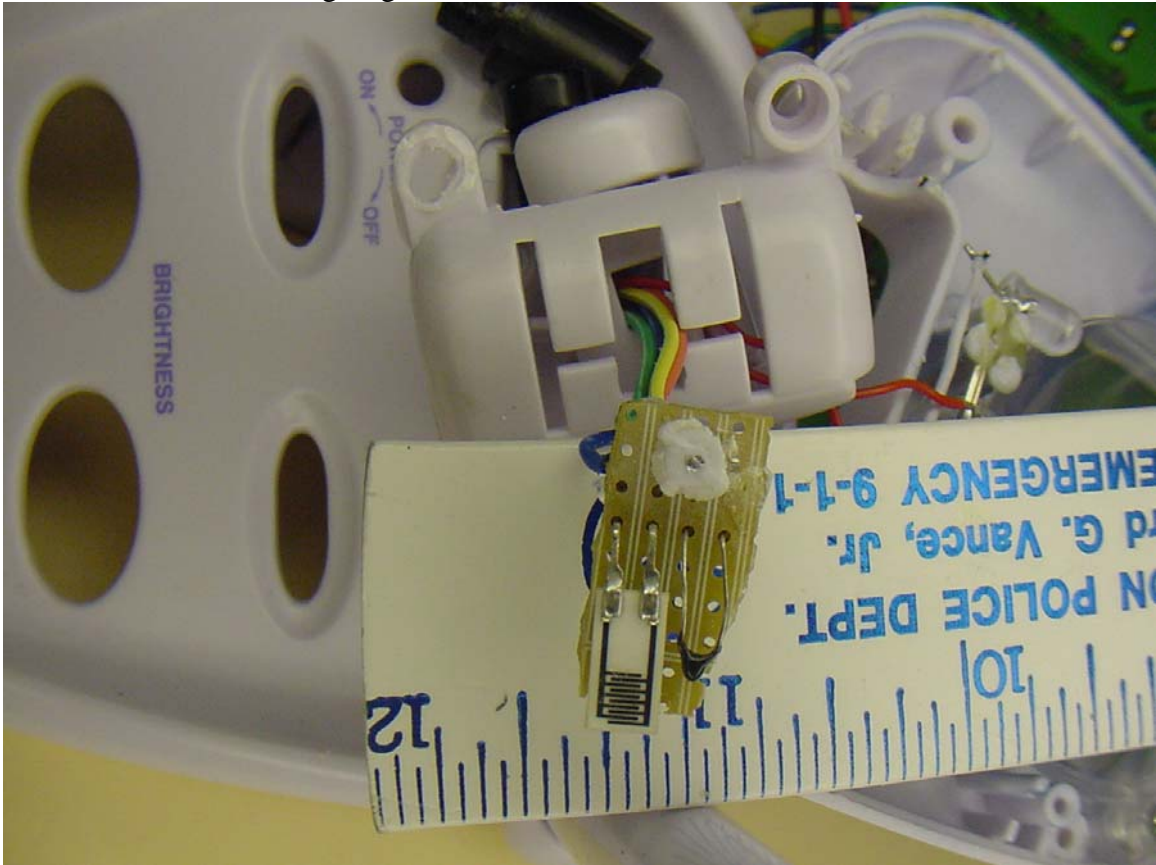

02110 Tx



Inside of night light/cover.

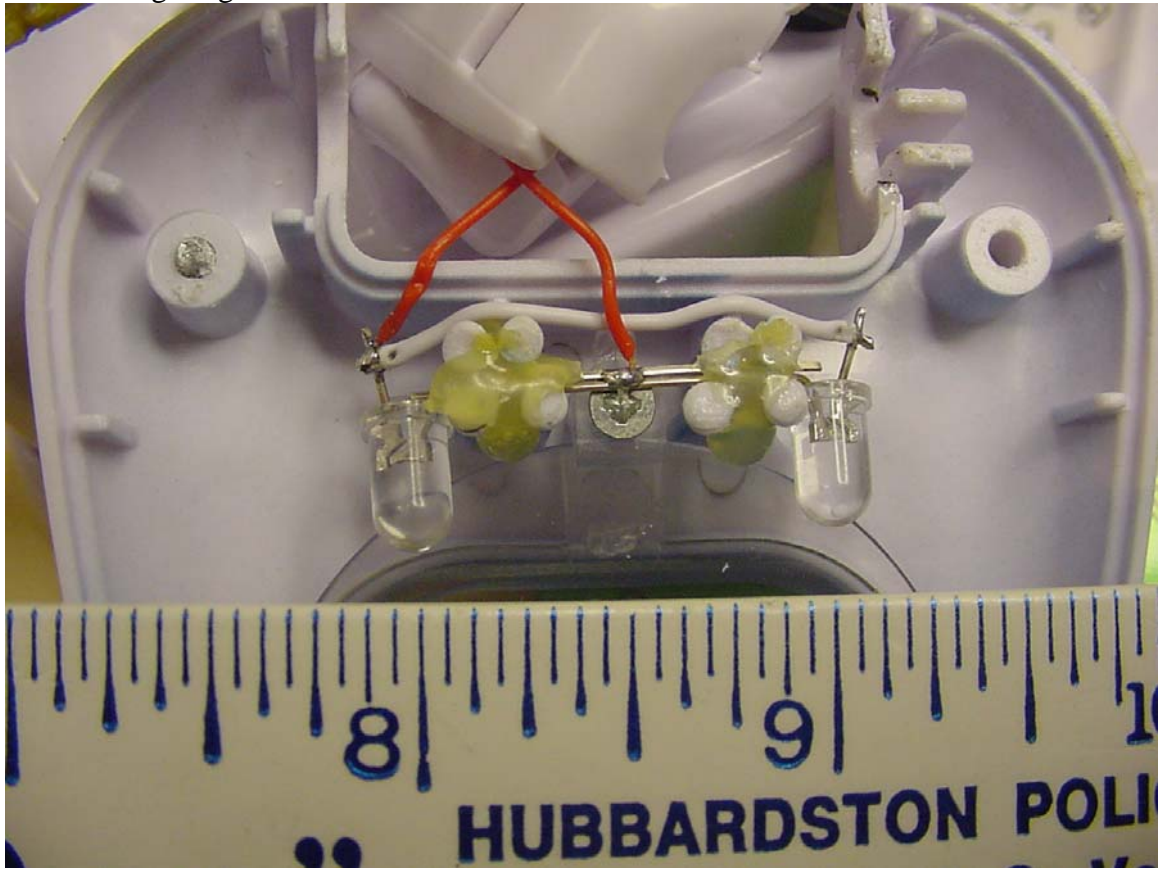

02110 Tx

Antenna



02110 Tx