



02280/02281

Please read the following instructions and warnings carefully.

Keep this instruction manual for future reference.


Tools required:
Phillips head screwdriver (not included).
Requires 4 "C" batteries (not included).

**For Technical Support Call 1-800-268-6237
(In Europe call: 44 (0) 208 420 4429) or
E-Mail at customerservice@summerinfant.com**

For use with children from birth and up.

! WARNING:

Adult assembly required.
Keep small parts away from children when assembling.

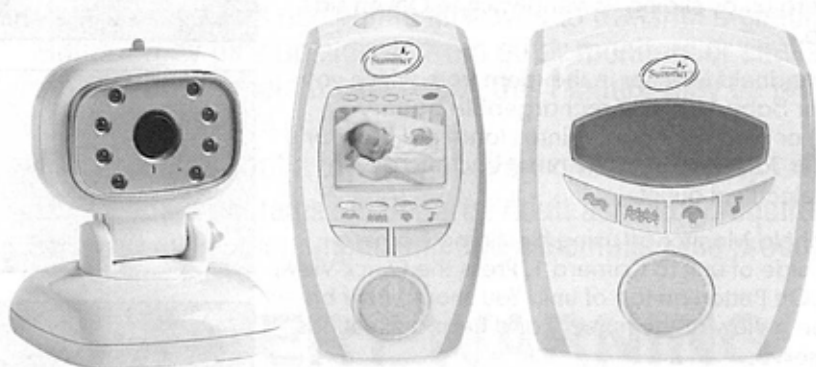

INSTRUCTION MANUAL

Secure Sounds™ Digital Handheld Color Video Monitor With Remote Controlled Crib Soother

Thank you for buying the Secure Sounds™ Digital Handheld Color Video Monitor with Remote Controlled Crib Soother from Summer Infant. Now you can soothe your baby back to sleep without disturbing them. Parents can choose from 2-speed vibration, night light, lullabies or nature sounds and have control from their location without having to disturb baby. The Crib Unit attaches securely to baby's crib and shuts off automatically after 20 minutes. The Handheld Parent's Unit with color video screen gives visual reassurance and peace of mind, keeping you and your baby in touch at all times.

See page 12 (back page) for contact information if you should need to order replacement or additional products.

QUICK SET UP:

Read the instruction manual for more detailed instructions and explanations.




- Parent's Unit should be charged for 12-16 hours before first use.
- Place Camera in nursery and position facing crib (do not place in crib or within child's reach). Tilt the Multi-Position Camera/Microphone so it is facing baby as much as possible (Figure A).
- Plug Camera AC Adapter (with small Connector Jack) into Camera's AC Adapter Receptacle and other end of cord into a standard electrical outlet.
- Use Security Clips included to secure Camera's cord away from baby's reach (Figure B). Alternately, Camera may also be attached to a wall using wall anchor and screw (included) (Figure C).
- Turn Camera on by sliding Power Switch to ON on side of Camera.
- Position Handheld Monitor in the room from which you will monitor baby. Use 4.8V rechargeable battery (included) or plug AC Adapter into Handheld Monitor's AC Adapter Jack and plug the other end into a standard electrical outlet.
- Turn Handheld Monitor on using by sliding Camera Switch on side of unit to Camera 1. Press the Quick View/Video On/Off Button on top of unit. You should now be able to see a view of the nursery and hear any sounds in the nursery.
- Adjust the volume on the Handheld Monitor as needed.

Crib Soother Unit:

- Remove the Mounting Bolt Cap.
- Insert 4 C batteries (not included) in back of Crib Unit.
- Position the Crib Soother so that the back post passes between two vertical crib rails, with the top piece of the Crib Soother resting on the horizontal crib rail. Screw the Mounting Bolt Cap back onto the back post to secure in place (Figure D). **IMPORTANT:** Please be sure that Mounting Bolt Cap is screwed on tightly to ensure that Crib Soother is mounted securely in place.

Note: Camera should face Crib Soother to operate Parent Unit remote control functions.

- The Crib Unit operates independently as well from the Handheld Monitor. Turn the Crib Soother on by sliding the switch on the right side of unit to ON.

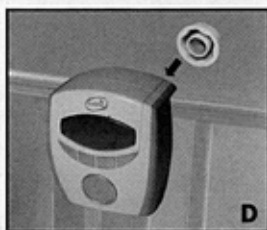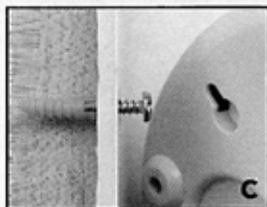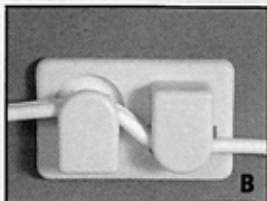

WARNING:

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.


- Prevent cord entanglement – do not place Camera in crib or within arm's reach of baby. Use enclosed Security Clips to help secure cords away from baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test Monitor before first use, periodically, and when changing location of the Camera.
- Do not use Monitor near water (such as bathtub, sink, etc).
- Keep Monitor away from heat sources (such as stoves, radiators, etc) and make sure there is proper ventilation (not on sofas, cushions, beds, etc which may block ventilation).
- Nursery monitors use public airwaves to transmit signals. This Monitor may pick up signals from other monitors or similar devices and signals broadcast by this Monitor may be picked up by other receivers.
- This product is not a toy. Do not allow children to play with it.
- This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product.

BATTERY WARNING:


- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Batteries are to be inserted with the correct polarity.
- Remove batteries when bouncer is stored for long periods of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Do not recharge non-rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Only the recommended batteries or equivalent are to be used, volts and size.
- Do not short-circuit supply terminals.
- Rechargeable batteries are to be removed before being charged.

FEATURES & COMPONENTS:

Monitor:

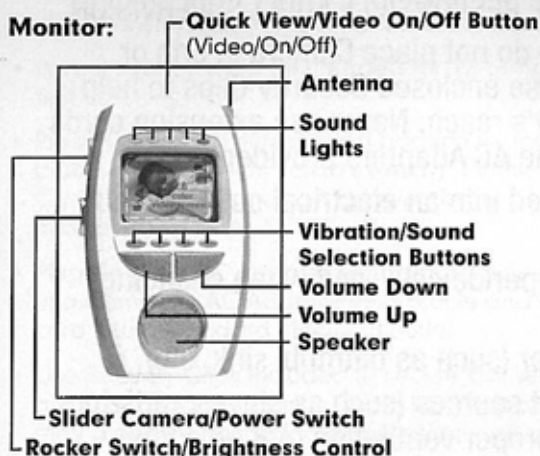


Monitor (Back View):

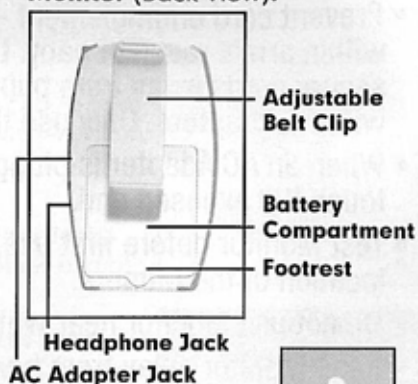

Monitor AC Adapter
(with large Connector Jack)




Camera:

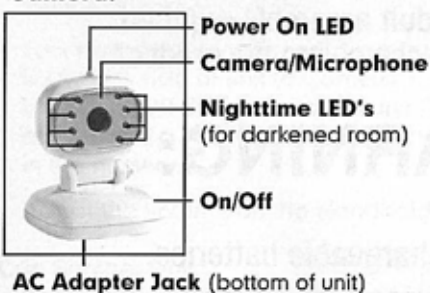



Security Clips

 (six)




Camera AC Adapter

 (with small Connector Jack)

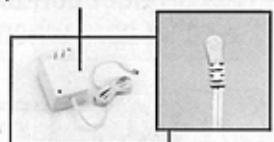

Wall Anchor (one)
Screw (one)

Crib Soother:

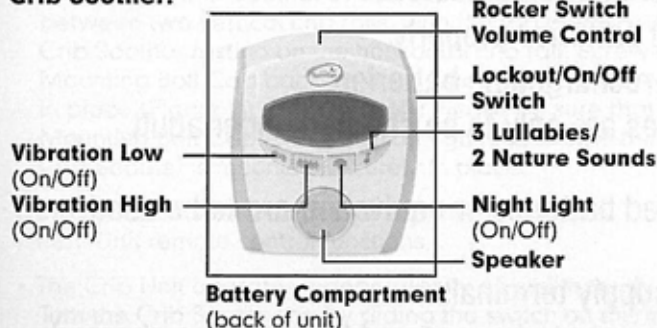

Mounting Bolt Cap
(one)

SET UP & USE:

CAMERA

Step 1: Table Top or Wall Mounting:



Tilt Camera/Microphone up, and pull up (Figure A). Determine a location for the Camera that will provide the best view of your baby in their crib. Place the Camera on a flat surface, such as a dresser, bureau, shelf, or mount the Camera on a wall. Be sure not to place Camera in crib or within arm's reach of baby. Place Camera on a hard, well ventilated surface approximately 4 – 6 feet from the child or viewing object.

Be sure to test reception and Camera positioning before mounting to a wall (see "Testing Your Initial Set Up" section).



To Wall Mount:

- Pre-drill a hole in the wall (3/16", 4.8mm, drill bit) (Figure B).
- Insert the wall anchor (included) into the hole and with a hammer, tap gently on the end until the wall anchor is flush with the wall.
- Insert the screw (included) into the wall anchor and tighten screw until only 1/4" (6.2mm) of the screw is exposed.
- Plug Camera AC Adapter (with small Connector Jack) into Camera's AC Adapter Receptacle and other end of cord into a standard electrical outlet.
- Slide the back of the Camera down onto the screw until the Camera is secure to the wall.
- Plug the AC Adapter into a standard electrical outlet.
- Secure the cord to the wall using the 6 Security Clips included to keep cord away from baby's reach (Figure C).

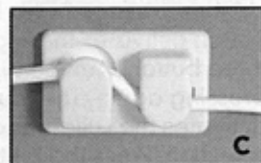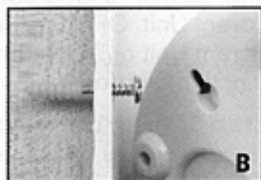

To Adjust Camera:

Pivot camera lens upward until it is standing upright in the base. Adjust Camera by turning left to right 180 degrees and tilting forward or backward for optimal viewing positions.

Step 2: Set Power Slide Switch to ON. The Power On LED will illuminate solid green.

CRIB SOOTHER

Step 1: Remove the Mounting Bolt Cap.

Step 2: Open Battery Compartment Door on the back of the Crib Soother. Insert 4 C batteries (not included) in back of Crib Unit. Insert batteries + and - orientation as marked in the Battery Compartment.


Tips:

- Make sure Camera is on and pointed at the Crib.
- If batteries are exhausted, remove them immediately from the Crib Soother.
- Properly dispose of exhausted batteries.


SET UP & USE (cont'd):

CRIB SOOTHER (continued)

Step 3: Position the Crib Soother so that the back post passes between two vertical crib rails, with the top piece of the Crib Soother resting on the horizontal crib rail. Screw the Mounting Bolt Cap back onto the back post to secure in place (Figure D). **IMPORTANT:** Please be sure that Mounting Bolt Cap is screwed on tightly to ensure that Crib Soother is mounted securely in place.

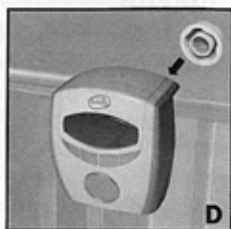


Step 4: Turn the Crib Soother on using the Slide Switch on the right side of unit. The soother has 3 modes. LOCKOUT (lock icon on unit) allows parent to control Crib Soother only with Parent Unit. OFF turns unit off and it cannot be controlled by Parent Unit or by buttons on front of unit. ON allows unit to function by pressing buttons on front of unit and by Parent Unit.

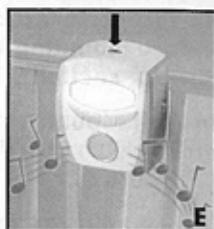

Step 5: There are four buttons on front of the Crib Soother (Figure F). The first button activates a LOW vibration of

Crib Unit. The second button activates a HIGH vibration of Crib Unit. The third button activates the Night Light. The first three buttons can be turned off by pressing again. The fourth button activates the Lullabies and Nature Sounds selection. Press the button twice to switch to the next sound. To turn off music, press music buttons until music turns off. All features have a 20 minute auto shutoff. Volume Up/Down Rocker Switch is located on top of unit (Figure E).

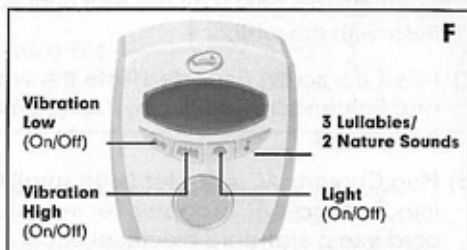

Step 6: After selecting the desired vibration, light or sound option, slide switch to LOCKOUT position to ensure baby does not reset buttons (Figure G).



MONITOR

To Use the Video Monitor with the Camera:

Step 1: Position Handheld Monitor in the room from which you will monitor your baby.

Step 2: Plug the Monitor AC Adapter (with large Connector Jack) into the Monitor's AC Adapter Receptacle. Plug the other end into a standard electrical outlet.

Step 3: Turn Handheld Monitor on by sliding Camera Switch on side of unit to Camera 1. The Power On LED will illuminate green. Press the Quick View/Video On/Off Button on top of unit for a view of the nursery. There will be a 4 second delay once Parent Unit is turned on to see picture.

Step 4: Adjust the volume as needed using the Volume Up Button and Volume Down Button on front of the unit.


Step 5: For audio and no video, press the Quick View/Video On/Off Button again to shut off the video mode.

Step 6: To turn Monitor off, slide the Camera Switch on side of unit to OFF.

SET UP & USE (cont'd):

To Use the Video Monitor in Portable Mode:

Installing the battery: For use in portable mode, the Monitor requires one 4.8V rechargeable battery (included). Open Battery Compartment Door and make sure battery is connected (Figure H). When the Power On LED is illuminated amber, the battery needs to be recharged.

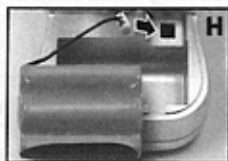

Tips:

- When battery is low, the Power On LED will illuminate amber.
- To conserve battery power, use AC Adapter whenever possible. Remove battery during long periods of non-use.
- If a battery is exhausted, remove it immediately from the Monitor.
- Properly dispose of exhausted batteries.

Belt Clip:

For convenience and portability, you can clip the Monitor to your belt or waistband after a battery has been installed (Figure I).



Footrest:

The Monitor has a built-in Footrest for tabletop convenience. Simply flip out Footrest and place the Monitor on a stable, level surface.

To Use the Video Monitor with the Crib Soother:

Step 1: The Monitor can be used as a remote-control unit for the Crib Soother. Turn the Monitor on by sliding the switch on the side of the Monitor to Camera 1.

Note: Camera must be on and in the same room as the Crib Soother for the Video Monitor to be used as a remote-control unit.

Step 2: There are four buttons to control the different vibrations, light and sound options of the Crib Soother.

Note: Crib Soother cannot be controlled if it is switched to OFF position. The first button activates a LOW vibration of crib unit. The second button activates a HIGH vibration of crib unit. The third button activates the Night Light. The fourth button activates the Lullabies and Nature Sounds selection. Press the button twice to switch to the next sound. All four buttons' functions can be turned off by pressing again.

To turn off music, press music buttons until music turns off. All features have a 20 minute auto shutoff.

To adjust the volume of the music, hold the music button down and press the Volume Up Button or Volume Down Button at the same time.

Step 3: Adjust the volume as needed using the Volume Up Button and Volume Down Button on front of unit.

Step 4: To turn Monitor off completely, slide the switch on the side of the Camera to OFF.

SET UP & USE (cont'd):

Testing Your Initial Setup:

Be sure to test your Monitor's reception before initial use. We also recommend testing your Monitor's reception periodically. Please keep in mind that the Secure Sounds™ Digital Handheld Color Video Monitor will not provide the same level of picture quality as your television with cable, satellite dish, or digital service.

To test reception you will need two adults. One adult should view the picture on the Monitor while the other is in the nursery to adjust the Camera. Often the quality of the reception can be improved by slightly repositioning the Camera, Monitor, or both. Adjust the picture brightness on the Monitor as needed by using the Brightness Rocker Switch.

To test sound quality, have one adult speak in both a normal tone and a whisper near the crib. Adjust volume on the Monitor's Volume buttons as needed.

Tips for Improving Reception:

- Position the Monitor closer to the camera if necessary.
- Move Monitor away from other monitors, cordless phones, walkie-talkies, etc.; moving even slightly could greatly improve reception.
- If you hear a feedback or squealing noise, move the Camera and the Monitor further away from each other.

Synchronizing Parent Unit and Child Unit:

The Parent Unit and Child Unit are synchronized at the factory. The Child Unit should only work when the switch on the side of the Parent Unit is on Camera 1. If the Parent Unit and Child Unit are not synchronized with each other, please synchronize them as described below.

Turn on the Camera Unit, press & hold the button on bottom of Camera Unit. Press and hold the Video On/Off Button when turning on the Parent Unit for 3-5 seconds, until you hear a beep out of the Parent Unit. Turn off both the Camera Unit & the Parent Unit, then turn back on both units and they should be paired up and synchronized.

If you purchase an additional Camera for this unit, you may repeat above procedure with the Slide Switch on the Parent Unit switched to Camera 2.

SPECIAL FEATURES:

- **Video Sleep Mode:** While operating on battery power, the video screen will go to sleep after 3 minutes of use, to conserve battery power. Audio and sound lights will function normally. Press the Video On/Off to resume viewing.
- **Sound Lights:** The 4 Sound Lights will illuminate on the Monitor depending on the level of your baby's sounds. For example, if your child is just cooing, only one or two lights will illuminate. If your baby is crying, several will illuminate, depending on how loud she is crying. This feature is particularly helpful if you are in a noisy room.

SPECIAL FEATURES (cont'd):

- **Quick View/Video On/Off Button:** This button turns the video mode on. If you only want to hear your baby, press the Quick View/Video On/Off Button again to shut off the video. The Quick View/Video On/Off Button is ideal for easily turning on the video option in the middle of the night.
- **Night Vision:** In a darkened room, the Monitor will automatically use its infrared LED's to transmit a clear image of baby, so you can see your child at night!
- **Multi-Position Camera/Microphone:** The Camera/Microphone should be positioned so it is facing baby as much as possible. This multi-position feature is unique to Summer Infant nursery monitors. It allows the microphone to focus on baby's voice while filtering out other household noises.
- **Lockout Feature on Crib Soother:** Puts Crib Unit in lock mode so child cannot activate buttons on unit.

PROBLEM SOLVING:

No picture or sound on Monitor

- Make sure the Monitor is turned on
- Make sure the AC Adapters are plugged in
- Make sure the outlets are working
- Make sure the Camera and Monitor are set to the same channel (try using the other channel if necessary)

Sound but no picture on Monitor

- Press the Quick View/Video On/Off Button once to turn on video mode
- Try adjusting the Brightness Rocker Switch on the Monitor
- Test reception by moving the Monitor and/or Camera to different locations
- Make sure the Camera and Monitor are set to the same channel (try using the other channel if necessary)

Picture but no sound

- Turn up the volume on the Monitor using the Volume Buttons
- Make sure the Parent's Unit is set to Camera 1

Picture not clear

- Position the Monitor closer to the Camera if necessary
- Move Monitor away from other monitors, cordless phones, walkie-talkies, etc.
- Try adjusting the Brightness Rocker Switch on the Monitor
- Test reception by moving the Monitor and/or Camera to different locations

Squealing sound

- Move the Camera and the Monitor further away from each other

Crib Soother cannot be controlled by Parent Unit

- Camera must be on and in the same room as Crib Soother for remote control function to work

Crib Soother does not function

- Make sure Crib Soother is turned on or in correct LOCKOUT mode

If you experience a problem that is not noted in this manual, please do not return the product to the store. Our Customer Service Department may have a simple solution to your problem. Please contact our Customer Service Department at 1-800-268-6237 (In Europe call: 44 (0) 208 420 4429) or e-mail us at customerservice@summerinfant.com.



IMPORTANT SAFETY INSTRUCTIONS:

- 1) **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
- 2) **Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3) **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- 4) **Follow Instructions** - All operating and use instructions should be followed.
- 5) **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6) **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7) **Water and Moisture** - Do not use this product near water- for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8) **Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9) **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surfaces. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 10) **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 11) **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

IMPORTANT SAFETY INSTRUCTIONS (cont'd):

12) Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits as contact with them might be fatal.

13) Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

14) Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

15) Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

16) Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged,
- b) If liquid has been spilled, or objects have fallen into the product,
- c) If the product has been exposed to rain or water,
- d) If the product does not operate normally by following the operating instructions. Adjusting only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
- e) If the product has been dropped or damaged in any way, and
- f) When the product exhibits a distinct change in performance - this indicates a need for service.

17) Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

18) Safety Check - Upon completion of any service or repairs to the product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

19) Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

20) Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Summer Infant may void the users authority to operate this equipment.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Consult the dealer or an experienced radio/TV technician for help

Summer Infant, Inc. Monitor Warranty Policy

Summer Infant, Inc. will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Summer Infant along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture. This warranty does not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration. Please contact our Customer Service Department by phone at 1-800-268-6237 or via email at customerservice@summerinfant.com for details.



visit us at

www.summerinfant.com

Feel free to contact us at the below phone number or email if you should need to order replacement or additional products.

We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our Customer Service Department at 1-800-268-6237 (In Europe call: 44 (0) 208 420 4429) or e-mail us at customerservice@summerinfant.com.

Summer Infant, Inc.
1275 Park East Drive
Woonsocket, RI 02895 USA
1-800-268-6237

Summer Infant Europe, LTD.
Office Suite 6, Second Floor
Bournehall House
Bournehall Road
Bushey, Hertfordshire
WD23 3HP UK
44 (0) 208 420 4429

© 2006 Summer Infant, Inc.
Colors and styles may vary.
MADE IN CHINA.
Please retain information for
future reference.

