Summer Infant, Inc. Monitor Warranty Policy

Summer Infant Inc. will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Summer Infant along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture.

This warranty does not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration.

Please contact our Customer Service Department by phone at 1-800-268-6237 or via email at customerservice@summerinfant.com for details.



www.summerinfant.com

We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our customer service department at 1-800-268-6237 or customerservice@summerinfant.com (For Europe Call +44 (0)208 420 4429 or customerserviceuk@summerinfant.com)

Summer Infant, Inc.

1275 Park East Drive Woonsocket, RI 02895 USA 1-800-268-6237 Summer Infant Europe, LTD.

Office Suite 6, Second Floor Bournehall House, Bournehall Road Bushey, Hertfordshire WD23 3HP UK +44 (0) 208 420 4429 © 2008 Summer Infant, Inc. Please retain information for future reference. Colors and styles may vary. **MADE IN CHINA.** 10/08



Please read the following instructions and warnings carefully.

Keep this instruction manual for future reference.

Tools required:

Phillips head screwdriver (not included).

Baby's Unit requires 4 "D" batteries (not included). In portable mode, Parent's Unit requires one 3.6V rechargeable battery (included).

For Technical Support Call 1-800-268-6237 or E-Mail at customerservice@summerinfant.com

For use with children from birth and up.

WARNING:

Adult assembly required. Exercise care when unpacking and assembling product.



INSTRUCTION MANUAL

Close2You™ Cordless Audio Monitor

Thank you for buying the Close2You[™] Cordless Audio Monitor from Summer Infant. This audio monitor is a great addition to any home. The 49 MHz digital technology eliminates interference and provides a secure and private transmission. The digital technology automatically selects a free and secure channel so you only hear your baby. It allows parent to monitor baby in the nursery from any part of the home within 600 ft. The Parent's Unit features volume control, sound lights, out of range indicator, convenient belt clip, rechargeable battery, and a recharging base. The Baby's Unit has a battery compartment that holds 4 "D" batteries (not included) in case of power outages.

02700

A WARNING:

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.

- Prevent cord entanglement do not place transmitter in crib or within arm's reach of baby. Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the components.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.) and make sure there is proper ventilation (not on sofas, cushions, beds, etc. which may block ventilation).
- Nursery monitors use public airwaves to transmit and receive signals. This monitor may pick up signals from other monitors or similar devices, and signals broadcast by this monitor may be picked up by other receivers.
- This product is not a toy. Do not allow children to play with it.

A BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries and unplug the rechargeable battery pack pig tail when product is stored for long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Use only the original rechargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found on page 8.

A CAUTION:

KEEP SMALL PARTS OUT OF CHILD'S REACH.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful inter erence, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Summer Infant Inc. may void the users authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: Use only the original rechargable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found on the next page.

SET UP & USE (continued):

Belt Clip:

For convenience and portability, you can clip the Parent's Unit to your belt or waistband.



PROBLEM SOLVING:

No sound coming from speaker

- Make sure both Units are "ON."
- Set volume to a higher setting.

Static

• Move the Parent's Unit closer to the Baby's Unit.

Squealing noise


- Parent's Unit and Baby's Unit too close together move further apart.
- Turn down the volume on Parent's or both Units.

Weak reception or no reception

- Make sure both Units are turned on.
- Move Parent's Unit closer to the Baby's Unit.
- Make sure the battery is charged.

If you experience a problem that is not noted in this manual, please do not return the product to the store. Our Customer Service Department may have a simple solution to your problem. Please call 1-800-268-6237 or e-mail us at customerservice@summerinfant.com.

FEATURES & COMPONENTS:

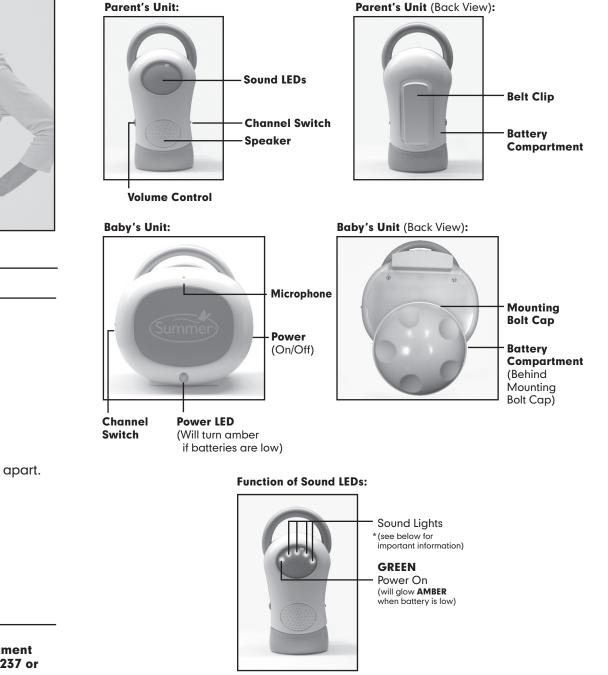

SET UP & USE:

Baby's Unit

Step 1: Remove the Mounting Bolt Cap by turning it counter-clockwise (Figure A).

Step 2: Using a Phillips head screw driver remove the 4 screws to the battery door on back of unit.

Step 3: Insert 4 "D" batteries (not included) in the back of the Baby's Unit and replace battery cover.

Step 4: Position the Baby's Unit so that the mounting bolt passes between two vertical crib rails, with the top piece of the Baby's Unit resting on the horizontal crib rail (Figure B).



Α

Step 5: Screw the Mounting Bolt Cap onto the back post to secure in place (Figure B).

Step 6: Switch Power on and switch Channel Switch to Channel A or Channel B.

IMPORTANT: Please be sure that the Mounting Bolt Cap is screwed on tightly to ensure that the Baby's Unit is mounted securely in place.

Baby's Unit Battery Life Information:

Hours Baby Unit is on per day	Months of Use
6	13.2
12	6.6
16	5
24	3.3

Note: Turning Baby's Unit off when not in use is recommended to conserve battery life.

Parent's Unit

Step 1: Place the Parent's unit in the room from which you want to monitor your baby (i.e. bedroom or living room). Plug the AC adapter into the AC Adapter Jack on the left side of the unit and the other end into a standard electrical outlet.

Step 2: Turn unit on and adjust volume level by using Volume/Power Dial on left side of Parent Unit. Set Unit to Channel A or Channel B depending on which channel Baby's Unit was set to.

SET UP & USE (continued):

To use the Parent's Unit in Portable Mode

NOTE: Parent's Unit should be charged 12-16 hours before first use. After initial 12-16 hour charge, to achieve optimal battery life, charge battery when overnight by plugging in AC adaptor and unplug all day during use.

Step 1: For use in portable mode, the Parent's Unit requires one 3.6V rechargeable battery (included). When the power LED is amber color, the battery needs to be recharged.

Parent's Unit Battery Installation:

Note: This step is only needed if replacing battery. **Step 1:** Locate the Battery Compartment on the back of the Parent's Unit and loosen the 2 battery compartment screws with a Phillips head screwdriver.

Step 2: Open Battery Compartment door and connect battery (Figure C). Ensure correct connection. Replace door and tighten 2 screws.



Step 3: If a battery is exhausted, remove it immediately from the Parent's Unit and properly disposed of exhausted battery.

To use the Baby's Unit outside of Crib:

Step 1: Remove Mounting Bolt Cap from Parent's Unit.

Step 2: Remove Mounting Bolt by lifting tab and sliding Mounting Bolt down out of groove (Figure D).

Step 3: Place Baby's Unit in the nursery or on a flat surface, such as a dresser, bureau or shelf (not in the crib or within child's reach).





NOTE: There is an AC adaptor jack on the back of the Baby's Unit under the sliding mount bolt (Figure E). A Baby's Unit AC adapter (#02770) is available by calling Summer Infant Customer Service.

WARNING: Prevent cord entanglement. When using Baby's Unit with an AC adapter do not place Baby's Unit in crib or within arm's reach of baby. Never use extension cords with AC adaptors. Only use the AC adapter purchased from Summer Infant.

Testing the Unit:

You should be able to clearly hear all levels of sound coming from the Baby's Unit through the speaker on the Parent's Unit. If no sound comes from the speaker on the Parent's unit check to make sure all cords are fully plugged in and connected and make sure the batteries are fresh. Make sure both units are turned on and on the same channel.

