

## Summer Infant, Inc. Monitor Warranty Policy

Summer Infant Inc. will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Summer Infant along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture.

This warranty does not apply to normal wear or damage from misuse, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration.

Please contact our Customer Service Department by phone at 1-800-268-6237 or via email at [customerservice@summerinfant.com](mailto:customerservice@summerinfant.com) for details.



02480

Please read the following instructions and warnings carefully.

Keep this instruction manual for future reference.

Tools required:  
Phillips head screwdriver (not included).

**For technical support call 1-800-268-6237 or e-mail at [customerservice@summerinfant.com](mailto:customerservice@summerinfant.com)**

For use with children from birth and up.

### **WARNING:**

Adult assembly required.  
Exercise care when unpacking and assembling product.



## INSTRUCTION MANUAL

### **SLIM & CLEAR™ DIGITAL AUDIO MONITOR**

Thank you for purchasing the Slim&Clear™ Digital Audio Monitor from Summer Infant. This audio monitor is a great addition to any home. The 2.4 GHz digital technology eliminates interference and provides a secure and private transmission. The digital technology automatically selects a free and secure channel so you only hear your baby. It allows parents to monitor their baby in the nursery from any part of the home within 650 feet. The Parent's Unit features volume control, sound lights, a convenient belt clip and a rechargeable battery.

 **CAUTION:**  
**KEEP SMALL PARTS OUT OF CHILD'S REACH.**



We **LOVE** our customers!  
Get to know us at:

**[www.summerinfant.com](http://www.summerinfant.com)**

We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our customer service department at 1-800-268-6237 or [customerservice@summerinfant.com](mailto:customerservice@summerinfant.com) (For Europe Call +44 (0)208 420 4429 or [customerserviceuk@summerinfant.com](mailto:customerserviceuk@summerinfant.com))

**Summer Infant, Inc.**  
1275 Park East Drive  
Woonsocket, RI 02895 USA  
1-800-268-6237

**Summer Infant Europe, LTD.**  
Office Suite 6, Second Floor  
Bournehall House, Bournehall Road  
Bushey, Hertfordshire WD23 3HP UK  
+44 (0) 208 420 4429

© 2010 Summer Infant, Inc.  
Please retain information  
for future reference.  
Colors and styles may vary.  
**MADE IN CHINA.** 10/10

732-0248000-0700

## **WARNING:**

**THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.**

- Prevent cord entanglement – do not place transmitter in crib or within arm’s reach of baby. Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the components.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.) and make sure there is proper ventilation (not on sofas, cushions, beds, etc. which may block ventilation).
- This product is not a toy. Do not allow children to play with it.

## **BATTERY WARNING:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries and unplug the rechargeable battery pack pig tail when product is stored for long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Use only the original rechargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found at the end of the instruction booklet.

## **CAUTION:**

**KEEP SMALL PARTS OUT OF CHILD’S REACH.**

### FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by Summer Infant Inc. may void the users authority to operate this equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

**NOTE:** Use only the original rechargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found on the next page.

## PROBLEM SOLVING:

No sound coming from speaker

- Make sure both units are powered on.
- Set volume to a higher setting.

Static

- Move the Parent's Unit closer to the Baby's Unit.

Squealing noise

- Parent's Unit and Baby's Unit too close together – move farther apart.
- Turn down the volume on the Parent's Unit or both units if necessary.

Beeping

- Out of Range Indicator: Parent's Unit will sound 3 consecutive beeps until unit is back in range.
- Low Battery Indicator: Once battery has between 10 - 30 minutes remaining (depending on volume setting), Parent Unit's Power LED will flash blue.

Weak reception or no reception

 
 
- Make sure both units are turned on.
- Move Parent's Unit closer to the Baby's Unit.
- Make sure the battery in the Parent's Unit is charged.

NOTE: Digital technology will automatically scan multiple channel frequencies and select a free and secure channel.

Baby unit greater than the distance from the body's use of 20 cm

**If you experience a problem that is not noted in this manual, please do not return the product to the store. Our Customer Service Department may have a simple solution to your problem. Please contact us 1-800-268-6237 or e-mail us at [customerservice@summerinfant.com](mailto:customerservice@summerinfant.com).**

## FEATURES & COMPONENTS:

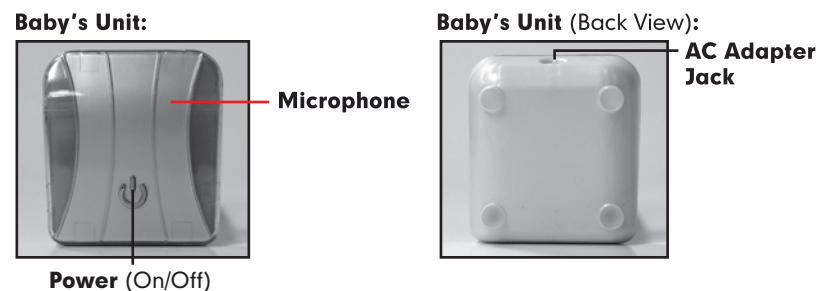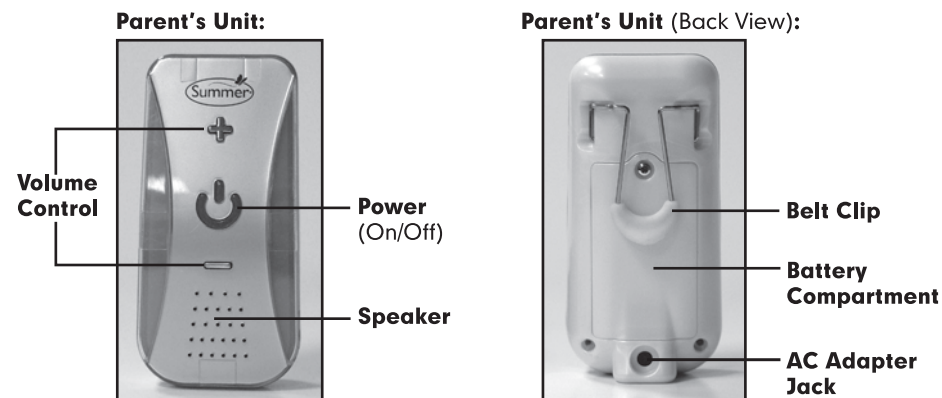

**AC Adapters (2)**



**Rechargeable Battery Pack (Parent's Unit)**

## SET UP & USE:

### Baby's Unit

**Step 1:** Place the Baby's Unit in the nursery near the crib on a flat surface, such as a dresser, bureau or shelf (not in the crib or within child's reach). Insert AC Adapter into the AC Adapter Jack on the back of the Baby's Unit. Plug the AC Adapter into a standard electrical outlet.

**Note:** Be sure to keep all cords out of baby's reach.

**Step 2:** Press and hold the power button on front of Baby's Unit for 1 second to turn on. Baby's Unit will glow blue once power is on.

### Parent's Unit

**Step 1:** Place the Parent's Unit in the room from which you want to monitor your baby (ie. bedroom, living room, etc.). Plug the AC Adapter into the AC Adapter Jack on the back of the Parent's Unit and the other end into a standard electrical outlet.

**Step 2:** Press and hold the power button on front of Parent's Unit for 1 second to turn on. Button will glow blue once power is on.

**Step 3:** Set Volume to desired level using Volume Control on front of Parent's Unit using the "+" and "-" buttons.

**Note:** After initial 12-16 hour charge, charge battery overnight and unplug all day during use to achieve optimal battery life.

### To use the Parent's Unit in Portable Mode

For use in portable mode, the Parent's Unit requires one rechargeable battery (included).

- Out of Range Indicator: Parent's Unit will sound 3 consecutive beeps until unit is back in range.
- Low Battery Indicator: Once battery has between 10 - 30 minutes remaining (depending on volume setting), Parent Unit's Power LED will flash blue.

### Battery Use and Care:

- Before using Parent's Unit in portable mode (battery), be sure to charge battery for 12-16 hours.
- To charge battery, plug the larger AC adapter into the Parent's Unit AC Adapter Jack. Plug the other end into a standard electrical outlet.
- After initial 12-16 hour charge, charge battery overnight and unplug all day during use to achieve optimal battery life.
- **Note:** Only charge battery when the low power indicator beeps. Constant recharging of your battery before low battery indicator beep comes on will decrease the life of your battery.
- To conserve battery power, use AC Adapter whenever possible. Unplug battery during long periods of non-use.
- If battery is exhausted, remove it immediately from Parent's Unit.
- Properly dispose of exhausted batteries.

## SET UP & USE (continued):

### Battery Installation For Parent Unit:

 
**Note:** This is necessary prior to initial use and also replacing battery.

**Step 1:** Remove Belt Clip by sliding one side out from back of Parent's Unit, followed by the other side (Figure A).

**Step 2:** Locate the battery compartment door on back of Parent's Unit.

**Step 3:** Loosen screw with Phillips head screwdriver, open battery door and connect new battery. Ensure correct connection (Figure B). Replace door and tighten screw.

**Step 4:** Insert belt clip back into holes on each side of monitor.

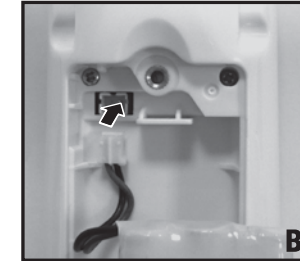

### Synching Baby and Parent Unit:

**Note:** This digital monitor set is pre-synched with security codes for privacy reasons. However, there are instances that the Baby and Parent unit will lose its code and may require you to re-synch it.

**Step 1:** Connect the Baby unit to its power supply and make sure unit is powered OFF.

**Step 2:** Turn ON the Parent unit.

**Step 3:** Press and keep holding the "-" button and at the same time press the "+" button for about 3 seconds. A continuous audible BEEP and blue flashing lights will occur. The Parent unit is now ready to be synched.

**Step 4:** Within 20 seconds, turn on the Baby unit. A single BEEP will emit from the Parent unit to signify successful synching.

### Testing the Product

You should be able to clearly hear all levels of sound coming from the Baby's Unit through the Speaker on the Parent's Unit. Digital technology will automatically scan and select a free and secure channel so you only hear your baby. If no sound comes from the Speaker of the Parent's Unit, check to make sure all cords are fully plugged in and connected and battery is charged. Also, make sure both units are turned on.

### Belt Clip:

For added convenience and portability, you can clip the Parent's Unit to your belt or waistband using the Belt Clip on the back.

