



Model No 285R



## PictureMe™

### COLOUR VIDEO MONITOR INSTRUCTION MANUAL

Please read the following instructions and warnings carefully.  
Keep this instruction manual for future reference.  
Tools required: Philips screwdriver (not included).

### MONITOR DE VÍDEO A COLOR MODE D'EMPLOI

Veuillez lire avec attention les instructions et mises en garde suivantes.  
Veuillez conserver ce mode d'emploi pour toute référence ultérieure.  
Outils requis : Tournevis à tête Philips (non fourni).

### MONITOR DE VÍDEO A COLOR MANUAL DE INSTRUCCIONES

Lea con atención las siguientes instrucciones y advertencias.  
Guarde este manual de instrucciones para futuras consultas.  
Herramientas necesarias: destornillador de punta Philips (no se incluye).

### MONITOR DE VÍDEO A CORES MANUAL DE INSTRUÇÕES

Leia atentamente as seguintes instruções e avisos.  
Guarde este manual de instruções para futura referência.  
Ferramentas necessárias: Chave de parafusos Philips (não incluída).

# PictureMe™

## COLOUR VIDEO MONITOR INSTRUCTION MANUAL

### WARNING!

**THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.**

**Adult assembly required.**

**Keep small parts away from children when assembling.**

- Prevent cord entanglement – do not place Camera in crib or within arm's reach of the baby. Use enclosed Security Clips to help secure cords away from baby's reach.
- Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the Camera.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.).
- Make sure there is proper ventilation around all monitor components. Do not place on sofas, cushions, beds, etc. which may block ventilation.
- Nursery monitors use public airwaves to transmit signals. This monitor may pick up signals from other monitors or similar devices and signals broadcast by this monitor may be picked up by other receivers.
- This product is not a toy. Do not allow children to play with it.
- This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product.

### WARNING:

- The monitor shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the monitor.
- The plug in adaptor is used as a disconnect device, shall remain readily operable.



Correct disposal of this product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

#### FCC Caution:

**Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

#### IMPORTANT NOTE:

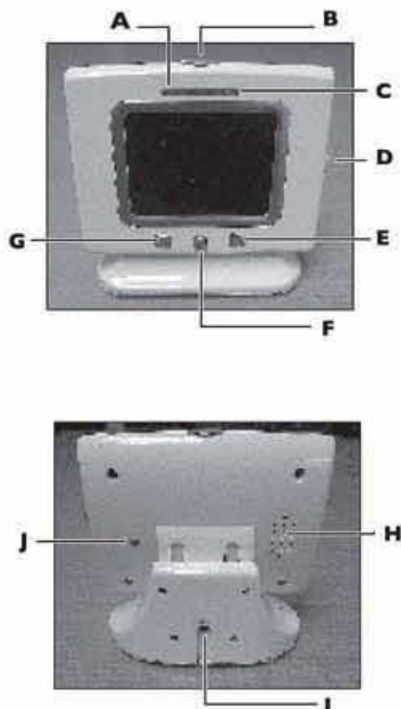 
##### FCC Radiation Exposure Statement:

**This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.**



**FEATURES & COMPONENTS:**  
**CARACTÉRISTIQUES ET COMPOSANTS :**  
**CARACTERÍSTICAS Y PIEZAS:**  
**CARACTERÍSTICAS E COMPONENTES:**

**MONITOR/MONITEUR:**



**MONITOR (PARENT UNIT):**

- A Power LED
- B VIDEO Button
- C Sound Lights
- D Monitor/Off/Pic Frame
- E Right ► Button
- F MENU Button
- G Left ◄ Button
- H Speaker
- I AC Adaptor Jack
- J CODE Button

**CAMERA:**

- K Aerial
- L Power On LED
- M Nighttime LED's (for darkened room)
- N Camera
- O Microphone
- P Power Button
- Q AC Adapter Jack (on bottom of unit)
- R CODE Button
- S Temperature Sensor

**ACCESSORIES:**

- T AC Adapter (2)
- U Security Clips (six)
- V Wall Anchor (one)
- W Screw (one)

**MONITEUR (UNITÉ PARENT) :**

- A Voyant DEL Alimentation
- B Bouton VIDEO
- C Témoins lumineux de niveau sonore
- D Moniteur/Arrêt/Cadre Photo
- E Bouton ► Droit
- F Bouton MENU
- G Bouton ◄ Gauche
- H Haut-parleur
- I Prise adaptateur AC
- J Bouton CODE

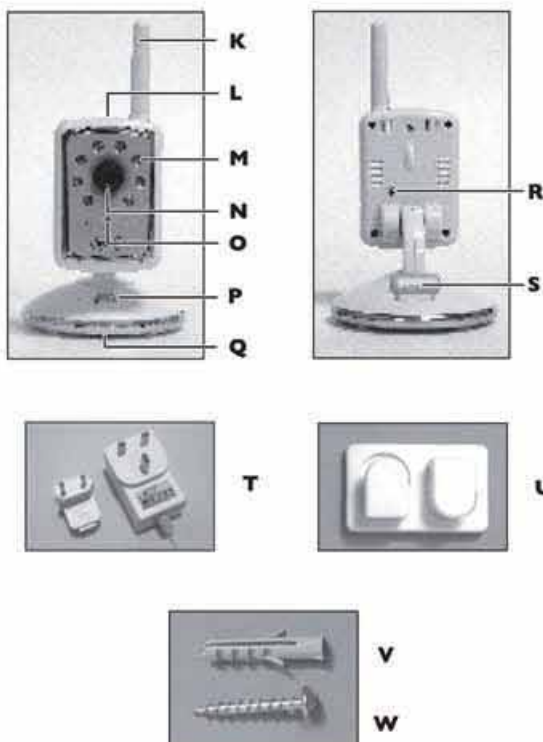 
**CAMÉRA :**

- K Antenne
- L Voyant de mise en marche DEL
- M Voyant lumineux DEL nuit (pour les chambres obscures)
- N Caméra
- O Microphone
- P Bouton Alimentation
- Q Adaptateur AC Jack (en bas de l'unité)
- R Bouton CODE
- S Capteur de température

**ACCESSOIRES :**

- T Adaptateur AC (2)
- U Clips de sécurité (six)
- V Cheville (une)
- W Vis (une)

**CAMERA/CAMÉRA:**



**MONITOR (UNIDAD DE LOS PADRES):**

- A Indicador LED de potencia
- B Botón VIDEO
- C Luces de sonido
- D Monitor/Apagado (Off)/Marco de fotos (Pic Frame)
- E Botón ► Derecha
- F Botón de MENÚ
- G Botón ◄ Izquierda
- H Altavoz
- I Conector para el adaptador de CA
- J Botón CODE

**CÁMARA:**

- K Antena
- L Indicador LED de encendido
- M Indicador LED nocturno (para habitaciones oscuras)
- N Cámara
- O Micrófono
- P Botón Alimentación
- Q Conector para adaptador de CA (en la parte inferior de la unidad)
- R Botón CODE
- S Sensor de temperatura

**PIEZAS ADICIONALES:**

- T Adaptador de CA (2)
- U Clips de seguridad (6)
- V Anclaje de pared (1)
- W Tornillo (1)

**MONITOR (UNIDADE PRINCIPAL):**

- A LED de alimentação eléctrica
- B Botão VIDEO
- C Luzes de som
- D Monitor/Off/Pic Frame (Monitor/Desliga/ Moldura de imagem)
- E Botão ► Direita
- F Botão de MENU
- G Botão ◄ Esquerda
- H Altifalante
- I Tomada do adaptador de CA
- J Botão CODE

**CÂMARA:**

- K Antena
- L LED de alimentação eléctrica ligada
- M LED nocturno (para compartimentos escuros)
- N Câmara
- O Microfone
- P Botão Alimentação
- Q Tomada do adaptador de CA (na parte inferior da unidade)
- R Botão CODE
- S Sensor da temperatura

**AUXILIAR:**

- T Adaptador de CA (2)
- U Clipes de segurança (seis)
- V Bucha de parede (uma)
- W Parafuso (um)

---

## SET UP & USE:

---

### CAMERA

#### Table Top or Wall Mounting:

Determine a location for the Camera that will provide the best view of your baby in their crib. Place the Camera on a flat surface, such as a dresser, desk, or shelf. Or mount the Camera on a wall. Be sure not to place camera in crib or within arm's reach of baby. Do not place the Camera near open windows, direct sunlight or heat sources. **Be sure to test reception and Camera positioning before mounting to a wall (see "Testing Your Initial Set Up" section).**

#### To Wall Mount:

- 1) Pre-drill a hole in the wall (3/16", 5mm, drill bit) (Figure A).
- 2) Insert the wall anchor (included) into the hole and with a hammer, tap gently on the end until the wall anchor is flush with the wall.
- 3) Insert the screw (included) into the wall anchor and tighten screw until only 1/4" (6mm) of the screw is exposed.
- 4) Insert AC Adapter into the Camera's AC Adapter Jack.
- 5) Slide the back of the Camera down onto the screw until the Camera is secure to the wall.
- 6) Plug the AC Adapter into a standard electrical outlet.
- 7) Secure the cord to the wall using the 6 Security Clips included to keep cord away from baby's reach (Figure B).
- 8) Slide switch on side of Camera to ON and the POWER ON LED will illuminate solid green.



### MONITOR

#### To Use in Video and Audio Mode:

**Step 1:** Place the Monitor in the room from which you want to monitor your baby (ie. bedroom or living room). Plug an AC Adapter into the AC Adapter Jack and the other end into a standard electrical outlet.

**Step 2:** Slide the switch on the right hand side of the unit to MONITOR.

**Step 3:** For audio and no video, press the VIDEO button on top of the unit.

#### To Adjust Volume/Brightness:

To increase the sound volume, press the right button ► on the front of the monitor. To decrease, press the left button ◀.

To adjust the brightness, press and hold the VIDEO button, and at the same time, press either the left button ◀ to decrease, or right button ► to increase the brightness.

#### To Take a Picture of Your Child

Press the VIDEO button on top of the Monitor for 3 seconds. A maximum of 10 pictures can be stored at one time. Any additional pictures will replace existing pictures in the order they were taken (the 11th picture will replace the 1st, etc).

#### To Use in Picture Frame Mode:

Move the switch on the right hand side of the Monitor to PIC FRAME. The pictures that have been stored in the unit will automatically scroll in the order in which they were taken.

**PLEASE NOTE!** THE MONITOR WILL NOT RECEIVE LIVE PICTURES OR SOUNDS OF THE BABY WHILE IN PICTURE FRAME MODE.

Press the MENU button once to exit scroll mode and view an individual picture. Press the right ► or left button ◀ on the front of the monitor to go to the next or previous picture. To resume scroll mode, press the MENU button once

To exit Picture Frame Mode, move the switch on the side of the unit to MONITOR or OFF.

#### Temperature

The camera unit has a temperature sensor on the rear of the base. Do not place the camera near open windows, direct sunlight, or heat sources, as temperature accuracy may be affected. The temperature is displayed in the top left corner of the screen of the parent unit.

To change the display between degrees Centigrade or Fahrenheit, press the MENU button, then use the Right ► or Left buttons ◀ to highlight the correct icon °C or °F. Press the MENU button to confirm.



---

## SET UP & USE continued:

---

### ADDING ADDITIONAL CAMERAS

**Note:** This product can accept two cameras. To order an additional camera (our part number 02921), please contact our Customer Service Department by phone at 1-800-268-6237 or via e-mail at customerservice@summerinfant.com for details. (For Europe Call +44 (0)208 420 4429 or customerserviceuk@summerinfant.com)

Plug the AC adapter into AC jack in the bottom of the Camera and the other end into a standard wall outlet. Slide Switch on side of Camera to ON and POWER ON LED will illuminate solid green.

#### Menu Selection:

Turn on Camera and and Monitor/parent unit, then slide the switch on the side of the parent unit to MONITOR.

Press the MENU button on the front of the unit.

Press the Right ► or Left ◀ button to select  B.

 
ADD CAMERA - Press the CODE button at the back of the monitor until the Power LED flashes amber and within 10 seconds, press the CODE button once at the back of the camera. The image from the new camera should appear on the screen.

Please bring the camera and receiver close to each other during the process, to make sure the signal is strong enough and to prevent failure caused by interference.

 

#### Camera Scanning:

The monitor is designed with a scanning feature that will allow parents to scan between the two cameras with each scan duration of about 14 seconds.

**Step 1:** Make sure additional cameras are paired with the parent unit and turned on. See "Adding Additional Camera's" section (above).

**Step 2:** To activate the SCAN feature, call up the OPTION menu by pressing the MENU button on the monitor. Scroll to  A B A↔B and select A↔B, then confirm selection by pressing the MENU button once.

**Step 3:** The monitor will scan all active cameras and image will appear on the screen for about 14 seconds.

**Step 4:** To exit scanning and to view a particular camera, press the MENU button once and select  A or  B.

**Step 5:** To resume scanning, repeat Step 2.

#### Testing Your Initial Setup:

Be sure to test your Monitor's reception before initial use.

 

We also recommend testing your Monitor's reception periodically. Please keep in mind that the PictureMe™ Colour Video Monitor will not provide the same level of picture quality as your television with cable, satellite dish, or digital service.



To test reception you will need two adults. One adult should view the picture on the Monitor while the other is in the nursery to adjust the Camera. Often the quality of the reception can be improved by slightly repositioning the Camera, Monitor, or both. It may help to place a stuffed animal or doll in the crib to simulate the position and size of your baby. Adjust the picture quality on the Monitor as needed by using the Brightness Adjustment.

To test sound quality, have one adult speak in both a normal tone and a whisper near the crib. Adjust volume on the Monitor's Volume Adjustment as needed.

#### Pairing MONITOR and CAMERA:

The Monitor and Camera are paired at the factory for privacy reasons. If the Monitor and Camera are not pairing with each other for any reason, please pair them as described below.

**Step 1:** Move the Monitor to the same area as the Camera. With both the Camera and Monitor on, press the MENU button on the Monitor to call up the OPTION menu. Select choice of channels  A or  B by scrolling the ◀ or ► button.

The selected  A or  B will be highlighted with a GREEN box.

**Step 2:** Press the CODE button until the Power LED flashes amber and within 10 seconds, press the CODE button once at the back of the camera.

**Step 3:** You should then see a picture from the Camera on the Monitor.

**Step 4:** If this is unsuccessful, you should repeat steps above making sure the Camera and Monitor are close enough to each other for pairing.

---

## TIPS FOR IMPROVING RECEPTION:

---

- Position the Monitor closer to the Camera if necessary.
- Move Monitor away from other monitors, cordless phones, walkie-talkies, etc.; moving even slightly could greatly improve reception.
- If you hear a feedback or squealing noise, move the Camera and the Monitor further away from each other.

---

## SPECIAL FEATURES:

---

- **Sound Lights:** The 5 Sound Lights will illuminate on the Monitor depending on the level of your baby's sounds. For example, if your child is just cooing, only one or two lights will illuminate. If your baby is crying, several will illuminate, depending on how loud they are crying. This feature is particularly helpful if you are in a noisy room.
- **VIDEO Button:** This button turns the video mode on. If you only want to hear your baby, press the VIDEO button again to switch off the video. The VIDEO button is ideal for easily turning on the video option in the middle of the night.
- **Night Vision:** In a darkened room, the Monitor will automatically use its infrared LED's to transmit a clear image of baby, so you can see your child at night!
- **Multi-Position Camera/Microphone:** The Camera/Microphone should be positioned so it is facing baby as much as possible. This multi-position feature is unique to Summer Infant nursery monitors. It allows the microphone to focus on baby's voice while filtering out other household noises.

---

## PROBLEM SOLVING:

---

### No picture or sound on Monitor

- Make sure the Monitor is turned on and the camera are turned on and the correct channel selected
- Make sure the AC Adapters are plugged in
- Make sure the outlets are working
- Make sure Monitor and Camera are PAIRED (refer to "Pairing MONITOR and CAMERA" section)
- Ensure unit is placed in MONITOR mode and not PIC FRAME

### Sound but no picture on Monitor

- Press the VIDEO button once to turn on video mode
- Try adjusting the Brightness Control on the Monitor
- Test reception by moving the Monitor and/or Camera to different locations

### Picture but no sound

- Turn up the volume on the Monitor using the Volume Control
- There is no sound when in PIC FRAME mode. Ensure switch D is positioned in MONITOR mode

### Picture not clear

- Position the Monitor closer to the Camera if necessary
- Move Monitor away from other monitors, cordless phones, walkie-talkies, etc.
- Try adjusting the Brightness Control on the Monitor
- Test reception by moving the Monitor and/or Camera to different locations

### Poor colour or Black and White image

- Night view image is Black & White only. Improve lighting in room for colour image

### Squealing sound

- Move the Camera and the Monitor further away from each other



**Summer Infant, Inc.**  
1275 Park East Drive  
Woonsocket, RI 02895 USA  
1-800-268-6237

**Summer Infant Europe, LTD.**  
Office Suite 6, Second Floor  
Bournehall House, Bournehall Road  
Bushey, Hertfordshire WD23 3HP UK  
+44 (0) 208 420 4429

© 2009 Summer Infant, Inc.  
Colors and styles may vary.  
Please retain information  
for future reference.

**MADE IN CHINA.** 02/10