

## INTRODUCTION

Thank you for the purchase of this quality LLOYTRON product.  
Used carefully and in accordance with the instructions set out below, it should give you trouble free service over a long period of time.  
Please read and keep these instructions for future reference.

## FEATURES

- 32 Melody Chimes
- 100m unobstructed range
- Small Strobe Light, Volume Control and Chime Selection
- 120V~ Mains Operated


### SOUND LIST

Ding Dong, Ding Dong-Ding Dong, (Knock door), Jingle bells, Happy birthday, For Alice, Minuet, Merry Christmas, Westminster, Bird's sound 1, Bird's sound 2, Cuckoo, Oh, Susanna, The yellow rose of Texas, Santa Claus, My old Kentucky home, Frosty the Snowman, Minuet (Bach), Arabia music, Wedding in the dream, Doraemon, Silent Night, Auld Lang Syne, Swan Lake, Jasmine, Butterfly Love, Turkey March

### POWER SOURCE

240V~ 50Hz  
0.7w Power

## LOCATION OF CONTROLS

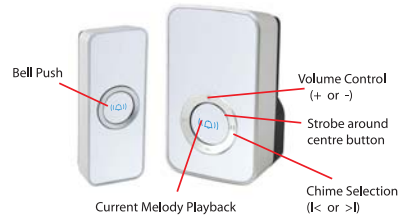

### CAUTION!

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.

## WEEE / ENVIRONMENTAL PROTECTION



### Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority.  
Improper disposal may be harmful to the environment.

## HOW TO USE

### INSTALLING THE BELL PUSH

1. Pry open the Bell Push unit.
2. Mount the bell push into an upright position onto a wall or doorframe by using the screws supplied or the double-sided sticky pad.
3. Insert a 12 Volt DC 'A23' size battery (included), ensuring the battery polarity matches the internal marking.
4. Replace the cover and press to lock into position.

### CHIME SELECTION

PLEASE NOTE: The 'Bell Push' and the 'Door Chime' lets you activate 32 optional Chimes. You can select the Chime of your choice via the following options.

- A) BELL PUSH - Insert the end of a slot screwdriver into the slot on the bottom of the 'Bell Push' case and then gently pry loose the cover. Inside the 'Bell Push' you will see a 'Button'. To move through the various Chimes, continuously Press the 'Button' until you have found the Chime of your choice. Once selected replace the Battery cover of the 'Bell Push'.
- B) DOOR CHIME - To move through the various melodies, continuously Press the '<' or '>' until you have found the Chime of your choice.  
CURRENT MELODY PLAYBACK - Press centre button on the receiver to play back current tune.  
VOLUME CONTROL - Press '+' or '-' to change volume to desired level.

NOTE: The battery can be used for one year. If the chime sounds distorted or faint, replace the old batteries with fresh ones.

### IMPORTANT -

This wireless Door chime has an operating distance of 100 meters, but local conditions and the number of walls may affect this. Metal door frames and other factors that interfere with the signal will reduce the operating distance.

## 1 YEAR GUARANTEE

**NOTE: THESE STATEMENTS DO NOT AFFECT YOUR STATUTORY RIGHTS AS A CONSUMER.**

This product has been manufactured under the strictest of quality control procedures, and using the highest quality of materials, to ensure excellent performance and reliability. It will give very good and long lasting service, provided it is properly used and maintained.

The product is guaranteed for one year from the date of original purchase. If any defect arises due to faulty materials or poor workmanship, the faulty product must be returned to the original place of purchase. Refunds or replacement is at the discretion of the store.

LLOYTRON plc offer this one year guarantee under the following conditions:

- 1) The product must be returned to the retailer with original proof of purchase.
- 2) The product must be installed and used in accordance with the instructions contained in this operating manual.
- 3) It must be used only for domestic purposes.
- 4) It does not cover wear and tear, malicious damage, misuse, neglect, inexpert repairs or consumable parts.
- 5) Lloytron plc has no responsibility for incidental or consequential loss or damage.
- 6) Lloytron plc are not liable to carry out any type of servicing work, under the guarantee.
- 7) Valid in the UK and Eire only.

