 
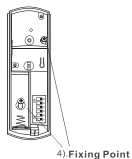 


Installation

The bell push can be mounted on door frame. The chime can be put on table or put to the strap.

Set the channel

In case of interference with neighbouring wireless device, you may need to change the DIP switch setting. To use a pen to push the 6 DIP switches at the push and chime in place. They MUST be identical for switches combinations.

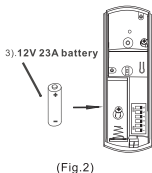


Tunes selection

There are 8 tunes selectable for user. The desired tune can be selected by changing the 3 DIP switches in the push. Different combination will have different tunes as below list:

Tunes:

- 1 UP, 2 DOWN, 3 UP Knocks (Twice)
- 1,2,3 UP Ding Dong (Twice)
- 1,2,3 DOWN Melody 1
- 1 DOWN; 2,3 UP Westminster 1
- 1,2 DOWN; 3 UP Melody 2
- 1DOWN,2 UP, 3 DOWN Melody 3
- 1,2 UP; 3 DOWN Melody 4
- 1UP; 2,3 DOWN Melody 5


Receiver unit

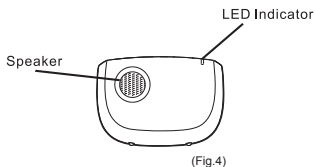

To change the battery


- Remove the battery cover
- Bell Push uses 1 x 12V A23 Battery
- Chime uses 2 x 1.5 AA Batteries

Transmitter unit

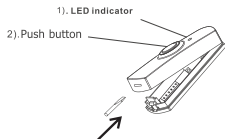

Use flat screw driver to push the hole, to open the cover.

(Fig.1)

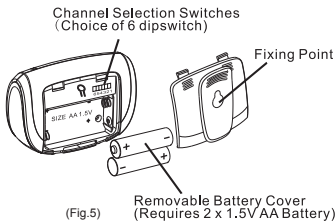

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.