 


Gaming Remote Bundle

DIGWIIRCB

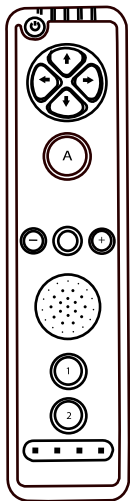 


Cautions


- Do not disassemble. This will void any and all warranty and may be extremely hazardous.
- Never push objects of any kind, other than authorized items, into the product as they may touch dangerous voltage points or short out parts that could result in fire or electrical shock.
- Avoid leaving cords in places where they are likely to be walked on or tripped over. Do not pinch, damage, or wrap cords around objects or people.
- Do not mix different brand batteries or insert them in wrong direction.
- Do not allow children to play with cords.
- Do not throw or drop the product, or expose them to strong physical shock.
- Do not expose the product to high temperatures, high humidity or direct sunlight (use in an environment where temperatures range from 42°F to 95°F).
- Refer to the Instruction Manual that came from your console.
- Failure to follow these directions may void your warranty.

1

Contents

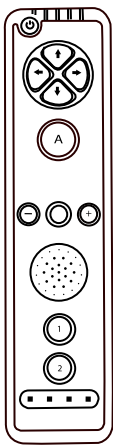

Wii Remote

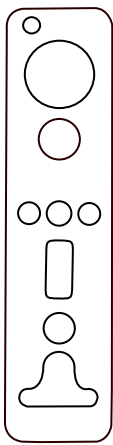 


Remote Silicone Sleeve

2

Operation Guide

1. Install batteries

 - Remove the Battery Compartment cover.
- Install two AA batteries into the Battery Compartment. Make sure the direction is correct. And replace the Battery Compartment cover.

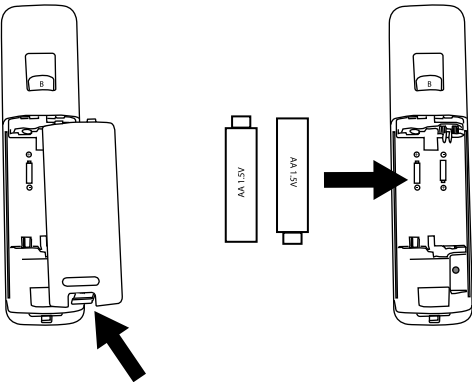


2. Synchronizing the remote with gaming console.

You have to synchronize your remote with the gaming console when you the first time use it.


3

 - Turn on your gaming console. Remove the battery cover on the back of the remote. Press and release the SYNC. button inside the cover. The Player LEDs will blink.
- Open the SD Card Slot cover on the front of the gaming console. Press and release the SYNC. button on the inside of the compartment.
- When the Player LED blinking stops, connection is complete. The LED that is illuminated indicates the player number.

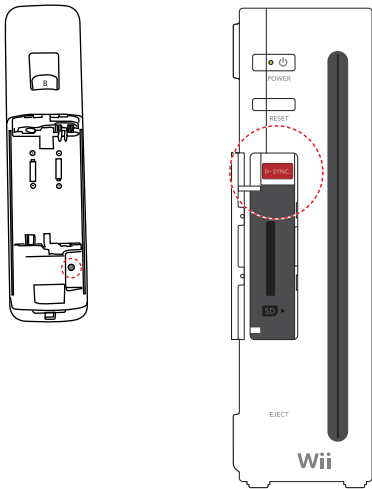

4

 3. Putting the Silicone sleeves on remote and

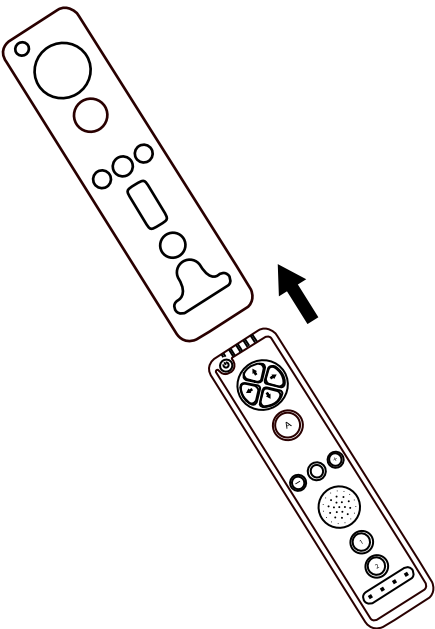

5

FCC/regulatory notices :

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This device complies with part 15 of the FCC Rules. Operation is subject to the fol-lowing two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference re-ceived, including interference that may cause undesired operation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The label was located in the battery compartment.

6

ICES-003 Statement:

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.