

## WIRELESS CONTROLLER INSTRUCTION MANUAL(ENGLISH)

### Safety Information:

1. The protective silicon skin and wrist-strap must be used at all times to avoid accidental damage or injury.
2. Always make sure there is sufficient room in which to play.

### Installing Batteries:

1. Wireless Controller requires 2 x AA batteries (not included).
2. Remove battery cover and insert batteries - please note correct polarities.
3. Then replace battery cover.
4. Please note safety information on the packaging of the batteries used.

### Controller Set-Up:

1. Turn on your Wii™ console.
2. Remove the battery cover from Wireless Controller and press the “SYNC” button. The player LEDs will flash.
3. Open SD card slot cover on the front of your Wii™ console, then press and release the “SYNC” button on inside of compartment. When the player LEDs stop flashing set-up is complete.
4. The LED that is illuminated donates your player number.

**Caution:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.