

PS3™ BLUETOOTH CONTROLLER INSTRUCTION MANUAL(ENGLISH)

Feature:

- With six-axis motion sensing technology
- HOME button
- Vibration Feedback Function
- Built-in rechargeable battery
- USB charging cable included (1.2m)

 
IMPORTANT INFORMATION:

This controller features a firmware update function. If Sony releases a PS3™ firmware update that affects the function of the controller, solutions can be found on our website: www.gamestop.com. Please retain this information for future reference.

Basic Operation:

Charging the Controller

- With the system turned on (power indicator is lit green), connect the controller to the system using a USB cable. The port indicators of the controller flash slowly and charging begins. When charging has completed, the port indicators stop flashing.

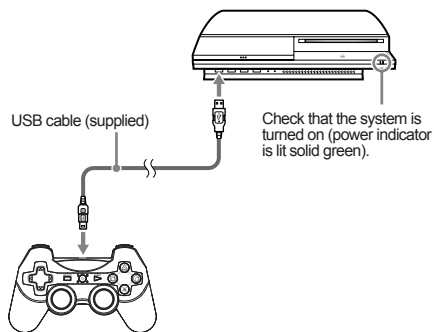

Please Notice:

Before you use the controller for the first time, or after you have not used it for a long time, you must charge the battery. (If the controller will not be used for long periods of time, the battery should be recharged at least once every three months.)

IMPORTANT: Make sure that the mini-USB plug is aligned correctly with the port before inserting into the plug to avoid damaging either the port or the plug. Recharging a battery that has not been fully discharged will shorten its life.

Hints

- The controller can be used while charging.

Preparing for use

To use this Bluetooth controller, you must first register or "pair" the controller with the PS3™ system and assign a number to the controller.

Step 1: Pair the system and the controller.

 
- When using for the first time
- When using with a different PS3™ system




Step 2: Assign a controller number.

Every time the system is turned on


Step 1: Pair the system and the controller
When using the controller for the first time or when using with a different PS3™ system, you must first pair the devices. If you turn on the system and connect the controller using a USB cable, the pairing will be completed automatically.

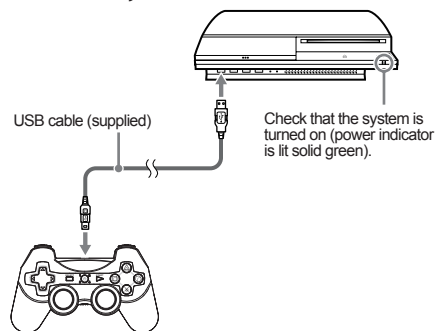

 Step 2: Assign a controller number
Each time you turn on the system, a number must be assigned to the controller.

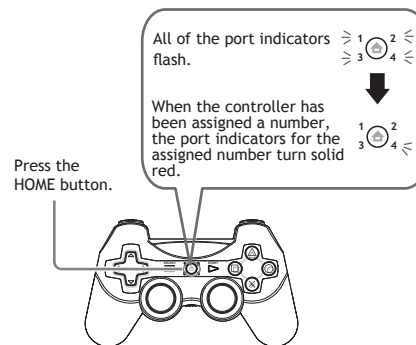

 The controller number is shown by the number above the port indicators. For numbers 5-7, add the numbers of the lit indicators.

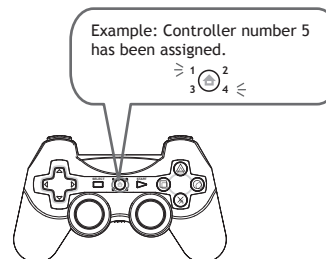

Hints

- Pairing and assigning controller numbers can only be done when the system is turned on (when the power indicator is lit solid green).
- When a paired controller is used with another PS3™ system, the pairing with the original system is cleared. Pair the controller with the system again if the controller has been used with another system.
- If the controller or the system is turned off, the port indicators on the controller will turn off and the assigned number will be cleared.

Using the controller wirelessly

 
If you disconnect the USB cable, you can use the controller wirelessly. To use it wirelessly, the controller's battery must be charged.

Hints

- The USB cable can be connected or disconnected while the controller and the system are turned on.
- If the controller does not function, press the HOME button and reassign the controller number.


Battery charge level

If you press and hold down the HOME button for more than two seconds, you can check the battery charge level on the screen.

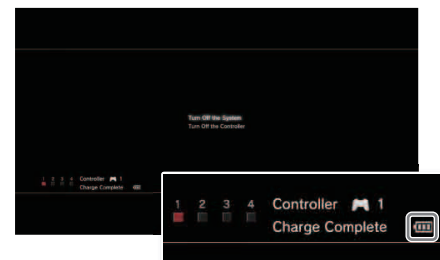


	The battery has plenty of charge.
	The battery has started losing its charge.
	The battery charge level is low.
	The battery has no charge. The port indicators of the controller rapidly flash. Charge the controller.

 Button Layout

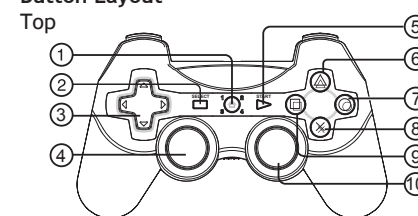

#	Description	#	Description
1	HOME button/Port indicators	6	△ button
2	Select button	7	○ button
3	Directional pad	8	× button
4	Left stick/L3 button	9	□ button
5	Start button	10	Right stick/R3 button

 Side View

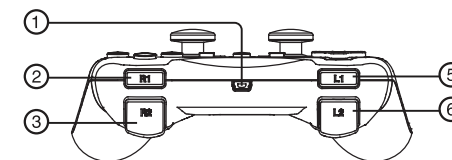

#	Description	#	Description
1	USB port	4	L1 button
2	R1 button	5	L2 button
3	R2 button		

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.