

Contents

Basic Information	2
<i>Brief Introduction.....</i>	<i>2</i>
<i>Safety Notice.....</i>	<i>2</i>
<i>Cleaning and Maintaining</i>	<i>2</i>
Before Using.....	2
<i>SIM.....</i>	<i>2</i>
<i>Phone Unlock.....</i>	<i>3</i>
<i>SIM Unlock.....</i>	<i>3</i>
Function menu Introduction	3
<i>Phonebook.....</i>	<i>3</i>
<i>Call center.....</i>	<i>4</i>
Call history.....	4
Call settings	5
<i>Tools</i>	<i>6</i>
Bluetooth.....	6
Calculator.....	6
Calendar	6
Alarm	6
Torch.....	7
<i>Multimedia</i>	<i>7</i>
Image viewer.....	7
Video recorder.....	7
Video player.....	7
<i>Sound recorder</i>	<i>7</i>
FM radio	7
<i>Messaging</i>	<i>7</i>
Inbox.....	8
Drafts.....	8
Outbox.....	8

Sent messages	8
SMS settings	9
<i>File manager</i>	9
User profile	9
Camera	9
Music palyer	9
<i>Games</i>	10
<i>Settings</i>	10
Duad SIM settings	10
Phone settings	10
Network settings	11
Security settings	11
Connectivity	12
Restore factory settings	12
<i>Services</i>	12
<i>Warning:</i>	13

Basic Information

Brief Introduction

Thank you for choosing A1000 mobile phone. Please read the manual carefully before using of mobile phones.

A1000 supports up to two SIM cards optionally. It provide you various functions like phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, external memory card (T-Flash card), calculator, calendar, torch etc as well as basic functions like call and SMS.

Safety Notice

If your phone is lost or stolen, immediately notify it to the telecommunications sector, or its outlet, to disable the SIM. This is to prevent any further possibilities of loss.

To keep your phone more safely , please take the following actions;

Activate the PIN password of your SIM card to prevent unauthorized use of your phone by others.

Cleaning and Maintaining

Take away your phone from any moisture, a place like bathroom, raining outside.

Use a soft, dry cloth to clean the phone, battery and charger.

Dirt outlet may cause the poor contact which can be a power supply problem.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card is provided by the network provider.

Warning: Be sure to power off the phone before you remove the SIM card. The mobile phone may be damaged.

Phone Unlock

To prevent any unauthorized usage of your phone, you can set the phone lock with password. With this function, you need to enter the password first to unlock the phone for any further usage.

Enter the phone lock password, press the **LSK** to confirm. For example, if the phone lock password is set to 1122, enter **1122** then, press **OK**.

SIM Unlock

To prevent any unauthorized usage of your SIM, you can set the PIN (Personal Identification Number) password. With this function, you need to enter the PIN password every time you power on the phone.

Enter the PIN password then, press the **LSK** to confirm. For example, if the PIN is set to 1234, enter **1234** then, press **OK**.

If you enter the password incorrectly three times consecutively, your SIM will be locked, and the phone will ask for PUK password.

Function menu Introduction

Phonebook

Press RSK in the idle or from the main menu to enter into the phonebook.

You can use the phonebook to save the contact with name and phone number.

In the phonebook list, select a contact, and simply press the send key to make a call.

With each contact in the phonebook list, you can have the following options:

View: View the details of the contact.

Send SMS: Send SMS to this number.

Call: Make a call to this number.

Edit: Edit the contact.

Delete: Delete the contact.

Copy: Copy the contact to Phone or SIM.

Add to Blacklist: Add this number to the blacklist.

Mark several: Mark several or all contacts to send text message or delete.

Phonbook settings

Preferred storage: You can select SIM (SIM2) or Phone to save the contact.

Extra numbers: You can set your owner number(s) and fixed dialing number(s).

Memory status: View the available memory capacity.

Copy contacts: Copy the contact(s) between SIM and phone.

Move contacts: Move the contact(s) between SIM and phone.

Delete all contacts: Delete all contact(s) in SIM or phone.

Call center

Call history

Missed calls

Missed call menu will display the missed call list. Select a missed call number and press the **LSK** to have "Options":

View: View the details.

Call: Call to the missed call number.

Send SMS: Send SMS to the missed phone number.

Save to Phonebook: Save the missed phone number.

Edit before call: Edit the missed phone number before dialing.

Delete: Delete the missed phone number.

Delete all: Delete all missed phone numbers.

Dialed calls

Dialed call menu will display the dialed out call list. Select a dialed call number and press the LSK to have "Option":

Received calls

Received call menu will display the received call list. Select a received call number and press the LSK to have “Option”:

Call settings

With this menu, you can set the following items:

Call waiting

With this function on, if you are on line and there is an incoming call, the network will notify you.

Avtivate: Set this function on.

Deactivate: Set this function off.

Query status: Query the function’s status.

Call divert

With this function on, you can set the call condition by which callers are diverted to another phone number.

Call barring

With this function on, you can set to restrict incoming calls and outgoing calls from your phone.

Line switching

This is a network service to select phone line 1 or 2, which is the subscriber number for making calls.

Advanced settings

Blacklist: To filter and block incoming calls.

Auto redial: This option allow you set redial automatically when the call receiver is busy.

Call time reminder: You can set the call time reminder to give you alarm of call time.

Off Close the function.

Single Enter any number between 1-3000 so that the phone give you

alarm of call time according to the specified time.

Periodic Enter any number between 30-60 so that the phone give you alarm of call time on every minute until the times you set.

Answer mode: you can select answer mode when receive incoming call.

Tools

Bluetooth

Power: Activate Bluetooth on or off.

Visibility: If this menu set on, other devices can find this Bluetooth device.

My device: Can search for Bluetooth devices nearby.

Search audio device: Can search for audio supportive device like Bluetooth headset.

My name: Can modify Bluetooth device name.

Advanced Options :

Audio path Set the path of sound so that a sound file in the phone can be set to transferred to the handsfree device.

Storage To set the storage of transferred file as phone or memory card.

My address Display the address of Bluetooth.

Calculator

Your mobile phone provides a calculator with 4 basic functions to facilitate simple calculations.

Calendar

Enter **Calendar** submenu, screen will display the current month, click date to change date.

You can enter “**Add Event**” menu to add and edit routing, and then you can view, view all, add event, and jump to date and so on.

Alarm

The mobile-phone can set five alarms at most, and hold out the alarm when the phone is power off.

Torch

You can turn on\off the torch with this menu.

Multimedia

Image viewer

You can look over the photos list conveniently with this menu.

Video recorder

Camcorder settings: Set the camcorder in details.

Video settings : Set the video in details.

Storage: Set the storage between Phone and Memory card to save the file(s).

Video player

With this menu, you can view the saved video clip. Press the LSK to have further "Options".

Sound recorder

You can record sound in AMR, WAV format and use it as ring tone, attachment and so on.

FM radio

In the **FM Radio** menu interface, press “**Option**”.

Channel list: to save and edit the auto-search result.

Manual input: manually enter the figure of the channel you want to start exact search;

Auto search: auto search channels.

Settings: to set Background Play and Loud Speaker.

Messaging

Write Text message

Use this menu to create and send a message. The SMS function is

dependent on the network service and your network may or may not support the service. Press the LSK to have further "Options":

Send to: Send the written message.

Input method: Offer various input methods.

Save to Drafts: Save message.

Enter the **Advanced** menu

Insert number: Insert number from phonebook.

Insert name: Insert the name from phonebook.

Insert bookmark: Insert bookmark from Bookmarks.

Inbox

All received messages will be saved here. Press LSK to have further "Options":

View: View the message.

Reply: Reply SMS to the sender.

Call sender: Make a call to the sender.

Forward: Forward the message to other people.

Delete: Delete the message.

Delete all: Delete all messages in Inbox.

Save to Phonebook: Save the sender's number to phonebook.

Sort by: Sort by sender, subject, unread/read, message size.

Filter by: Filter by SIM1, (SIM2) and ALL message.

Mark several: Can mark several messages to delete.

Drafts

After editing of information, information will select save to draft box location.

Outbox

In sending messages, select save and send when after the failure, and transmit information will be stored in boxes.

Sent messages

In sending messages, select save and send and the news will save to transmit information.

SMS settings

Within the message settings sub-menu, you can define default values on common parameters for mobile-originated messages.

File manager

Use this menu to view the stored files in the phone or memory card. In the main menu interface, click “**File Manager**” to enter this submenu, menu display **Phone** and “**Memory Card:** \”(if the Memory card have insert into the mobile-phone).

User profile

Your mobile phone provides many different user profiles for you to set your mobile phone’s ring tone according to case and environments like General, Silent, Meeting, Outdoor. Select the needful profile:

Activate: to activate selecting profile.

Customize: to set the selected mode

Camera

Presses the “**Option**”, can select the operation as follows:

Album: You may view the photos in this menu.

Camera settings: To set some relative spec.

Image settings: You may set image size and quality.

White balance: You may set the balance of light.

Scene Mode: To take photos with different scene.

Effect Settings: To set special shot effect

Storage: To set the default storage path.

Restore default: To restore to the camera’s default settings.

Music palyer

In the **Music Player** menu interface, press the “**List**” to display the play list of music. Pressing the “**Option**”, can **Play** the current music, look over **Detail** message of music, **Refresh List** and **Settings** the attribute about the Music Player.

Games

A1000 offers only one game - snake.

Settings

Dual SIM settings

You can select three kinds of mode: **Dual SIM open, only SIM1 open, Only SIM2 open.**

Phone settings

With this menu, you can set the following settings:

Time and Date

With this menu, you can set time and date.

Set home city: Your phone offers 78 international cities and you may select any specific city.

Set time/date: Set time and date.

Set format: Set the format of date.

Update with time zone: Set time zone on /off to activate auto-time update.

Language

A1000 supports Spanish and English.

Pref. input method

The phone supports various kinds of text input methods.

Display

Wallpaper: You can set wallpaper.

Power on display: You can set the display for power on.

Power off display: You can set the display for power off.

Show date and time: You can set the format of displaying date and time on idle screen.

Flight mode

You can set the mode between Normal and Flight mode. In Flight mode, you can set all RF power off but still use the multimedia functions of the phone.

Dedicate key

You can set the shortcut of specified menus for navigation key.

UART settings

You can set it as any SIM card.

Misc. settings

Set the brightness of screen and time for entering into power save mode.

Network settings

Network selection

New search: Re-search the network.

Select Network: You can select a network from searched network list.

Selection mode: You can select a network between automatic and manual mode. But it may cause a network problem, so please be careful with this function.

Preferences

You may set the preference of your service provider. Press the LSK to have further "Options".

Change priority: Change the priority of your service provider.

Delete: Delete the currently selected service provider.

Security settings

This function provides you with related settings about safety use.

SIM security settings

PIN lock

You may set PIN lock to prevent any unauthorized usage of your phone. If you set PIN lock on, you need to enter the PIN password whenever you power on the phone.

Change PIN: To change the PIN password, you need to enter the current PIN password first.

Change PIN2: Same with “Change PIN1” above for PIN2.

Phone security

Phone lock:

You may set Phone lock to prevent any unauthorized usage of your phone. If you set Phone lock on, you need to enter the password whenever you turn on the screen.

Change password: To change the password, you need to enter the current password first.

The factory set default password is 1122.

Auto keypad lock

You can set auto keypad on or off.

Connectivity

This menu allows you to change the settings for the GSM network services. For further details, contact your service provider.

Restore factory settings

You can restore the relevant settings to the manufacturer’s settings.

The factory set default password is 1122.

Services

A1000 supports WAP and has the following items:

Home page: You can set homepage.

Bookmarks: You can set some website you visit frequently as Bookmark.

Search or input URL: You can edit any website you want to visit.

Recent pages: It offers you recent websites you visited.

Settings: You may set homepage, data account, browser options,

preferences settings.

Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the

highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.