


Overview

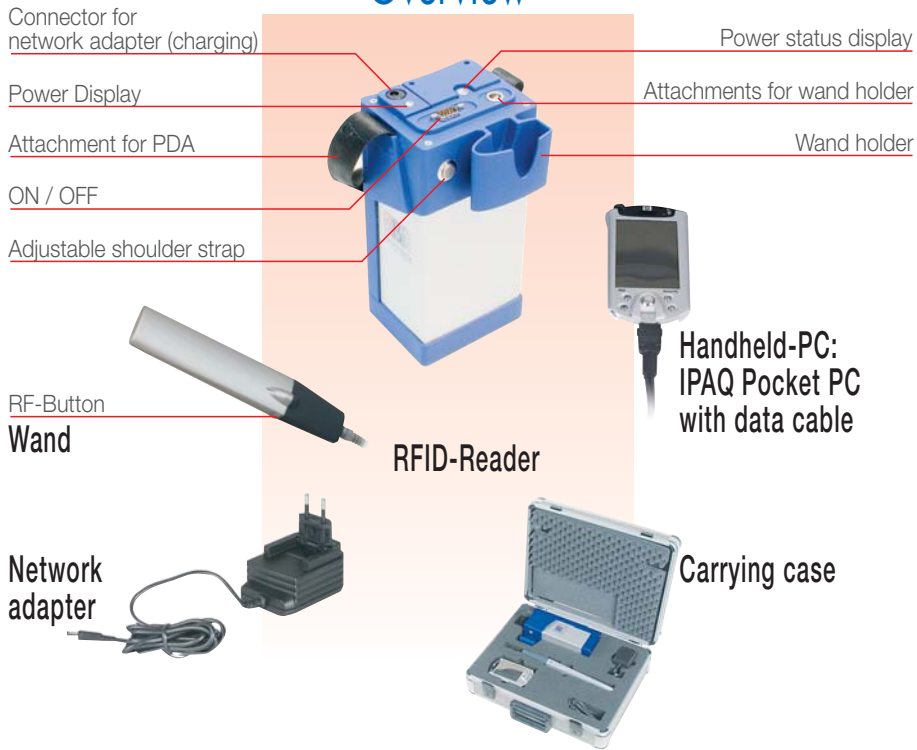

tro facevano grande inf 00010110001100110
 che erano genti 10010000001000001
 oldo. Tufti que 101000110001010
 r lunga mofier 0001111000100
 aggiote fioreo ita 000100010010001
 lechati & folu m 1001010011110000
 steffi ne ufa ne ra 100100000000010
 ille man fra Ter 1001100111000100
 (facevano st 100100100101001
 decto nel pontificato 100110010101001000

BIBLIOTHECA
 RFID Library Systems AG



BiblioWand™

User Manual

Read carefully before use!

Security precautions

Use without regard for instructions or security precautions can be dangerous.

Hand Scanner

Warning: electromagnetic field

Network part

Used outlets must be installed in conformity to standards, and be easy to reach.
 Unplugging can cause disconnection from the net. (charging adapter)
 When not in use, disconnect from the net. (charging adapter)

General

- Only use specific batteries. (type 11151202)
- Do not open scanner. All repairs only through dealers/customer service.
- Use only indoors. Protect scanner from contact with water.
- Remove battery prior to disposal. Dispose of battery and scanner in accordance with environmental standards either at a location designated for disposal or at location where scanner was purchased.
- Disconnect scanner from net prior to cleaning. Do not clean scanner with fluids. Do not use cleaning agents.
- Only use adapter included in delivery (Egston N2UFSW3)

Technical Data

	Battery	Type	NiMHd
		Running Time	2 Stunden
	RFID Reader	Carrier Frequency	13,56 MHz
		Rating	12V ~~, 800 mA
		Max. Temperature	40 °C
	Network Adapter	Capacity	24 W
		Input Voltage	100 - 240 VAC
		Output Voltage	15 VDC

Wand goes in holder

1



Connect wand with RFID-Reader

2



RFID-Reader shoulder strap

3



Connect it handheld PC

4




5 Activate RFID-Reader

Battery:



To load battery:

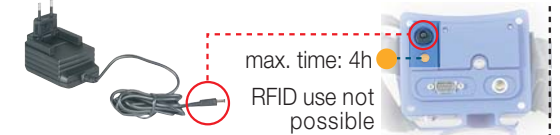

6 Activating the handheld PC



7 Take wand in hand

Take handheld PC in other hand or fasten onto carrying belt



8 Position scanner in front of book case

9 Activate wand

Press RF button during search



10

Place wand in holder

11

Turn off RFID Reader

12

Disconnect handheld PC from RFID Reader

Staying as parallel as possible with spine of book
Hold as close to book as possible

