

DC Voltage Measurement

A/D - Converter Resolution nominal

High Range: 1LSB = 6.1 μ V, full range = -100...+300 mV

Low Range: 1LSB = 61nV, full range = -1.....+3mV

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

Calibration Factors	X	Y	Z
High Range	404.662 \pm 0.02% (k=2)	404.844 \pm 0.02% (k=2)	404.267 \pm 0.02% (k=2)
Low Range	3.93273 \pm 1.50% (k=2)	3.98110 \pm 1.50% (k=2)	3.97938 \pm 1.50% (k=2)

Connector Angle

Connector Angle to be used in DASY system	141.0 $^{\circ}$ \pm 1 $^{\circ}$
---	-------------------------------------

Appendix

1. DC Voltage Linearity

High Range	Reading (μV)	Difference (μV)	Error (%)
Channel X + Input	199996.51	-1.40	-0.00
Channel X + Input	20001.72	1.16	0.01
Channel X - Input	-19998.74	2.23	-0.01
Channel Y + Input	199995.49	-2.08	-0.00
Channel Y + Input	20001.55	1.15	0.01
Channel Y - Input	-19997.38	3.75	-0.02
Channel Z + Input	199996.10	-1.20	-0.00
Channel Z + Input	19999.08	-1.38	-0.01
Channel Z - Input	-19999.72	1.40	-0.01

Low Range	Reading (μV)	Difference (μV)	Error (%)
Channel X + Input	2002.82	1.92	0.10
Channel X + Input	202.17	0.93	0.46
Channel X - Input	-198.65	-0.18	0.09
Channel Y + Input	2002.22	1.54	0.08
Channel Y + Input	200.42	-0.71	-0.35
Channel Y - Input	-199.73	-1.09	0.55
Channel Z + Input	2000.94	0.28	0.01
Channel Z + Input	200.01	-1.13	-0.56
Channel Z - Input	-200.29	-1.60	0.80

2. Common mode sensitivity

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

	Common mode Input Voltage (mV)	High Range Average Reading (μV)	Low Range Average Reading (μV)
Channel X	200	3.04	1.31
	- 200	-0.45	-1.35
Channel Y	200	3.69	2.42
	- 200	-3.59	-3.54
Channel Z	200	-7.37	-7.51
	- 200	5.30	5.09

3. Channel separation

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

	Input Voltage (mV)	Channel X (μV)	Channel Y (μV)	Channel Z (μV)
Channel X	200	-	-0.18	-3.67
Channel Y	200	6.93	-	-0.17
Channel Z	200	7.39	5.46	-

IMPORTANT NOTICE

USAGE OF THE DAE 3

The DAE unit is a delicate, high precision instrument and requires careful treatment by the user. There are no serviceable parts inside the DAE. Special attention shall be given to the following points:

Battery Exchange: The battery cover of the DAE3 unit is connected to a fragile 3-pin battery connector. Customer is responsible to apply utmost caution not to bend or damage the connector when changing batteries.

Shipping of the DAE: Before shipping the DAE to SPEAG for calibration the customer shall remove the batteries and pack the DAE in an antistatic bag. This antistatic bag shall then be packed into a larger box or container which protects the DAE from impacts transportation. The package shall be marked to indicate that a fragile instrument is inside.

E-Stop Failures: Touch detection may be malfunctioning due to broken magnets in the E-stop. Rough handling of the E-stop may lead to damage of these magnets. Touch and collision errors are often caused by dust and dirt accumulated in the E-stop. To prevent E-stop failure, Customer shall always mount the probe to the DAE carefully and keep the DAE unit in a non-dusty environment if not used for measurements.

Repair: Minor repairs are performed at no extra cost during the annual calibration. However, SPEAG reserves the right to charge for any repair especially if rough unprofessional handling caused the defect.

DASY Configuration Files: Since the exact values of the DAE input resistances, as measured during the calibration procedure of a DAE unit, are not used by the DASY software, a nominal value of 200 MOhm is given in the corresponding configuration file.

Important Note:

Warranty and calibration is void if the DAE unit is disassembled partly or fully by the Customer.

Important Note:

Never attempt to grease or oil the E-stop assembly. Cleaning and readjusting of the E-stop assembly is allowed by certified SPEAG personnel only and is part of the annual calibration procedure.

Important Note:

To prevent damage of the DAE probe connector pins, use great care when installing the probe to the DAE. Carefully connect the probe with the connector notch oriented in the mating position. Avoid any rotational movement of the probe body versus the DAE while turning the locking nut of the connector. The same care shall be used when disconnecting the probe from the DAE.

4. AD-Converter Values with inputs shorted

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

	High Range (LSB)	Low Range (LSB)
Channel X	16109	15852
Channel Y	16158	16754
Channel Z	16279	16611

5. Input Offset Measurement

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

Input 10M Ω

	Average (μ V)	min. Offset (μ V)	max. Offset (μ V)	Std. Deviation (μ V)
Channel X	1.30	-0.50	3.30	0.53
Channel Y	-0.18	-1.65	1.35	0.50
Channel Z	-0.26	-1.48	1.14	0.47

6. Input Offset Current

Nominal Input circuitry offset current on all channels: <25fA

7. Input Resistance (Typical values for information)

	Zeroing (kOhm)	Measuring (MOhm)
Channel X	200	200
Channel Y	200	200
Channel Z	200	200

8. Low Battery Alarm Voltage (Typical values for information)

Typical values	Alarm Level (VDC)
Supply (+ Vcc)	+7.9
Supply (- Vcc)	-7.6

9. Power Consumption (Typical values for information)

Typical values	Switched off (mA)	Stand by (mA)	Transmitting (mA)
Supply (+ Vcc)	+0.01	+6	+14
Supply (- Vcc)	-0.01	-8	-9