

C-1. 簡易版說明書(正面)

Remote Control Model #RC-S01

產品規格 / Product Specification

 
1. Model : RC-S01
2. Dimensions : $\Phi 47 \times 15 \text{mm}$
3. Weight (including battery) : $21 \text{g} \pm 5 \text{g}$
4. Battery / Voltage : CR2032 3V (Lithium coin battery)
5. Radio Frequency : 2.4GHz
6. Operation Temperature : $0^{\circ}\text{C} - 50^{\circ}\text{C} / 32^{\circ}\text{F} - 122^{\circ}\text{F}$

NCC 警語

- 取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
- 低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

1 Button Overview / 按鈕功能說明


English

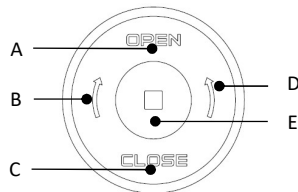

- A. Open Button: Tap once; shade opens to its upper limit
- B. Lower Button: Press to move shade downward slightly
- C. Close Button: Tap once; shade closes to its lower limit
- D. Raise Button: Press to move the shade upward slightly
- E. Stop Button: Press to stop shade in any position

※ Raise & Lower Button function vary with shade type.

 中文

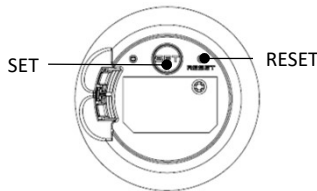

- A. 開啟(OPEN)：窗簾移動至完全開啟位置
- B. 調降：往關閉方向微幅調動
- C. 關閉(CLOSE)：窗簾移動至完全關閉位置
- D. 調升：往開啟方向微幅調動
- E. 停止：使窗簾停止於固定位置

 
※ 調升與調降功能可能因搭配不同窗簾使用而有所差異

2 Battery Replacement / 電池替換

The Remote Control uses one coin battery CR2032 which is pre-installed.
此遙控器使用1顆鈕扣電池CR2032，出貨時已內含電池

CAUTION: When installing the battery be sure to keep safely out of reach of small children, primarily those age 6 and under.

警告：請妥善保管新舊電池，使其遠離六歲以下嬰幼兒，避免誤吞造成危險

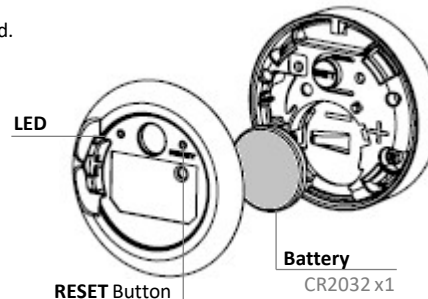

C-2. 簡易版說明書(背面)

Remote Control Model #RC-S01

 
3 Assigning Shades to Group / 遙控器與窗簾配對

IMPORTANT! Please assign only one shade type to 1-Group Remote for optimal operation.


重要! 請配對單一様式之窗簾於同一群組，以達最佳操作體驗。

English

◆ Shade Button / 窗簾按鈕

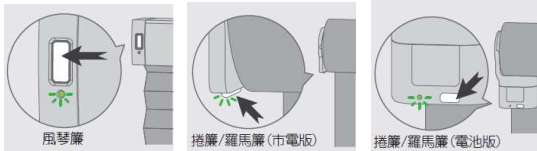

◆ Remote SET mode / 遙控器SET模式

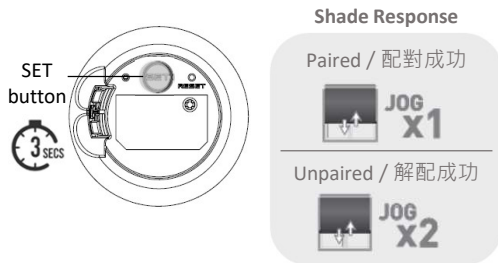 

3-1 Quickly press the **shade button** **3 times** on the shade you want to assign. The green light will flash while in pairing mode.

3-2 Press the **SET** button on the back of the remote control for **3 seconds** to activate setting mode (LED will flash green), and the shade will be assigned to remote automatically.

The shade will jog once when successfully assigned.

i Repeat above steps 3.1 - 3.2 on assigned shade to remove from the group.

The shade will jog twice when successfully removed the assignment.

3-3 Press the **SET** button on the back of the remote control for **3 seconds** again to deactivate setting mode (LED will stop flashing).

NOTE: Setting mode will time out after 20 seconds of inactivity.

中文

FCC/IC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

3-1 將欲配對之電動窗簾**按鈕**快速連按**3下**，使窗簾進入配對模式(綠燈慢閃)

3-2 長按遙控器背面**SET****3秒**進入設定模式(綠燈慢閃)，將自動與窗簾進行配對當配對成功，窗簾抖動一次

i 已配對之窗簾，重複上述步驟3.1~3.2則解除配對當解除配對成功，窗簾抖動兩次

3-3 配對/解配完成，長按遙控器背面**SET****3秒**退出設定模式(綠燈停閃)

註：若20秒內未操作，也將自動退出設定模式