

7 inch Tablet PC /MID SM708

TABLE OF CONTENTS

2 POWER BUTTON USAGE	1
3 TOUCH-SCREEN NAVIGATION	3
4 U-Disk	3
5 USING MICRO-SD CARD	4
6 GETTING STARTED	5
7 DESKTOP	7
8 SCREEN LOCK.....	9
9 PRE-LOADED APPLICATIONS	10
10 STATUS AND NOTIFICATION AREA.....	13
11 APPLICATION MANAGEMENT.....	15
Install Android Applications	15
Download Android Applications directly from a Website.....	16
Uninstalling Android Applications	17
12 WEATHER	18
13 CLOCK.....	19
Alarm	19
14 APP MARKET	22
Download Applications.....	22
App Market Function Menu	23

15 BROWSER	24
16 CALENDAR	25
Add Event	26
17 CAMERA	26
Take Pictures	27
Take Videos.....	27
Single-motion Panorama.....	28
18 CALCULATOR.....	29
19 MYRECODER	29
20 EMAIL.....	30
Add Email accounts	30
Email Inbox.....	31
Edit Email Accounts	33
Delete Email Accounts.....	34
21 FILE BROWSER	36
Copy Media between Computer and Tablet	37
Connected to the local area network shared folders	38
Delete files	39
22 MY MUSIC	39
Play Music	39
Create Music Widget	41
The Operation with Music and Playlist	41

Sort by title or date added.....	42	33 SETTINGS	59
23 MY VIDEO	43	FREQUENTLY ASKED QUESTIONS.....	73
Play Video.....	43	BATTERY MANAGEMENT	76
Create Video Widget.....	44	Charge battery	76
The Operation with Video.....	44	IMPORTANT SAFETY PRECAUTIONS.....	77
The Operation with Playlist	45	Appendix : The optional parts and models.....	78
24 MY PHOTO.....	46		
The operation with picture list.....	47		
Slide show and settings.....	47		
Doodle.....	48		
Create Photo Widget	49		
25 Gallery	49		
The operation with photo and video list	49		
26 SCREEN CAPTURE	51		
27 TASK MANAGERMENT	52		
Stopping Applications.....	52		
Uninstall Applications.....	53		
Install Applications	53		
28 WI-FI	54		
29 3G NETWORK	55	System: Android 4.0	
30 GPS	57	Proxessor: VIA8850	
31 PPPoE SETTINGS	58	Edition: V01	
32 ETHERNET	58	DA42	

1 OUTLOOK DESCRIPTION



2 POWER BUTTON USAGE

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

Reboot: Press the power button and hold for 2 seconds → Tap **reboot**.

Quickly Hibernate/wake-up: Press the power button and hold for 2 seconds → tap **Hibernate** to enable the

device to hibernate, or press the power button briefly to make the device to hibernate/ wake-up.

Airplane mode: Press the power button and hold for 2 seconds → Tap **Airplane mode**.

Silent mode: Press the power button and hold for 2

seconds → Tap .

Vibrate mode: Press the power button and hold for 2

seconds → Tap .

Normal mode: Press the power button and hold for 2

seconds → Tap .

Force Off: If device does not respond, press and hold the power button for 5 seconds.

(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device. It's will clear the all data, Please be careful to use the

function. (**Note:** The current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset).

3 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

Tap: Quick tap & release on an item on the screen.

Touch & hold: Touch and hold one place about 2 seconds, and then release to display an options window.

Finger slide: Touch & slide your finger across the screen and then release.

☆ *To avoid scratching or crushing, do not place objects on the touch screen surface.*

4 U-Disk

Insert U-Disk

Insert your U-disk into the device via USB host

transfer cable. When ready for use, enter into the file browser and switch to the USB folder to view it.

Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap  → **Settings** →

Storage → **USB storage** → **Unmount this storage device**. When it displayed **Mount this device** and then you can unplug the U-disk.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

5 USING MICRO-SD CARD

☆ *The device supports maximum 32GB microSD card.*
Insert your card into the microSD slot until it clicks into place. It's OK.

Remove microSD Card

Close all applications or documents which have been opened on the card. Tap  → **Settings** → **Storage** → **SD card** → **Unmount this storage device**.

When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

- ☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*
- ☆ *We recommend using major brands of memory cards to avoid incompatibility.*

6 GETTING STARTED

Charge the device

- ☆ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in

the status of "off").

Turn the device on

Press the power button briefly.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you to set up your Wi-Fi network now.

- 1.Tap  → **Settings**.

- 2.Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local

Wi-Fi Network found. A lock indicates secure **Wi-Fi**

networks that require input of password to connect.

1.Tap the desired network which you want to

connect → enter the **Network Password** if applicable

→ tap **Connect**.

- 2.Tap  to return to the Desktop screen.

☆ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and

follow the prompts to add your network.

7 DESKTOP



1. Back.
2. Home.
3. Recent Apps.
4. Menu.
5. USB debugging connected
6. USB connected
7. Current time.

8. Screen capture.

9. Volume.

10. Wireless network

11. Battery Status.

12. Google search.

13. Voice search

14. Add Widgets/Apps shortcuts or setting
wallpapers and more.

15. Tap to view the applications screen

Can make many personalized operation through "add" icon , such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

★ Tap on any application icon to launch it.

★ Touch, hold and then slide icons to reposition them on the screen.


★ Touch, hold and slide icons onto 

to remove them from the **Desktop** screen.

8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

Lock screen displays the following:

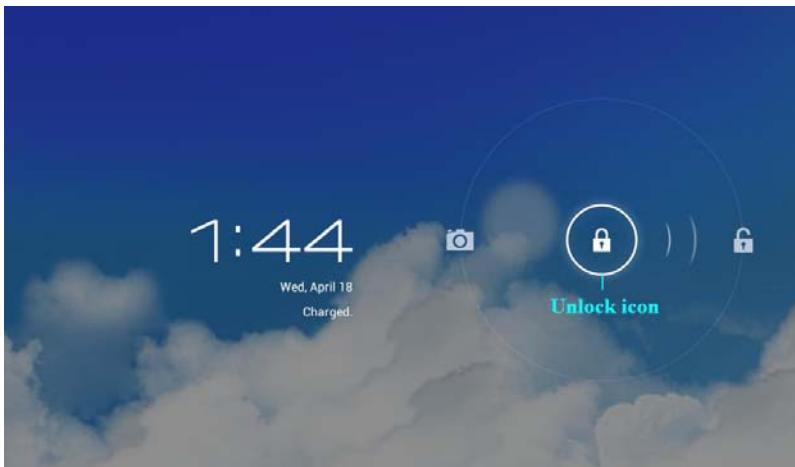


Tap the unlock icon and drop it to the right until out of the circle to unlock.

9 PRE-LOADED APPLICATIONS

	Weather	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	Clock	It can display the time and set the alarm.
	App Market	Downloaded applications quickly & easily.
	Browser	Access internet.
	Calendar	Calendar.
	Camera	Take normal photos, panoramic photos and

		take video.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Install Android apps and backup files to your SD card.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.

 	My Photo	View and manage photo files.
	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.
	Task Manager	Application manager for managing processes.
	Voice search	Voice search.
	Flash player settings	Flash player settings.
	Downloads	View the downloads and the downloading progress.

	Search	Local search and online search.
	Settings	Multiple settings for personalizing and enhancing your Device.

- ☆ To move an icon to the **Desktop** screen, touch & hold the icon, and then release it when it appears on the **Desktop** screen.
- ☆ Touch, hold and then slide icons to reposition them on the screen.
- ☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which are in the state bar to view more state information and

events.



Airplane mode	Switch airplane mode.
Wi-Fi	Access to Wi-Fi settings interface.
Auto-rotate screen	Auto-rotate switch. The screen will automatically rotate with gravity induction after opening.
Brightness	Set screen brightness.
Notifications	Open or close the notification.

Settings	Access to settings.
-----------------	---------------------

11 APPLICATION MANAGEMENT

Install Android Applications

★ *There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.*

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the



Browser or **task manager** application.

1.Copy the **.apk** files which you want to install onto an SD card or USB device → insert or connect to your Device.

2.Tap the  **File Browser** application icon.

1.Tap  or  and locate the folder in

which the **.apk** application files were saved.

2.Tap on a **.apk** file → **Install**.

The application is installed and the application icon is added to the **Applications** screen.

3.Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications directly from a

Website

You can download Android applications directly from websites, and then install them on your device quickly and easily.

1.Tap the  **browser** application icon to

launch the internet.

2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.

3. After the downloading is completed, tap 

→ **Downloads**. Open the applications from app list.

Uninstalling Android Applications

You can also uninstall the Android applications quickly and easily that you have installed.

1. Tap  → **Settings** → **Apps** → **All**.

2. Tap the application you want to uninstall → **Uninstall**.

3. Tap **OK** to confirm the Uninstall.



12 WEATHER

Tap the  **Weather** application icon.

General setting

You can set Temperature Unit(°C), Update frequency .

About

View software version number and relevant legal information.

Add city

You can add city to **Weather** and view the city's weather information.

Select city

In the list of cities, click the city to view the weather information. Select the city and tap 

to delete the city, tap  refresh the weather

information.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap  → **Widgets** → **Weather Widget**.



13 CLOCK

Tap the  **Clock** application icon. You can

see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

Add Alarm

1.Tap the  **Clock** application icon.

2.Tap  **Set alarm** → **Add alarm**.

3.Set up your alarm as desired.

4.Tap **OK**.

5.Selected the alarm clock.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

Tap **Dismiss** to cancel the alert.

Turn Alarm on

1.In the Alarm list, find the desired alarm.

2.Click the  on the left.

3.After the  change to , tap **Done**.

Edit Alarm

1.Tap the  **Clock** application icon →



Click .

2.Tap on the alarm you want to edit → make desired edits.

3.After editing, tap **OK**.

Delete Alarm

1.Tap the  **Clock** application icon →

Click .

2.Tap on the alarm you want to delete.

3.Tap **Delete** → **OK**.

Tap  to return to the **Desktop** screen.

14 APP MARKET

The App Market has many applications that you can quickly and easily download to your Tablet.

Download Applications

1.Tap the  **App Market** application icon.

★ *The first time, it will prompt “**Register**” and “**Login**” options. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*

2.You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.

3.Tap on an application → **Download**.

4.After the app is downloaded, tap **Install**.

5.Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

History

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

App Market Function Menu

Tap  to display the App Market Function

Menu.

Profile

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

About


Displays App store version and support information.



15 BROWSER

Users can connect to the Internet through browser. Click the browser icon on the Desktop  ,

and then you can open the Web browser.

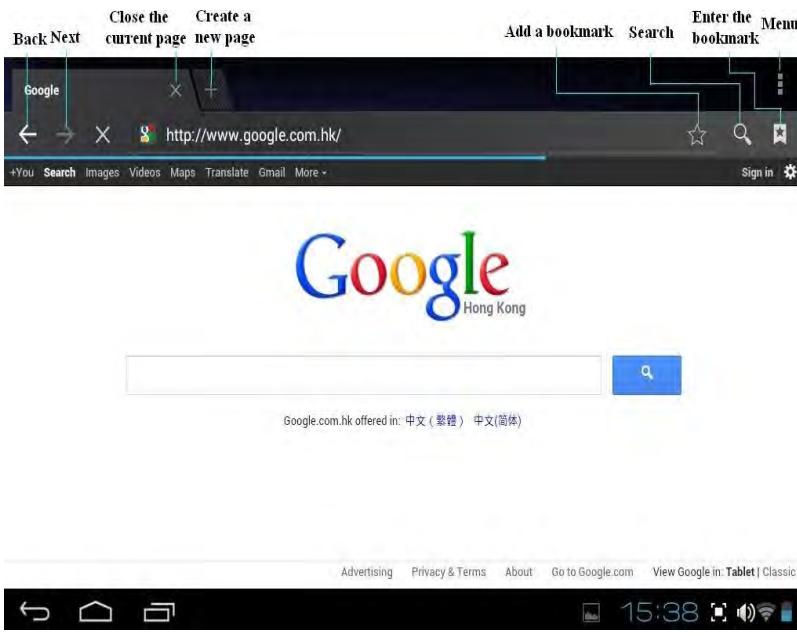

16 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Account**

& sync → **Add account**. Complete the setting according to the prompts . After then you can use the calendar. Don't need to add Exchange account if only view the calendar .

Add Event

1. On the **Calendar** screen, tap on the date when you want to add an event.

2. Tap on the event time → tap .

3. In each field, enter the details of the related activities.

4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

☆ *Dates with gray bars indicate scheduled events.*

 


17 CAMERA

Tap the  Camera application icon.

Take Pictures

1. Click  switch to camera, and you can

1. Click  switch to video, and you can

take videos.



take picture.

2. Click  conversion lens



 
2. Click  take picture.


3. The video will be saved.

3. The picture will be saved.

4. Click the video thumbnail to play the video.

4. Click the picture thumbnail to enter **My Photo**
to scan the picture.

 5. Click  to exit the **Camera** and back to
the **Desktop**.

5. Click  to exit the **Camera** and back to
the **Desktop**.

Single-motion Panorama

For capturing larger scenes, tap  icon and

switch to single-motion panorama mode. In this mode,
the user starts an exposure and then slowly turns the
Camera to encompass as wide as a perspective needed.
The Camera assembles the full range of continuous
imagery into a single panoramic photo.

Take Videos

Note: You can tap  on the top left of the

interface to choose the files are stored in the ROM, SD card or USB storage.



18 CALCULATOR

1.Tap the  Calculator application icon.

2.Tap the numbers and sign of operation to do the calculation.

3.Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



19 MYRECORDER

1. Tap the  recorder icon.



2. Tap the  record icon to start recording.

3. Tap the  record icon to stop record.

4. Tap the  play button to play the voice of recording.



20 EMAIL

☆ *POP3 and SMTP accounts are supported.*

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your tablet.

1.Tap the  Email application icon.

2.On the **Account setup** screen, enter your email

address in the **Email address** entry field.

3. Enter your email password in the **Password** entry field

4. Tap **Next**.

5. Manual Setup (optional): The server settings are automatically populated based on your email account provider (*i.e.*, *gmail.com*, *etc*). However, if you need to change the server settings, tap **Manual Setup** to make necessary changes.

6. According to the selected mailbox server, enter or select the parameter and server type ,and then Tap **Next**.

7. Optional: Enter a name for the account.

8. Enter name for outgoing message → tap **Done**.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

Email Inbox

1. Tap the  **Email** application icon.

2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.

3. Tap on the desired email account → tap **Inbox**.

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.

2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.

3. To replay, tap  **Reply** or  **Reply all**.

a. Tap in the Compose Mail entry field to enter your reply message.

b. Tap **Send** to send immediately, **Save as draft** to save without send or **Discard** to discard without saving or sending.

1. To delete the email immediately, tap **Delete**.

Compose New Email Message

1.On the Inbox screen, tap .

2.Enter the e-mail address in the recipient field. If you want to add Cc or Bcc recipients, tap  →

Add Cc/Bcc , and then enter the recipient's email

address.

1.Tap in the **Subject** entry field to enter your desired subject title.

2.Tap in the **Compose Mail** area to enter your personal message.

3.If desired, tap  →  to attach a file.

4.When ready to send the email, tap .

Edit Email Accounts

1.Tap the  Email application icon.

2.On the Inbox screen, tap  → **settings**.

3.Set your desired preferences to customize your email account.

4.Tap  to return to the Inbox screen.

Delete Email Accounts

★ *If you have multiple accounts, delete the account designated as the default account, the next email listed will be automatically set as the default.*

1.Tap the  Email application icon.

2.On the **Inbox** screen, tap  → **Settings**.

3.Click the account you want to delete.

4.In the pop-up **Account options** window, tap

Delete

5.Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1.Tap the  Email application icon.

2.On the Inbox screen, tap  → **Settings**.

3.Tap the desire account.

4.In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.






21 FILE BROWSER

Tap the  **File Browser** application icon to

view the files on all storage devices (*Internal memory, SD card, USB device*), and to install Android application on your tablet quickly & easily.

Use the icons across the top of the screen as follows:

  

 

Switch folder display mode.



Menu

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

★ *The internal device storage is titled "ROM", memory card "SD" and USB storage device are titled "USB".*

★ *The instructions below are for copying from an SD card or USB storage device into the device. You can use the same method to copy from the device to an SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1.Tap **GoTo**, select **SD** or **USB** to display the

contents of your storage device.

2.Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.

3.Tap **GoTo**, select **ROM** Internal Memory →

tap on the folder into which you want to copy the file → tap

Connected to the local area network shared folders

You can view all of the LAN shared folders.

1.Connect to LAN.

2.Tap Net share → Add new sharing point

→ Choose the mode used of sharing → Editor of

network folder sharing.

3. After connect successfully, enter **network sharing settings** and open the list of shared folder directly.

Delete files

Tap and hold a folder/file and enter into the multi-selection mode, select the folder/file as desired
→ tap **Delete** → **OK** to confirm the deletion.



22 MY MUSIC

☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music

1. Tap the  **My Music** application icon.

2. Select an audio file from

All/Albums/Artists/Directories/My Favorites/User

Defined Playlists to play it.

3. To stop the music, tap the **Pause**  icon.

4. When you are playing the music, you can tap



to return to the previous screen.

Click  switch to the currently playing

interface, It is shown as follows:



At this interface, you can do: view /download the

lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

Create Music Widget

Can play the music quickly through the Music Widget .

Tap  icon on the desktop, In the pop-up list

select Widgets → Select Music Widget.

The Operation with Music and Playlist

Add playlist

1.Choose  to enter the playlist interface →

click .

2.Input the playlist name.

3.Tap **Save**.

Rename or Delete playlist

Switch to **display mode**, Tap the playlist → tap



→ Enter a new name in the dialog box, and

click **Save**. If you want to delete the playlist, click 

→click **save**.

Add music

- 1.In the **all song, album, and artist** list, tap the music and hold for switching to multi-select mode.
- 2.Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).
- 3.Tap **Add to playlist**, and then select a playlist.

Delete music

Tap and hold on the music you want to delete → tap **Delete**.

Sort by title or date added

In the all song interface, click the  on the upper right, select **sort by title** in the pop-up list , then click the "alphabetical" of the right hand, the songs interface

will be sorted quickly according to the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will be sorted by add date.



23 MY VIDEO

☆ *Video file formats supported:*

MPEG1/2/4, H263, H264 VC1, RealVideo, MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.

Play Video

1.Tap the  **My Video** application icon.

2.Select the video from ROM, SD card or USB.

3.Tap screen and click the related icon to adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).

4.Tap **Back button** or  to return to the **My Video** screen.

Create Video Widget

Can quickly play the video through the Video Widget .

On the desktop tap  icon, select **Widgets** in

the pop-up list → Select **Video Widget**.

The Operation with Video

Zoom video screen

In the video player interface, drag two fingers on the screen with reverse / opposite direction can zoom in / zoom out the video screen.

Setting video display mode

Tap  icon, the video screen can be set as

"full screen, actual size, best fit" three modes.

Audio track and subtitle switching

In the video player interface, click  icon

on the top right to switch **audio track** and **subtitle**.

The Operation with Playlist

Classification of video list

In the root directory, click the **album (times)** on the top left to classify the video.

Switch display mode in the classification folder

In the classification folder, click  and

 icon to set list display mode or album display mode.

★ In the classification folder, users can click  to classify the video by time or name.

Send or delete the video in the list

Tap and hold the video, →click the **option** or **delete** button on the top right of the screen to send or delete the video.



24 MY PHOTO

★ Photo file formats supported: **JPG, JPEG, BMP, and PNG**.

1.Tap the  **My Photo** application icon.

2.Tap on the desired photo, to view individual photo.

3.Click  on the top right screen to operate the

corresponding photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, showing details)

The operation with picture list

Classification of photo list

In the root directory, click the **album (times), Locations, people, or tags** on the top left to classify the photo.

Delete the photo in the list

Tap and hold the video → click the **delete** button on the top right of the screen to delete the photo.

Slide show and settings

Enter the slide's setting

1.Tap the  My Photo application icon.

2.In the root directory, click the  on the top right→ **setting**.

3.In the settings interface, set the **Filter photo by file size, slideshow speed, and slideshow mode**.

Slide show

1.Tap the  My Photo application icon.

Click the photo folder.

2.click  →slide show.

★In the classification folder, users can click  and classify the photo by time , color or name .

Doodle

★ You can do doodle in My Photo interface.

1. Open the picture.

2. Click the  icon → Select My Photo.

3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop. (Note: It will missing brush function if you choose the **Gallery**)

4. After finish the doodle, click the **save** icon.

5. Click the  icon to return to picture

browsing interface.


Create Photo Widget

Through the Photo Plug-ins can quickly open

the photos.

Tap  on the desktop, select **Widgets** in the

pop-up list → Select **Photo Widget**.

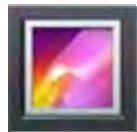

25 Gallery

The operation with photo and video list

Classification of photos and videos list

In the root directory, click the **album (times,**

Locations, people, or tags) on the top left to classify

the photos and videos.

View, play the photos and videos

Photo: In the classification folder,

click on the photo thumbnails to open the photo, and

on the top right of the folder interface tap  icon

to play slide.

Video: In the classification folder, click on the video preview, enter the video preview interface, and click the play button in the video preview to play the video.

Delete the photos and videos in the list

On the top right of the screen, Tap  icon →

Tap **select album** or **Select item**, then select the photo or video which you want to delete, tap  →

Delete.


☆ **Gallery** only supports the display and manages photos and videos in the **default reading/writing storage**. To toggle the

display of the storage area, go to

Settings → **storage** → **default**

reading/writing storage to make changes.

The device default storage area is SD card.

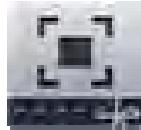

26 SCREEN CAPTURE

You can capture a screen image by tapping



at any time.

Tap the  **Screen Capture** application

icon to set options for a screen capture.

- Select a delay timer to capture the screen (seconds) .

- Select the default storage device.

- Show screen capture icon in status bar.

After the images are saved, they can be viewed through  **My Photo** application.



27 TASK MANAGEMENT

Use PK Manager to manage applications and widgets.

Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

1.Tap the  **Task Manager** Application

icon.

2.Tap **Running** to display all running applications.

3.Tap on an application you want to stop → tap

Force stop →OK.

Uninstall Applications

1.Tap the  **Task Manager Application**

icon.

2.Tap **All** to display all applications.

3.Tap on an application you want to uninstall → tap **Uninstall**.

1.Tap **OK** to confirm uninstall.

Install Applications

2.Tap the  **Task Manager Application**

icon.

3.Tap **Install** to display all applications and folders.

4.Find and tap on an application you want to install → tap **Install**.

28 WI-FI

Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1.Slide the Wi-Fi switch to turn on Wi-Fi.

2.All the AP in the vicinity will be listed, click to select the name you want to connect to AP;

3.If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;

4.If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;

5.If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;

6.When internet connections are successful, the wireless connection icon will appear in the bottom status bar .

29 3G NETWORK

First of all, you need to buy 3G wireless network card according to China Telecom, China Mobile or China Unicom. For the currently supported 3G card type, please refer to **3G dongle support list** or **appendix**.

We strongly recommend to buy the USB 3G Dongle in order to ensure normal 3G Internet access. Please put the prepaid card into the USB 3G Dongle, insert the USB 3G Dongle into the USB host transfer cable and then insert OTG interface. It will be bright lights on the USB 3G Dongle, which indicate that it could begin to connect the 3G network.

Tap **Settings** → **3G network**, And tap “**Add 3G network**”, in the popup dialog box, Fill the **name**, **Device number**, **APN**, **user** and **password** information.

Name: In the popup dialog box, Name field enter

the name.

Device number and APN: Please fill in the information provided by operating agencies. (As in China: If you use China Unicom and China Mobile's 3G network card, **device number** field need to fill in “*99#”, **APN** need to fill in the “cmnet”; if China Telecom formats 3G on the card, phone number need to fill in the column “T#777”, **APN** do not need to fill in the name of column.)

User and Password: If you use the standard of China Unicom and China Mobile's 3G network card, user and password fields are free to fill or not fill; if you use the standard of China Telecom's 3G network card, **user and password** fields need to fill in(**user**: card, **password**: card).

Note: If it does not work properly for entering the above user and password. Please try to fill in (**user**: ctnet@mycdma, **password**: vnet.mobi) or (**user**: ctnet,

password: vnet.mobi), also you can ask to China

Telecom.

Click the connect after finishing filling, then you will see the 3G symbol  appearing at the bottom

of status bar , indicating the 3G network is connected, and then you can get online.

30 GPS

GPS functionality requires the use of a USB interface external GPS receiver. (It access to device via the USB host transfer cable). Users need to download the navigation software and map from the internet, through the SD card installation (please refer to the Application Management section of this User Guide).

For the currently supported GPS receiver type, please refer to Appendix.

31 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings** .
2. Input name and password then click connect to access the broadband network.

32 ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

When the USB network cable plugged into the USB network card, you will see the bottom of status bar ETH

symbol  appears

1. Tap **Settings** → **Ethernet**.
2. The device can automatically obtain IP address to connect to the network. You can also choose to

manually set the IP address to get connected.



33 SETTINGS

Wireless & networks	Wi-Fi	Turn on /off Wi-Fi, Set up & manage wireless access points.	
	Ethernet	DHCP	Automatic assign IP address
		Use Static IP	Manual assign IP address
	PPPoE settings	Set up ADSL network	
	3G	Set up 3G network.	

	network		
	Data usage	View of data usage	
	Airplane mode	Disable all wireless connection s.	
	More...	VPN	Add Virtual Private Networks (VPNs).
	Mobile network	Set up mobile network	
Device	Sound	Volumes	To adjust the Media

		volume.
	Default notification	Select desired ringtone sound.
	Vibrator	Turn on/off vibrator
	Touch sounds, screen lock sound	Turn on/off operating sounds.
Display	Brightness	Adjust the screen brightness as desired.
	Wallpaper	Set up

		wallpaper
	Auto-rotate screen	Auto-rotate switch.
	Show full-screen gesture tip	Full-screen gesture prompts
	Screen timeout	Adjust the delay before the screen automatically turns off.
	Font size	Set the system font size
	Storage	View,

			uninstall, and format the internal memory, SD card and USB storage.
	Battery		View the usage of the battery.
	Apps		View and uninstall application s
Personal	Account & sync		Add sync account.
			Let apps

		Google's location service	use data from source such as Wi-Fi and mobile network to determine your approximate location
		GPS satellites	Let apps use GPS to pinpoint your location.

		Location & Google search	Let Google use your location to improve search results and other service.
Security	Screen lock		
	Owner info		
	Encrypt tablet	Require a numeric PIN or password to decrypt your tablet each time you power	

		Make passwords visible	it on.
		Device administrators	View or deactivate device administrators
		Unknown sources	Allow installation of non-Market apps.
		Trusted credentials	Display trusted CA certificates

		.	
	Install from SD card	Install certificates from SD card.	
	Clear credentials	Remove all certificates .	
	Language	Setting system language.	
Language & input		Spelling correction, personal dictionary, keyboard and input	

			methods, text to speech (TTS) output, and pointer speed.
	Backup & Reset	Factory data reset	Erases all data on tablet.
Syste m	Date & Time	Automatic date & time	Use network -provided time
	Set date	Set date	
	Set time	Set time	

	Select time zone	Select time zone
	Use 24-hour format	Choose 24-hour format or 12-hour format.
	Select date format	Select date format.
Accessibility		Large text, power button ends call, auto-rotate screen, speak passwords,

			touch & hold delay, and install web scripts
	Developer options		USB debugging, development device ID, stay awake, allow mock locations, HDCP checking, desktop backup password,

		<p>strict mode</p> <p>enabled,</p> <p>pointer</p> <p>location,</p> <p>show</p> <p>touches,</p> <p>show</p> <p>screen</p> <p>updates,</p> <p>show CPU</p> <p>usage,</p> <p>Force GPU</p> <p>rendering,</p> <p>window</p> <p>animation</p> <p>scale,</p> <p>transition</p> <p>animation</p>	<p>scale, don't</p> <p>keep</p> <p>activities,</p> <p>background</p> <p>process</p> <p>limit, and</p> <p>show all</p> <p>ANRs.</p>
		About	<p>Status,</p> <p>legal</p> <p>information</p> <p>model</p> <p>number,</p> <p>android</p> <p>version,</p> <p>kernel</p> <p>version</p> <p>and build</p>

			number.
--	--	--	---------

FREQUENTLY ASKED QUESTIONS

Android

Q: What Android OS version is on my Device?

A: 4.0.3

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours, but you can use the device while it's charging. Use the included power adapter to charge; this device does not support charging via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts.

Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, ,FLAC,APE,AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、RealVideo、MotionJPEG.. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Note:Inconsistent with the physical specifications, please prevail in kind.

BATTERY MANAGEMENT

The battery is not fully charged when you use the device first time, so it is recommended that you charge the battery for at least 6 hours before you use the device. The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by the suggestions as below:

- Use your tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the

battery before use (A full charge takes about 6 hours in the status of "off").

★ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the status of "off", but you can use the device while plugged in when desired.

IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your tablet. This will reduce the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Avoid being stepped on or don't put object on the power cord when make charging.

Pay more attention to the point where the cord attaches to the device.

- Please use the AC adapter included in the device packaging. Using any other power adapter voids your warranty.
- Do not unassemble the device by yourself. Any damaged by your own is out of warranty.

Cleaning your device

Treat the screen gently. Please use soft, non-abrasive cloth such as a camera lens cloth to clean fingerprints or dust on the screen.

Appendix : The optional parts and models

Parts name	Parts type	
3G Wireless Network Card	TD-CDMA	TD368
		HUAWEI E220
	WCDMA	HUAWEI E230

		HUAWEI E160X
		HUAWEI E169G
		HUAWEI E1750
		HUAWEI E173
		HUAWEI W8
		HUAWEI E153
		HUAWEI E153u6
		VW718/719
		Alcatel AL720
		ZTE MF190
		ZTE MF110
		ZTE MF210
		SEW868

		UW100
		Bora 9380
		AWIT-U8
	CDMA2000	RATE EC186
		ZTE AC2736
		SEV759
GPS Receiver		Central-day technology ND100
		Central-day technology ND100S

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

-- Reorient or relocate the receiving antenna. -- Increase

the separation between the equipment and receiver. --

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF striction.