



STEELMATE
Automotive

BSA-1


Baby Seat Alarm System

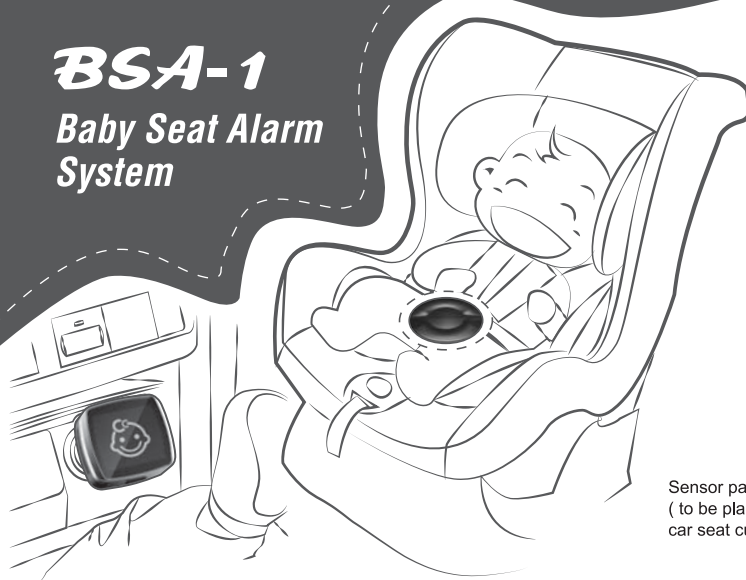

Brief look

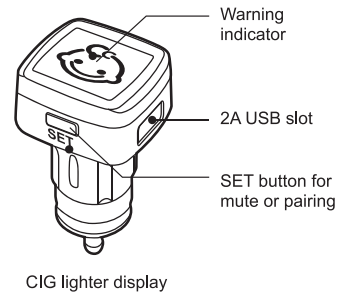

Sensor pad
(to be placed under
car seat cushion)

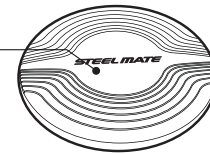

Quick Start Guide

Usage

01 Put your baby on the car seat before ACC ON:



Put the sensor pad under the car seat cushion



Put the baby on the seat and click the seat belt safely



Plug the display in (Do not press SET button)



ACC ON



Display turns on with green light, then "Bi" twice within 10 minutes



The system enter the working mode

02 Put your baby on the car seat after ACC ON:




Plug the display in (Do not press SET button)



ACC ON



Display turns on with green light

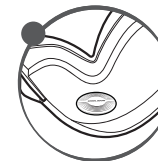

Put the sensor pad under the car seat cushion



Put the baby on the seat and click the seat belt safely



Display will "Bi" twice immediately to enter working mode

Usage

03 | Baby is left the car seat while driving:



1 Baby is left the car seat (Stand or not sit on the pad)



2 Display will "Bi" three times, the warning light will turn to red




3 Put the baby back to the car seat (Sit on the pad)



4 Display will back to normal status with green light


04 | Baby is remained on the car seat after ACC OFF:

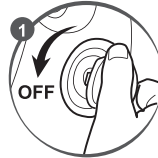

1 ACC OFF



2 Baby is remained on the car seat

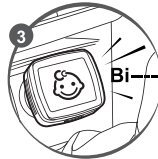

3 Display will warning for 15 seconds, and the warning light will flash red & green in turns

Notices

- This system is not suitable for Electric Vehicle.
- The system is not available for the vehicle which with the CIG lighter has the electricity after flameout.
- Please scan the QR code on packaging and read the user manual carefully.
- Please take care of your baby and check the baby seat once display is warning.
- Make sure your baby meets the requirements: weight 5~36kg or age 6 months ~ 12 years old.
- Please remind other caregiver who first use this system which vehicle was installed.
- Once sensor pad is running down of battery or get damage, please replace new one ASAP. You can buy from retailer or buy from STEELMATE online shop.
- This system is only remind you baby is still in car, so please take your baby when you leave the vehicle.
- STEELMATE does not guarantee any accident were be happened.
- If you have any question, please email us at customerservice@steel-mate.com.

CE warning statement

Remark: This product can be used across EU member states We, STEELMATECO., LTD. (Steelmate Industrial Park, Heping Street, DongFu Road, DongFeng Town, ZhongShan City, GuangDong, P.R.China) declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

FCC warning statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio / TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.