


System functions

1. Active warning When Trackmate is attached to your belongings, smartphone will have a visual and audible warning once they are out of

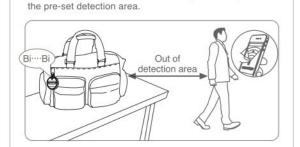

2. Find my Trackmate If you forget where you put your belongings, click "Q" icon on the app, the Trackmate will indicate the location with beeping sound and flashing light.



System functions

3. Find my phone

If you forget where you put your smartphone, press the search button on Trackmate, your phone will be chiming



4. Take a selfie

Trackmate can be a remote control to help taking a selfie. On selfie interface, swipe left or right to select video/ photo/ burst shot mode.



System functions

If the GPS status is ON, the last position will be recorded

automatically while Bluetooth is disconnecting. Click "2" icon

on the app, item will be shown on the map identifying the last

Last seen location

5. Last seen location

position of the Trackmate.




b. Swipe the switch to ON position to turn on the function. Swipe left to unfold the "Delete" option Click "Add" to add a new mute area. Click "Delete" to remove the mute area

System functions


In mute mode, the warning sound on smartphone will be muted.


6. Smartphone mute mode

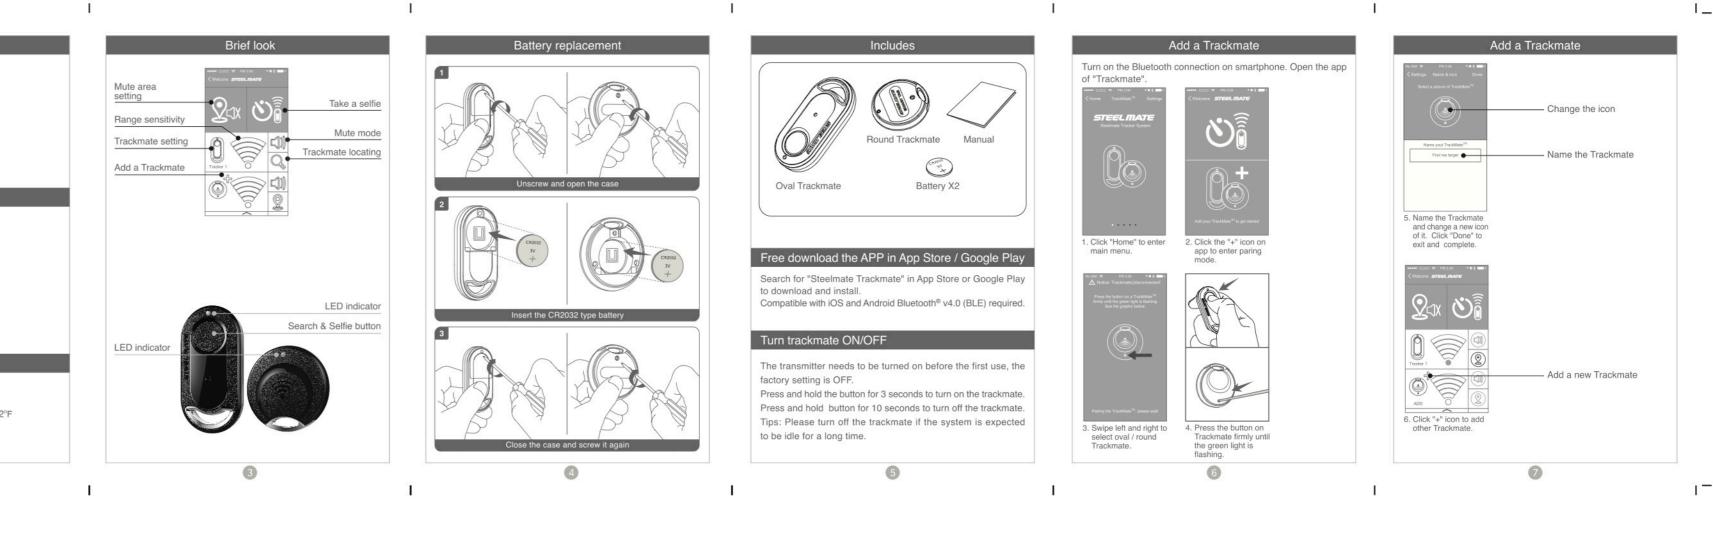



- Mute mode setting

a. Click the "Mute mode setting" icon to enter setting interface. - Add a mute area

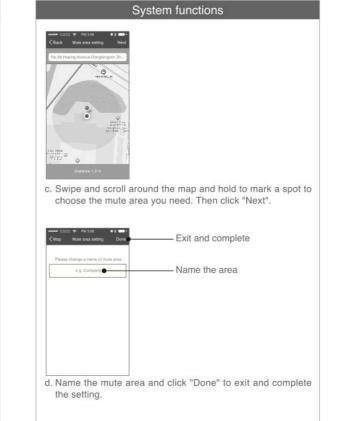

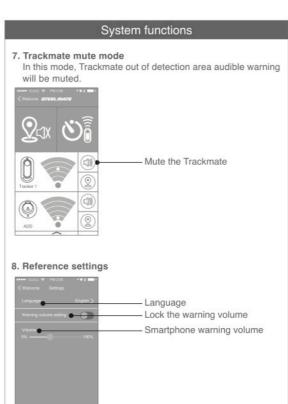

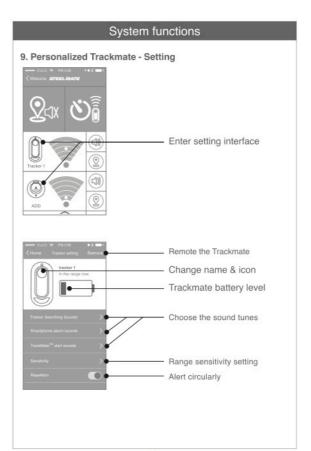

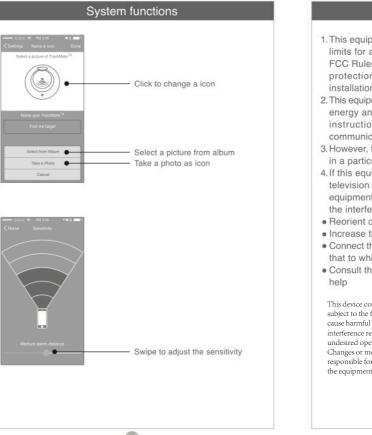

FCC warning statement

- 1. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- 2. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- 3. However, there is no guarantee that interference will not occur in a particular installation.
- 4. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected
- Consult the dealer or an experienced radio/ TV technician for

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the equipment.