 
 



RF 884M:  
LTE 20M-Port 1-884MHz-E-TM2

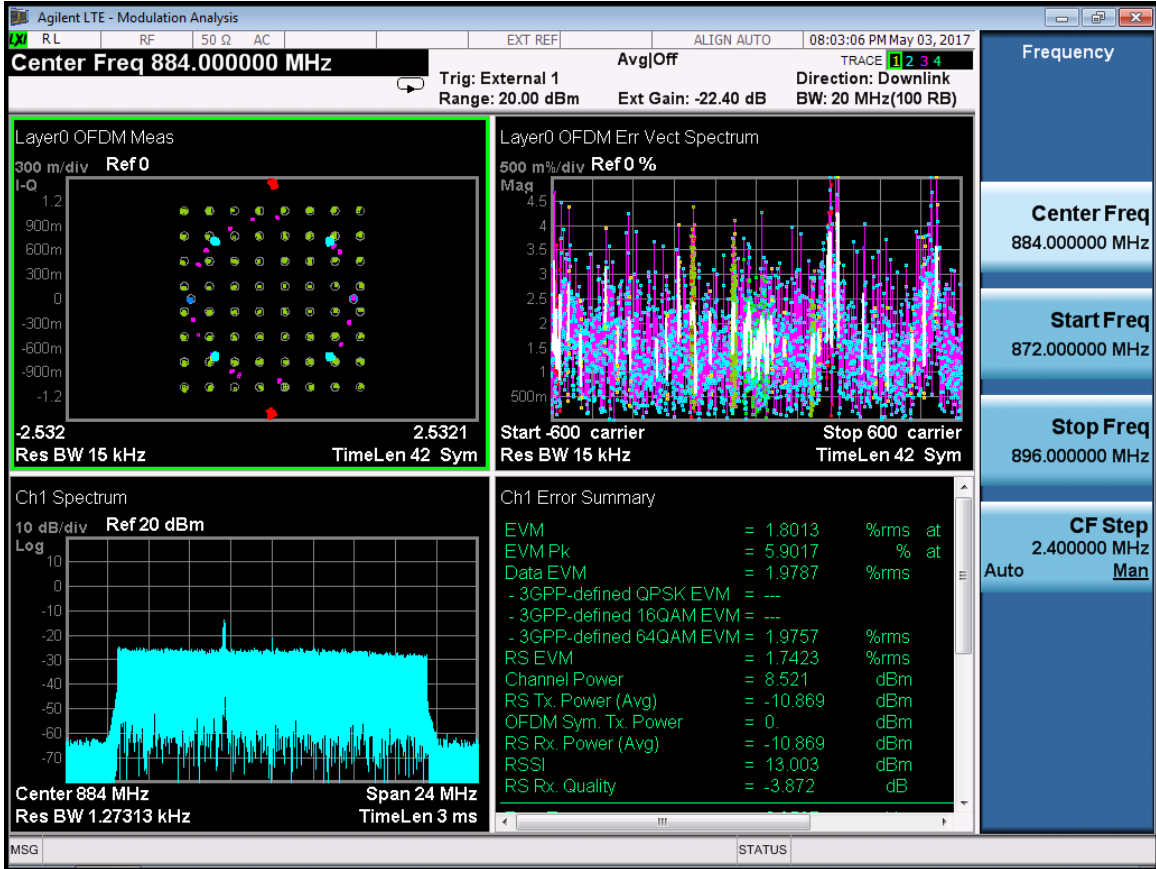


LTE 20M-Port 1-884MHz-E-TM3.1

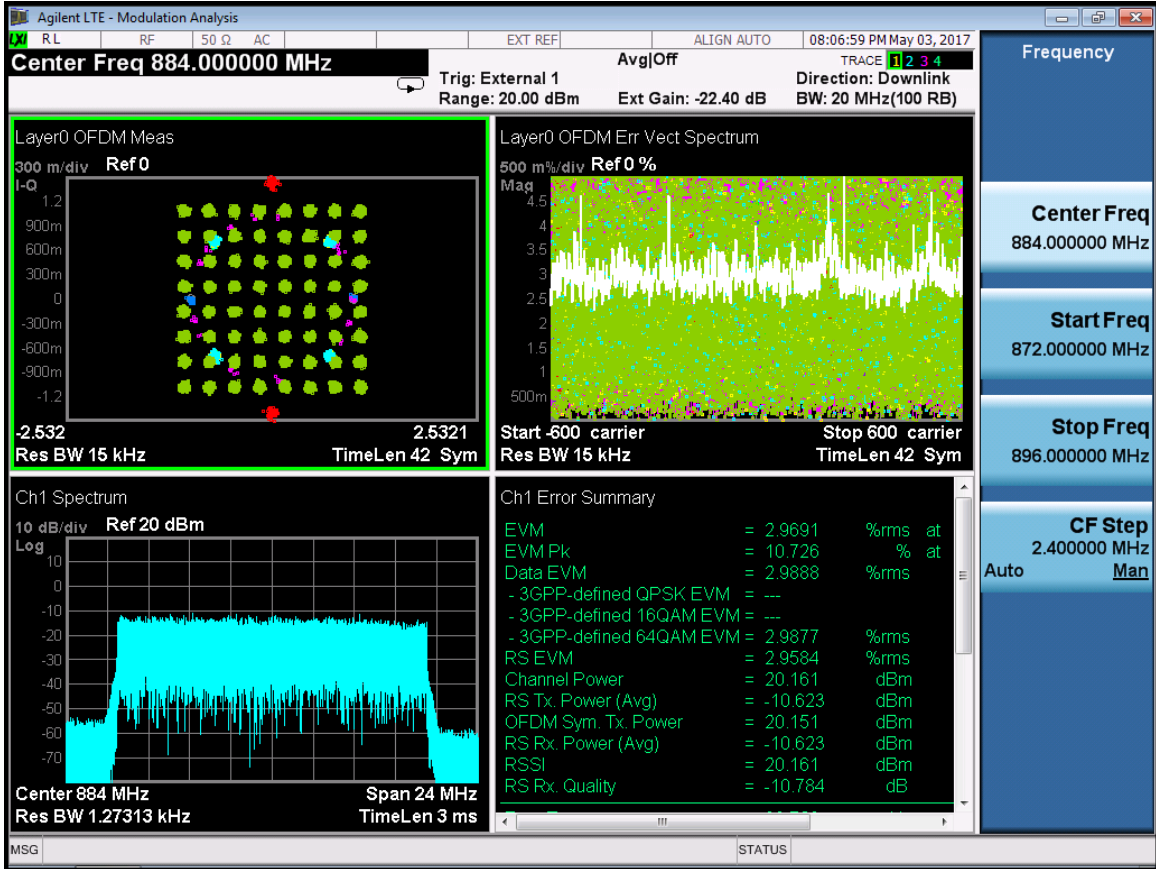

 
LTE 20M-Port 1-884MHz-E-TM3.2

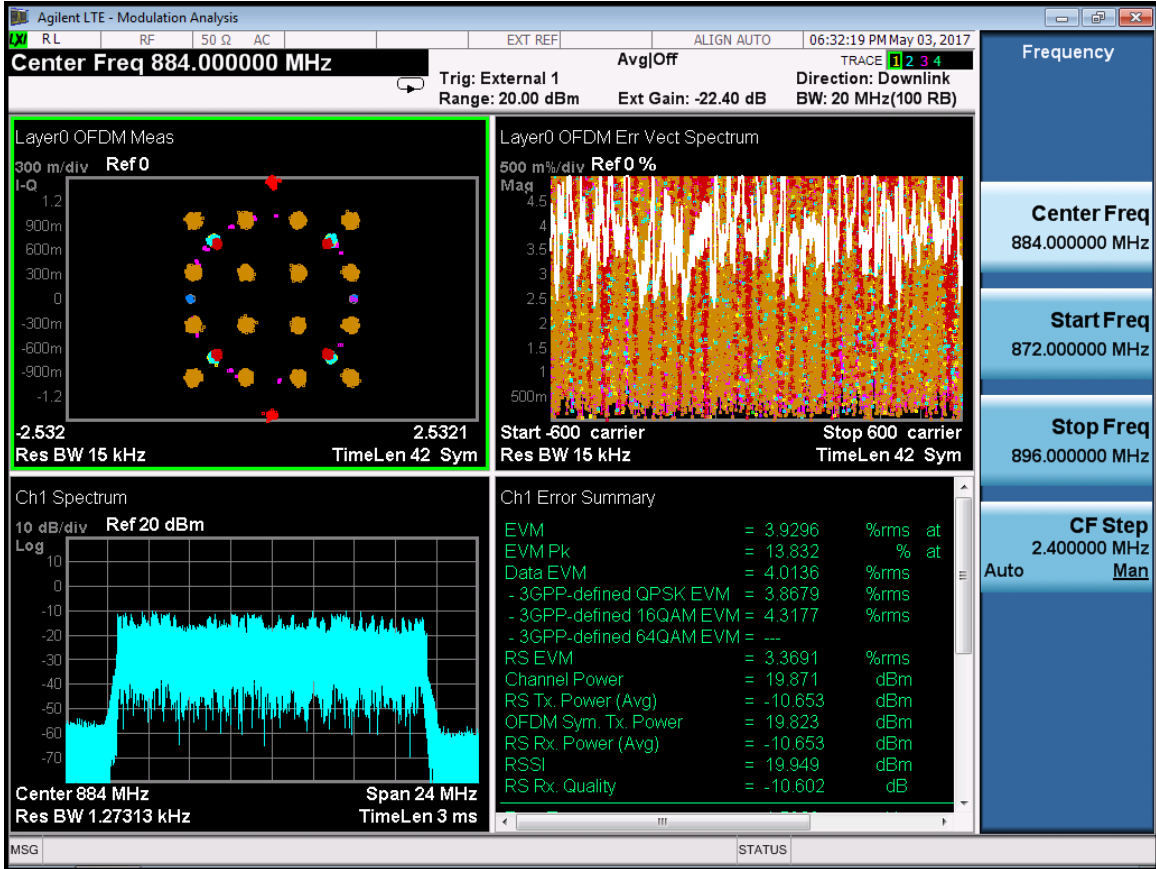


LTE 20M-Port 1-884MHz-E-TM3.3

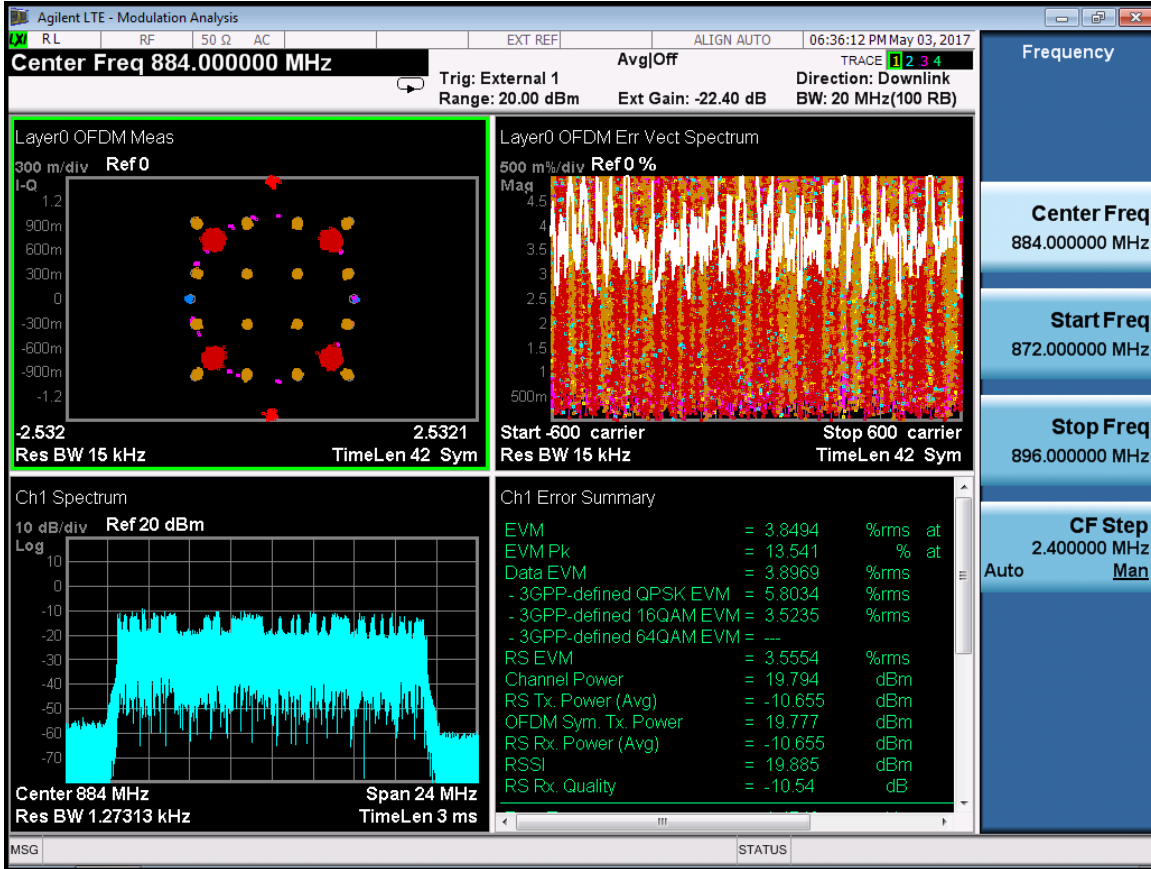 


RF 876.5M:  
 LTE 15M-Port 0-876.5MHz-E-TM2

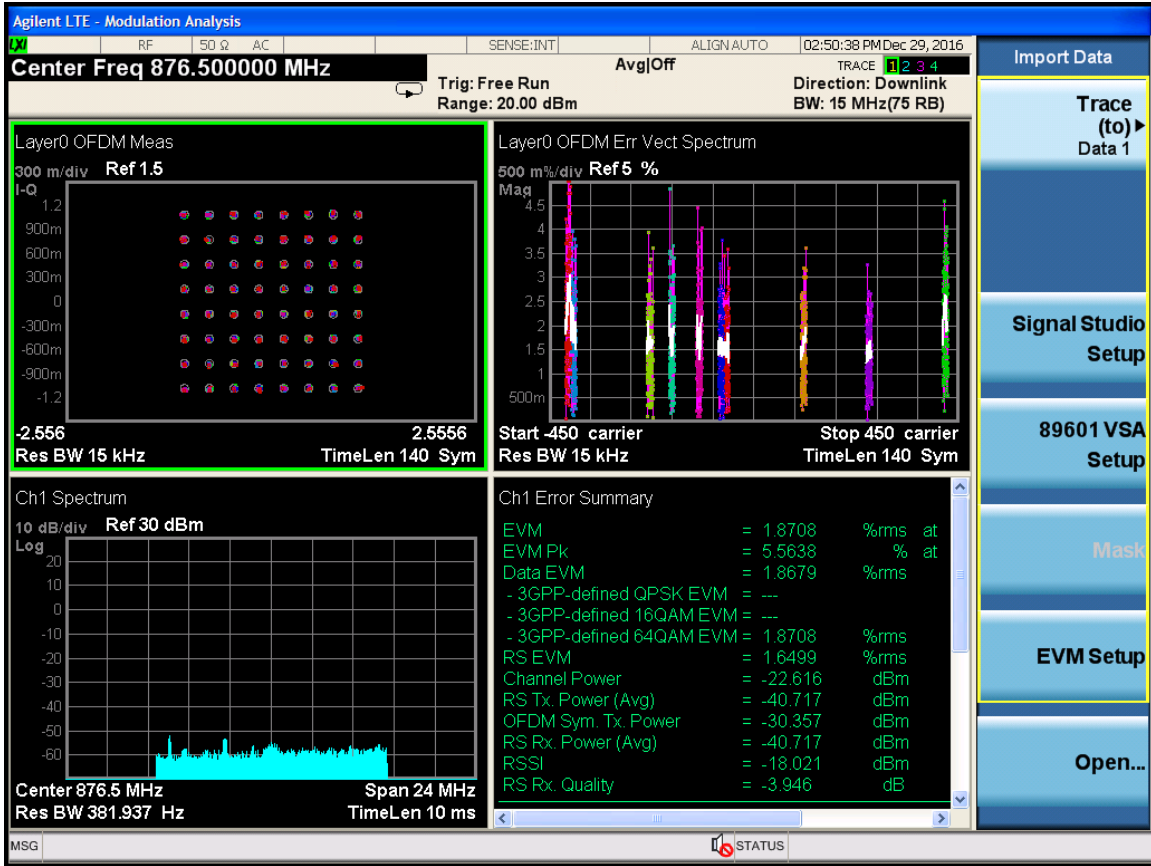 

LTE 15M-Port 0-876.5MHz-E-TM3.1

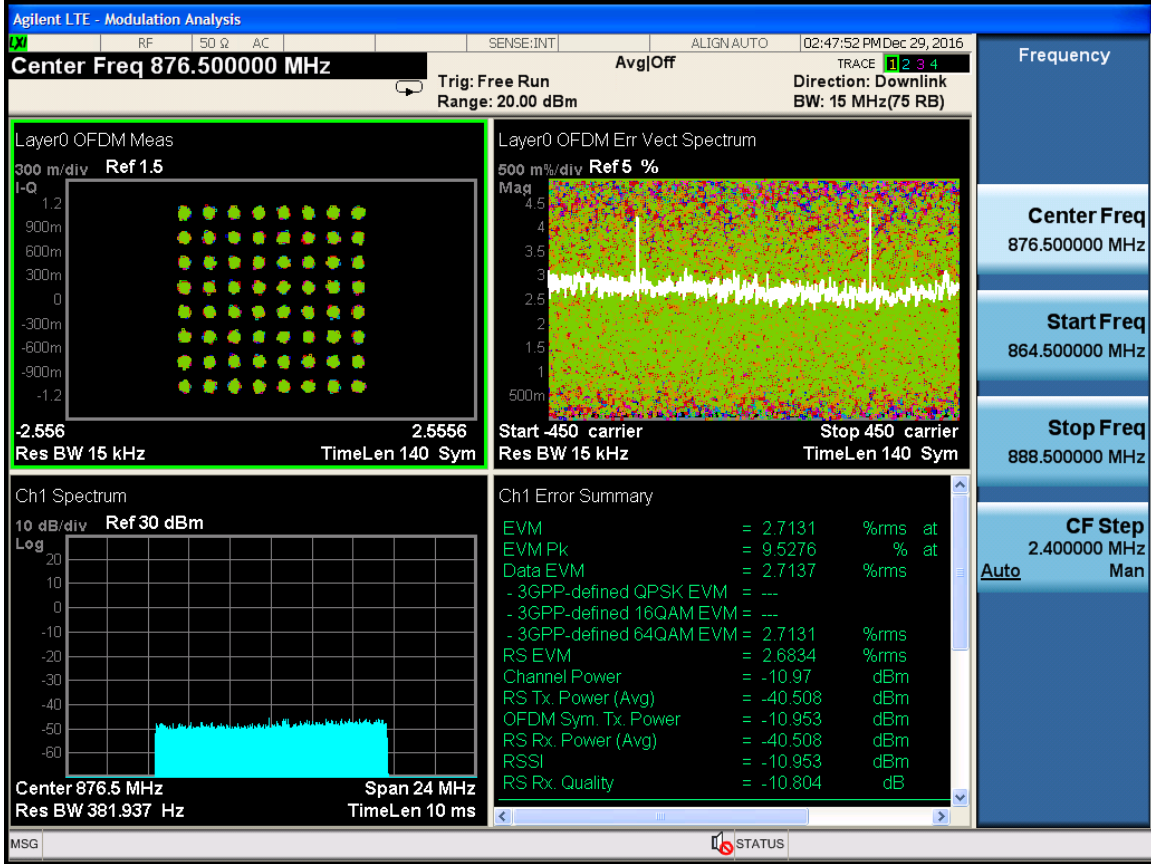 


LTE 15M-Port 0-876.5MHz-E-TM3.2

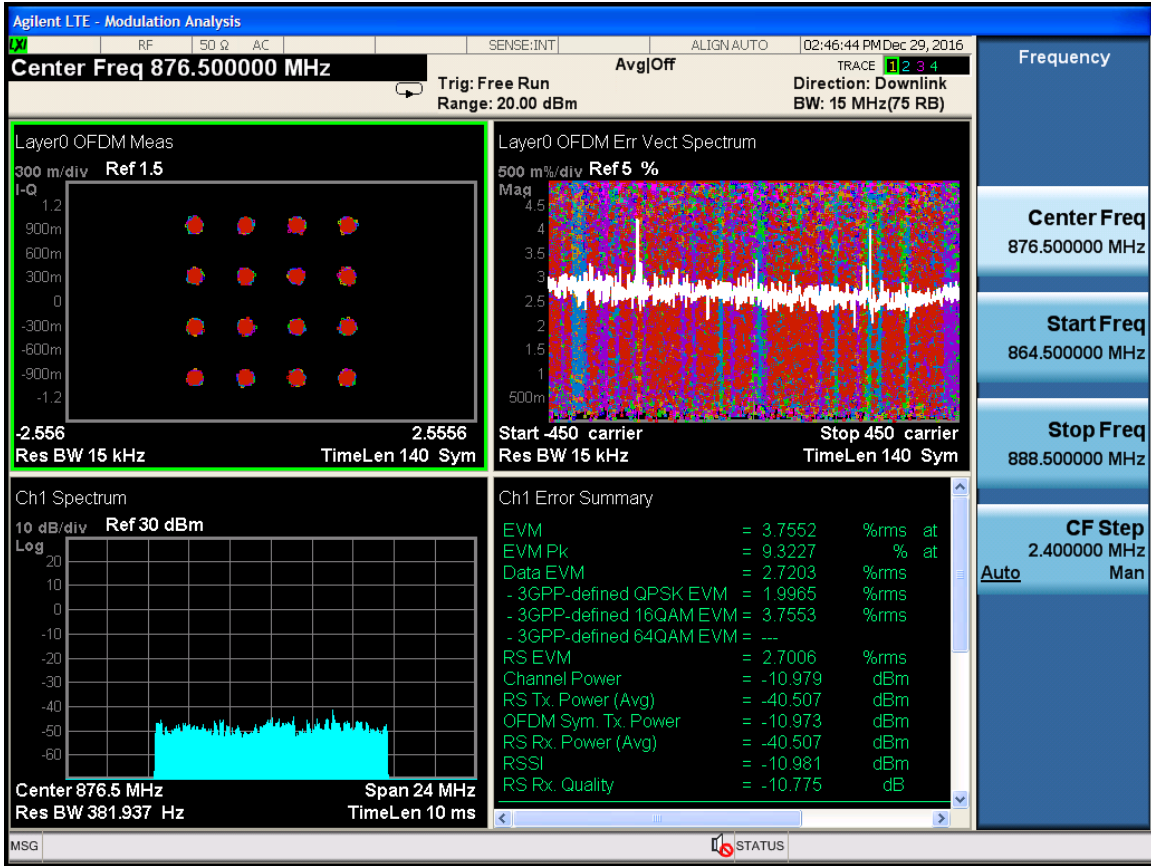 


LTE 15M-Port 0-876.5MHz-E-TM3.3




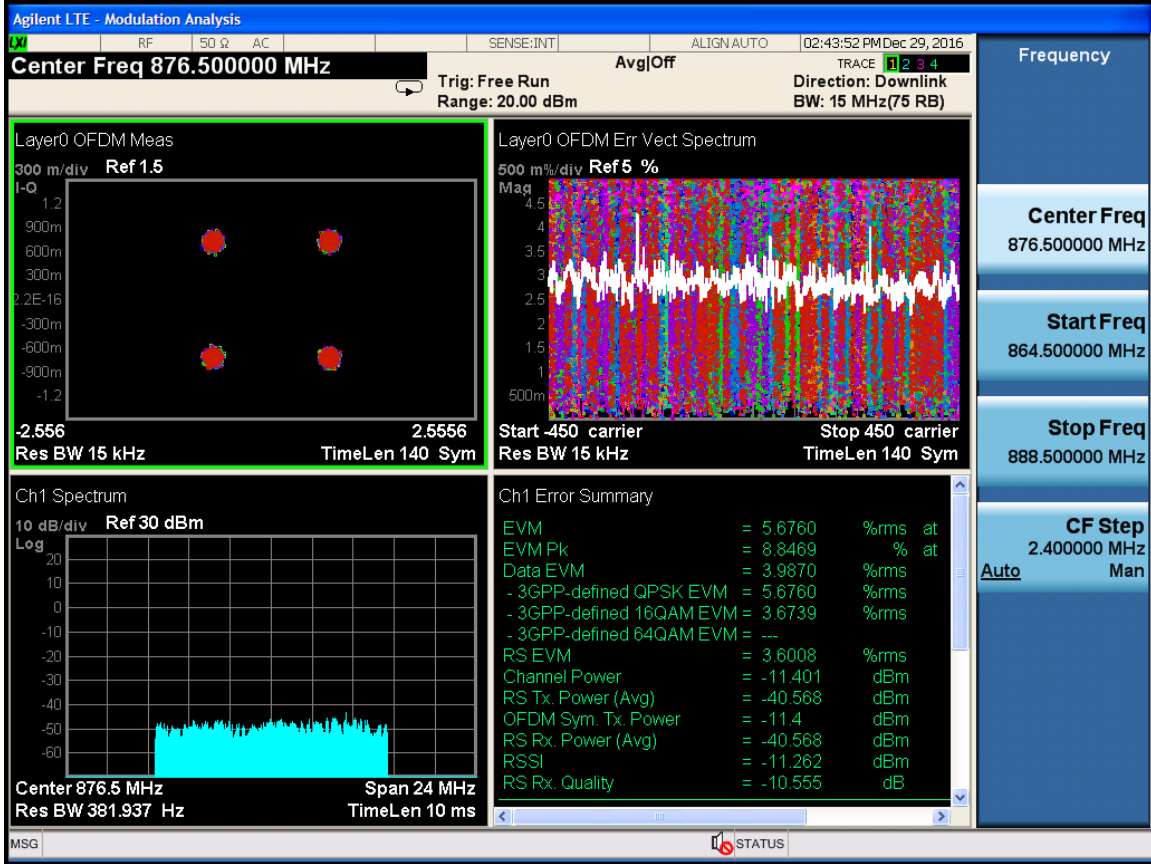 


RF 881.5M:  
LTE 15M-Port 0-881.5MHz-E-TM2

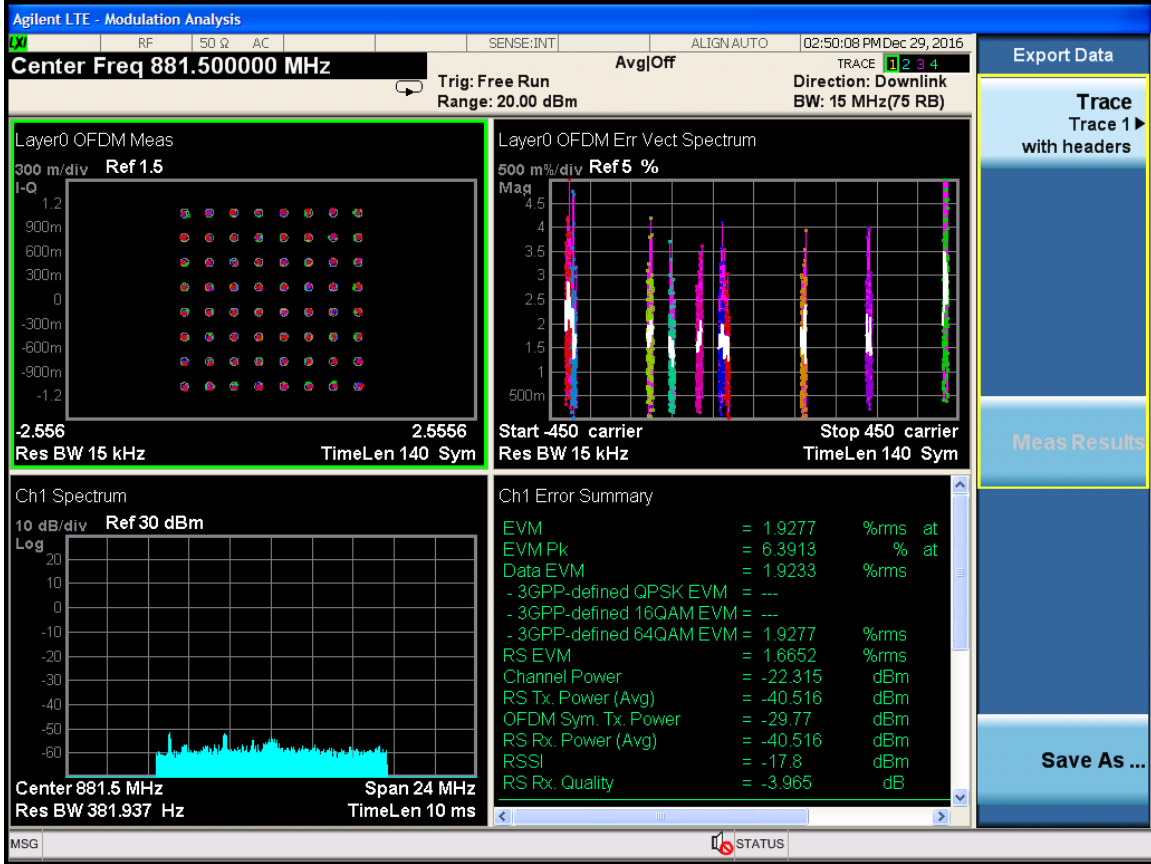 


LTE 15M-Port 0-881.5MHz-E-TM3.1

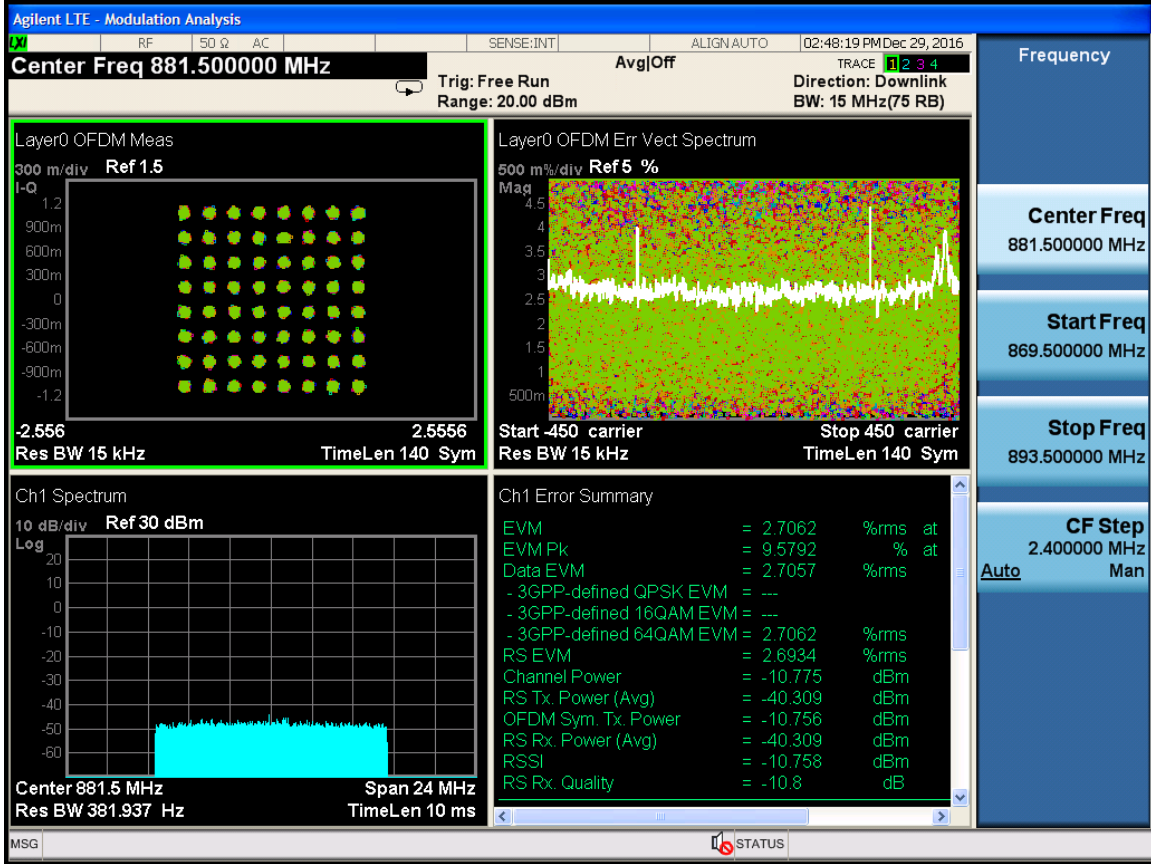 

LTE 15M-Port 0-881.5MHz-E-TM3.2

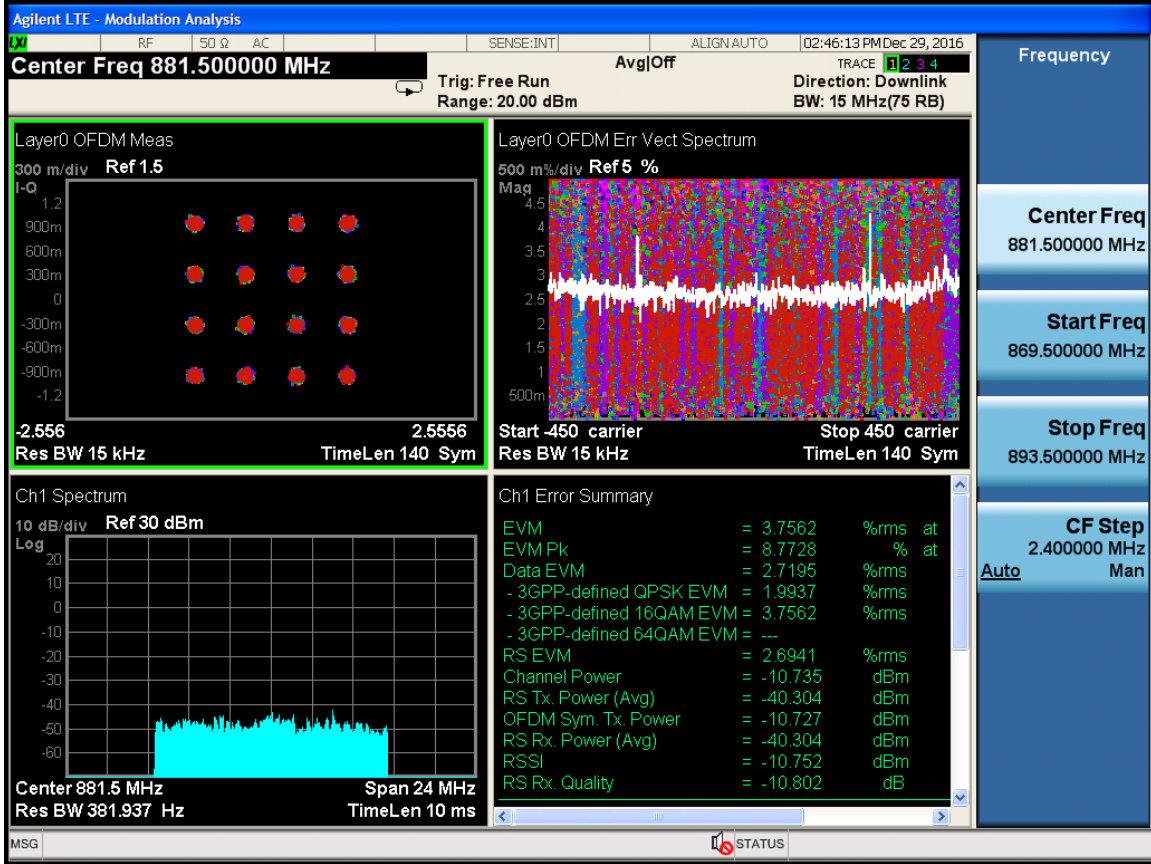 


LTE15M-Port 0-881.5MHz-E-TM3.3

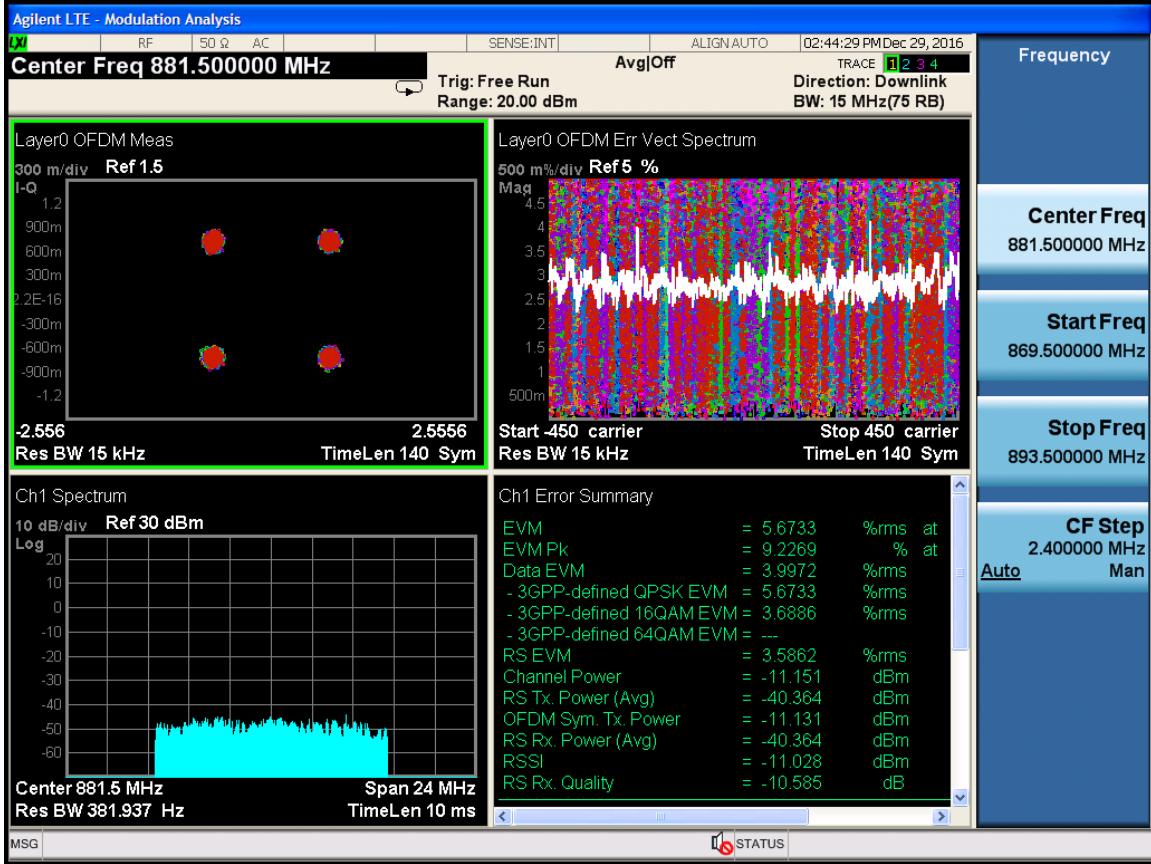 


Frequency	
Center Freq	881.500000 MHz
Start Freq	869.500000 MHz
Stop Freq	893.500000 MHz
CF Step	2.400000 MHz
Auto	Man

 RF 886.5M:  
 LTE 15M-Port 0-886.5MHz-E-TM2

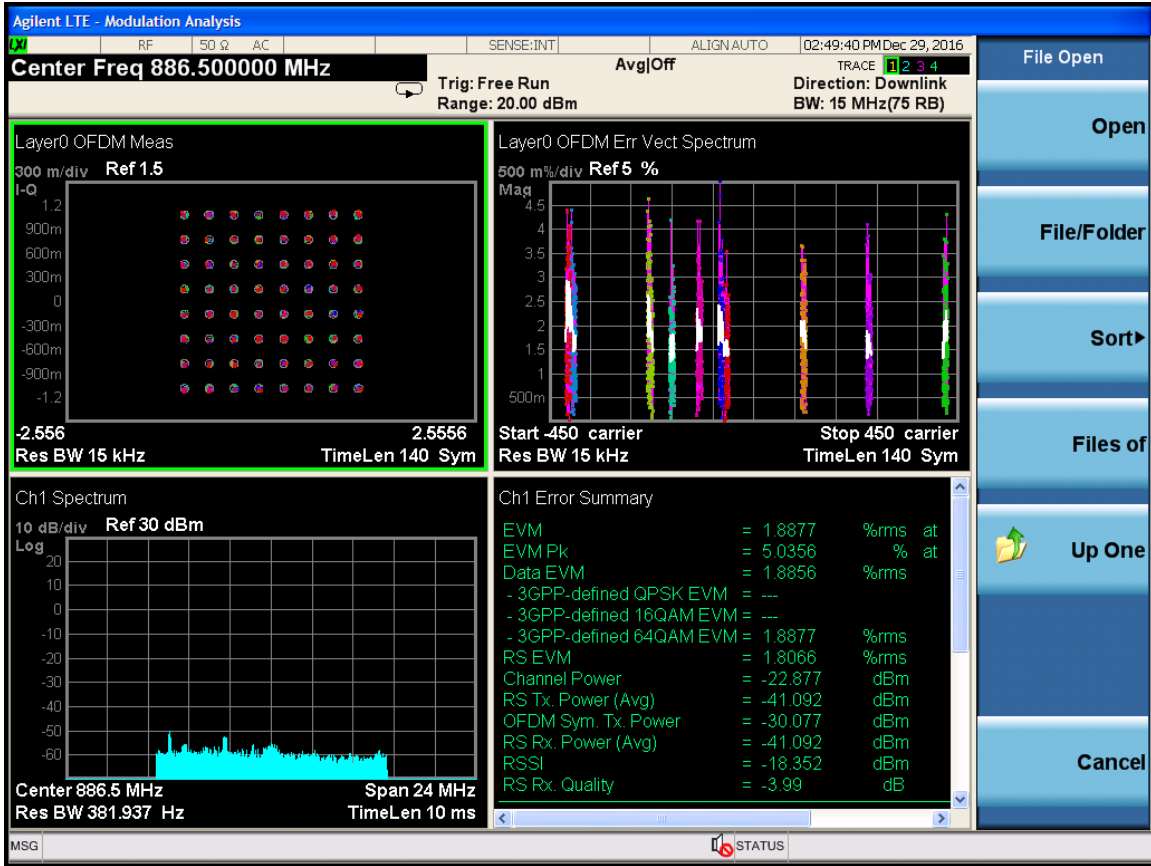


LTE 15M-Port 0-886.5MHz-E-TM3.1

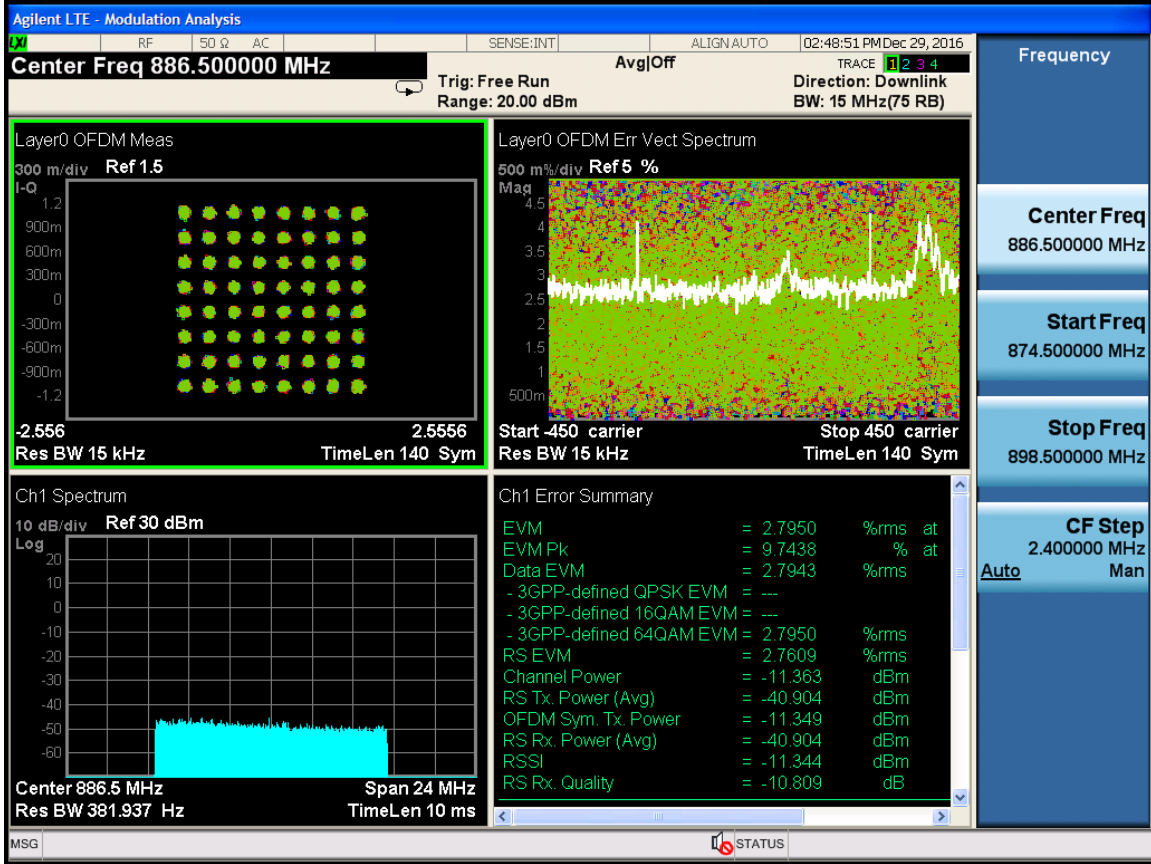 


Frequency	
Center Freq	886.500000 MHz
Start Freq	874.500000 MHz
Stop Freq	898.500000 MHz
CF Step	2.400000 MHz
	Auto Man

 LTE 15M-Port 0-886.5MHz-E-TM3.2

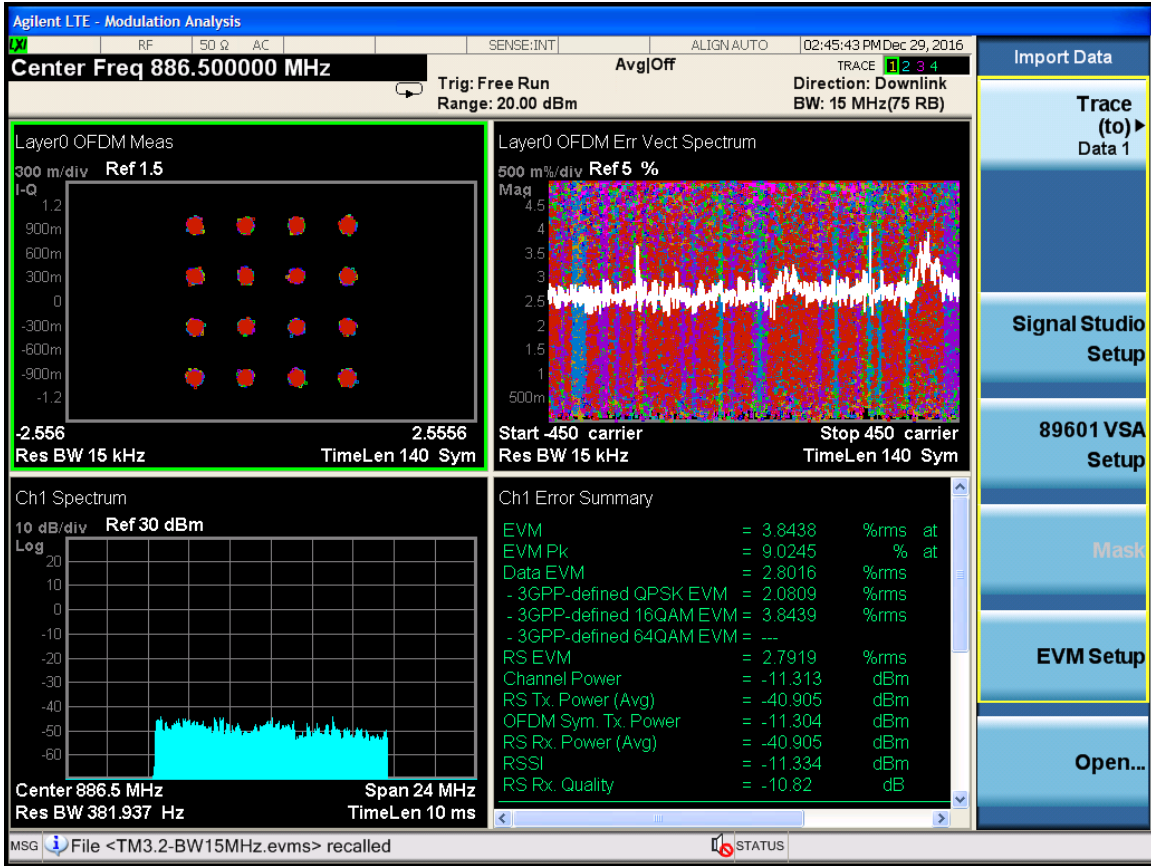


LTE 15M-Port 0-886.5MHz-E-TM3.3




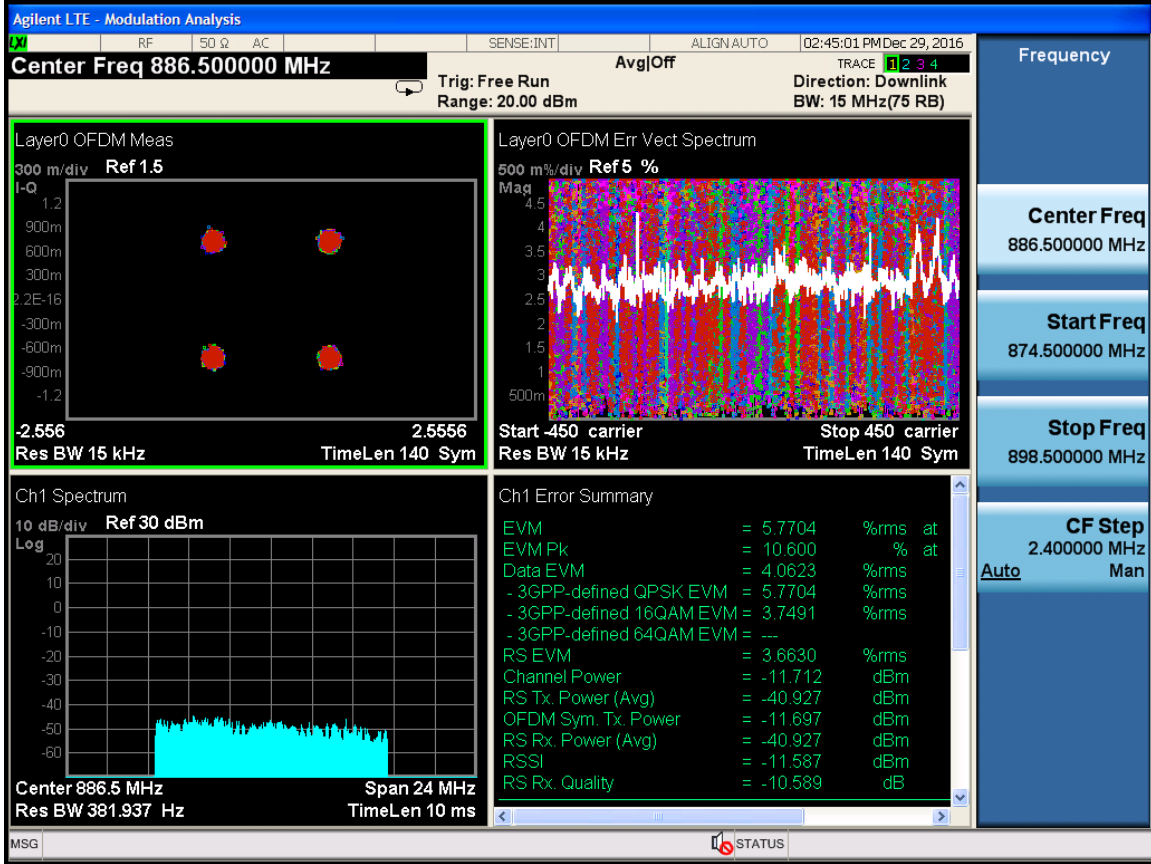 


RF 876.5M:  
LTE 15M-Port 1-876.5MHz-E-TM2

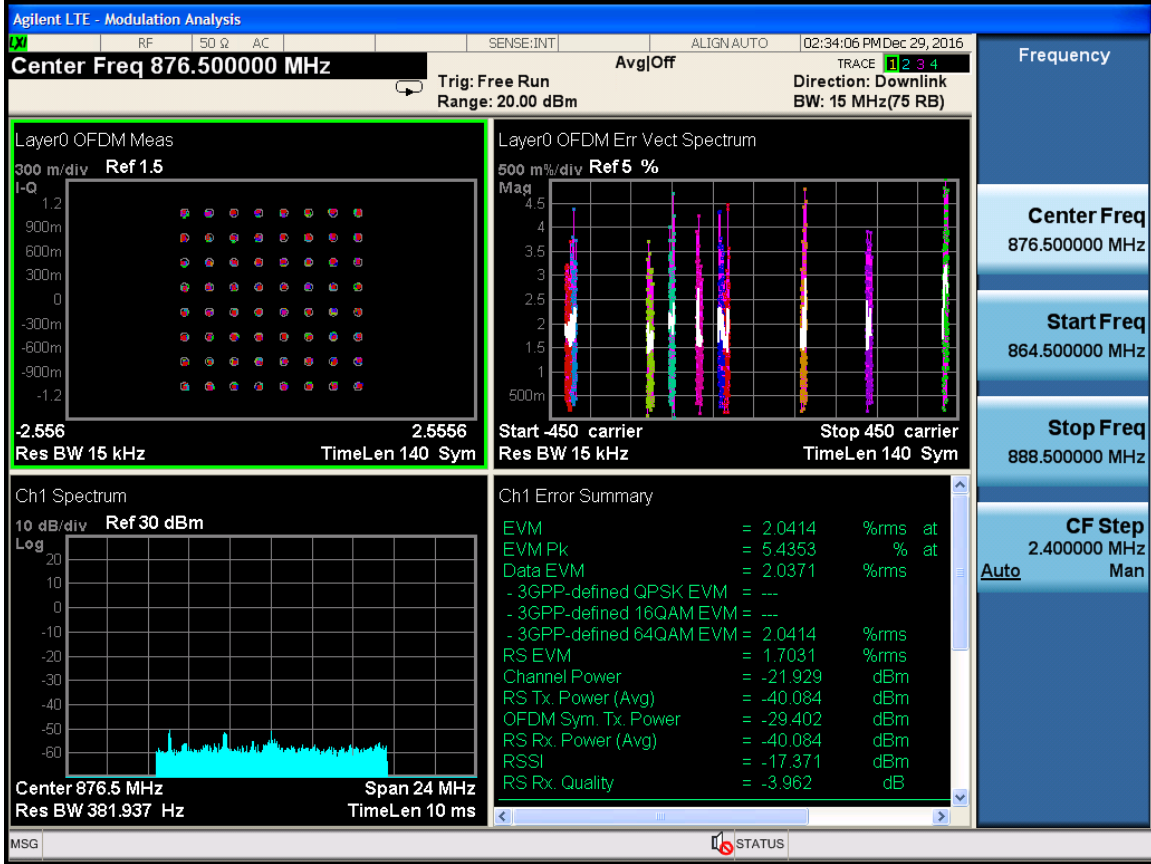 


LTE 15M-Port 1-876.5MHz-E-TM3.1

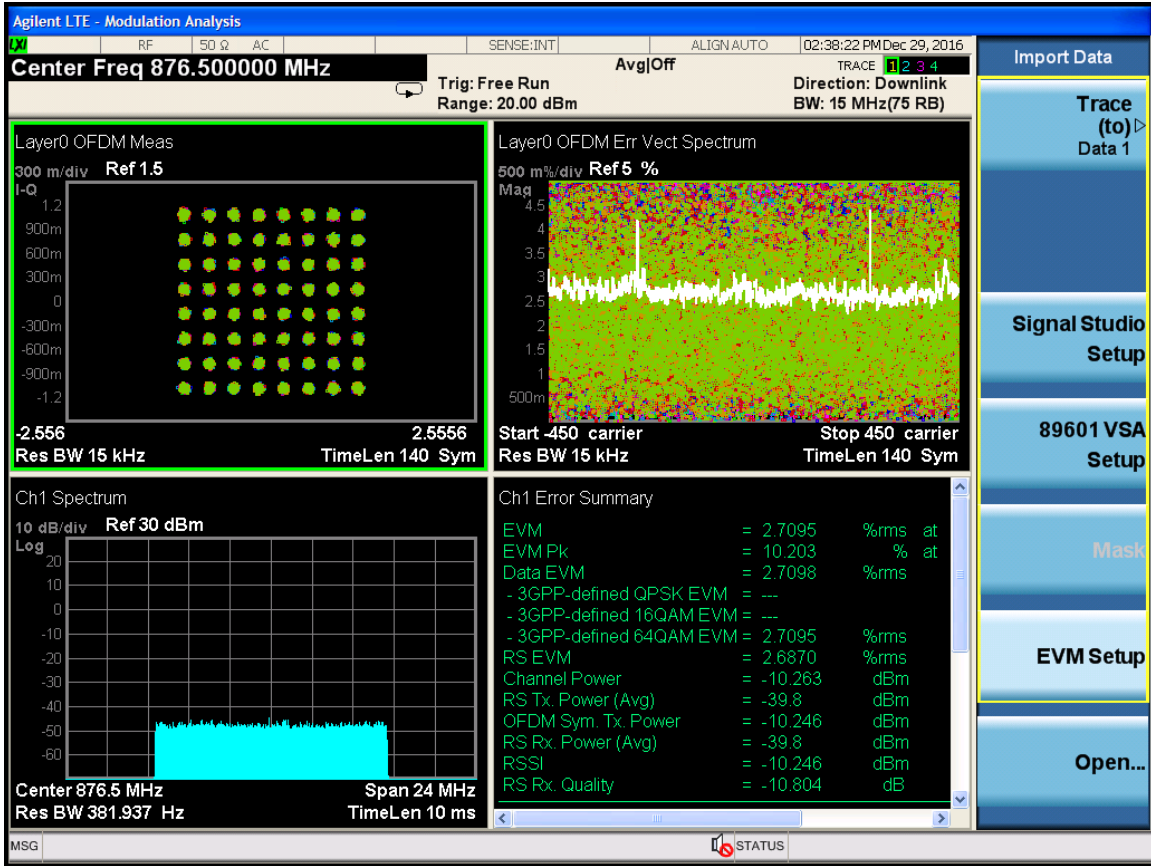 

LTE 15M-Port 1-876.5MHz-E-TM3.2

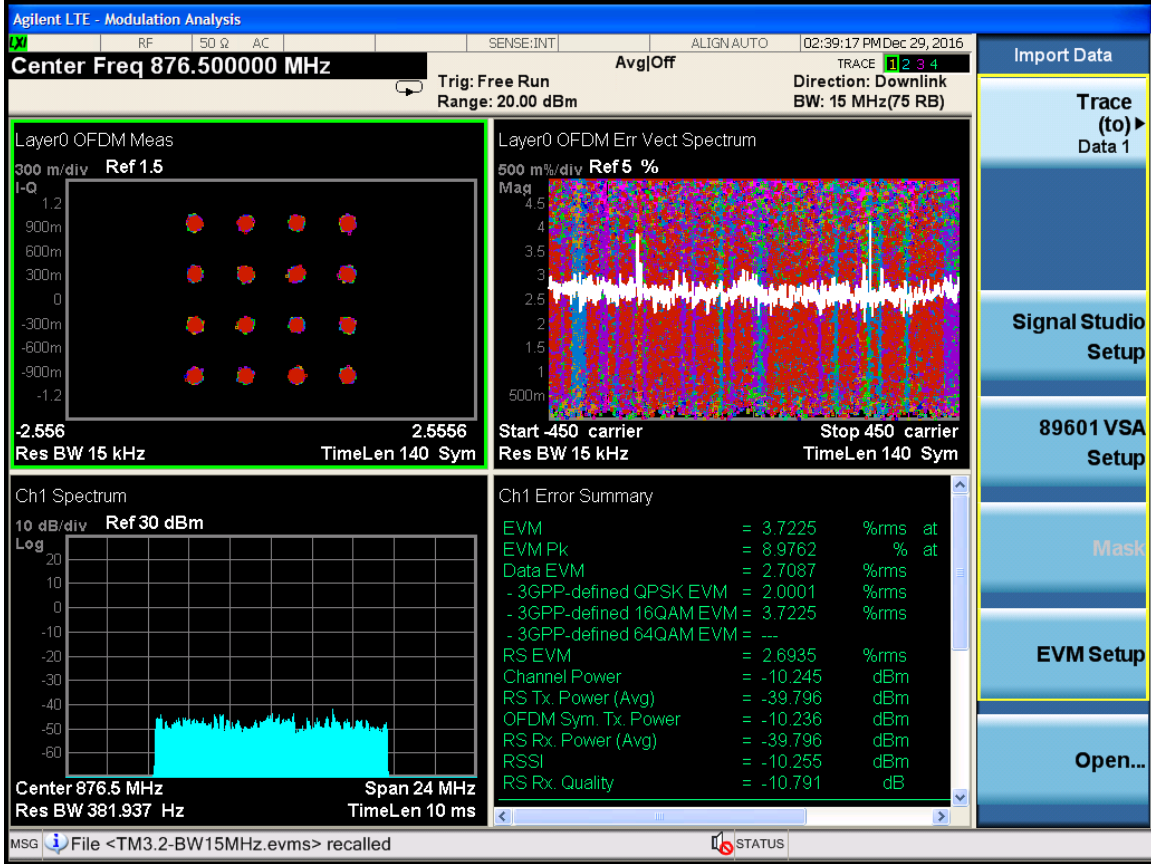 


LTE 15M-Port 1-876.5MHz-E-TM3.3

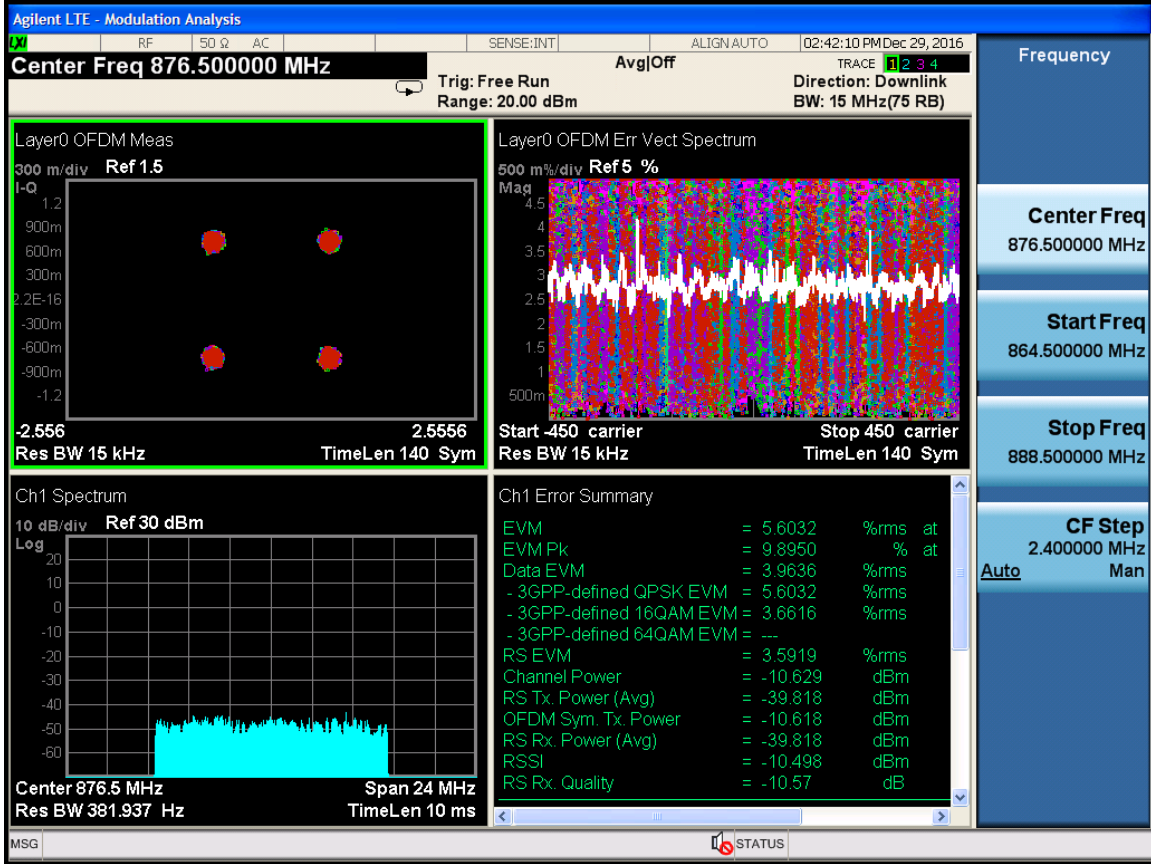 


Frequency	
Center Freq	876.500000 MHz
Start Freq	864.500000 MHz
Stop Freq	888.500000 MHz
CF Step	2.400000 MHz
	Auto Man

 RF 881.5M:  
 LTE 15M-Port 1-881.5MHz-E-TM2

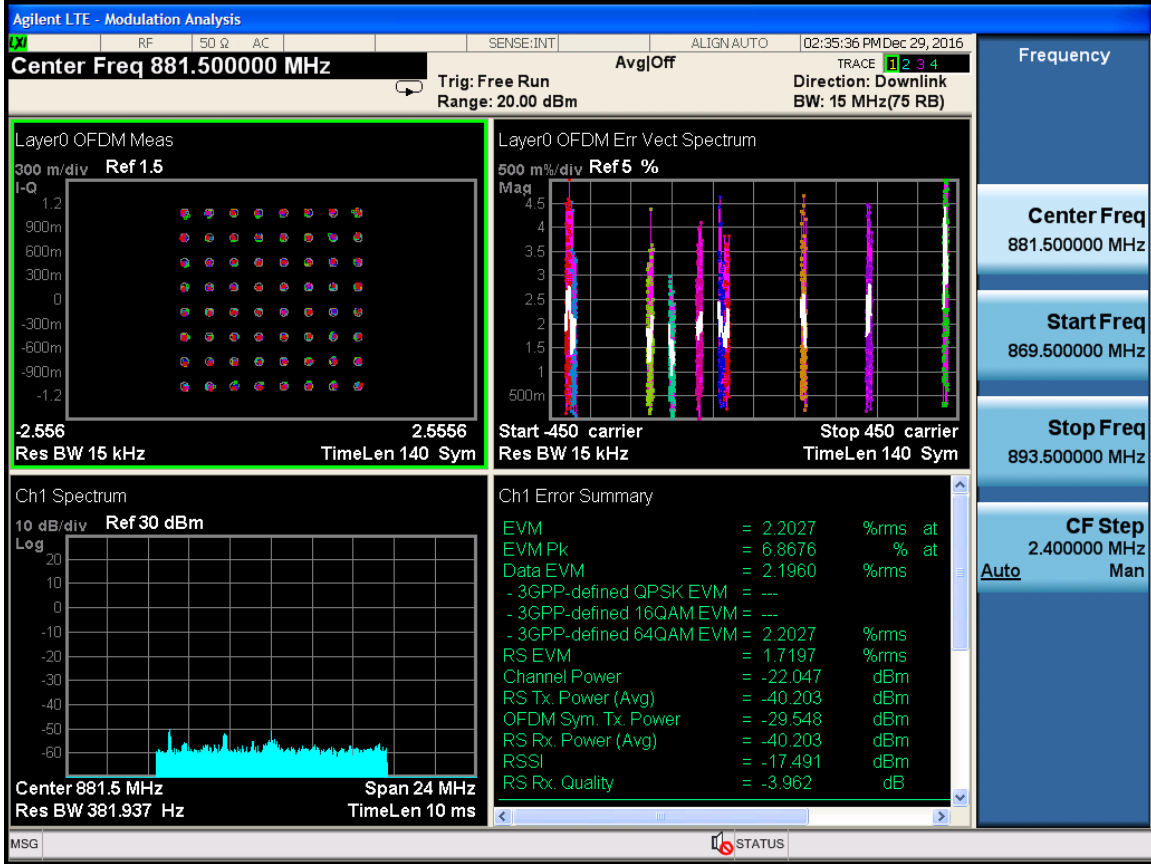


Frequency	
<b>Center Freq</b>	881.500000 MHz
<b>Start Freq</b>	869.500000 MHz
<b>Stop Freq</b>	893.500000 MHz
<b>CF Step</b>	2.400000 MHz
<b>Auto</b>	<b>Man</b>

 LTE 15M-Port 1-881.5MHz-E-TM3.1

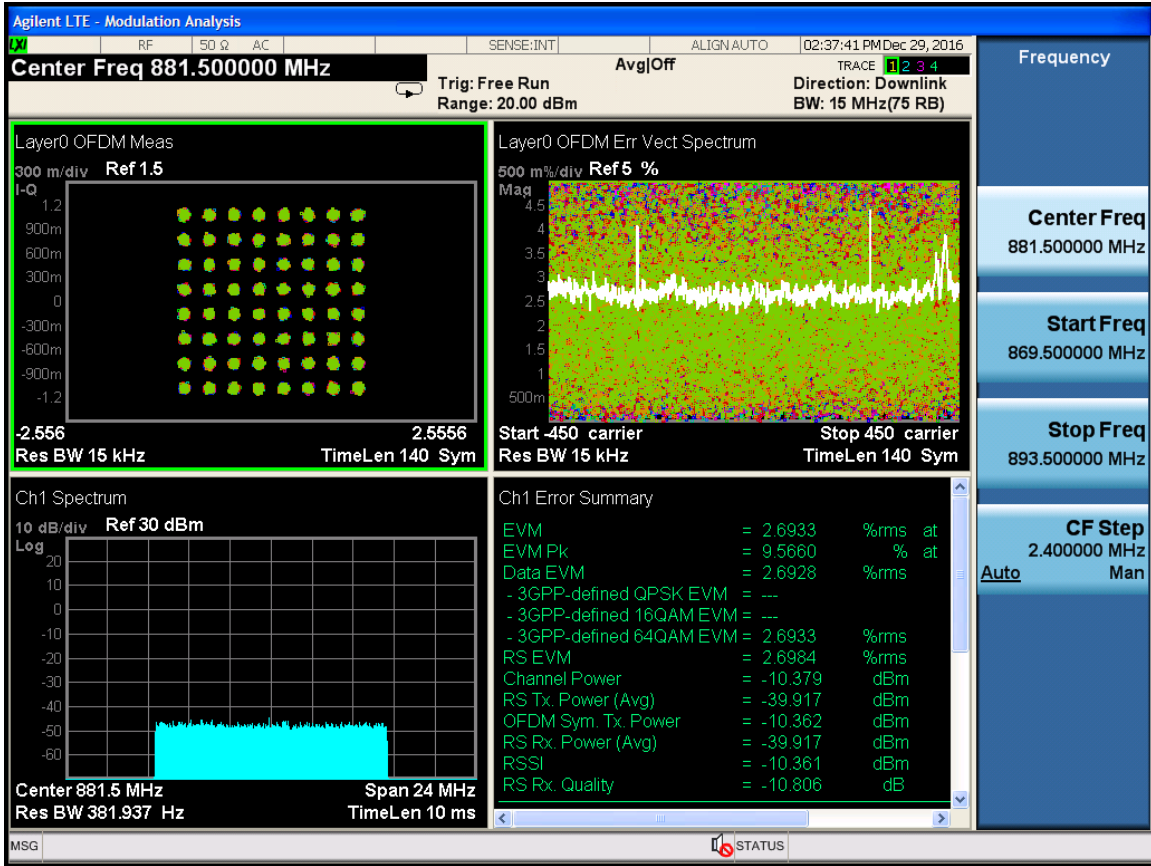


LTE15M-Port 1-881.5MHz-E-TM3.2

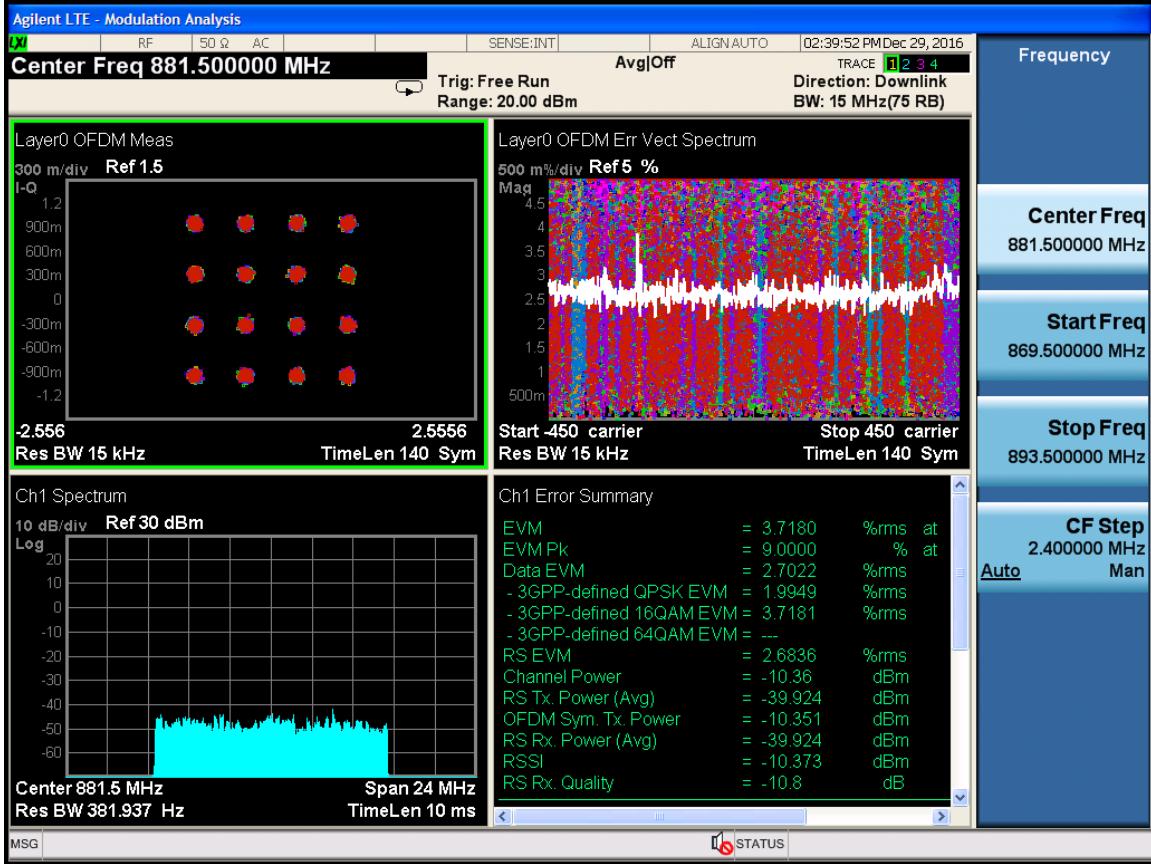 


LTE15M-Port 1-881.5MHz-E-TM3.3




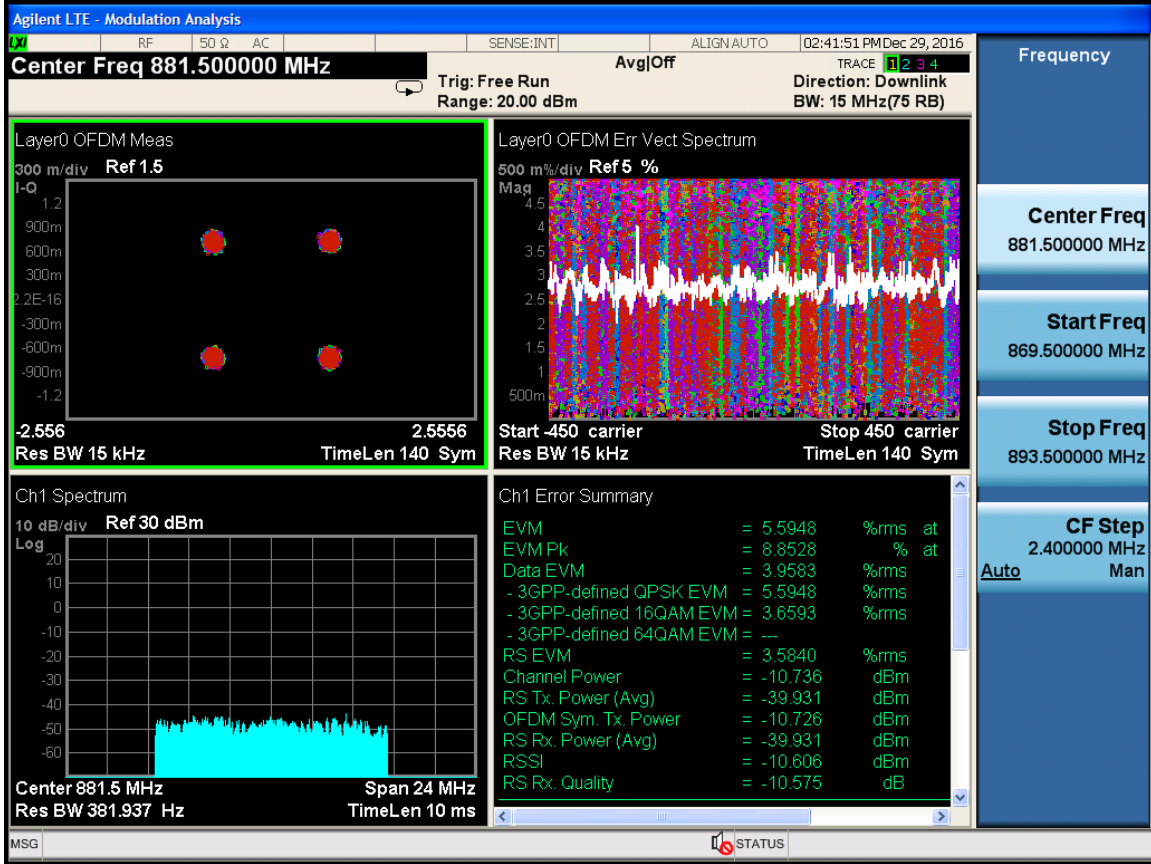 


RF 886.5M:  
 LTE 20M-Port 1-886.5MHz-E-TM2

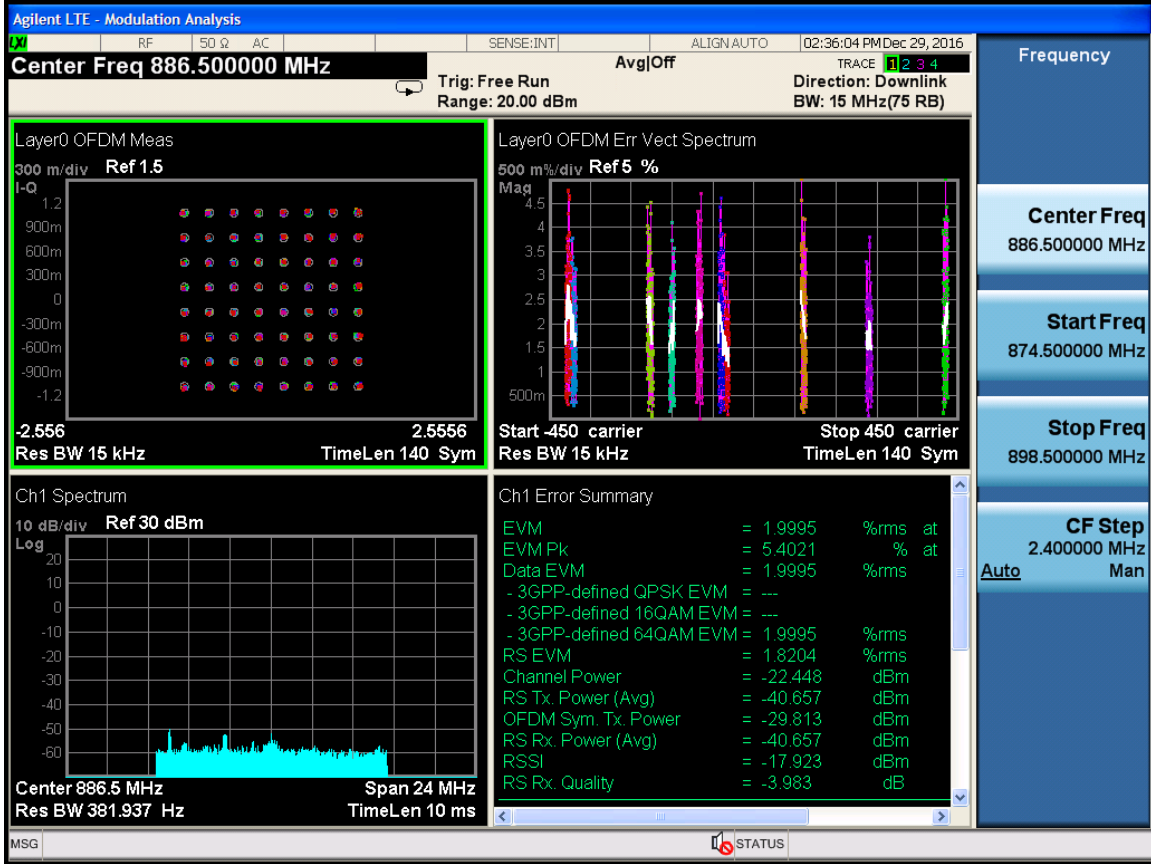 


LTE 15M-Port 1-886.5MHz-E-TM3.1

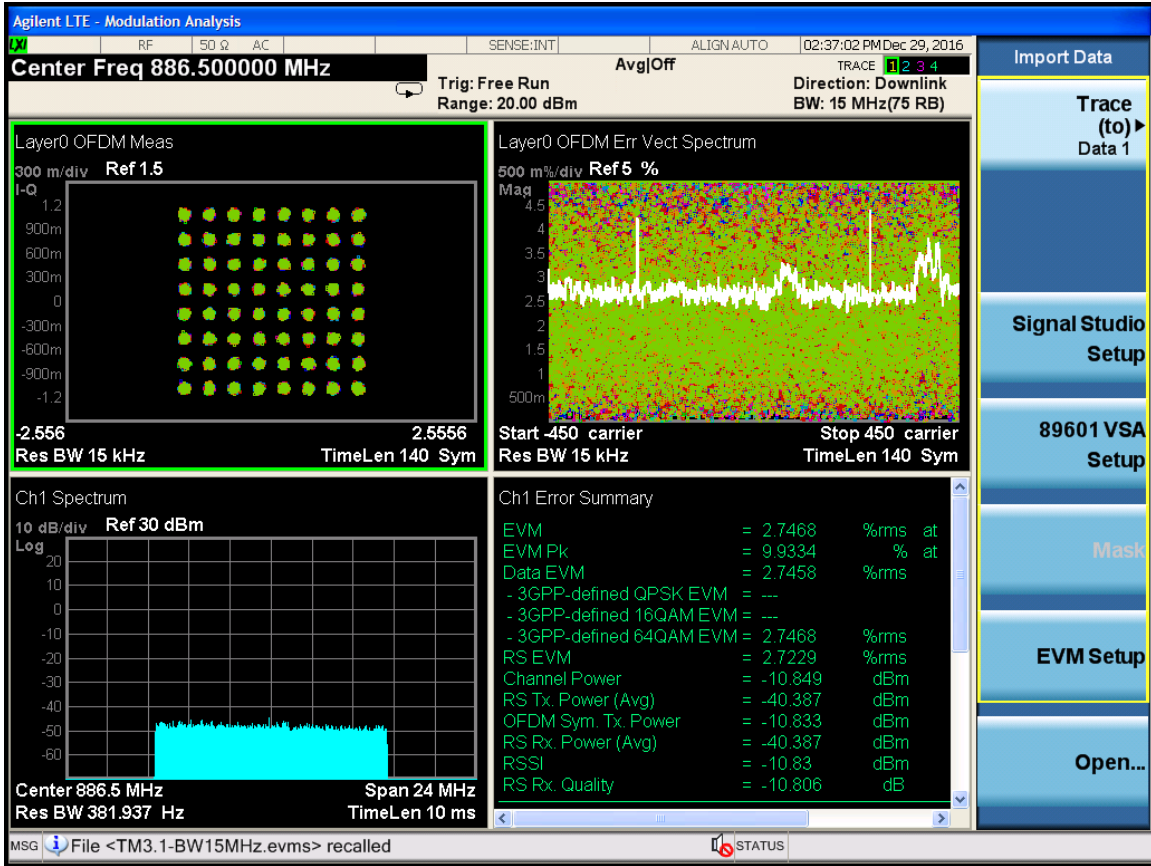 


LTE 15M-Port 1-886.5MHz-E-TM3.2

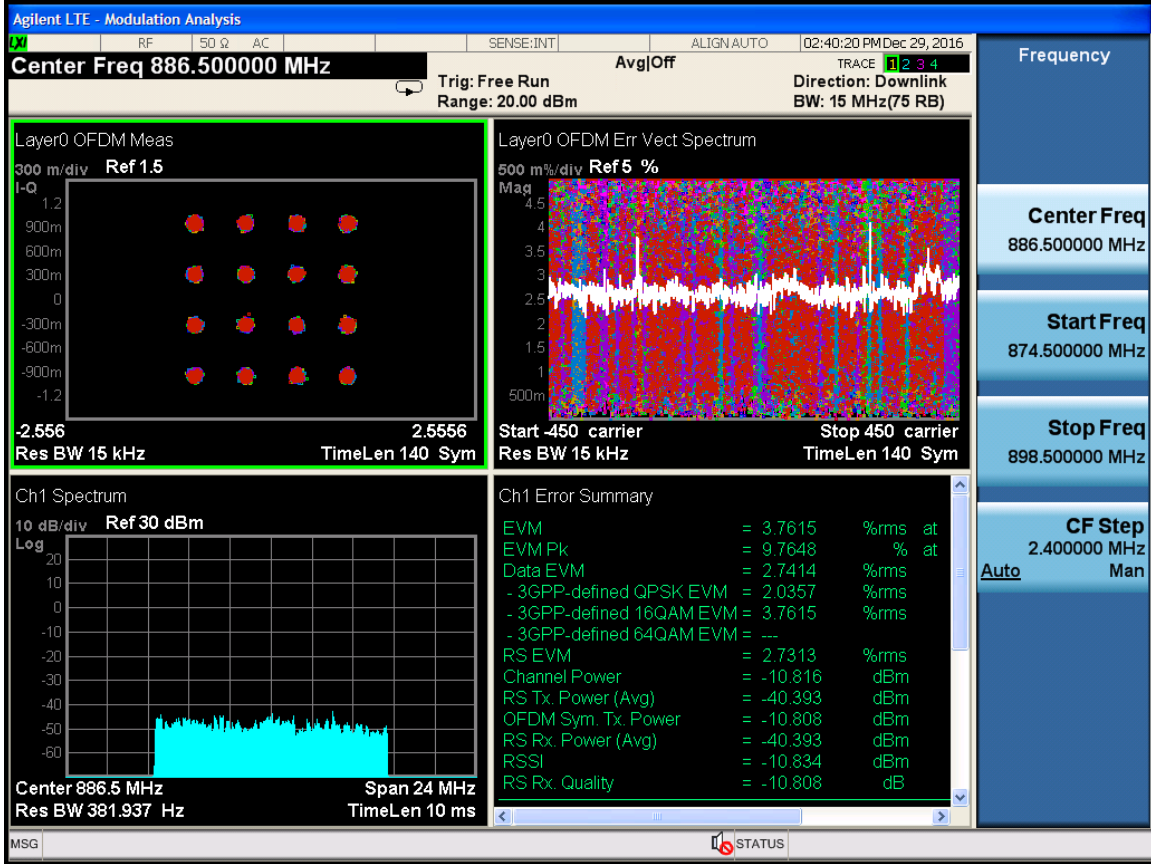 


LTE 15M-Port 1-886.5MHz-E-TM3.3

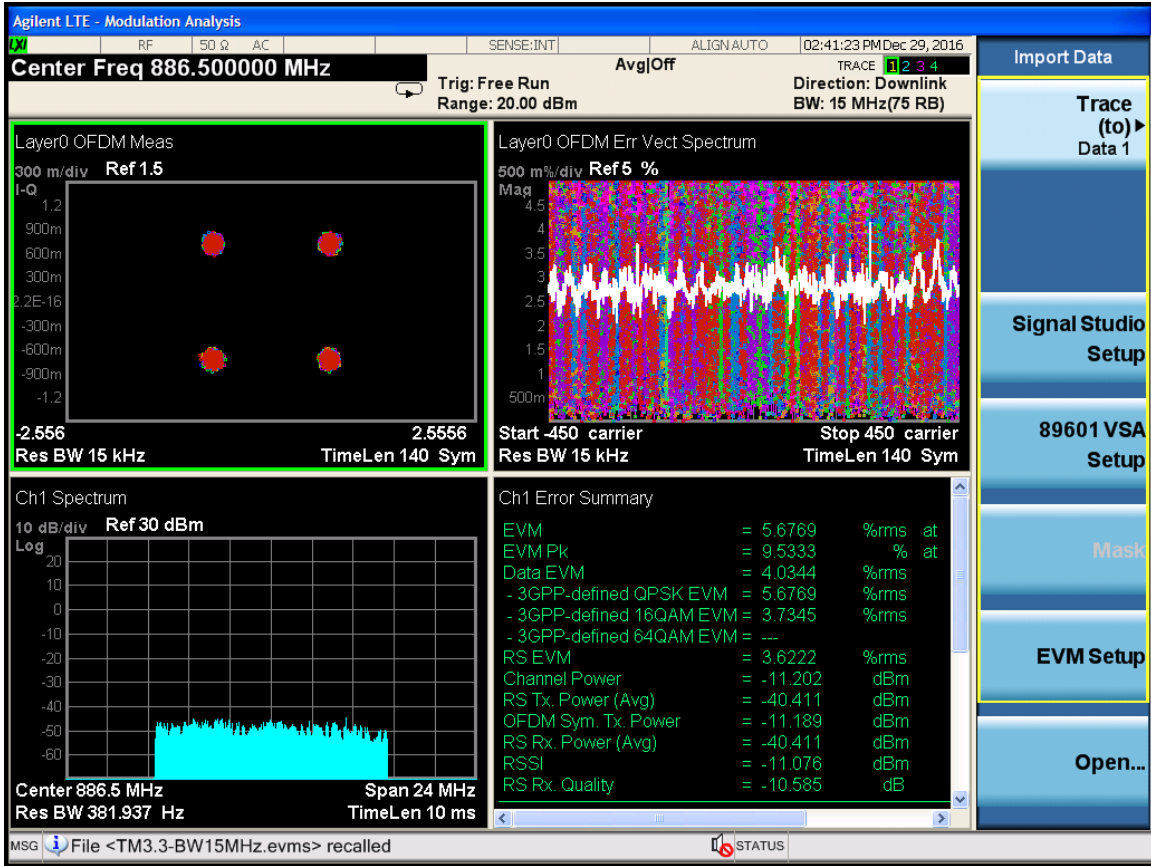 

LTE 10M-Port 0-874MHz-E-TM2

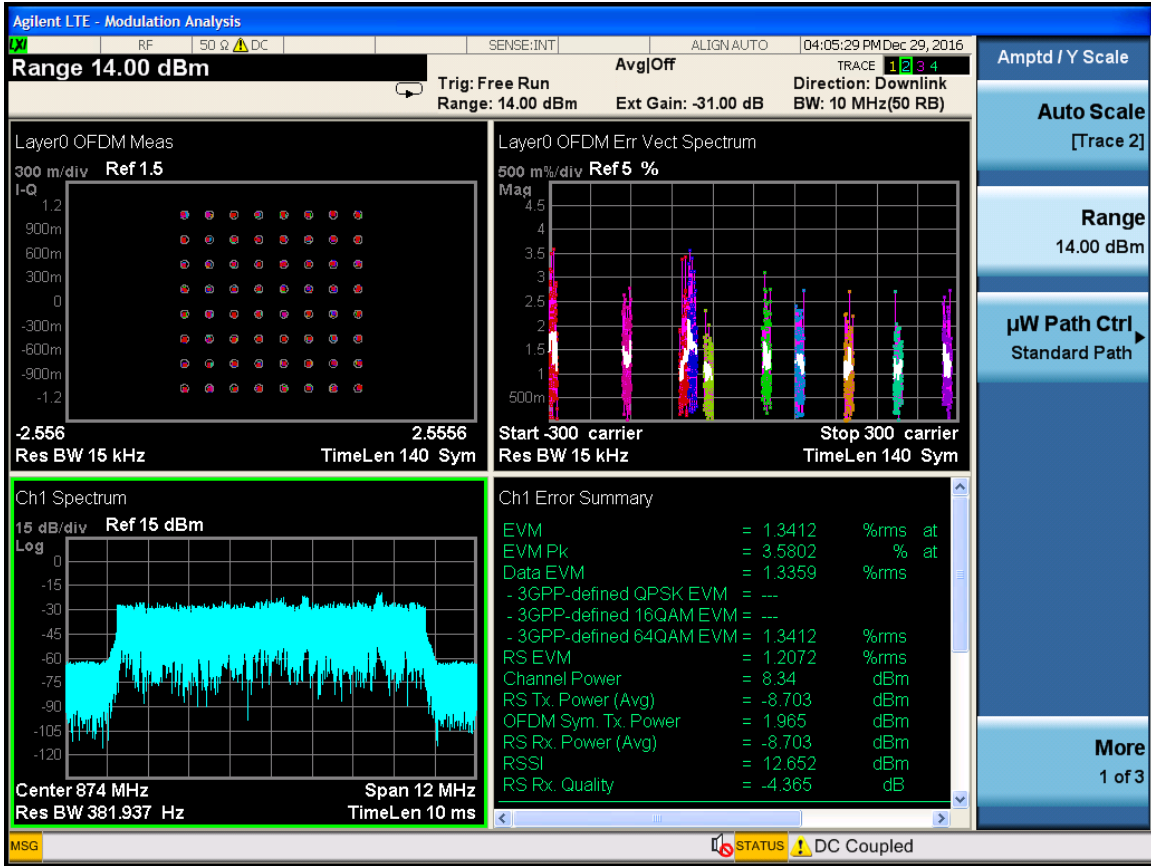 


LTE 10M-Port 0-874MHz-E-TM3.1

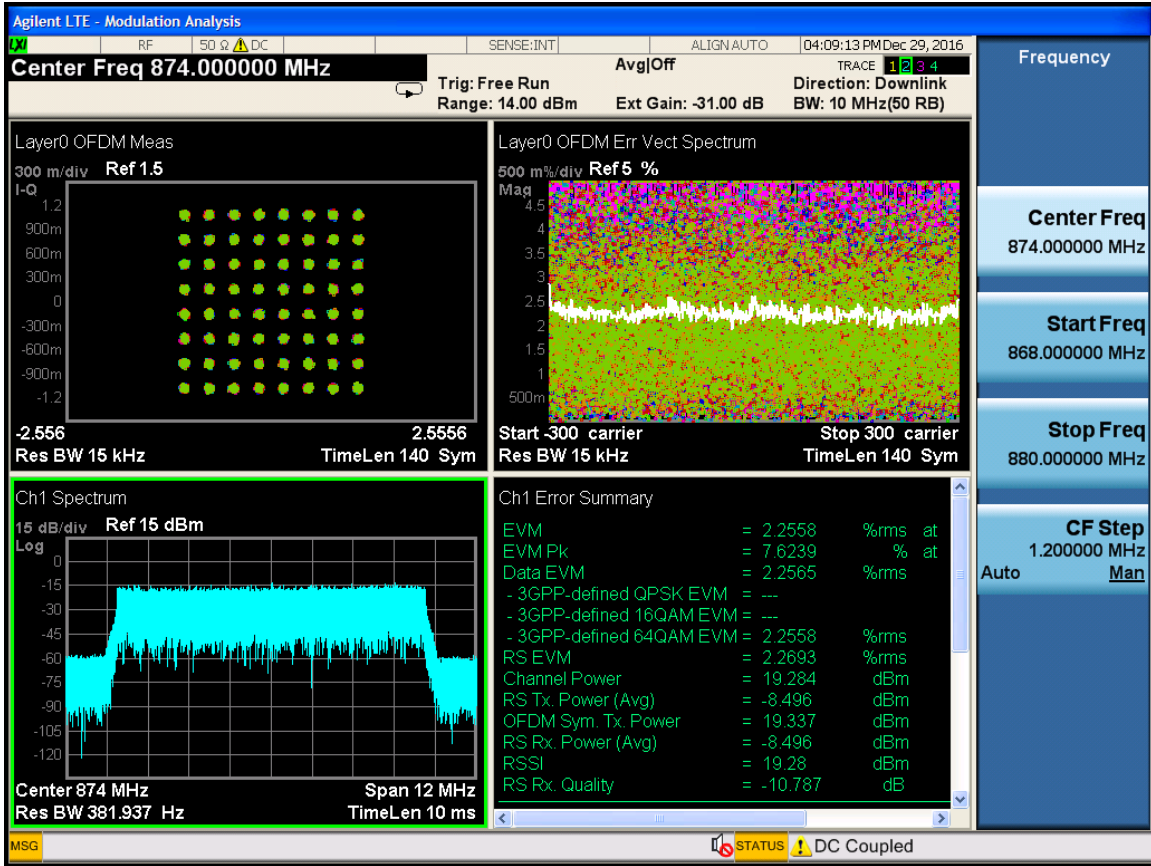 


Frequency	
Center Freq	874.000000 MHz
Start Freq	868.000000 MHz
Stop Freq	880.000000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE 10M-Port 0-874MHz-E-TM3.2

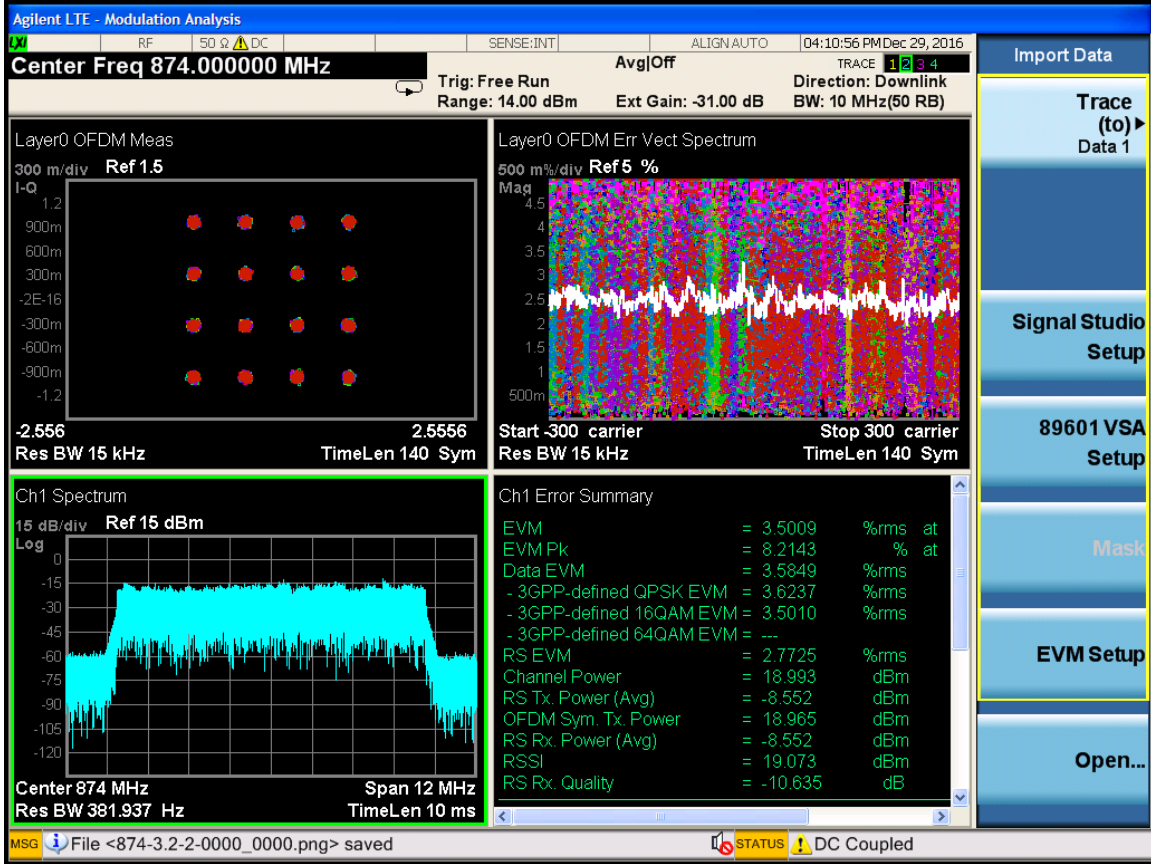


LTE10M-Port0-874MHz-E-TM3.3



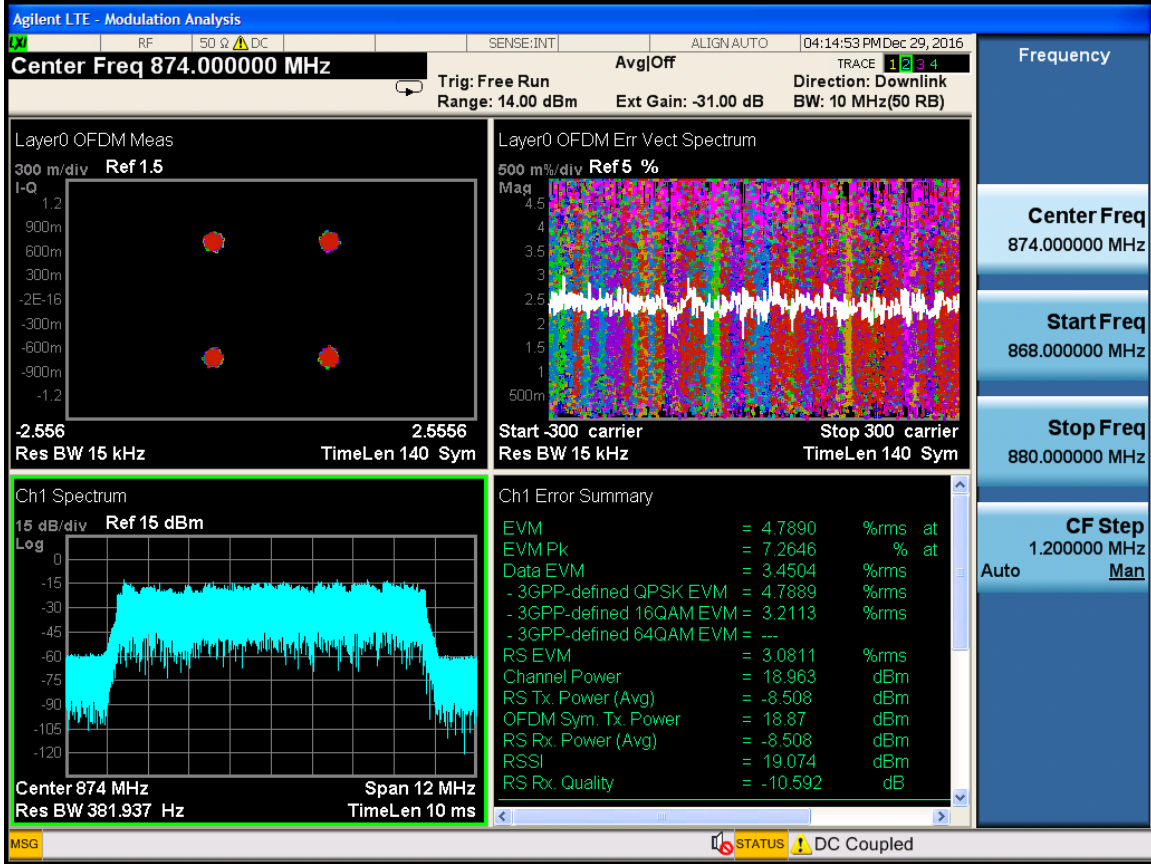 


Frequency	
Center Freq	874.000000 MHz
Start Freq	868.000000 MHz
Stop Freq	880.000000 MHz
CF Step	1.200000 MHz
	Auto <u>Man</u>

 LTE10M-Port0-881.5MHz-E-TM2.0

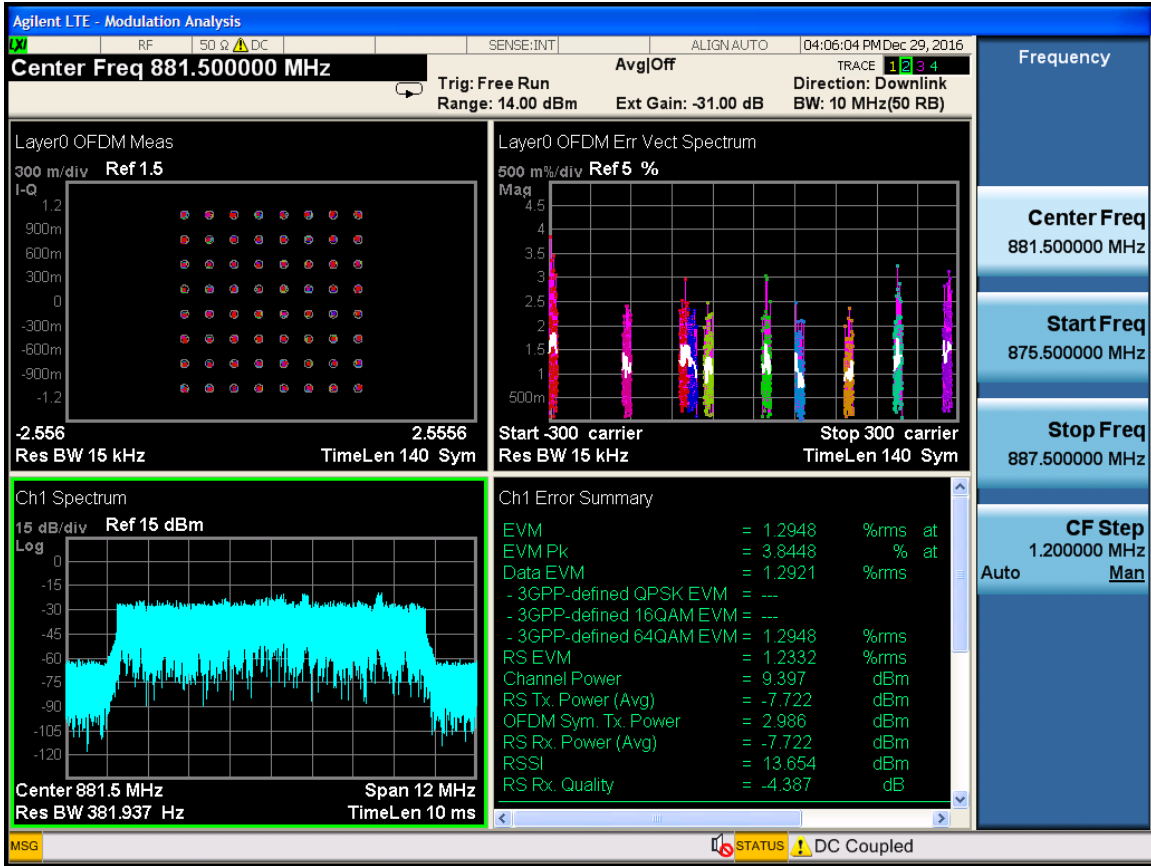


<b>Frequency</b>
<b>Center Freq</b> 881.500000 MHz
<b>Start Freq</b> 875.500000 MHz
<b>Stop Freq</b> 887.500000 MHz
<b>CF Step</b> 1.200000 MHz
Auto <u>Man</u>

 LTE10M-Port0-881.5MHz-E-TM3.1

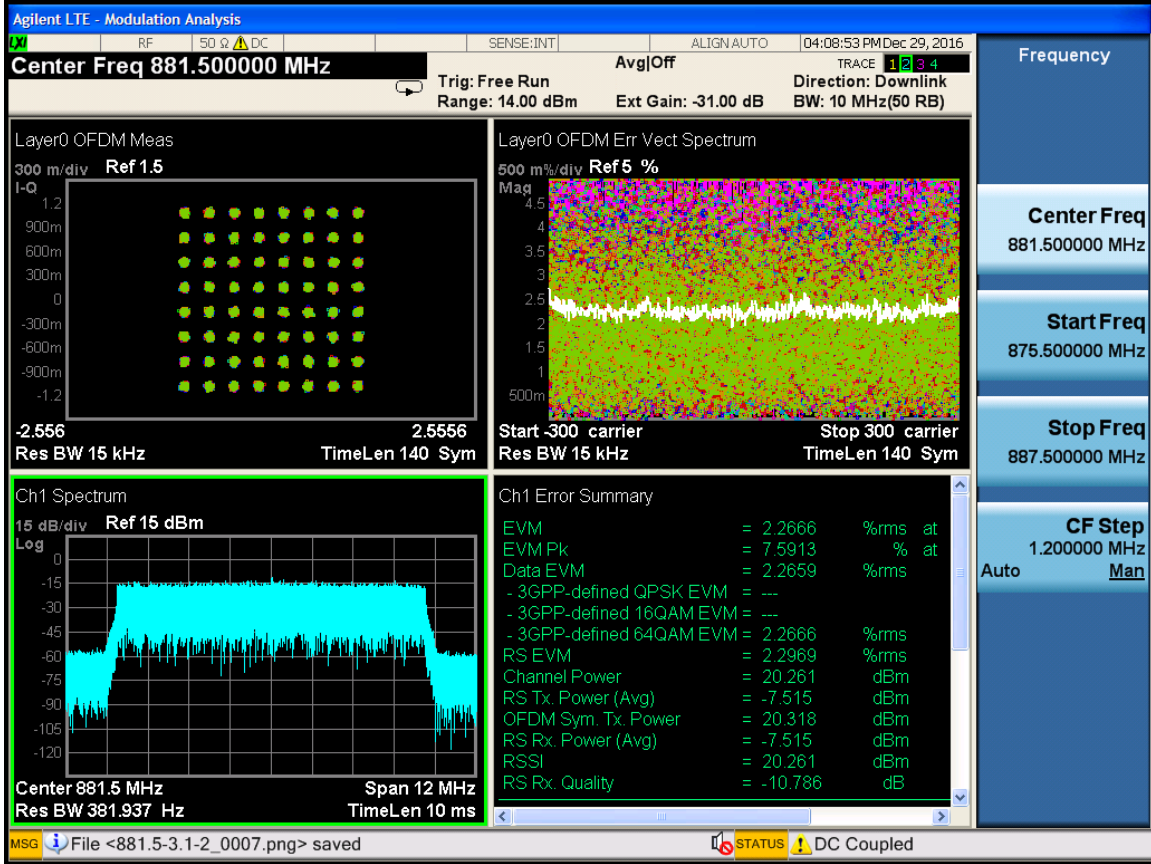


Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE10M-Port0-881.5MHz-E-TM3.2

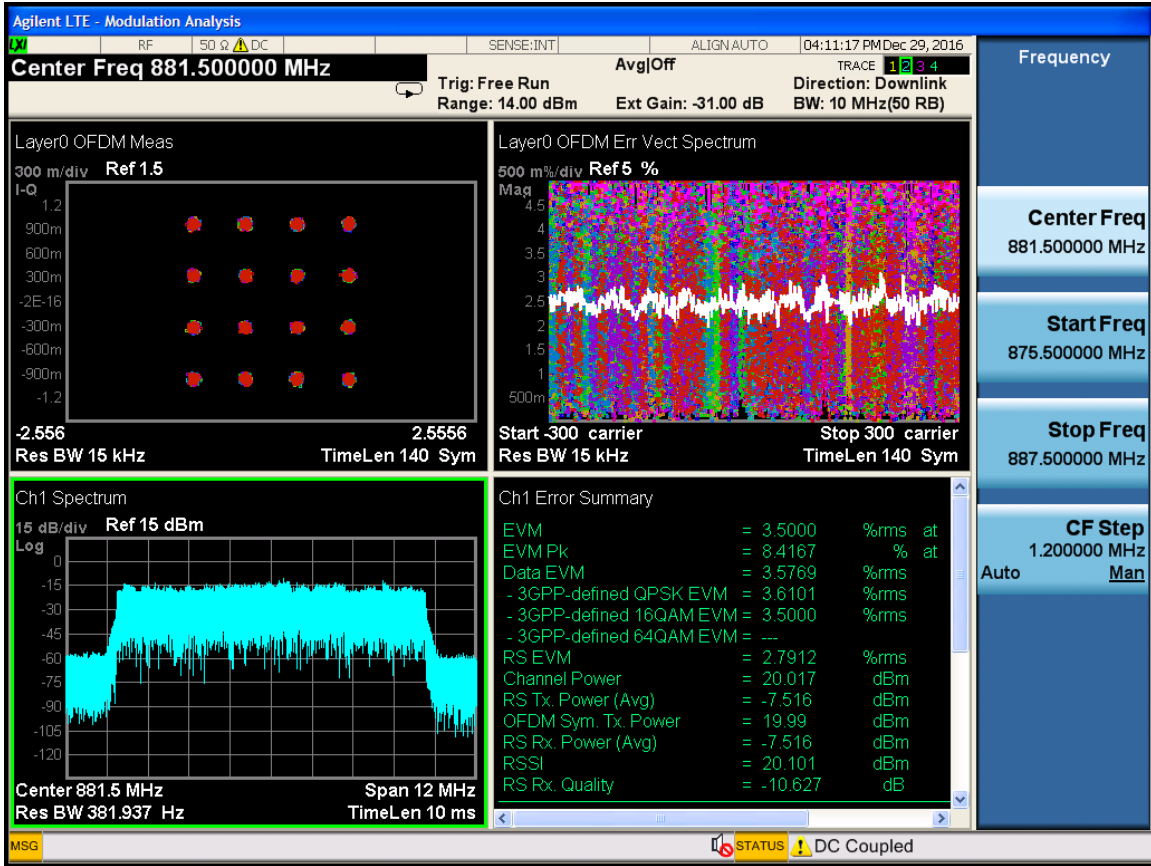


Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE10M-Port0-881.5MHz-E-TM3.3

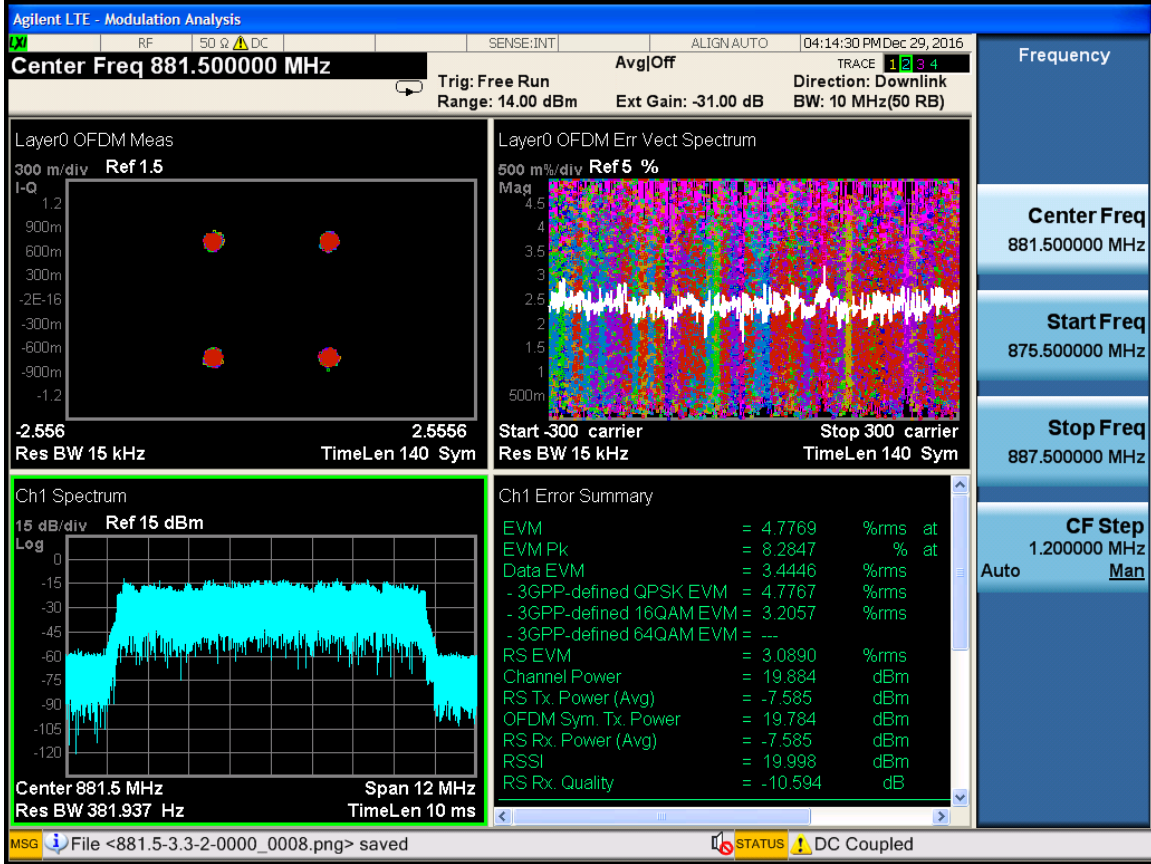


Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 
LTE10M-Port0-889MHz-E-TM2.0

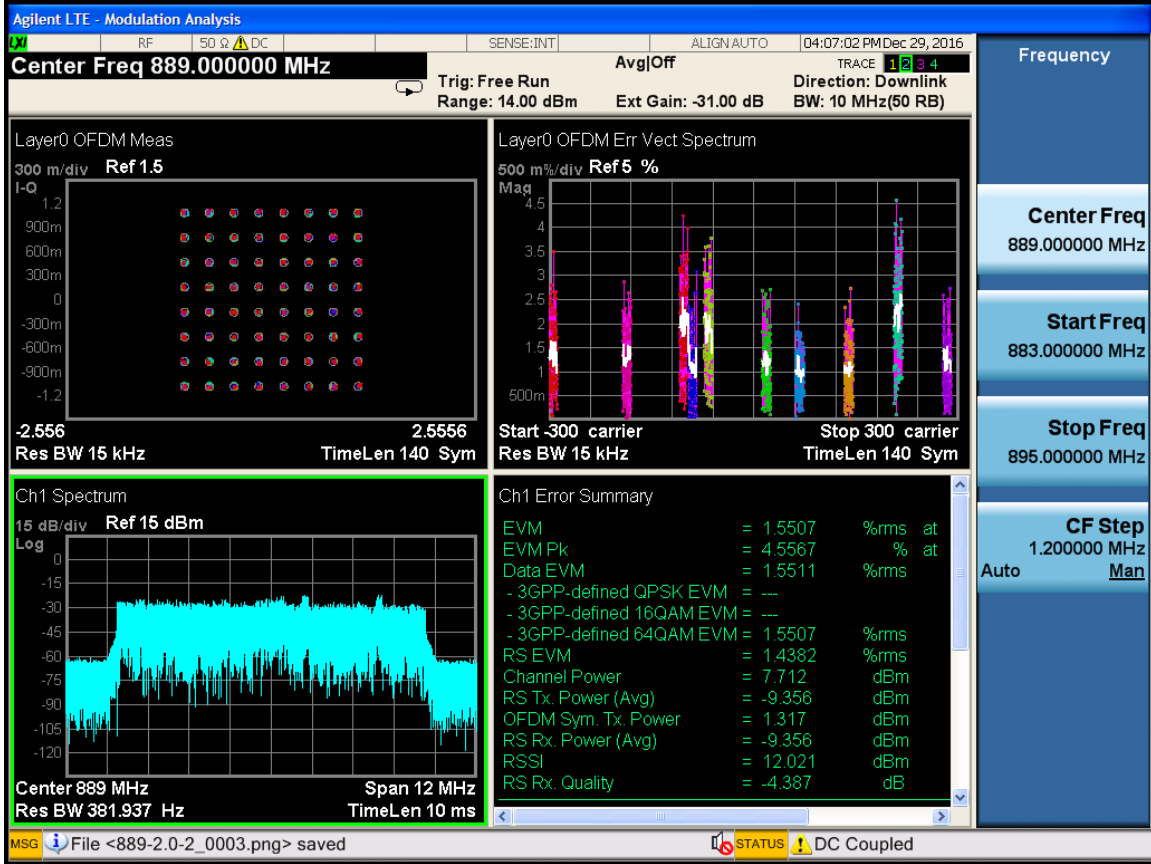

LTE10M-Port0-889MHz-E-TM3.1

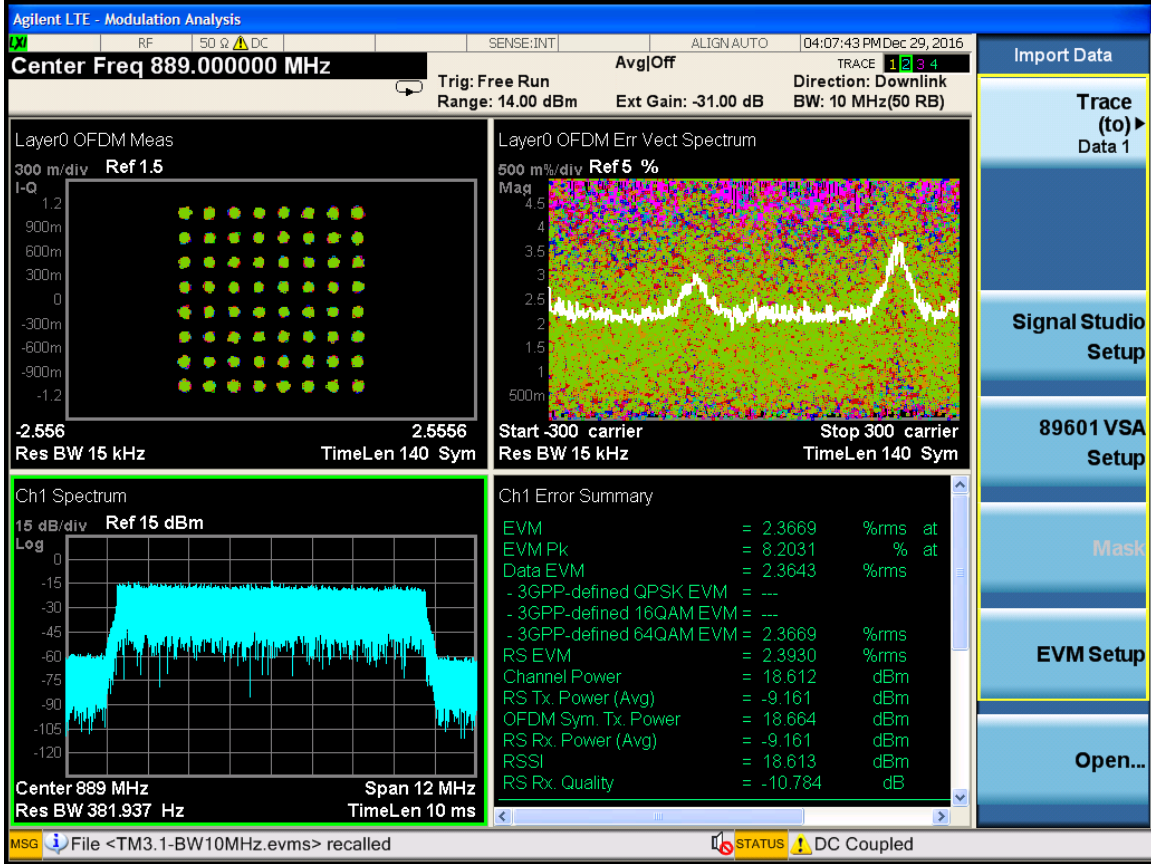 


LTE10M-Port0-889MHz-E-TM3.2

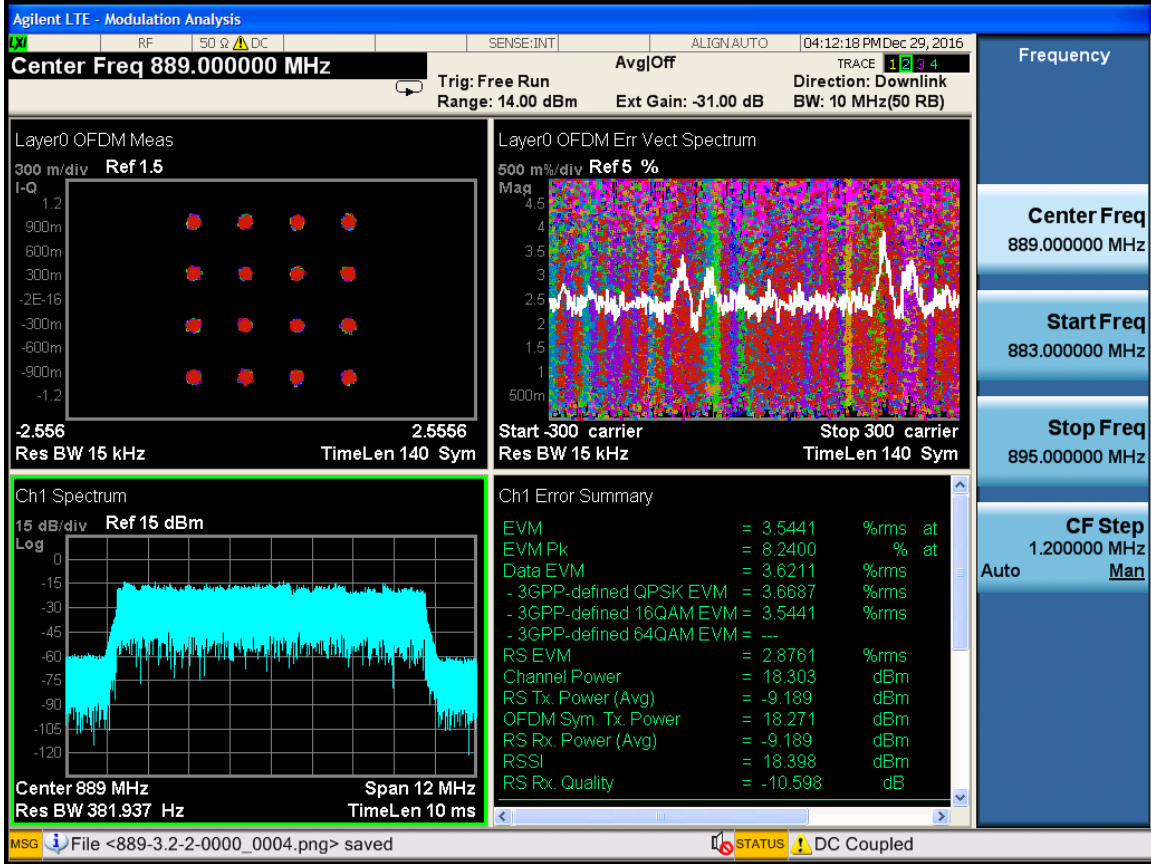 


LTE10M-Port0-889MHz-E-TM3.3




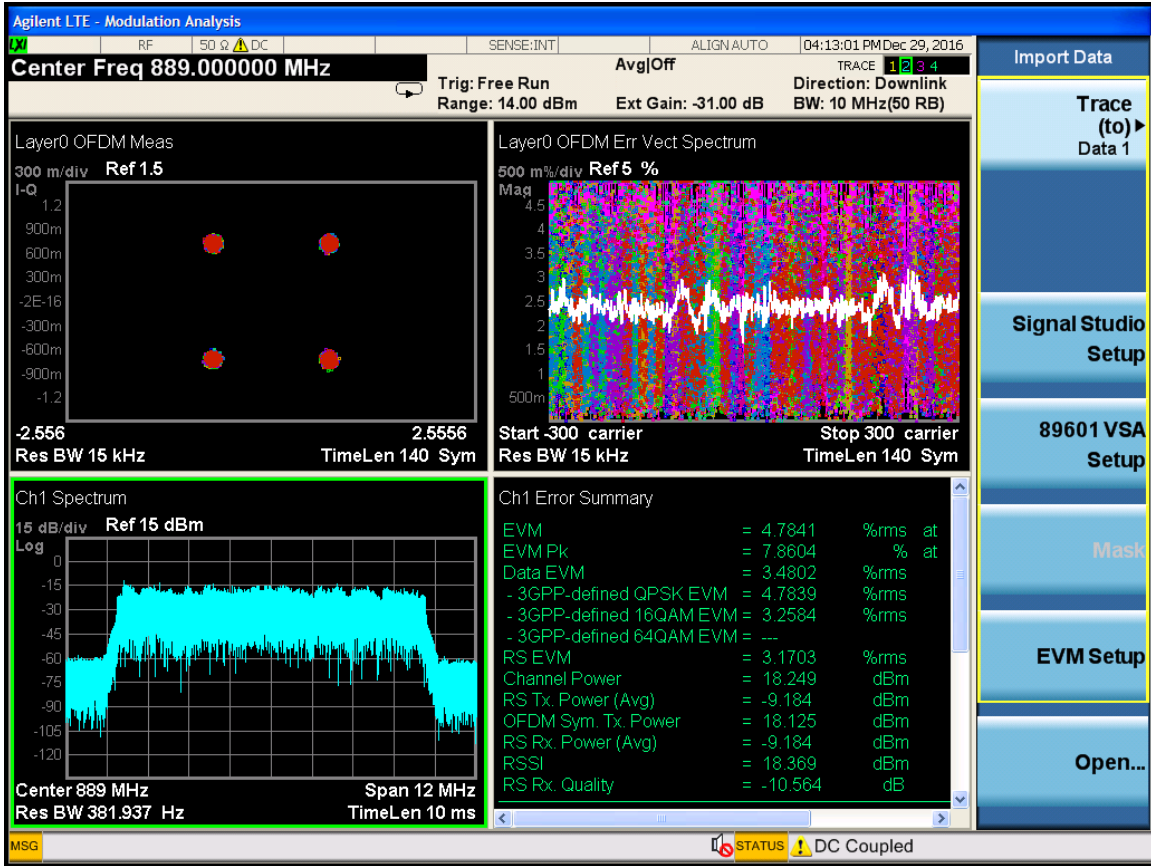 


LTE 10M-Port 1-874MHz-E-TM2.0

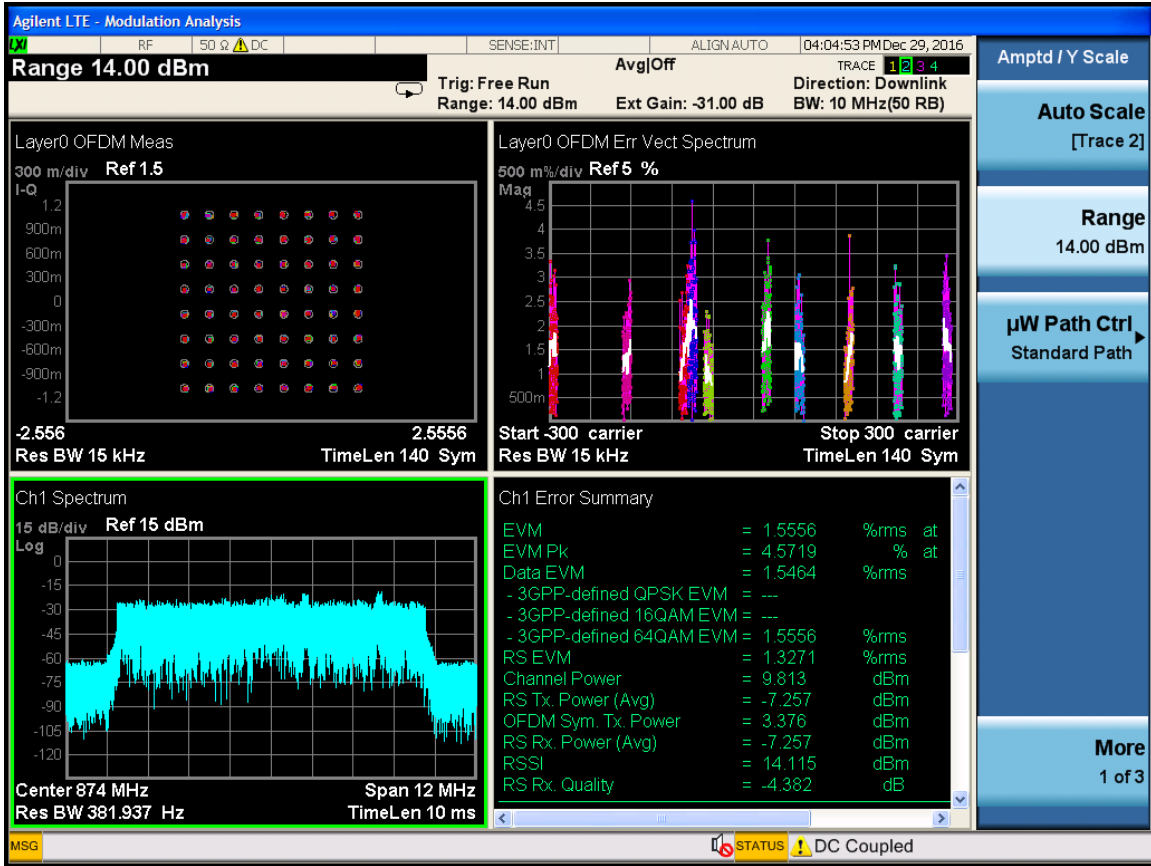 


LTE 10M-Port 1-874MHz-E-TM3.1

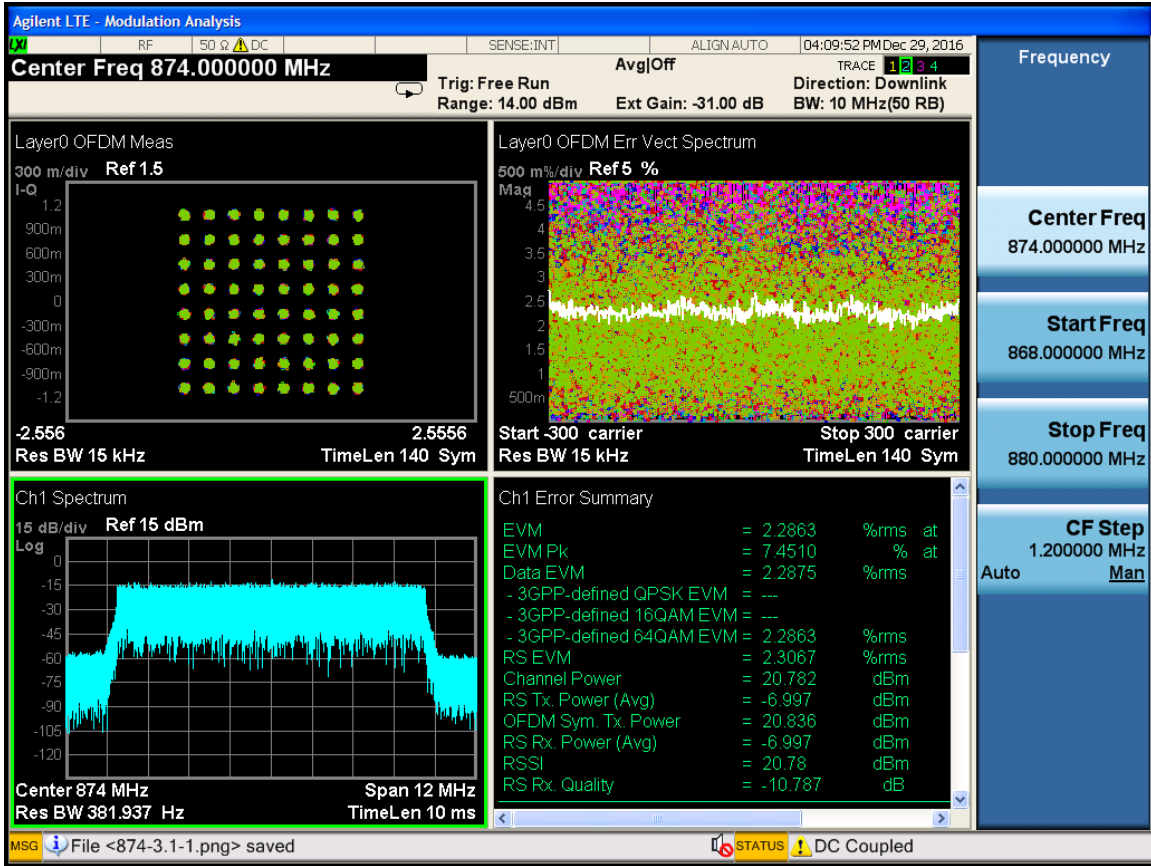 


LTE 10M-Port 1-874MHz-E-TM3.2

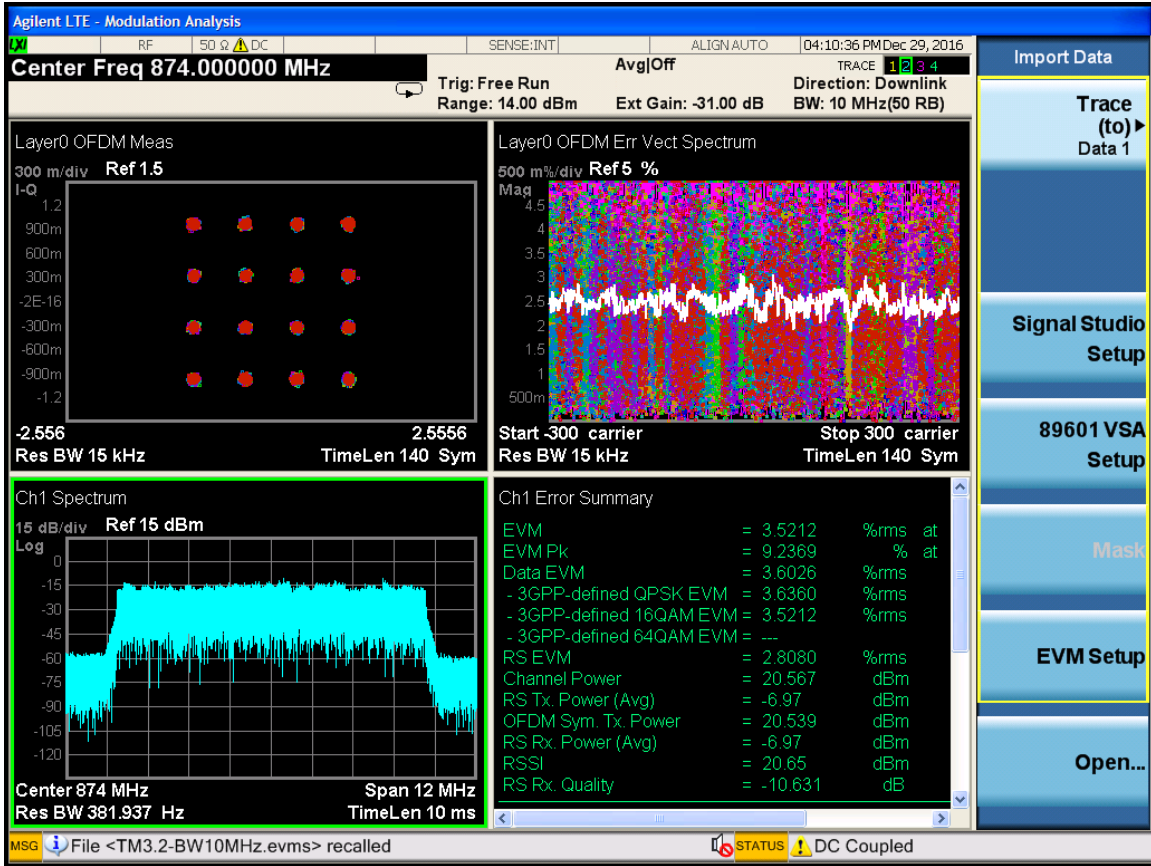 

LTE 10M-Port 1-874MHz-E-TM3.3

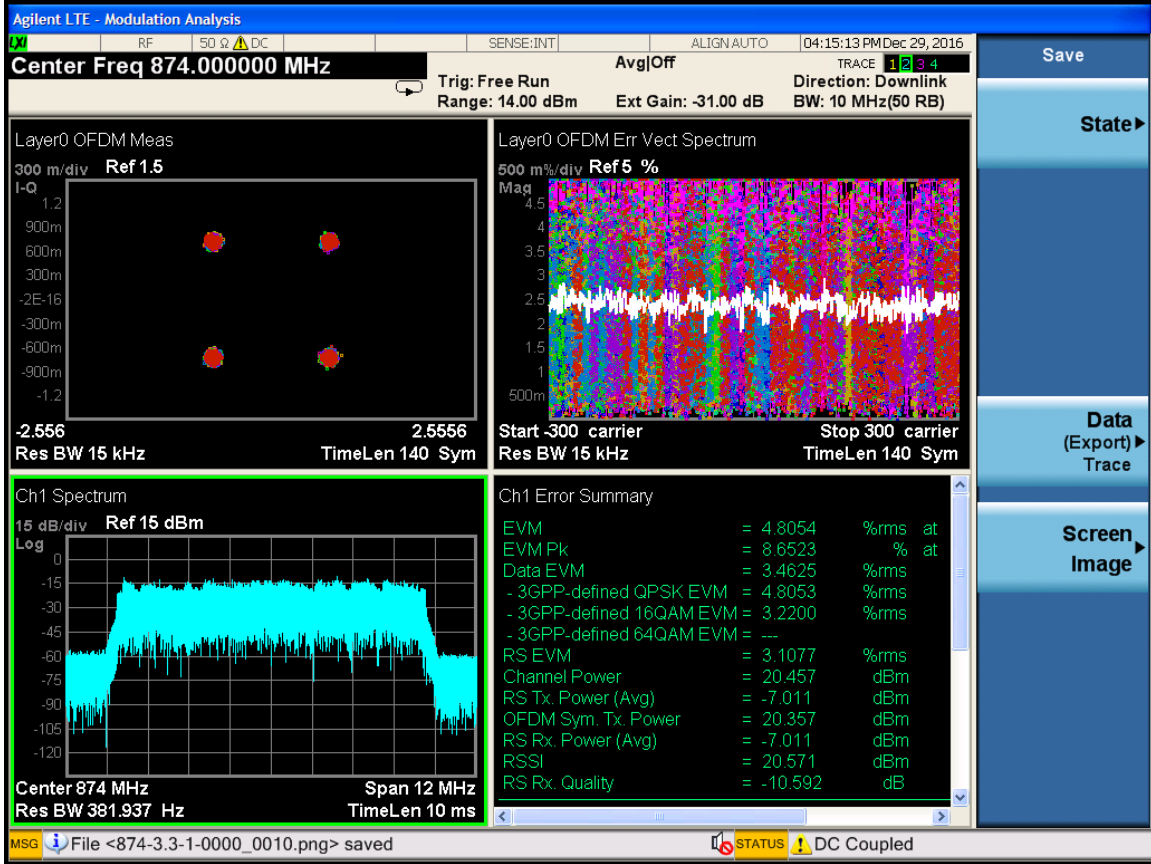 


LTE10M-Port1-881.5MHz-E-TM2.0

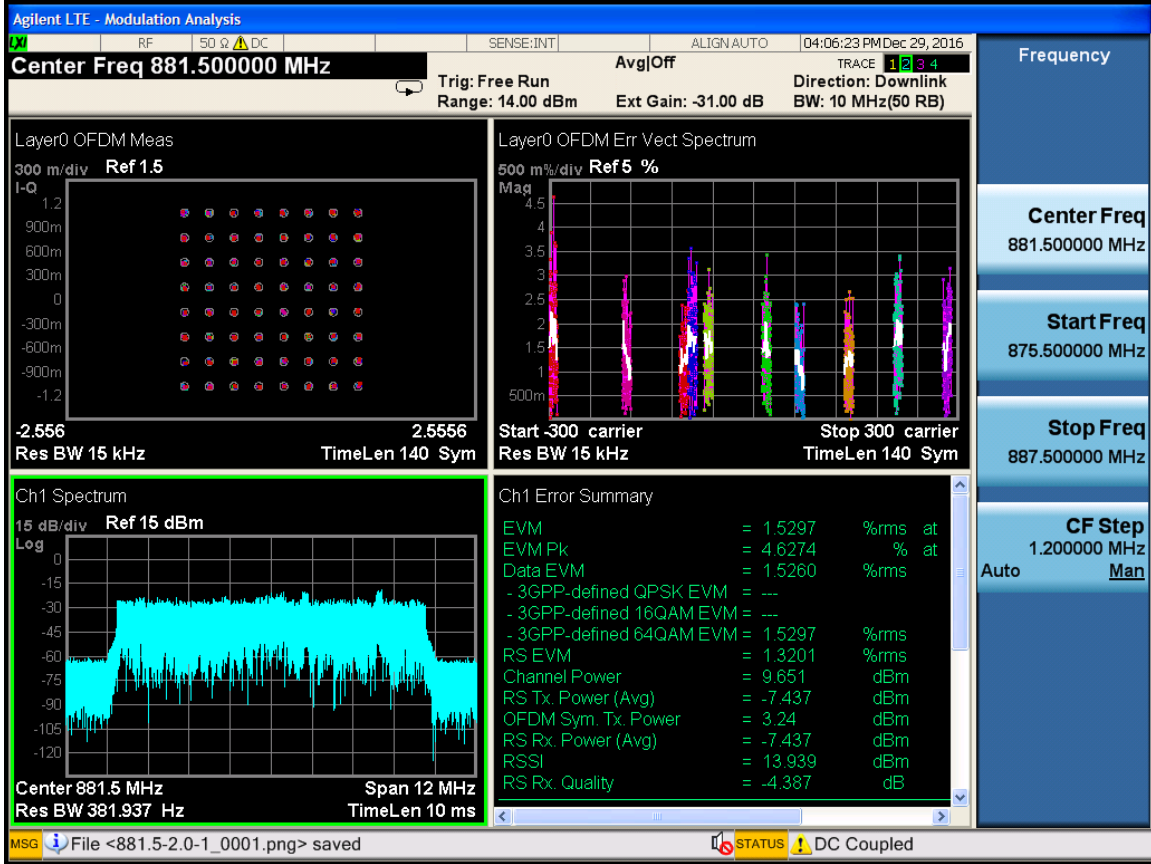 


Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE10M-Port1-881.5MHz-E-TM3.1

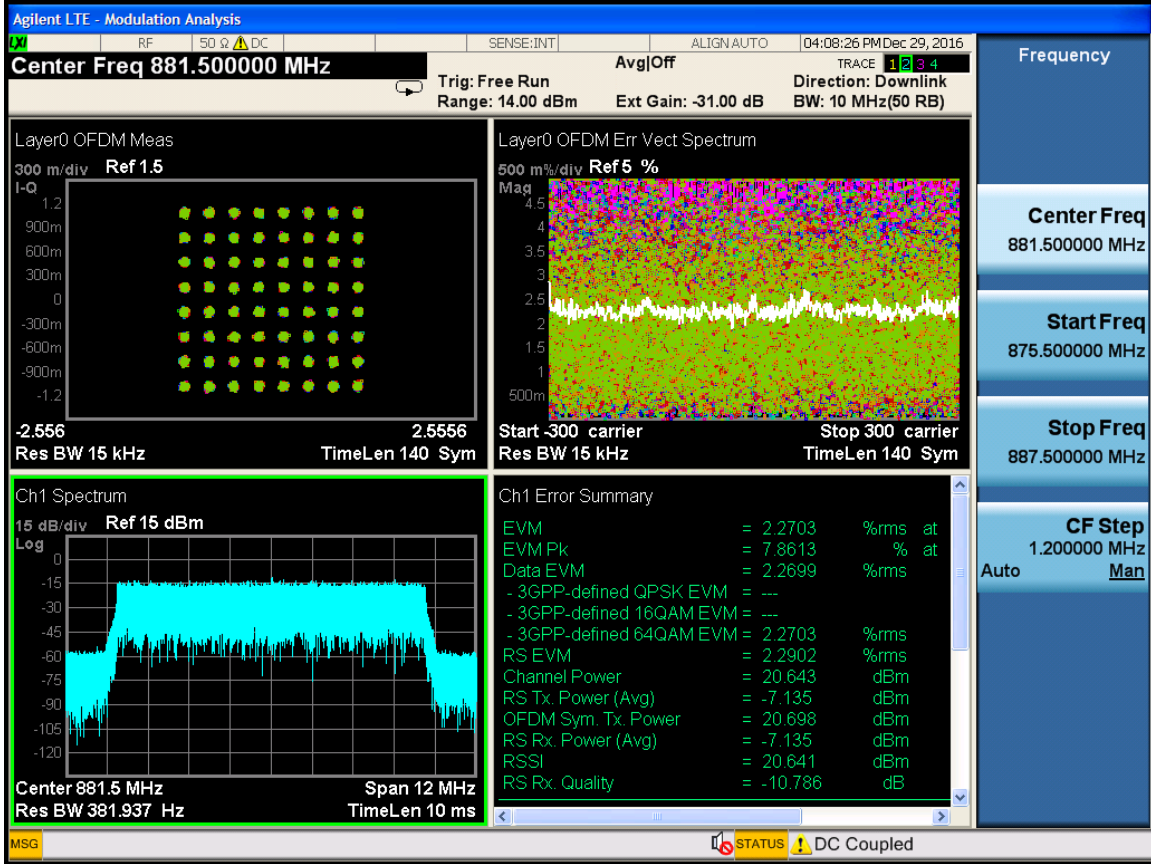

Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 
LTE10M-Port1-881.5MHz-E-TM3.2

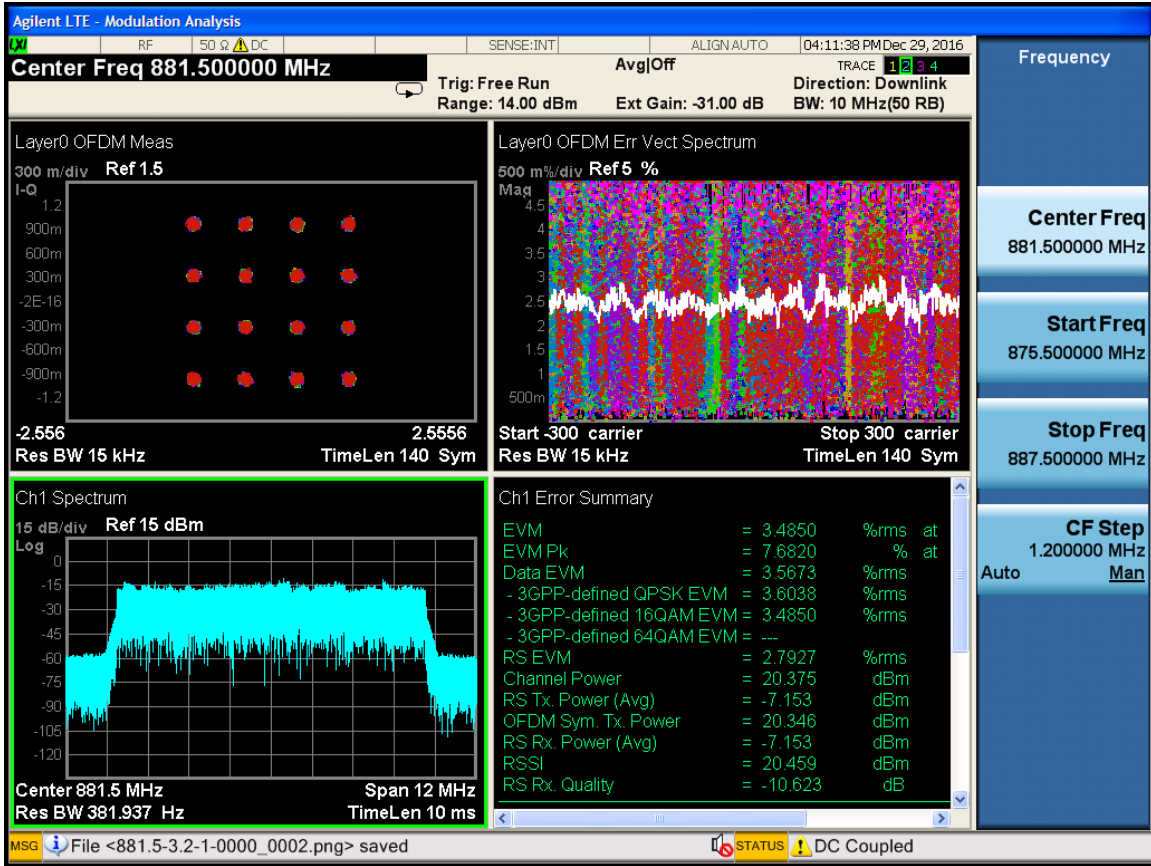

Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 
LTE10M-Port1-881.5MHz-E-TM3.3



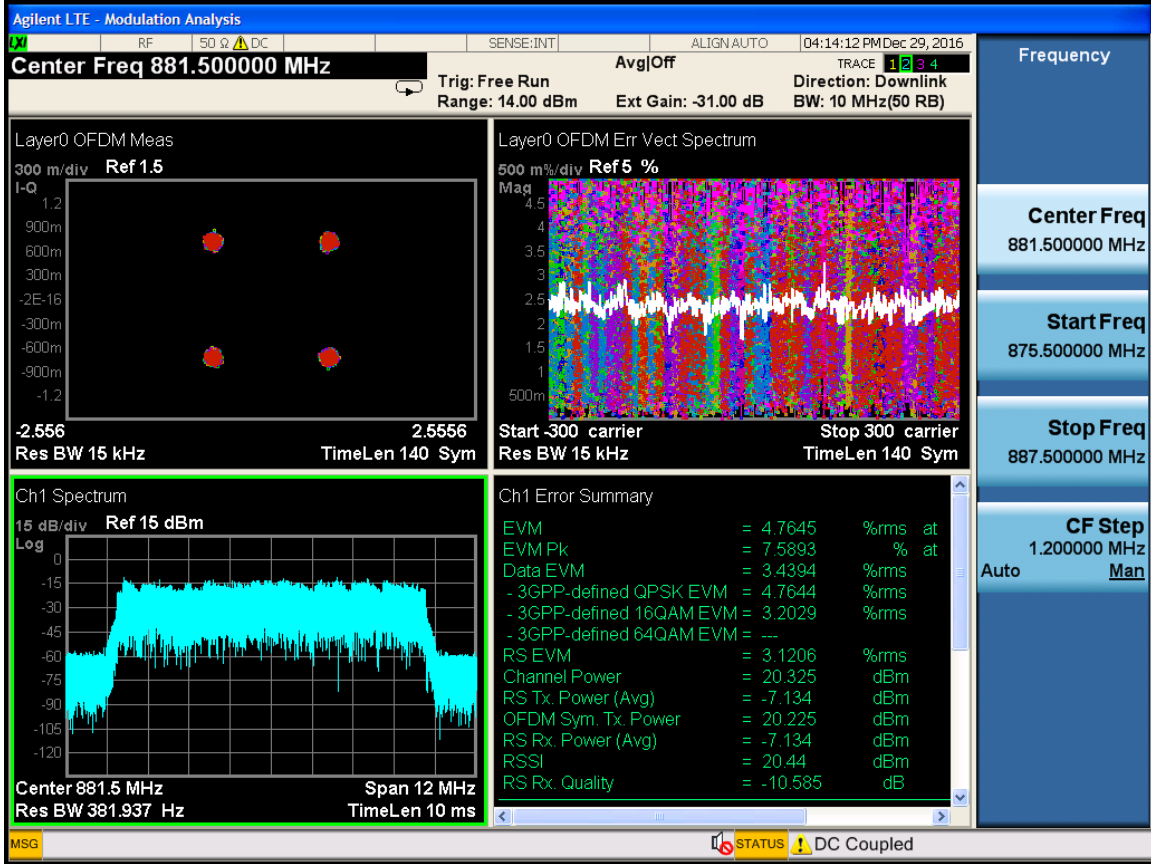


Frequency	
Center Freq	881.500000 MHz
Start Freq	875.500000 MHz
Stop Freq	887.500000 MHz
CF Step	1.200000 MHz
	Auto <u>Man</u>

 LTE10M-Port1-889MHz-E-TM2.0

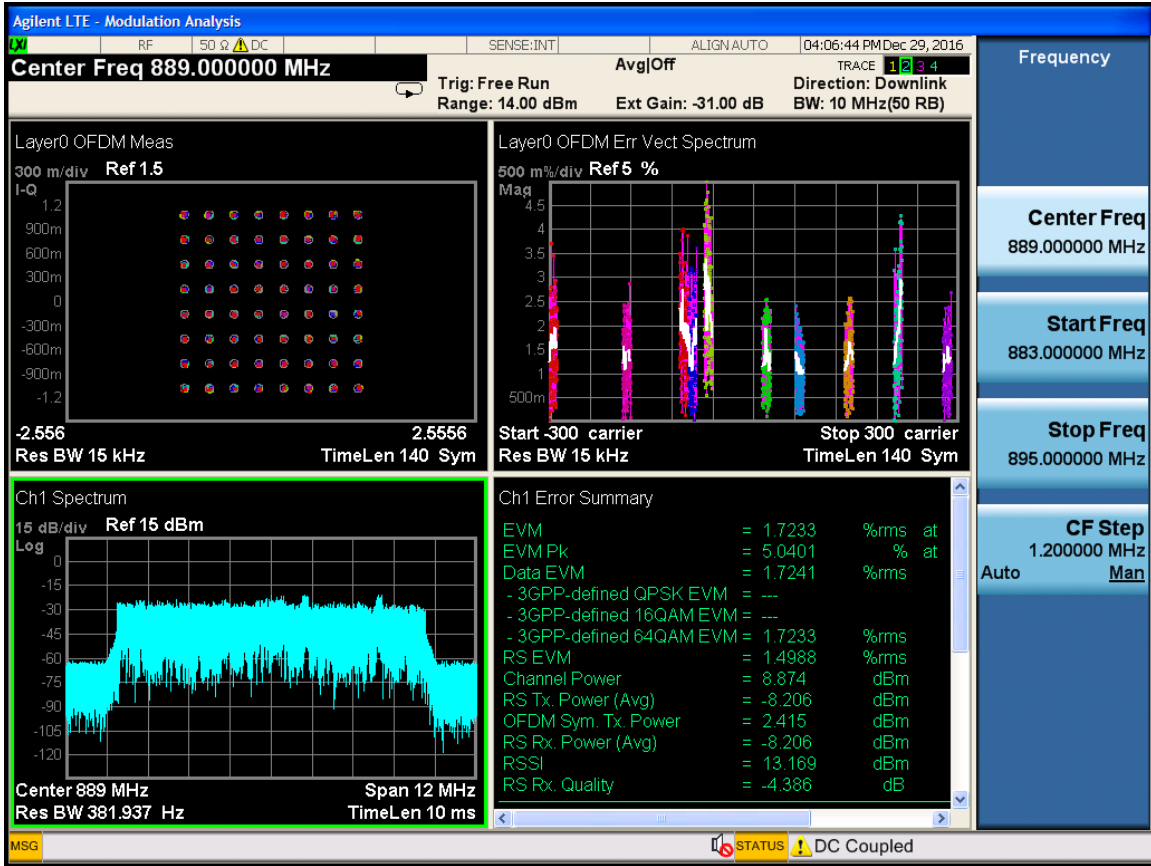


Frequency
<b>Center Freq</b> 889.000000 MHz
<b>Start Freq</b> 883.000000 MHz
<b>Stop Freq</b> 895.000000 MHz
<b>CF Step</b> 1.200000 MHz
Auto <u>Man</u>

 LTE10M-Port1-889MHz-E-TM3.1

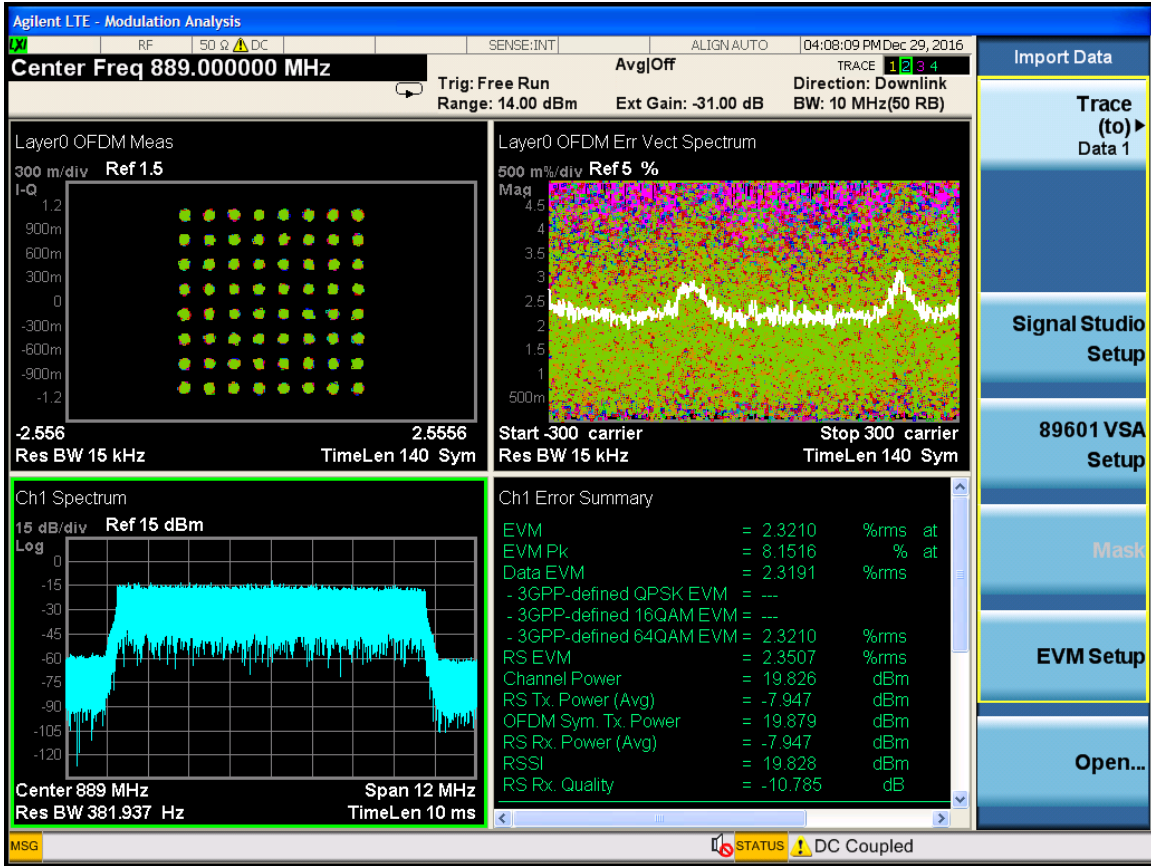


LTE10M-Port1-889MHz-E-TM3.2

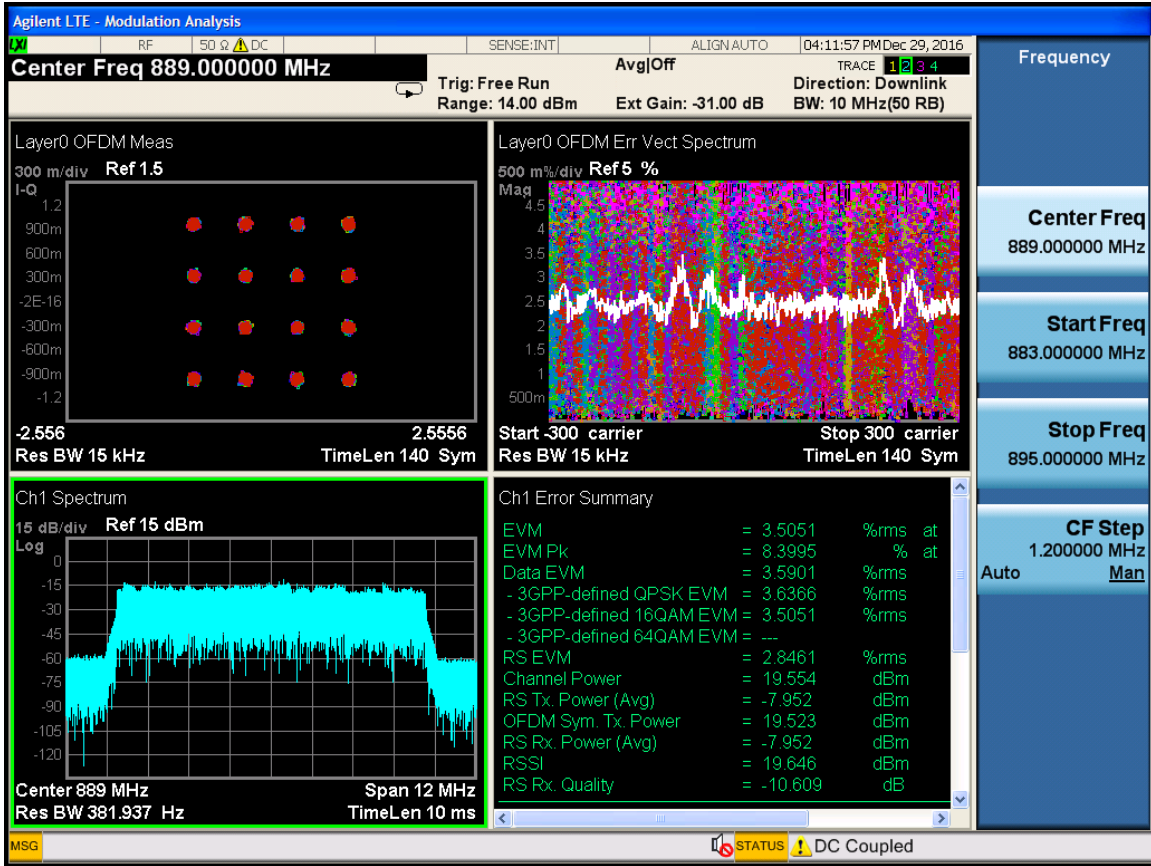 


Frequency	
Center Freq	889.000000 MHz
Start Freq	883.000000 MHz
Stop Freq	895.000000 MHz
CF Step	1.200000 MHz
	Auto <u>Man</u>

 LTE10M-Port1-889MHz-E-TM3.3

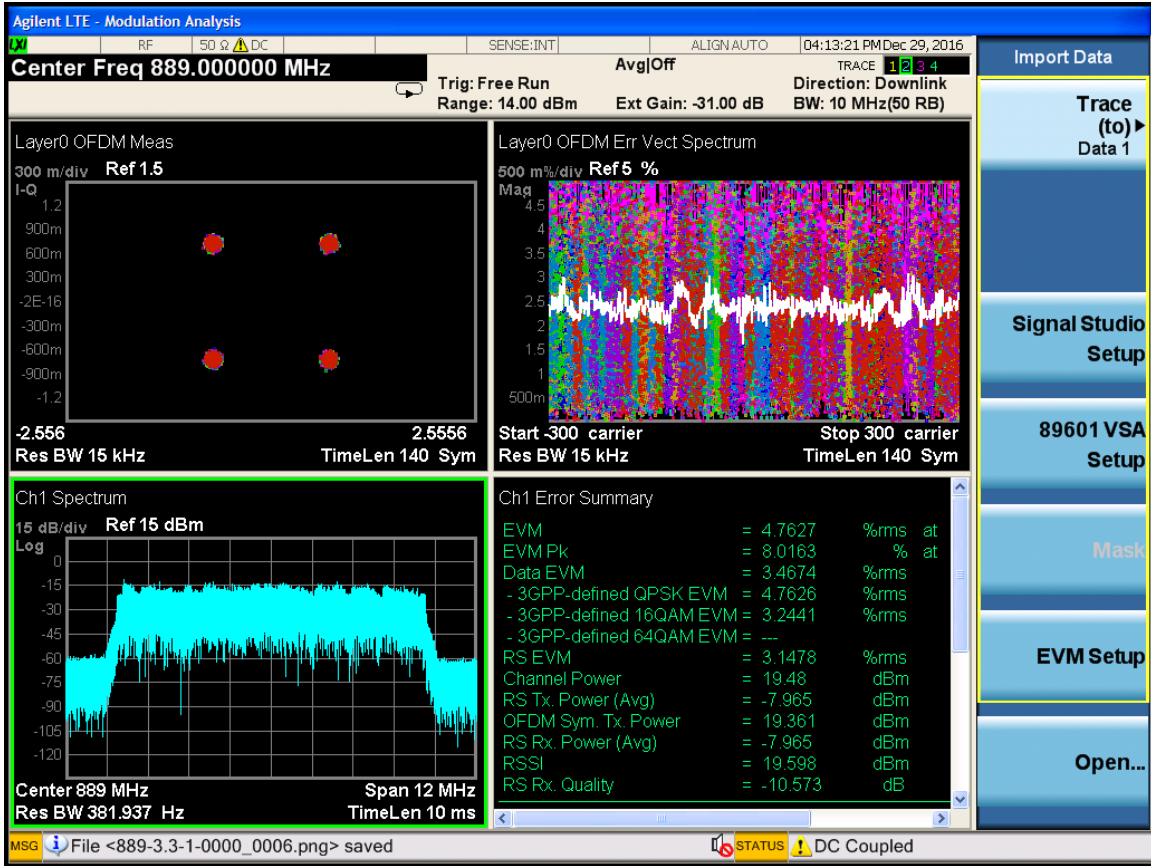


LTE5M-Port0-871.5MHz-E-TM2.0

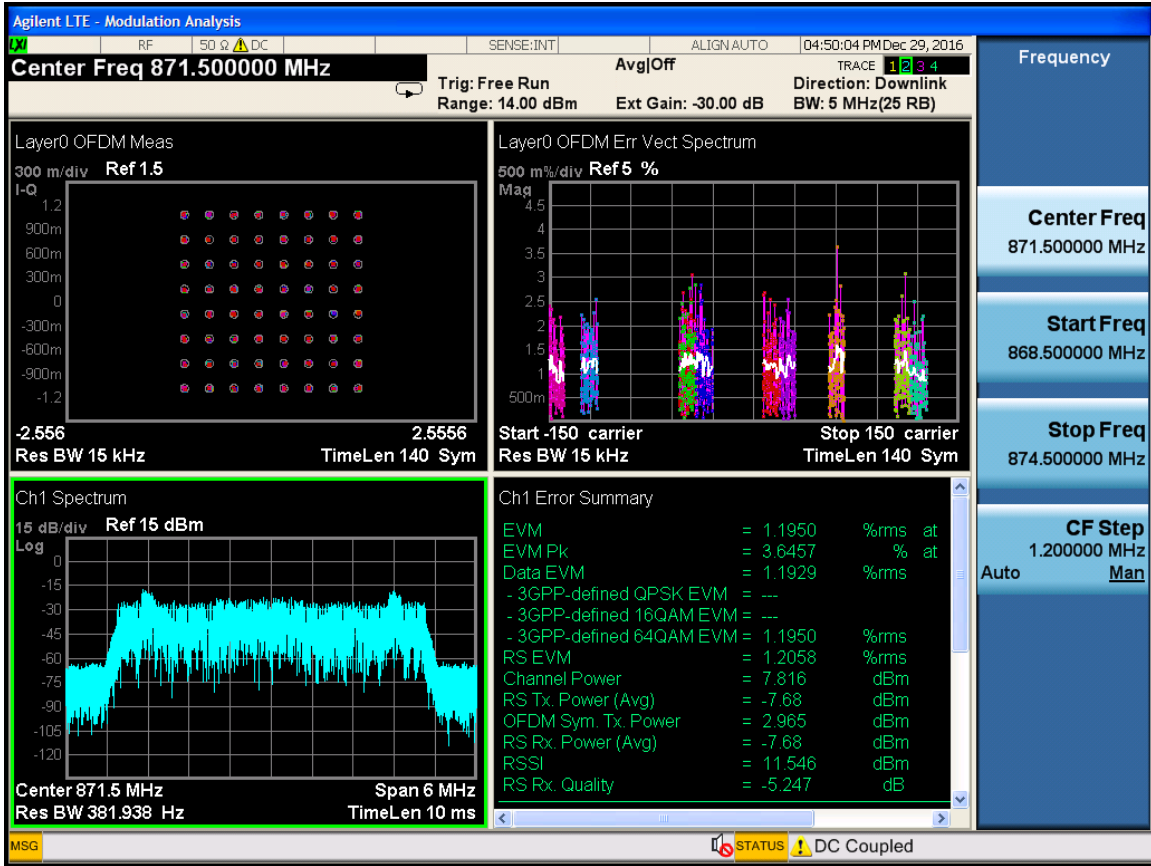 


<b>Frequency</b>
<b>Center Freq</b> 871.500000 MHz
<b>Start Freq</b> 868.500000 MHz
<b>Stop Freq</b> 874.500000 MHz
<b>CF Step</b> 1.200000 MHz
Auto <u>Man</u>

 LTE5M-Port0-871.5MHz-E-TM3.1

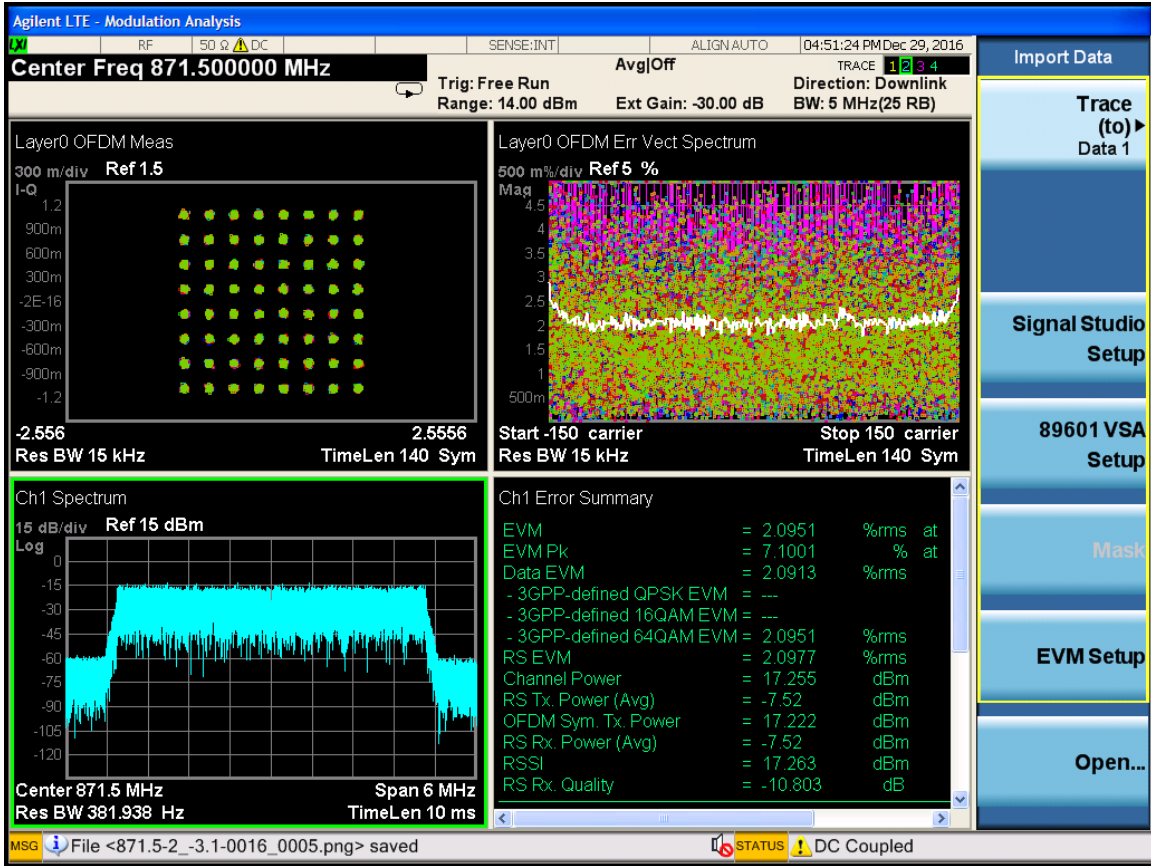


LTE5M-Port0-871.5MHz-E-TM3.2

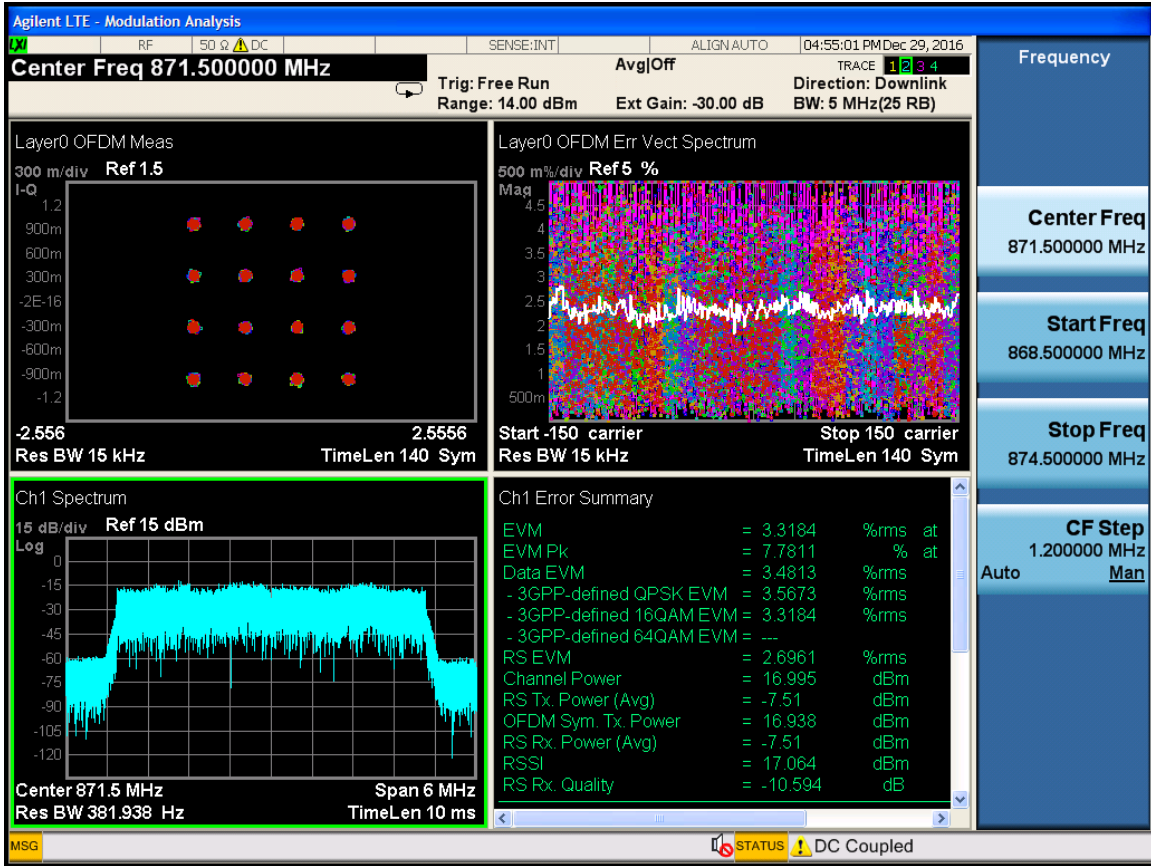 


Frequency
<b>Center Freq</b> 871.500000 MHz
<b>Start Freq</b> 868.500000 MHz
<b>Stop Freq</b> 874.500000 MHz
<b>CF Step</b> 1.200000 MHz
Auto <u>Man</u>

 LTE5M-Port0-871.5MHz-E-TM3.3




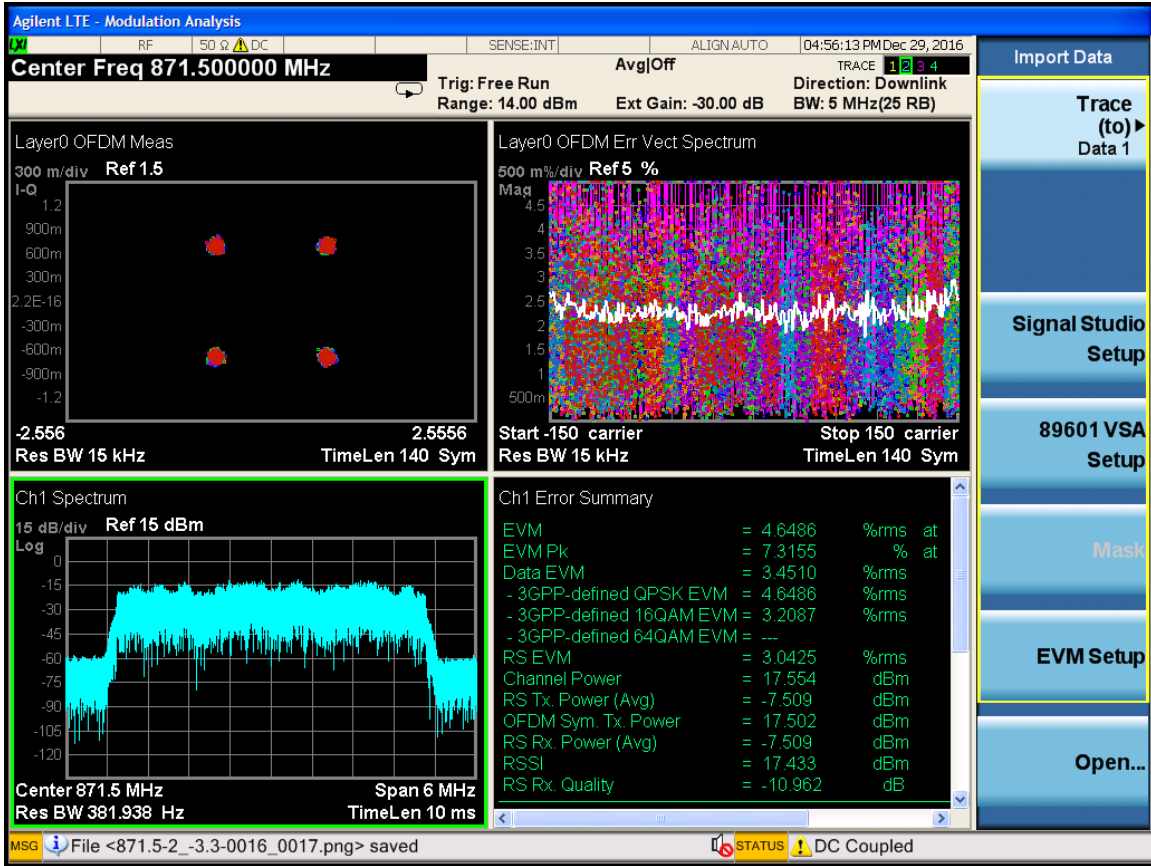

LTE5M-Port0-881.5MHz-E-TM2.0

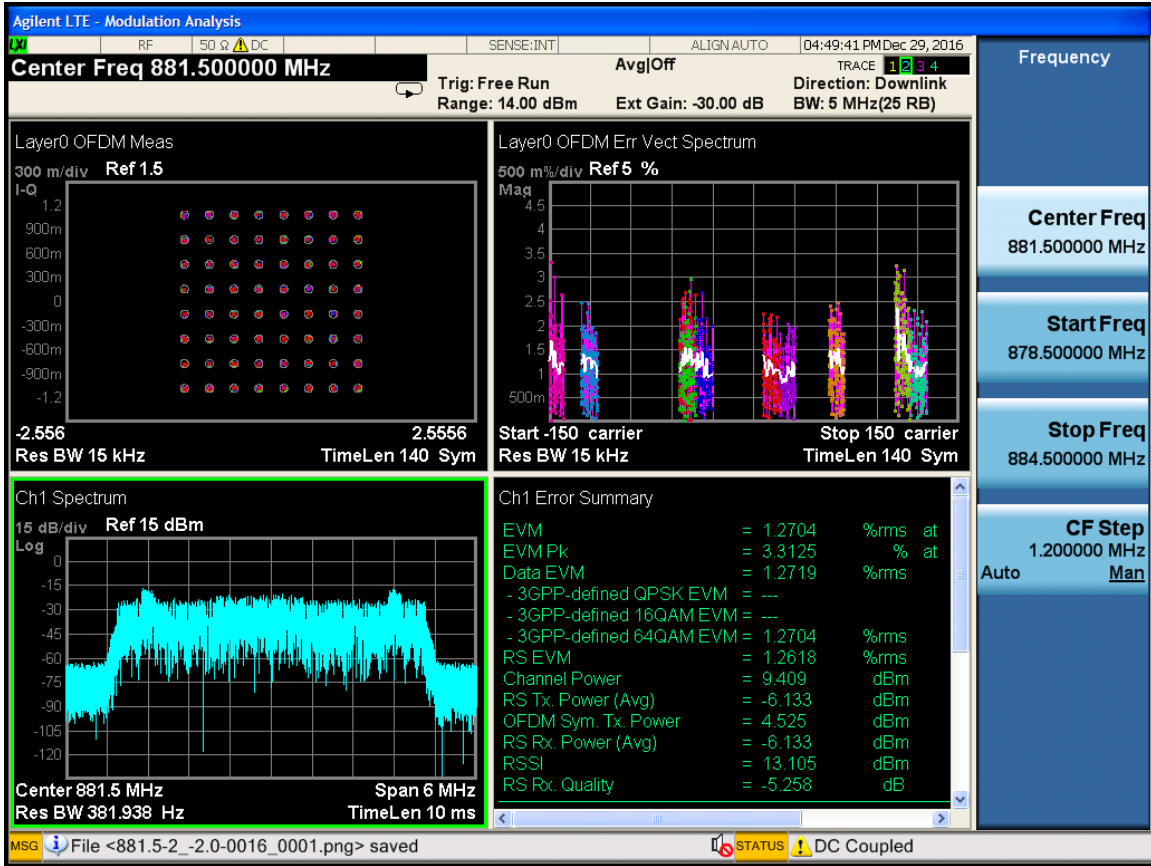 


LTE5M-Port0-881.5MHz-E-TM3.1

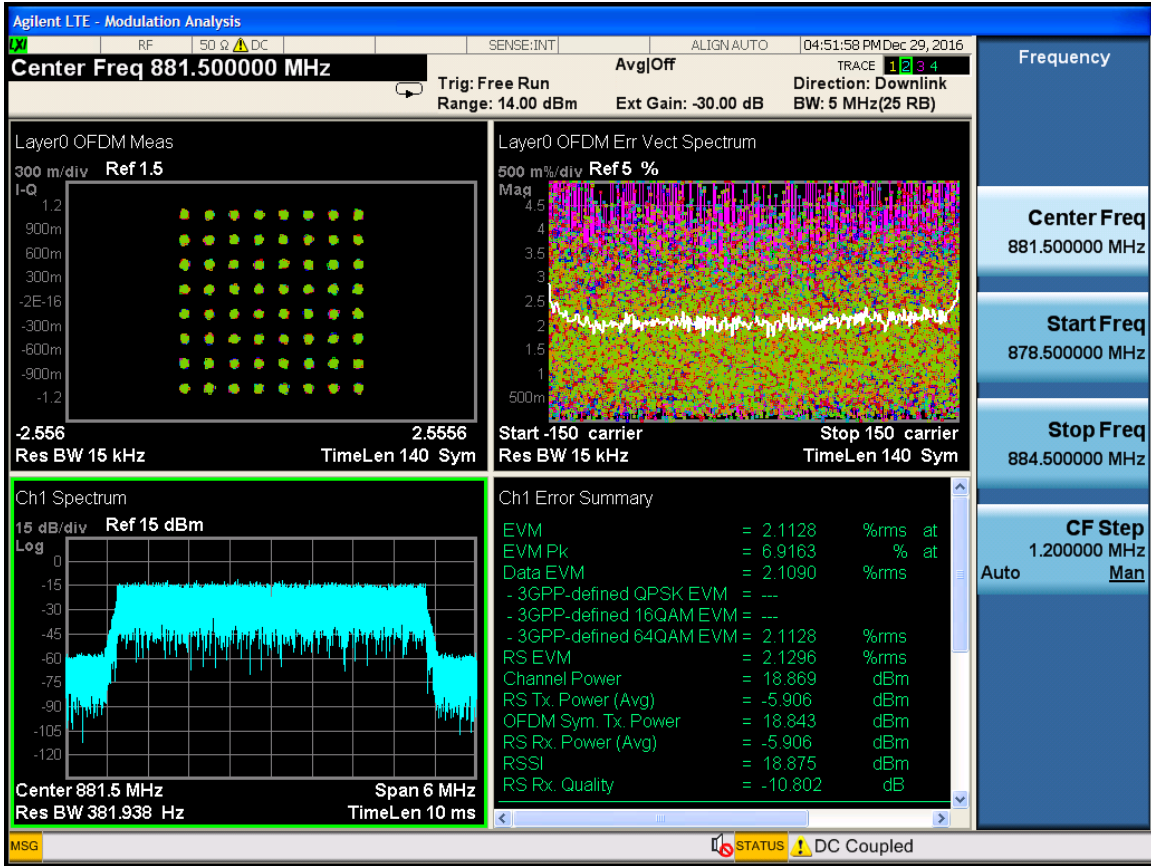 


Frequency	
Center Freq	881.500000 MHz
Start Freq	878.500000 MHz
Stop Freq	884.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE5M-Port0-881.5MHz-E-TM3.2

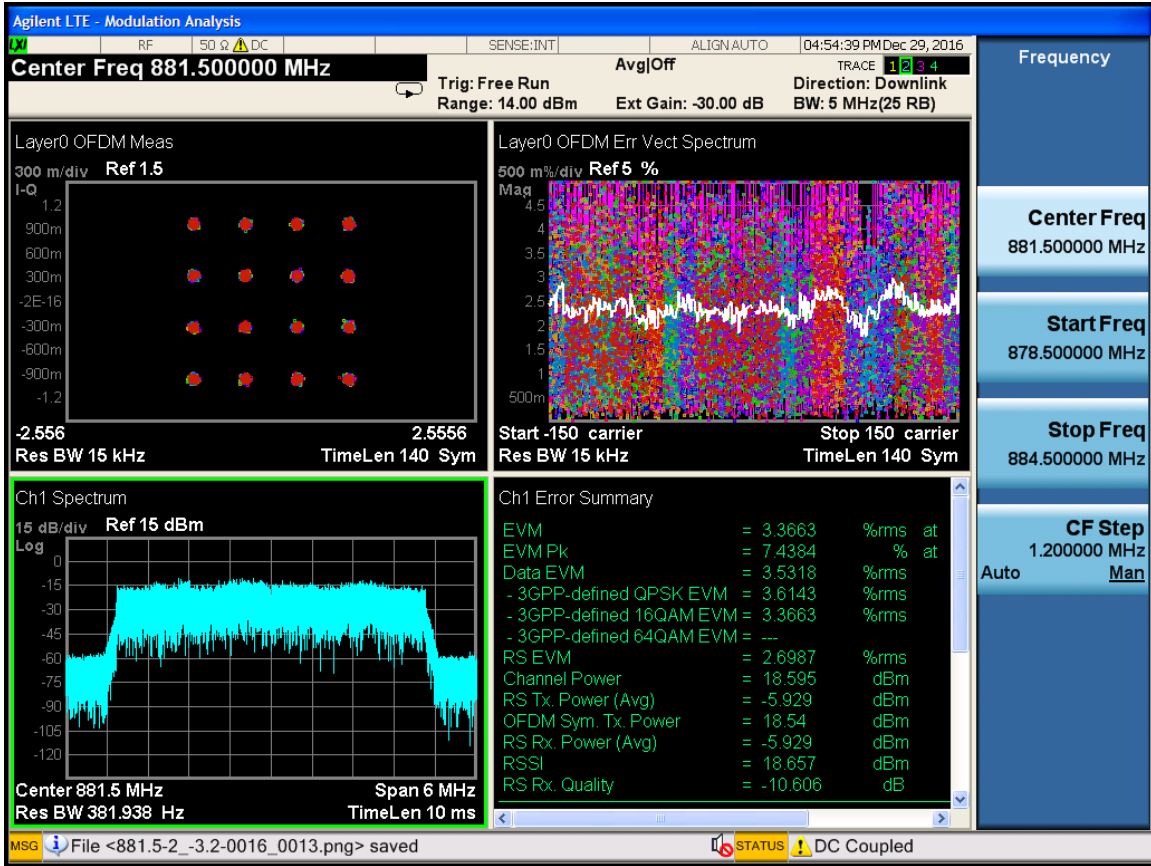


LTE5M-Port0-881.5MHz-E-TM3.3

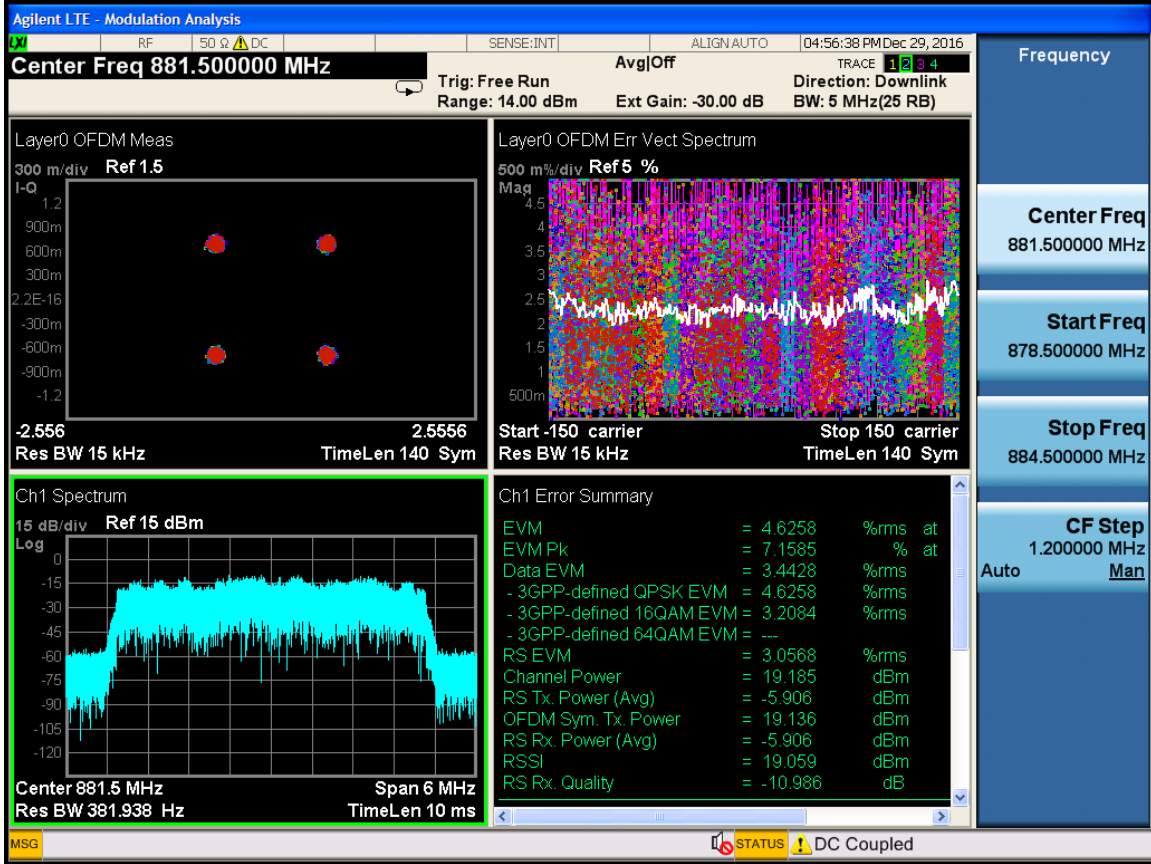 


Frequency	
Center Freq	881.500000 MHz
Start Freq	878.500000 MHz
Stop Freq	884.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE5M-Port0-891.5MHz-E-TM2.0

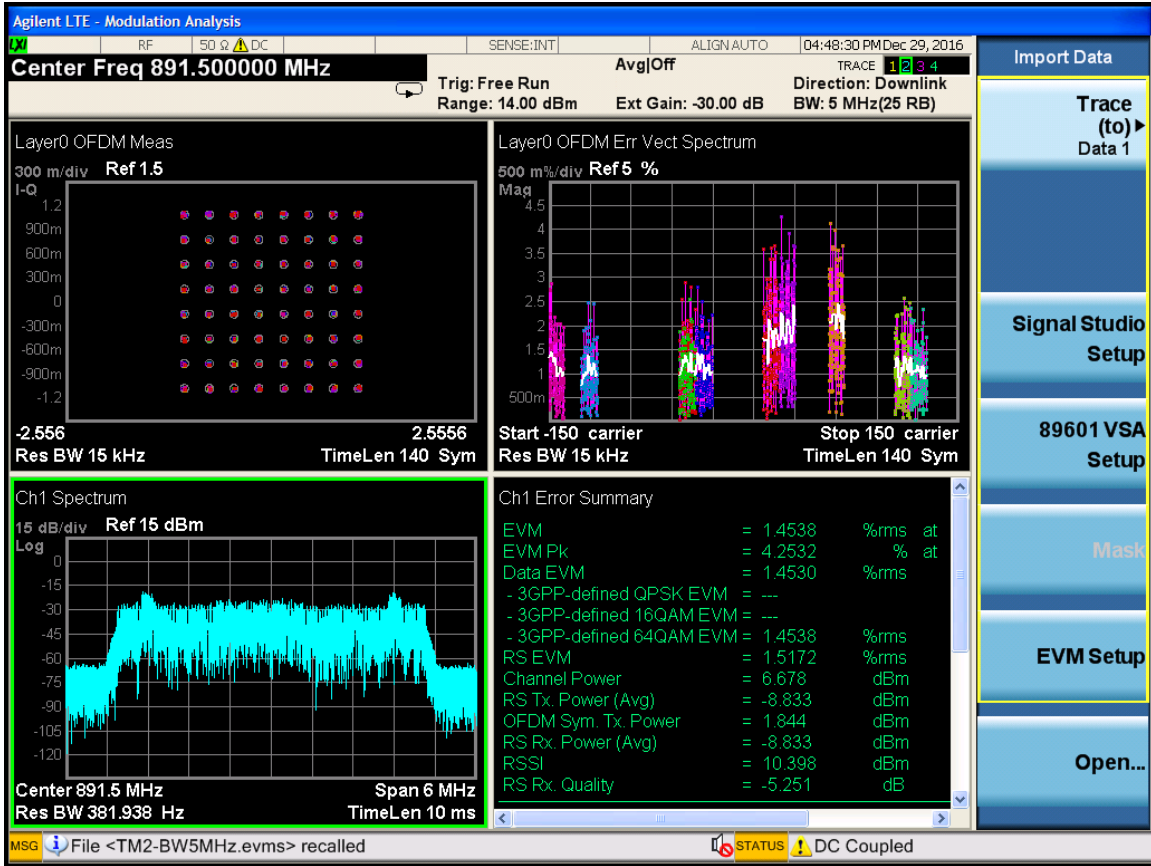


LTE5M-Port0-891.5MHz-E-TM3.1

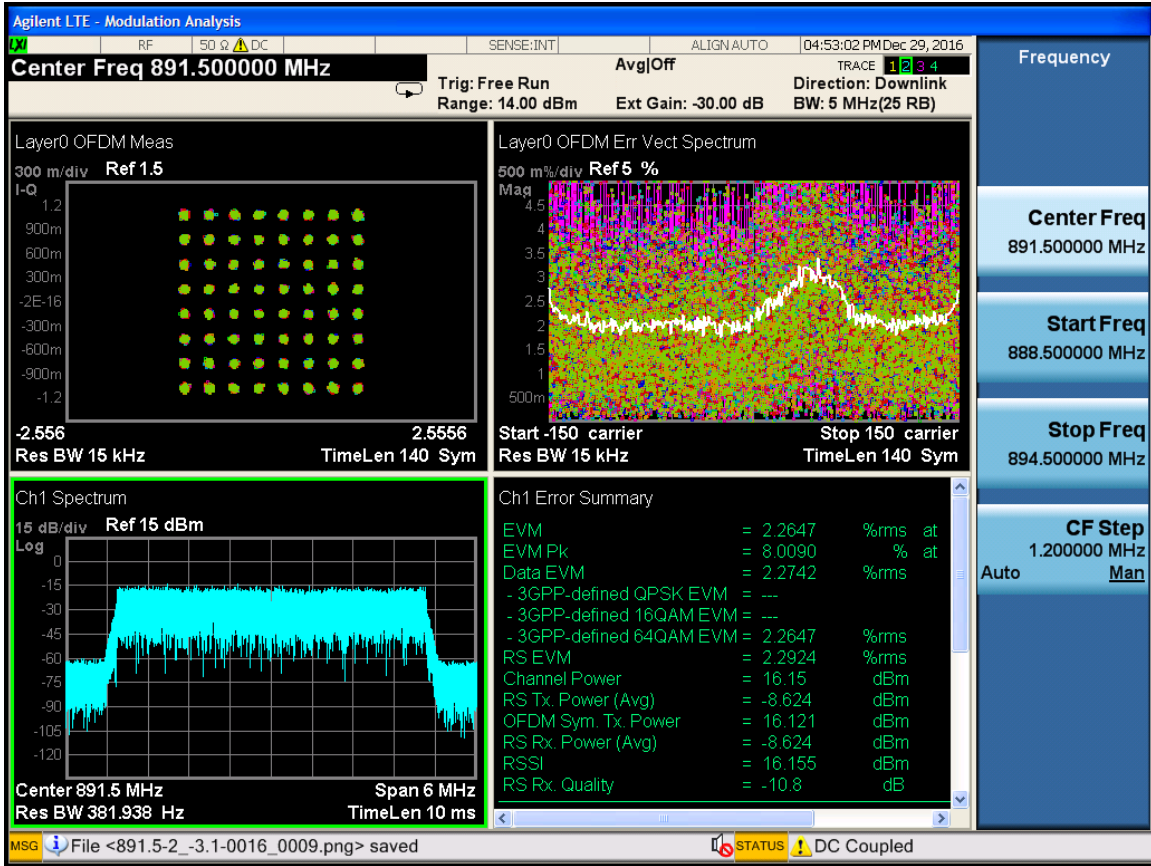 

Frequency	
Center Freq	891.500000 MHz
Start Freq	888.500000 MHz
Stop Freq	894.500000 MHz
CF Step	1.200000 MHz
Auto	Man

 LTE5M-Port0-891.5MHz-E-TM3.2

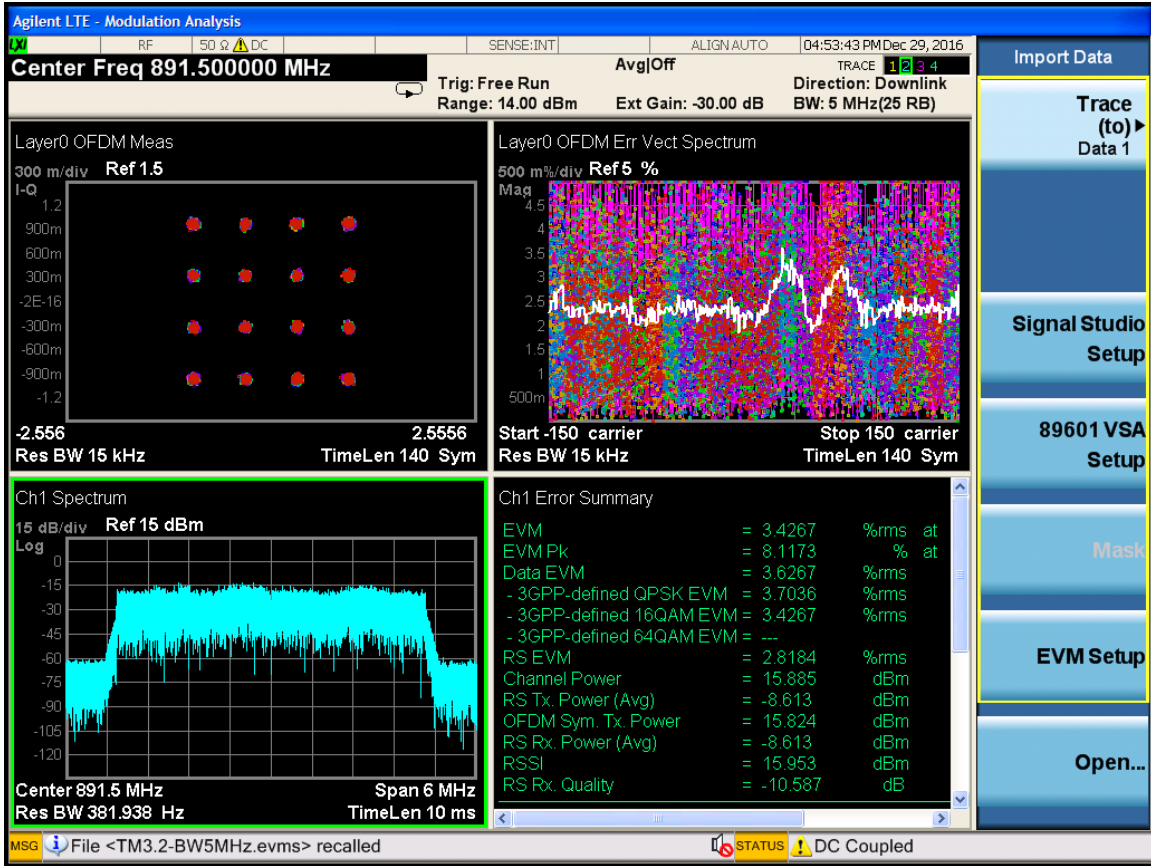

LTE5M-Port0-891.5MHz-E-TM3.3