

Operational Description of the equipment

Before setting up Voiis Mini/Phone, please charge the battery. You need to install the Voiis Panel software from Voiis software CD and then connect Voiis Mini/Phone and Voiis Dongle to start VoIP conversations. For more information, please see "Connecting Voiis Mini/Phone".

To use Voiis Mini/Phone as a high quality cordless phone, you need to setup and connect Voiis Mini/Phone with Voiis Dock. For more information, please see "Connecting Voiis Mini/Phone" and "Connecting Voiis Dock and Voiis Mini/Phone".

Step 1. Charge the Battery


Connect the USB cable (Figure A) to USB port on PC to charge the battery. Or you can simply use Voiis Dock to charge Voiis Mini/Phone (Figure B.). The built-in battery is 80% charged in about 2 hours and fully charged within 3 hours.

Step 2. Install Software

Place the Voiis software CD in PC and install Voiis Panel software.

Step 3. Connect Voiis Dongle with Voiis Mini/Phone.

Please see "Connecting Voiis Mini/Phone" to complete the connection so as to engage in VoIP conversations.

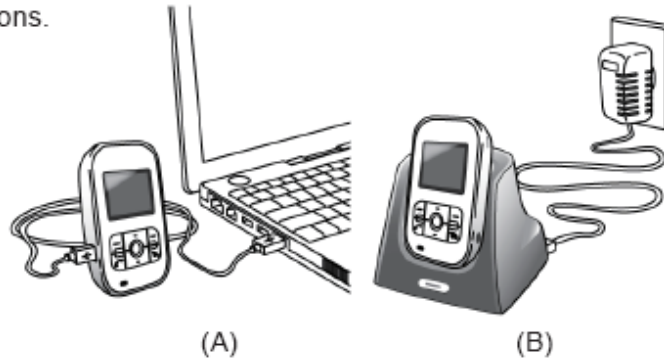

Note: The way you charge Voiis Phone is as same as you charge Voiis Mini.

| | |
|---------------------------------|---|
| PRODUCT | Voiis Mini |
| MODEL NO. | BV-300 |
| BUILD-IN BATTERY | Li-ion 3.7V, 750mAH |
| CHARGE POWER | DC 5.0V, 500mA |
| FREQUENCY BAND | 2.402GHz~2.480GHz |
| CARRIER FREQUENCY | FHSS(Frequency Hopping Spread Spectrum) |
| NUMBER OF CHANNEL | 79 |
| CHANNEL SPACING | 1 MHz |
| RATED RF OUTPUT POWER | +1.9 dBm |
| MODE OF OPERATION | duplex |
| MODULATION TYPE | GFSK(1Mbps) |
| BIT RATE OF TRANSMISSION | Bluetooth V1.2(1Mbps) |
| ANTENNA TYPE | Mono Pole |
| ANTENNA GAIN | 0dBi |
| OPERATING TEMPERATURE | 0~45°C |
| CHANNEL BANDWIDTH | 1MHz |