




Transmitter Front View

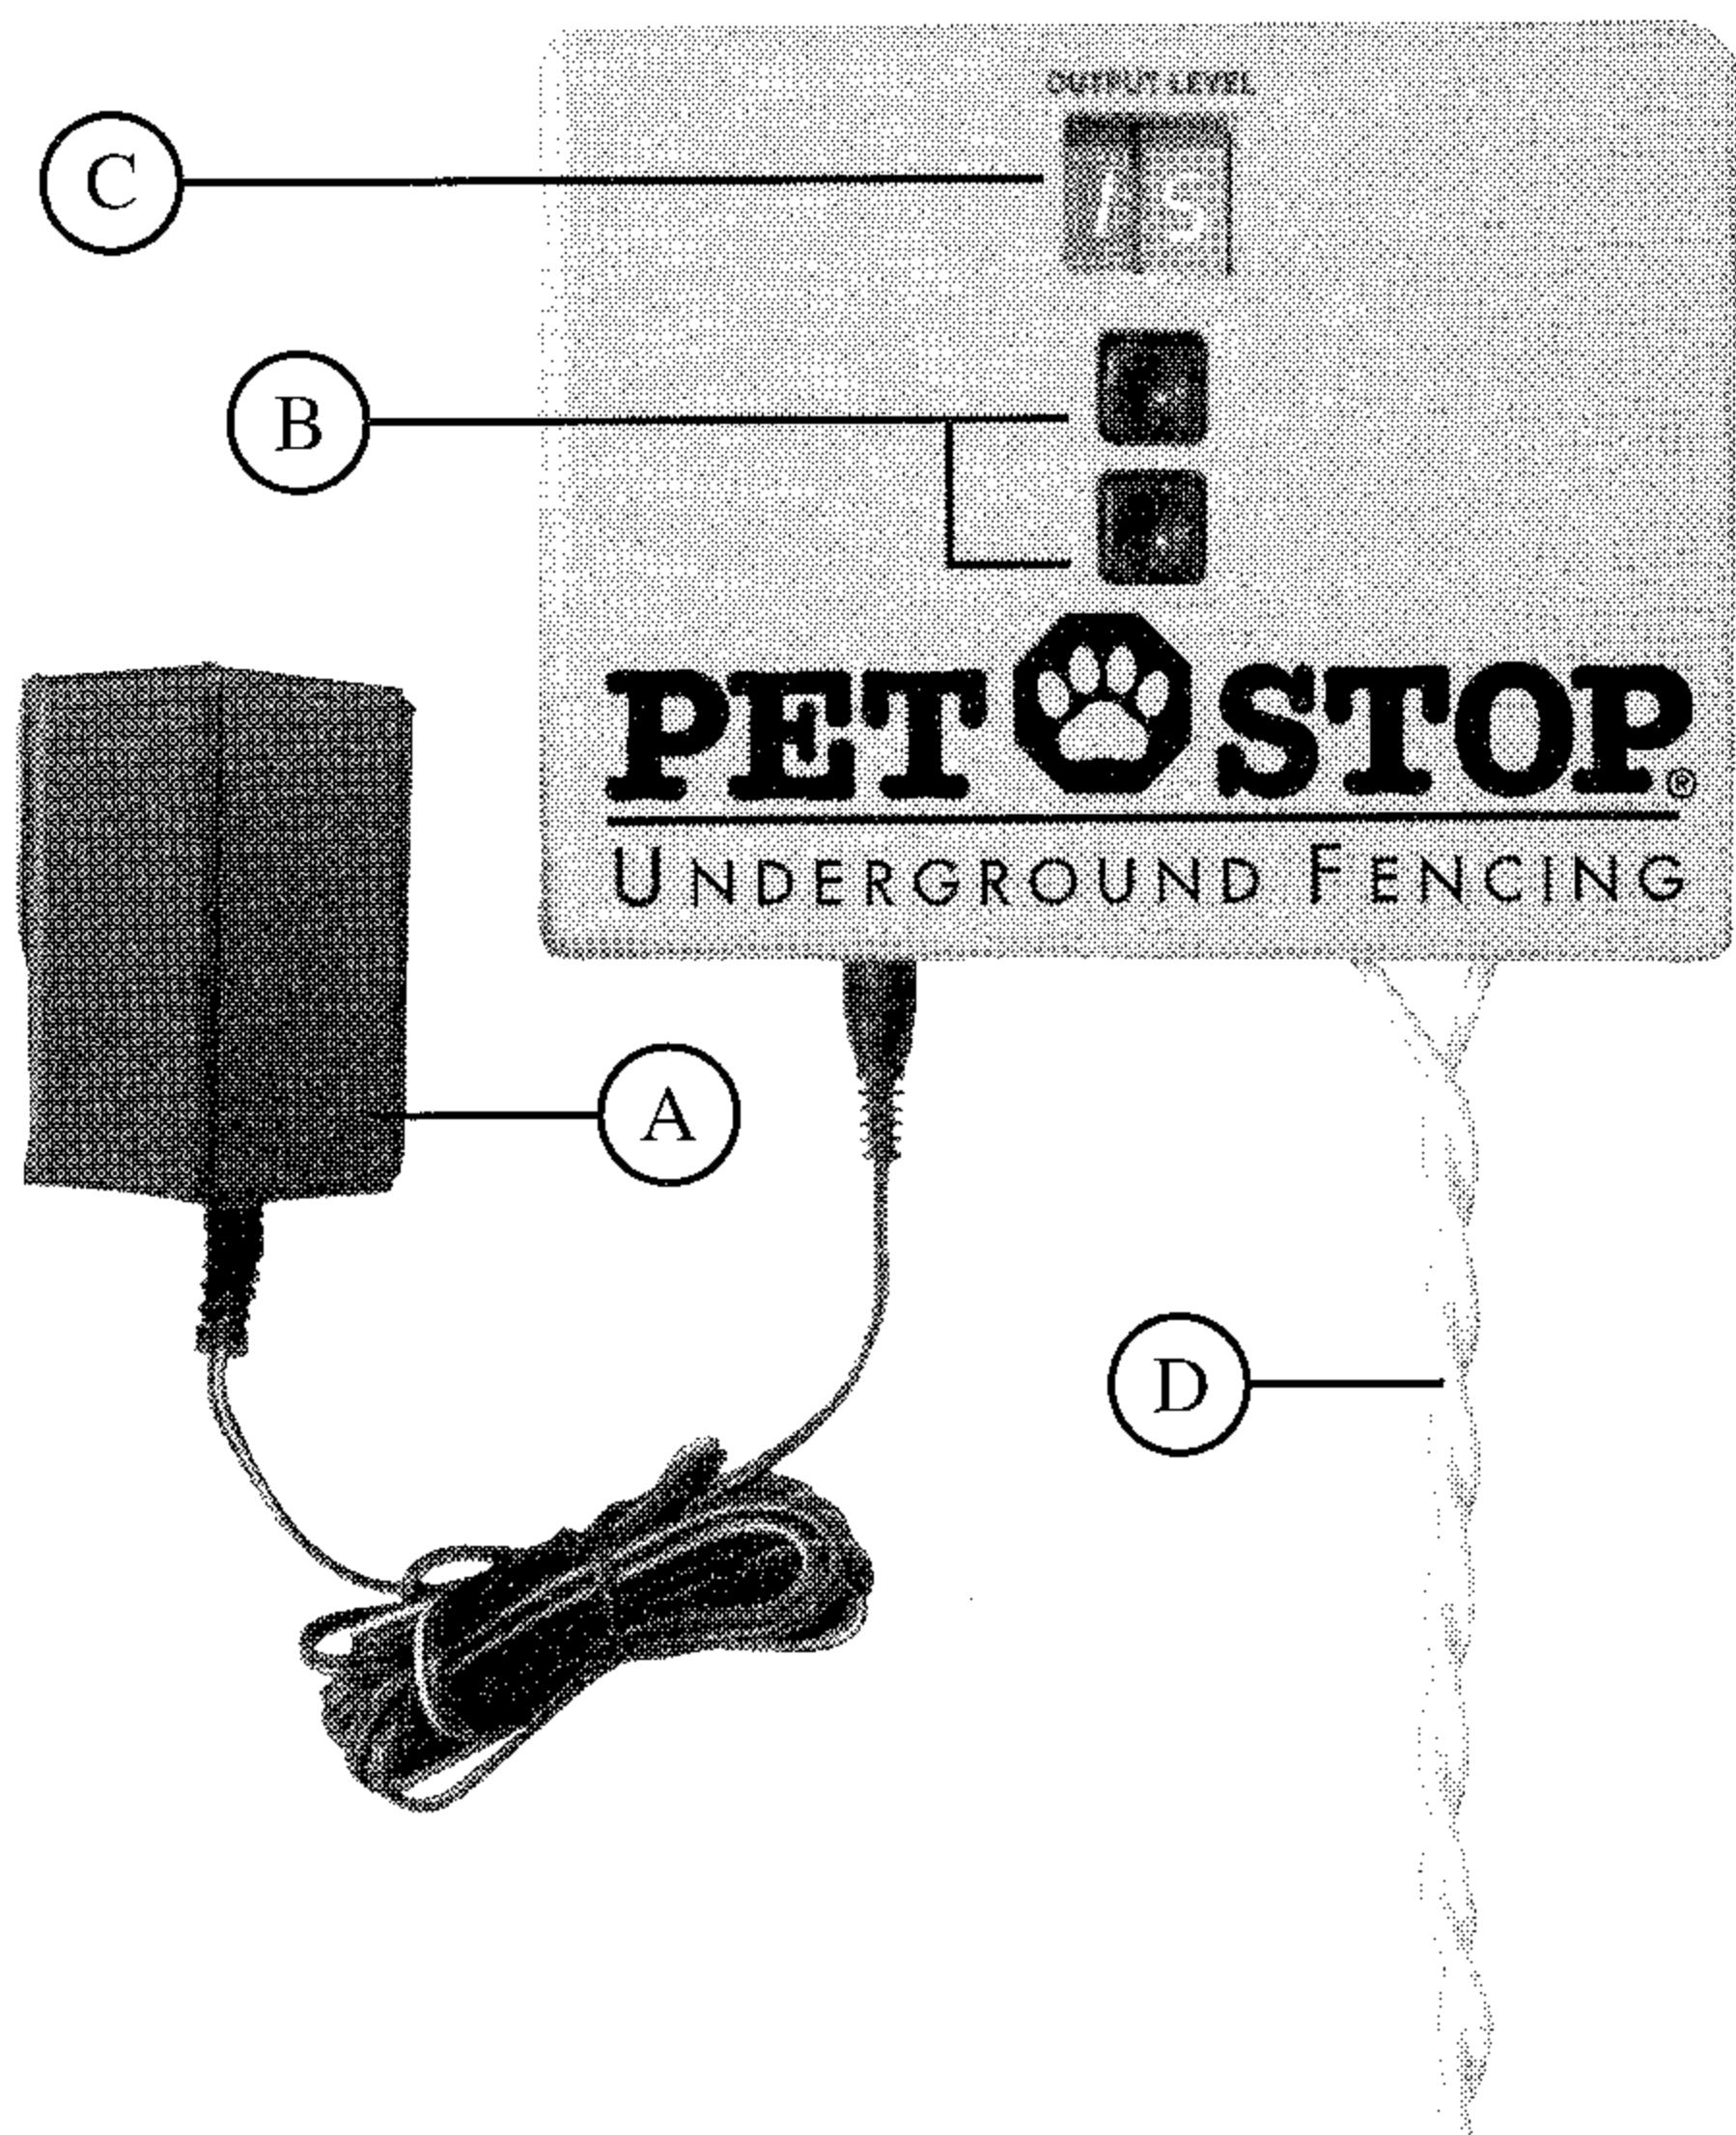

A. AC ADAPTER

B. RANGE ADJUST

These are the power on/off and range adjustment (increase/decrease) buttons for setting the boundary.

C. DISPLAY

Indicates power level and fence error when blinking.

D. LOOP CONNECTIONS

This is where the "loop" or boundary wire is connected.

This connects to the surge protection unit or directly to the loop.