

# **Instruction Manual for Transmitter**

**Model No.: BH-U / BH-R**

## **INSTALLATION:**

Install one (1) x 12V (23A) battery in the compartment, make sure the installation of battery is correct.

## **OPERATION:**

Transmitter BH-U/BH-R with 3 pairs of buttons for individual ON and OFF function, generally controls 3 socket receivers.

Transmitter BH-V/BH-P with 5 pairs of buttons for individual ON and OFF function, generally controls 5 socket receivers.

Each push of the ON or OFF button on remote controller will turn on or off the corresponding socket receivers accordingly.

## **CHANGING THE BATTERY:**

Regularly change the battery in the remote control for best use – however if you find the receivers are not responding or the indicator light becomes dim then you must change the battery at the earliest available time. Always dispose of old batteries with consideration for the environment.

## **TECHNICAL DATA:**

Transmission frequency: 433.92MHz

Transmitter powered by: DC 12V 23A battery (1pc)

## **FCC Warning:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.