Instruction Manual

Please read the Instructions carefully before using the product.

Product:

Remote Control Transmitter for Switches.

Model no.:

BH-O,BH-P

Installation:

Install one (1) x 12V (23A) battery in the compartment, make sure the installation of battery is correct.

Features:

- ◆ The Outlets can be manually operated or via the handy Remote Control.
- ◆ Individual ON & OFF function for the remote control.
- Easy to use and operate. Use one transmitter to match more socket receivers or program more than one transmitter to each socket. Any one transmitter and socket receiver can match use after finish programming operation. So the socket receiver and remote control can sell separately.

◆ The socket receiver will still rema in the "OFF" mode after a power out, even when the power comes on again.

Technical data:

Working Voltage for socket	100V-127V~/60Hz
Transmission frequency	. 433.92MHz
Max.load current	10A
Power for transmitter	DC12V battery

Detailed Learning Operation:

All remote controlled socket units have been pre-programmed and can be used immediately.

To re-program the remote control transmitter and socket receiver, please follow instructions below.

- Plug the remote controlled socket to a power point and turn the power on.
- Press and hold the learning button on the right and side of the socket receiver for about 5 seconds till the LED indicator flashes.
- Release the learning button and press the preferred "on" or "off" number button of the transmitter.
- Programming successful when the LED indicator stops flashing.
- The remote controlled socket is now ready to use.
- Remote set up only requires one-time programming.
- <u>PIs note</u>: The transmitter with 12V 23A battery is ready for learning operation in advance. Keep one hand press the Learning button on socket, the other hand holds the transmitter.

Change the battery:

Regularly change the battery in the remote control for best use – how ever if you find the receiver s are not responding or the LED indicator of remote control becomes dim, then you must change the battery at the earliest available time. Always dispose of old batteries with consideration for the environment.

NOTES:

•Make sure the battery and socket installation is firm, safe and correct.

- For indoor use only, it should be in stalled in the places of a eration and far from high-temperature source. Make sure to avoid strong sunlight, raining and moisture places
- Do not exceed the maximum load current.

FCC NOTE:

• This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. •THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MO DIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.