

MID Tablet PC
Quick Start Guide



This guide provide basic information for initial users on how to
operate the tablet.

Function description

Volume(+), volume (-): adjust the volume.

Power button: press the power button for 5 seconds to power on/off the tablet; short press the power button to lock or unlock

HDMI jack: HDMI output interface.

USB slot: connect to the PC and data transmission.

Micro SD card slot: external micro SD card.

Host jack: connect the external equipment, such as mouse, U disk and OTG cable.

DC interface: connect with the power source to charge the tablet.

TF card slot: external TF card.

Basic operation

Power on/off

In power off status, press the power button for 5 seconds,

after the boot up image then the device will enter main interface.

In power on status, press the power button for 5 seconds, then "Would you like to shut down" message will pop up on the screen, click "OK" to power off .

Connect the PC and transfer file

In power on status, use the USB cable to connect the device and PC, then click the "Turn on the USB Storage", then the device will act as a removable disk, it can upload and download file or data, click "Turn off USB storage" to quit the connection status.

Charging

A "Low battery" message will flash on the screen when the battery power is insufficient. Please use the provided charger to connect the power source and the tablet. It can only charge in off status. The whole charging time needs about 5 hours.

Reset function

When the PC tablet is at fault, use the pen pincushion to insert into the reset hole on the back of the tablet, and the tablet will force to shutdown.

Factory reset

Settings---factory data reset---erase Nand storage---reset tablet---erase everything.

Note : select “Erase Nand Storage” will clear all the data, like pictures ,music and movie. If you don't select “Erase Nand Storage” it will only delete part of the date and the APK downloaded data, can't clear the pictures ,music and movies in Nand

Main interface introduction

Power on the device, after unlock the device it will enter the main interface

Screen lock: drag the screen lock icon to the unlock direction.

After it will enter the main interface as below (note: the device has many kinds of unlock methods, it can set in setting menu.)



main screen detailed operating instructions:

screen switch: this device supplied with many main interface, you can drag the screen left or right to see the screen.

Create shortcuts: Click the icon you want to create shortcuts on the main interface for 3 seconds, the icon will become large, then you can drag the icon on the main interface.

Remove shortcuts: Click the icon you want to delete for 3

seconds, and then click the remove appear on the middle top of the screen to delete the shortcuts.



Touch function description as below:

⬅ back button: In different applications, you can click the back key back to the previous interface.

Note: the ⌂ icon on the right side of the screen is of the same function.

⌂ home button: No matter which interface you are on the

screen, you can go back to the main interface through touch the home key.

Note: the  icon on the right side of the screen is of the same function.

 history memory key: you can browse the history memory ,and click it you can enter the application soft ware.

 In different applications, click the menu button ,then the submenu will pop up, it has many other settings and operation.

Note: the  icon on the right side of the screen is of the same function.

 status bar: display time , Network signal strength, battery level.

Click the  icon on the top right on the screen to enter the applications, as follow:



Click the application icon to enter the relative application


Slide left or right to on the screen to enter the widgets ,you can also click the widgets to enter it.

Important settings

WIFI setting as follow:



first open the WIFI, The system will automatically scan the Internet available.

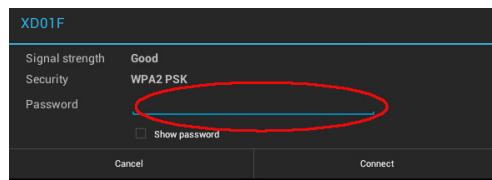


Second: select the internet you want to connect, insert the password, then click connect to enter WIFI.

(Note: If the Internet don't need password, you can directly connect the WIFI)

3G internet settings as below:

Setup:settings---wireless&network---more---mobile networks---data enabled. Use the OTG cable (optional

accessory) to connect the 3G-Dongle(optional accessory),
Then you can surf the internet.

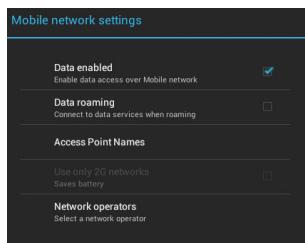


Language & input setup:


Users can download the common input software in the third party website, and install it through applications. The newly installed input software should only select to be use. Setup the default input method: settings---language&input---default---select input method---configure input methods.



Location services: it can determine the location through WIFI
Note: users should download the relative map software ,after
install the map software(like google map) then it can use WIFI
to determine the location(it should also select the "Google's
location service).

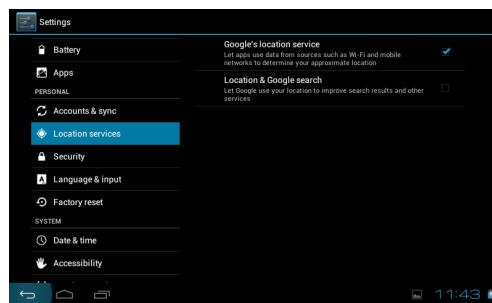

My pad

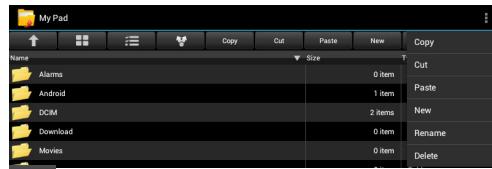

multi choose and open icon: after click this icon, you can select multiple files at once, after select ,you can copy ,cut ,paste, rename the file. Double click the icon ,you can play the music and video files the device supported.

Applications installation

In application interface, click the  icon, the system can automatically scan all the third party software stored on the device. Click the relative icon can install or uninstall the APK software. In the APK software list, it will indicated whether the software is installed or not.


Had scanned. Folder 33 File :372 Apk file :3		
path: /sdcard/dlcard1/sogou	name: com.sohu.inputmethod.sogou.apk	pkg: com.sohu.inputmethod.sogou app: 搜狗输入法 installed: Yes
path: /sdcard/dlcard1/sogou	name: qmotedekend1baidid0011.apk	pkg: com.tencent.tokener app: 手机令牌 installed: No
path: /sdcard/dlcard1/sogou	name: SafeMg_Android_V3.0.WEB.apk	pkg: com.angangjia.safe app: 安全管家 installed: No
		size: 6.42MB

Click the software you want to installed ,pop up the dialogue as below:



Click install to install the software,click the "cancel" to revert back to the previous catalogue.

(Note: To install the non-market apps, please select the "Unknown sources" in security menu.)

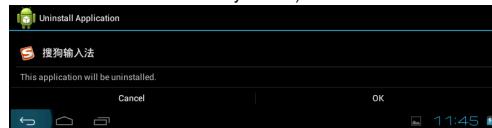


Click "OK" to uninstall the software, click "cancel" to revert back to the previous catalogue.

Connect to PC

Use the USB cable to connect the device with the PC, the LCD screen will pop up the USB connection window, click "Turn on USB storage" to connect to PC.

Note : please select the "OTG auto" in USB mode before connect to PC.

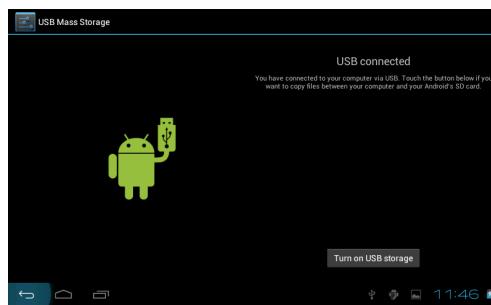

In the load mode, you can copy ,delete the file on the device or file on the memory card.

In the debug mode, you can use the PC to debug the MID.

Troubleshooting

1.The tablet can not power on

- Check the battery is out of power
- Recheck it after connect to the charger.
- If after charging it still can't power on ,please contact our dealer .

2.Serious noise

Explanation & solution

- Please check whether the file is damaged, you can play other file to confirm. If the file is damaged, it may cause serious noise.

3.Screen display messy code

Explanation & solution

- Please check whether you select the right language option.

4.Can not download file

Explanation & solution

- Please make sure the memory storage space is already full.
- Please make sure the USB cable is damaged.

changes or modifications not expressly

approved by the party responsible for

compliance could void the user's
authority to operate the equipment.

This equipment has been tested and found
to comply with the limits for a Class B
digital device, pursuant to Part 15 of the
FCC Rules. These limits are designed to
provide reasonable protection against
harmful interference in a residential
installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user

is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced
radio/TV technician for help.

This equipment complies with FCC radiation
exposure limits set forth for an
uncontrolled environment. End user must
follow the specific operating
instructions for satisfying RF exposure
compliance. This transmitter must not be

co-located or operating in conjunction

with any other antenna or transmitter.

The portable device is designed to meet the

requirements for

exposure to radio waves established by the

Federal Communications

Commission (USA). These requirements set

a SAR limit of 1.6 W/kg

averaged over one gram of tissue. The

highest SAR value reported under

this standard during product

certification for use when properly worn

on the body is 0.518 W/kg.