

Instruction Manual

PORTABLE STORAGE DEVICE

& MULTI - CODEC JUKEBOX

Model H10 Series



Firmware Upgradable

mware) Upgradable)
Thank you for your purchase.

Please read this manual carefully before using your new player.

http://www.iRiver.com

http://www.iRiver.com



iriver

Model H10 Series

Welcome

Thank you for buying the iRiver H10 Series. iRiver welcomes you to the world of the H10 Series, the leading HDD type MP3 player.

We firmly believe that the H10 Series will give you complete satisfaction. We know that the H10 Series will make your life more pleasurable in so many different ways.

Thank your for your iRiver purchase. The H10 series comes complete with a long list of advanced features. It is important that you read the manual to ensure that you get the most out of your new player.

Website

- · iRiver website address is www.iriver.com.
- The site provides product information and customer support.
- Use the firmware (system software) upgrade function of our products from the site to continuously improve the product performance.

Copyright/Certification/Liability

Copyright

- iRiver Limited reserves all patents, trademarks, copyrights, and other intellectual rights regarding the user manual. Copying the manual in part or in full without the written permission of iRiver is prohibited. Illegal usage of part or all of the document may result in criminal penalty.
- Related laws, including the copyright law, protect copyrighted contents such as software, music, or movies. If the product is used to copy or distribute copyrighted contents illegally, the user must take all legal responsibility for such actions.
- Companies, organizations, products, persons, and information on events used in the examples in this manual are not actual data. The company has no intention to link this user manual to any company, organization, product, or person. Do not assume any such intention or connection. It is the user's responsibility to comply with copyright laws.

©1999-2004 iRiver Limited. All rights reserved.

Certification

CE, FCC

Trademarks

- Windows, Windows 98 SE, Windows ME, Windows 2000, Windows XP, and Windows Media Player are registered trademarks of Microsoft Corp.
- SRS is a registered trademark of SRS Labs, Inc.

Limited Liability

The manufacturer, importer, and dealer cannot be held responsible for accidental damage, including personal injury or any other damage, due to inappropriate usage of the product.

 Information in the user manual is written for the current specification of the product. The manufacturer, iRiver, continues to provide additional functions and apply new technology to it. All specifications may be changed without notice to individual users.

Safety Precautions

Please read and ensure you have fully understood the following safety guidelines before using the product. The safety guidelines describe important details regarding your safety and are classified into "Danger," "Warning," and "Caution." The company cannot be held liable for accidents and product damage due to non-observance of these safety precautions.

DANG ER	Serious injury or death can result if not handled as directed.
WARNING	Serious / minor injury or product / property damage can result if not handled as directed.
CAUTION	Minor damage can result if not handled as directed.


2

A DANGER

Serious injury or death can result if not handled as directed.



Use only the AC adapter included. Using any other AC adapter may cause fire or electric shock.

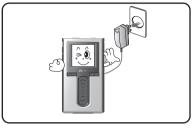

Connect the AC Adapter only to rated power outlet types as described in the user manual. Connecting to other types may cause fire or electric shock.



Do not touch the AC adapter with wet hands. If the inside or outside of the product get wet, an electric shock may result.



Do not place heavy objects on the AC adapter cable. Do not score, bend, twist, or pull the AC adapter cable. A damaged AC adapter cable may cause fire or electric shock.



Using the product under such conditions may cause fire or electric shock.



Do not repair, disassemble, or modify the product. To avoid a high probability of explosion or malfunction, do not dry the product with a heater or microwave oven when the product is wet (whether with water or some other liquid).



Promptly turn the power of the product off and disconnect the AC connector from the power outlet if the product produces smoke, smells, or unusual sounds. Using the product in abnormal conditions may cause fire or electric shock.



Do not drop the product, or subject it to strong impact or severe vibration, to avoid damage. Promptly turn the power of the product off and disconnect from the power outlet if the product is damaged. (Remove the AC adapter if the product was being charged). Using the product in abnormal conditions may cause fire or electric shock. Contact customer support.



Do not allow the earphones to get trapped in a car or train door. It can be extremely dangerous.



Do not use earphones or headphones while driving a vehicle, motorcycle, or riding a bicycle. Not only is it dangerous, but also illegal in some jurisdictions. Do not use the earphones or headphones while using a pedestrian crossing or in other dangerous areas, to avoid traffic accidents or other dangers.

Promptly turn the power of the product off and disconnect the AC connector from the power outlet during electrical storms to avoid fire or electric shock.

Turn off and unplug the power when it thunders or lightening flashes as quickly as possible. It could result in a fire or electric shock.

Turn off the power during an electronical storm to avoid damage to the product and disconnect the AC connector from the power outlet if foreign substances or liquid get into the product.

Keep the product and AC adapter away from children to avoid electric shock or exposure to electrical fields.

5