



## 4-2. Using DB Scan

Specific features



DB of all MP3 files on the player are created. You can not use the navigation using ID Tag information in case DB file (iRivNavi.iDB) is deleted or damaged accidentally. This can also be used to re-create the DB file on the PC if it is damaged or deleted accidentally.

 
### DB Scan

#### 2 Updating DB File

- 1 Connect the player to the PC. (Refer to "Connecting to the PC", page 30)



- 2 Open Windows Explorer and select the player drive.

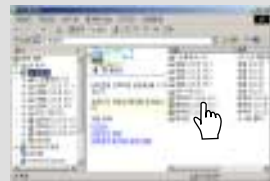

- 3 Right click on the player. Then select "DB File update" to activate DB File update.



- 4 Click "OK" after updating is completed.



※ In case ID Tag information is not in the MP3 file, NO DB displays. In case file or folder name is over 52 characters, Failure displays.

- 5 After disconnecting the player from the host PC, you can use the Navigation function to search for songs using ID3 Tag information. (Refer to "Safely Removing the player from the PC", page 35.)



## 4-2. Using DB Scan

Specific features



You can add the information of the newly saved MP3 file to the DB.

### DB Scan

#### 3 Adding DB

- 1 Connect the player to the PC. (Refer to "Connecting to the PC", page 30)



- 2 Open Windows Explorer and select the player drive.



- 3 Right click on the player after select MP3 files. Then select "Add Music(s) to DB" to add MP3 files to the DB.



- 4 Click "OK" after updating is completed.



ID3 Tag information of the selected files are added to DB. In case DB file is not, new DB file (iRivNavi.iDB) is created.

- 5 After disconnecting the player from the host PC, you can search the added music by using ID3 Tag. (Refer to "Safely Removing the player from the PC", page 35.)



## 4-3. Playback Mode

 
Specific features

You can set Repeat, Shuffle or Intro playback by choosing these selections under Mode while playing music or motion picture.

### Setting the Playback Mode



- 1 Press the B(EQ/MODE) button to set the playback mode. Refer to page ?? for details.

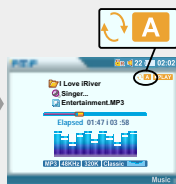

- 2 Press the ▲▼ button to play the previous or next playlist at the selected playback mode.

#### 1 Repeat : operate on the basis of playlist

- 1 Play a single playlist repeatedly.
- A Play all playlist in the player repeatedly.

#### 2 Shuffle : operate on the basis of playlist

- SFLI Randomly play all playlists on the player and stop.

#### 3 Intro : Only supports to music file

INTRO

Play only 10 seconds of each playlist in sequential order. It is useful for searching and playing the favorite music among many music files.

## 4-3. Playback Mode

Specific features

 
### Setting the Playback Mode

#### 4 A-B Repeat


Play a selected interval repeatedly during play.




- 1 Press A button while playing to select the beginning (A) point.

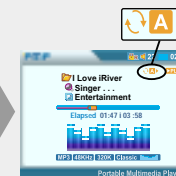

 - 2 Press A button again to select the end (B) point. The interval (A to B) will be repeated.

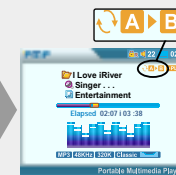

 - 3 Press the A button to cancel the interval repeat.

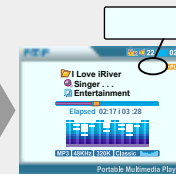



### How to use WINAMP PLAYLIST

#### 1 Making a Playlist

1 Make a PLAYLIST (\*.M3U) using WINAMP.

Winamp execution picture ▶

Launch WINAMP and add songs to make a list.  
Click "LIST OPTS" located on the right bottom and click "SAVE LIST"



1 Name the file name (ex: iriver.m3u) and click "SAVE" to save the list.



3 Save to the player with the \*.M3U and the files added to the playlist.  
The player can also play the playlists created on the PC.  
Refer to "Using playlist" for details.



- You can configure your own settings.
- Function Control is subject to change with different firmware versions.

### 1. Menu Setup Configuration

 
- |   |   |   |  |
|---|---|---|--|
| <p><b>General</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Language</li> <li><input type="checkbox"/> FM region</li> <li><input type="checkbox"/> Disk</li> <li><input type="checkbox"/> Load default</li> </ul> | <p><b>Display</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Video Out</li> <li><input type="checkbox"/> LCD Brightness</li> <li><input type="checkbox"/> Video X Position</li> <li><input type="checkbox"/> Video Y Position</li> </ul> | <p><b>Power</b></p> <ul style="list-style-type: none"> <li>• 자동꺼짐 예약</li> <li><input type="checkbox"/> 예약사용</li> <li><input type="checkbox"/> 전원 꺼짐 [분]</li> <li>• 정지상태 꺼짐 예약</li> <li><input type="checkbox"/> 예약사용</li> <li><input type="checkbox"/> Power Off (Min)</li> <li><input type="checkbox"/> Backlight (Min)</li> </ul> | <p><b>Mode</b></p> <ul style="list-style-type: none"> <li>• Music</li> <li><input type="checkbox"/> Repeat</li> <li><input type="checkbox"/> Shuffle</li> <li><input type="checkbox"/> Intro</li> <li><input type="checkbox"/> Visualization</li> <li>• Video</li> <li><input type="checkbox"/> Repeat</li> <li><input type="checkbox"/> Shuffle</li> <li><input type="checkbox"/> Intro</li> <li>• Video Caption</li> <li><input type="checkbox"/> Caption</li> <li><input type="checkbox"/> H align</li> <li><input type="checkbox"/> V align</li> <li><input type="checkbox"/> Delay</li> </ul> |
|---|---|---|--|
- 
- |   |   |   |   |
|---|---|---|---|
| <p><b>Sound</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> EQ</li> <li><input type="checkbox"/> Balance</li> <li>• User EQ</li> <li><input type="checkbox"/> 60Hz(db)</li> <li><input type="checkbox"/> 250Hz(db)</li> <li><input type="checkbox"/> 1KHz(db)</li> <li><input type="checkbox"/> 4KHz(db)</li> <li><input type="checkbox"/> 12KHz(db)</li> </ul> | <p><b>Clock</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Hour</li> <li><input type="checkbox"/> Minute</li> <li><input type="checkbox"/> Day</li> <li><input type="checkbox"/> Month</li> <li><input type="checkbox"/> Year</li> <li><input type="checkbox"/> Setup</li> </ul> | <p><b>System</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> USB Device</li> <li><input type="checkbox"/> Firmware Upgrade</li> </ul> | <p><b>Record</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Source</li> <li><input type="checkbox"/> Samplerate</li> <li><input type="checkbox"/> Bitrate</li> <li><input type="checkbox"/> Line In Volume</li> <li><input type="checkbox"/> File</li> </ul> |
|---|---|---|---|



### 2. Menu Setup Operation



**1** Press the SELECT button after selecting "Setup" by long click of the NAVI/MENU or short click of ◀▶ button.

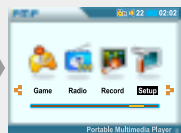

<Function Selection>



**2** Press the SELECT or ▶| button after selecting the "Setup Menu" by using ◀▶ button.



<Main Menu>



**3** Press ◀▶ button to set the desired feature after selecting the sub menu by using ▲▼ button.




<Sub Menu Setting>



### 3. Exit Sub Menu Setup



 Press the SELECT or ▶| button to exit the Sub menu and to display the initial "Setup Menu".

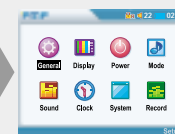


<Main Menu>



### 4. Exit Menu Setup



 Press the SELECT or ▶| button to exit Setup Menu at initial setting menu.

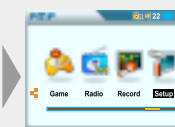

<Function Selection>





## 1. General

## ① Language : (supports 38 languages)

Select the language to display the file name and ID3 tag information.

The file name and ID3 tag information for the player is dependent on the version of the PC operating system that was used to create it.



For example, if an MP3 file is created in a English version of Windows, the language setting should be English for the proper title display. When the language is changed, the changed language is displayed after power off and on.

## ② FM Region

You can set the FM frequency and step according to your area.

After selecting a new tuner region, all preset stations will be deleted from memory.



## ③ Disk

When connecting to the PC, set the Volume label of the player.

While the player is connected to the PC, you can modify and save the playlist saved on the player on the PC.



## 1. General

 
 
## ④ Load Default

Initialize to original factory setting.

Press the SELECT button after selecting "Load Default" to set Load default.

Press the SELECT button after selecting "Yes" by using the ◀ ▶ button to initialize to original factory setting.

Press the SELECT button after selecting "No" to cancel the Load Default Setting.

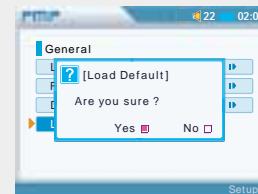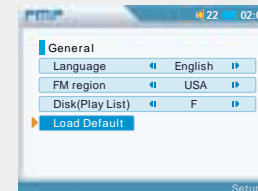

## 2. Display

## ① Video Out

Select the video signal output system correspondent with the TV on the player.

- NTSC : Korea/ U.S.A etc.
- PAL : Europe/ China etc.





## 2. Display

### ② LCD Brightness

Adjust LCD contrast of the player.  
The LCD contrast can range from 20/ 40/ 60/ 80/ 100.



### ③ Video X Position

Adjust the X Position (horizontal position) of the motion picture played from the player on the TV. (-20 ~ 0 ~ 20)



### ④ Video Y Position

Adjust the Y Position (vertical position) of the motion picture played from the player on the TV. (-20 ~ 0 ~ 20)



 
## 3. Power

### ◆ Sleep Timer

#### ① Sleep power off

You can set the sleep timer function is On or Off.


**ON** : enabled sleep timer  
**OFF** : disabled sleep timer

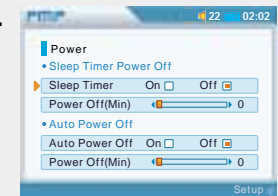

#### ② Sleep time set (Min)

Automatically turns the power off after a the set time.

 Time steps are **0 / 3 / 5 / 10 / 20 / 30 / 40 / 50 / 60** minute.  
**0** : Automatic power off function is released.

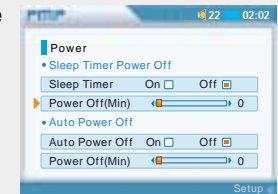



### 3. Power

#### ◆ Stop power off

#### ③ Auto Stop timer On/Off

The player, automatically turns power off to save the battery when not any action during the set time at stop mode.

ON : enabled sleep timer  
OFF : disabled sleep timer



#### ④ Power Off time set (Min)

Automatically turns the power off at the stop mode.

Automatically turns power off to save the power when not any action during the set time at stop mode.

Time steps are 0/ 3 / 5/ 10/ 20/ 30/ 40/ 50/ 60

 


#### ⑤ Backlight (Min)

You can adjust the backlight time.

Time steps are 0 / 3 / 5 / 10 / 20 / 30 / 40 / 50 / 60 min.

0 : Backlight is always off.

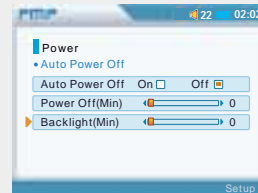


### 4. Mode

#### ◆ Music : When playing the music file

#### ① Repeat

 Select the repeat modes that are available during playing a music file. (1/ ALL/ None)

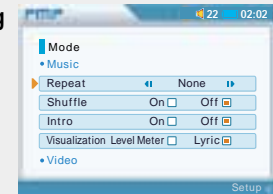

#### ② Shuffle

Set the shuffle mode to On or Off during playing a music file.

You can play the selected mode simultaneously by setting Repeat Mode / Shuffle Mode respectively.  
(Refer to page ?? for details about each mode)



#### ③ Intro

Plays about 10 seconds of each files at the beginning.

Plays 10 seconds at the beginning when ON is selected.

It is useful for searching and playing the favorite music among many music files.







## 4. Mode

## 4 Visualization

Visualizes audio signal or lyric using LDB manager at play mode.

Level Meter : Displays audio signal level.  
Lyric : Displays lyric using LDB manager.



## ◆ Video : When playing the moving picture

## 5 Repeat

Select the repeat modes that are available during playing a motion picture. (1/ ALL/ None)



## 6 Shuffle

Set the shuffle mode to On or Off during playing a motion picture.

You can play the selected mode simultaneously by setting Repeat Mode / Shuffle Mode respectively.  
(Refer to page ?? for details about each mode)



## 4. Playback Mode

## 7 Intro

Plays about 10 seconds of each track at the beginning.  
Plays 10 seconds at the beginning when ON is selected.



## ◆ Video Caption

## 8 Caption

On : Displays the caption.

Off : Does not display the caption.

With the caption On, the caption files (\*.smi) that have same name with the motion picture file are automatically displayed.

The player supports the caption of SMI format.



## 9 H align

Set video captioning justification while playing motion picture. (Top/Bottom).





## 4. Playback Mode

 
### 10 V align

Set video captioning justification while playing motion picture.  
(Left/Center/Right).



### 11 Caption Delay

Set whether the caption is displayed ahead of or behind the motion picture.  
(-50 ~ 0 ~ 50)

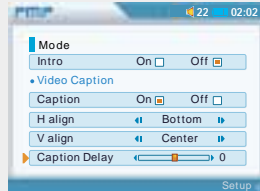


## 5. Sound

### 1 EQ


You can select various EQ modes.

 EQ is selected as follows :  
Normal → Classic → Jazz → Rock → Ultra Bass  
→ User EQ

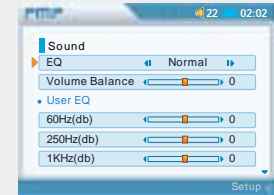

### 2 Balance

 When Sound Balance bar is moved to L (Left, 20), the sound outputs at the left earphone. When the lever is moved to R (Right, -20) the sound outputs at the right earphone. The default value is 0 and the sound outputs the same level at both earphones.

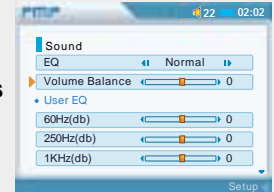

### ◆ User EQ

### 3 User EQ

You can adjust the sound to your preference. There are 5 band frequency steps, set from -12dB to +12dB by 2dB step.

Press the ▲ ▼ button to select frequency band and ◀ ▶ button to adjust the level.

