## PPF34

## Astell&Kern

# INSTRUCTION BOOK



## CONTENTS

## Getting Started -01

Package Contents	02
Product Overview	03
Power Management	05
Charging	06
Connections	07
Firmware Updates	13


### Using the Device -02

Basic Operations	14
Home Screen	19
Notification Bar	21
Using Open APP Service	24
AK CONNECT	25
AK File Drop	30
Listening to Music	32
Playlist Management	35
USB DAC Installation	38
How to Use USB Audio	39
CD Ripping	40
AK CD-Player	42
Car Mode	43
Bookmark Function	44
Favorites Function	45
Settings	46
Connecting to Wi-Fi	54
Using Bluetooth	55
Equalizer Setup	58

## Miscellaneous -03

Safety Pre-Cautions	61
Troubleshooting	63
Copyright	64
Certifications	65
Registered Trademarks	67
Disclaimers	68
Specifications	69

Package Contents Contents may be changed without prior notice to improve the performance or quality of the product.

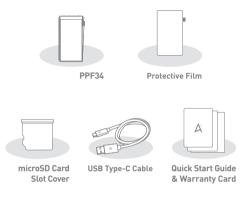

Protective Film: Protect the device and its screen.

microSD Card Slot Cover: The cover is used to protect the microSD card slot when not in use. It is installed in the product by default.

USB Type-C Cable: For charging and data transfer.

Quick Start Guide: Basic overview of device functionality.

**Warranty Card:** Provides warranty details for your device. Maintain a copy of this card as it may be required for future technical support requests.


**User Guide:** The User Guide can be downloaded from the Astell&Kern website.

[http://www.astellnkern.com > Support > Download]

Product Overview The appearance of the product, as well as the printed and engraved information, may vary depending on the model.



3.5mm Unbalanced Port

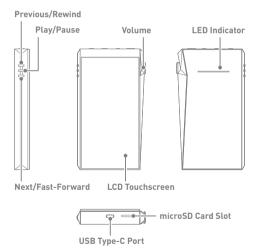

#### Power: 1) - Power symbol.

Short press - Turns the screen on or off.

Press and hold - Turns the device on or off.

**Volume:** Turn the wheel to adjust the playback output volume level.

**LED Indicator:** Displays information through light based on the track currently playing and the current volume level.

#### 3.5mm Unbalanced Port:

#### ∩ - 3.5mm Unbalanced Port symbol.

For audio output, connect earphones or headphones that utilize a 3.5mm jack.

**4.4mm Balanced Port:** BAL.1 - **4.4mm Balanced Port symbol.** For audio output, connect earphones or headphones that utilize a 4.4mm jack.

2.5mm Balanced Port: BAL.2 - 2.5mm Balanced Port symbol. For audio output, connect earphones or headphones that utilize a 2.5mm jack.

#### Previous/Rewind:

Short press - Play the previous song or restart the current song.

Press and hold - Rewind the current song.

Play/Pause: Play or pause the current song.

#### Next/Fast-Forward:

Short press - Play the next song.

Press and hold - Fast-forward the current song.

LCD Touchscreen: Display screen with touch control features.

#### microSD Card Slot: 🔄 - microSD Card Slot symbol.

Insert a microSD card to access its files.

#### USB Type-C Port: 9V == 1.67A - DC Power symbol.

For charging and data transfer.

Power
Manage-
ment

#### Powering the Device On/Off

- 1. Press and hold the [Power] button to turn on the device.
- While the device is on, press and hold the [Power] button to shut down the device. A confirmation message will appear.
- 3. Press [OK] to turn off the device.

This device has an automatic shutdown feature to save battery power. The device will turn off if there is no user input during the period defined in [Menu - Settings - Timer Settings - Auto Power Off] [See Page 51]

#### Turning the Screen On/Off

- 1. While the screen is on, press the [Power] button to turn off the screen.
- 2. Press [Power] button again to turn it on.
  - This device has an automatic timeout feature to save battery power. The screen will turn off if there is no user input during the period defined in [Menu - Settings - Timer Settings - Screen Timeout]. [See Page 51]

#### **Reset Function**

 In case of unexpected device failure or freeze, press and hold [Power] for 7 seconds to force a shutdown. The device can then be restarted after the shutdown is complete.

Resetting the device will not affect stored data or time settings. Do not use the reset function while the product is in use. Doing so may corrupt the data on the device.

## Charging


#### Charging via USB Wall Adapter

1. Commercially available 9V 1.67A output adapters may be used for charging.

Fast charging time: Approx. 3 hours (Fully discharged, Power-off, 9V 1.67A adapter) / Normal charging: Approx. 5 hours (Fully discharged, Power-off, 5V 2A adapter) A fast charger of 9V 1.67A may be used. Using a 12V adapter will not charge the device and may cause malfunction. The manufacturer shall not be responsible for problems caused by the use of adapters that do not adhere to the recommended specifications. tions


#### Connec- 3.5mm Unbalanced Port

 Connect earphones or headphones to the 3.5mm unbalanced port.

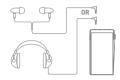

#### 2.5/4.4mm Balanced Port

 Connect earphones or headphones that support a 2.5mm or 4.4mm headphone jack to the 2.5mm or 4.4mm balanced port.

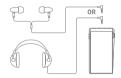

#### Connecting to a Balanced Audio Device

1. Connect to an external audio device by using the 3.5mm unbalanced port and 2.5mm balanced port.



#### **Connecting to a Computer**

- 1. Turn on the device and your computer.
- Use the USB Type-C cable to connect the device to a computer in accordance with settings in [Menu - Settings - USB Mode].
  - [Default] Media Device (USB Drive): Transfer files from a computer to the device.
  - DAC Input: Listen to music on a connected computer through the device. (See Page 39)



Mac users need to download and install Android File Transfer from the Astell&Kern website. [http://www.astellnkern.com > Support > Download]

For an optimal connection, quit any unnecessary programs before connecting the device to the computer.

Do not use cables other than the USB Type-C cable provided with the device. Doing so may cause malfunctions.

Use USB 2.0 only on Mac.

Type-C-to-Type-C cable is recommended when connecting with a MAC that supports Type-C port.


When a USB connection is established while playing a DSD or DXD file, a mode selection pop-up box will appear with the following options:

- External device connection: Connect the player to the computer to transfer files, USB DAC for audio playback or CD Ripper connection.
- Charge device: Charge the device.

#### Copy Files (Folders) to the Device

T

1. To copy files/folders from your computer, select the desired files/folders and drag & drop them into the device folder.

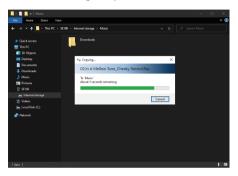


Ensure the USB Type-C cable is properly connected. Turning off the device, computer or disconnecting the USB Type-C cable while copying or moving files/folders may corrupt files or device memory. File transfer speeds may be affected by the computer and/or the OS

File transfer speeds may be affected by the computer and/or the OS environment.


#### Delete Files (or Folders) from the Device

- 1. Select the file/folder to delete, right-click the mouse, and then select [Delete].
- 2. Select [Yes] in the [Confirm File/Folder Deletion] window to delete the selected files/folders.

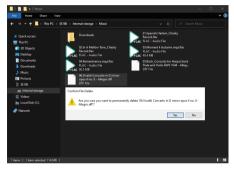

#### **Disconnecting from the Computer**

1. Disconnect the USB Type-C cable after the transfer between the device and computer is complete.

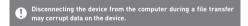

#### Insert/Remove a microSD Card

- Refer to the diagram and gently insert a microSD card into the microSD card slot.
- To safely remove a microSD card, on the Home Screen, select [Safely remove SD card] from the Notification Bar or select [Unmount SD card] from [Menu - Settings - System Information].
- Gently press the microSD card in to unlock and release it from the slot.





#### Recommended microSD Cards

#### SAMSUNG, SANDISK



Maximum Capacity: 1TB

- Notes on Inserting a microSD Card
  - Do not force the microSD card into the slot. Doing so may cause malfunction of the product and damage to the card.
  - Do not repeatedly insert/remove the microSD card.
  - If not inserted properly, the microSD card may cause product malfunctions and may become lodged in the product.

Notes on Removing a microSD Card

- Be sure to safely remove the microSD card from the device. Not following the proper procedure may corrupt data and cause serious damage to the both the card and device.
- Do not remove the microSD card during use. Doing so may cause malfunction, delete data and damage the microSD card.


Notes on Using a microSD Card

- If the microSD card is not recognized or functions improperly, format the card, preferably in the FAT32 system.
- Using cards other than the recommended microSD card types may cause malfunctions.
- A microSD card is not included in the product package. Please purchase separately.

## Firmware Updates

#### Wi-Fi Update / OTA (Over-the-Air)

- 1. Connect to a wireless network.
- If a new firmware update is available, the screen will display a Firmware Update Guide window.
- 3. Select [Update].
- Follow the on-screen instructions to proceed with the firmware update.

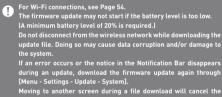

download.

# Basic LCD Touchscreen Operations 1. This device features a LCD touchscreen that allows you to perform operations by touch.

Use the touchscreen to access various features on the device.

To prevent damage to the screen, do not use a sharp object or excessive force.

#### Return to the Home Screen

1. Press [  $\bigtriangleup$  ] at any time to return to the Home Screen.



#### Using the Back Function

Back Swipe Gesture

 Swipe the navigation bar from right to left to return to the previous screen.



Back Button

1. Press the Back Button to return to the previous screen.



D This feature can be enabled or disabled under Settings - Input Method - Back Button. From the Home Screen, swipe your finger to the left, right, up or down from any edge of the touchscreen to access display menus. Each side of the Home Screen will activate a different display menu.

#### Main Menu

 From the left edge of the touchscreen, swipe your finger right to display the Main Menu, or tap the "A" icon in the upper left corner of the screen.



Music files extracted using the AK CD-Ripper accessory that are stored in the Ripping folder of the internal memory will be displayed in the CD library menu.

#### **Notification Bar**

1. From the top edge of the touchscreen, swipe your finger down to display the Notification Bar.



#### **View Current Playlist**

1. From the right edge of the touchscreen, swipe your finger left to display the Now Playing menu.



#### View Play History


1. From the bottom edge of the touchscreen, swipe your finger up to display the Play History menu.




#### Moving Up/Down on a List

1. Scroll through a list by dragging your finger up or down.



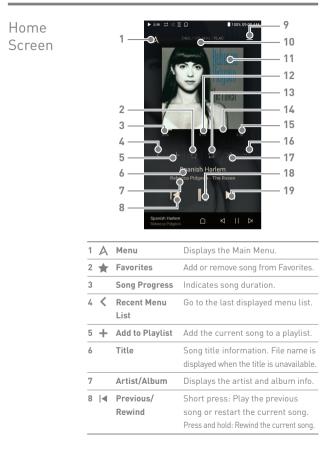

9	≣₊	Playlist	Display current playlist.
10		Format Information	Displays the bit rate and sampling frequency data.
11		Album Cover	Displays album cover of current song. Tap image to view the song lyrics.
12		Now Playing Song Count	Displays the current song number playing/ total number of songs in Now Playing.
13	1 ↓	Repeat Mode	Press [ ] to set the Repeat mode. ☐ : Repeat entire playlist. ☐ : Repeat current track. ☐ : Repeat mode off.
14		Playback Progress Bar	Shows the current track playback progress. Drag the Playback Progress Bar to move to the desired track time.
15		Song Duration	Indicates the song's total duration. Press to switch from elapsed time to remaining time.
16		Details	Displays current song information.
17	X	Shuffle Mode	Press [ ☆ ] to set track sequence for playback. ☆ : Shuffle mode on. ☆ : Shuffle mode off.
18	<b>▶</b> /	Play/Pause	Play or pause the current song.
19	•	Next/FF	Short press: Play the next song. Press and hold: Fast-forward the current song.

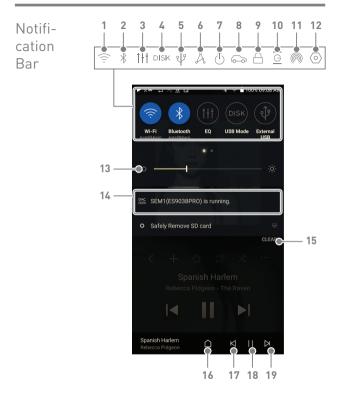

1	$(\widehat{\cdot}\cdot$	Wi-Fi	Press [ 🔶 ] to turn Wi-Fi on/off.
2	*	Bluetooth	Press [ 賭 ] to turn Bluetooth on/ off.
3	tłł	EQ	Press [ † ‡ ] to turn the EQ on/ off. The most recent EQ settings are applied by default.
4	DISK	Computer Connection Mode	Select the mode to use when connected to a computer. [Default] DISK : Enables transfer of media files. DAC : Listen to music on a connected computer through the device.
5	¢₽	USB Audio CD Ripping	After connecting the device to a portable USB DAC, press [ ${}_{3}$ [ ${}_{7}$ ] to connect or disconnect the device. Turn CD ripping function on/off.
6	A	AK CONNECT	Press [ $\hat{A}_{k}$ ] to turn AK Connect on/off.
7	Û	Line-out	Press [ (1)] to turn line-out on/ off.
8		Car Mode	Press [ 👝 ] to turn Car Mode on/off.
9	A	Wheel Lock	Press [ ] lo turn Wheel lock on/off. When turned on, the volume wheel will be disabled when the screen is locked.

10	G	Gapless Playback	Press [
11		AK File Drop	Wirelessly upload or download files to and from devices on the same network (PC, tablet, smartphone, etc.) using the PPF34 via an FTP program.
12	$\bigcirc$	Settings	Press [ 💿 ] to display the full settings menu.
13		Brightness	Use the adjustment bar to control the display brightness.
14		Notifications Display	Device notifications are displayed in this area.
15		Clear Notifications	Clear notifications.
16	$\triangle$	Home Screen	Returns to the Home Screen.
17	И	Previous	Play the previous song or restart the current song.
18	$\triangleright$	Play/Pause	Play or pause the current song.
19	$\bowtie$	Next	Play the next song.

Long-press an icon [  $\overline{\mathfrak{T}} / \sharp / \sharp / [ ] / [ ] ]$  to navigate to the corresponding full settings menu screen.

## Using Open APP Service

The Open APP Service enables the user to install specific APK music streaming apps to the device. Copy the desired APK into the Open Service folder of the product and install the relevant App in the [Menu-Service] of the product.

The source of the app you are trying to install is unknown. Be aware that if the app is installed, the device may be damaged and personal data compromised. Depending on the APP, some functions may not work. If you install an app from an unknown source, despite this warning, the company is not responsible for any damages to the device and data resulting from the app's installation, and downloading and installing such apps may limit the scope of after-sales services provided under the manufacturer warranty. For more information and full instructions on how to install music

streaming services, please visit the Astell&Kern website [<u>http://www.astell</u>nkern.com > Support > FAQ > Using Open APP Service].

## AK CONNECT

Access and play back music files stored on a computer, NAS drive or AK Device on the same network, as well as output sound through compatible speakers with AK Connect. AK Connect is available on your AK device and also available as an app for your smartphone or tablet via Apple's App store or Google Play Store.

#### Using AK Connect to Link Music Libraries/Speakers

- Turn on the music library device and/or speaker and AK player.
- Connect all devices to the same Wi-Fi network.
- Turn on the AK CONNECT feature by pressing and holding [ Å ] in the Notification Bar or selecting [Menu-Settings-AK CONNECT].
- Press [AK CONNECT] on the Main Menu.
- A list of libraries / speakers that are on the same network with the AK player will be displayed.
- 6. Select a library / speaker to connect.





 After selecting a library / speaker, select a category from the menu to display the corresponding music list.



For Wi-Fi connections, see Page 54.

#### Streaming Music from Your Library

- Select a category from the library menu to see your list of music.
- 2. Select a song to begin streaming.



#### Downloading Music from Your Library


- 1. Select a category from the library menu to see your list of music.
- 2. Press [ []] button at the upperright corner of the music list.
- Select the desired music and press [ <u>↓</u> ] to initiate the download.
  - A message on the Notification Bar will indicate when the download is complete.



Using a library for other processes can slow down the response time of the library. If you stream and download at the same time, it may slow the device's response time depending on the speed of the Wi-Finetwork or server.

To stop a download in progress, tap the notification in the Notification Bar to go to the download screen. Then, select the items to pause or delete.

#### AK Connect Usage Examples

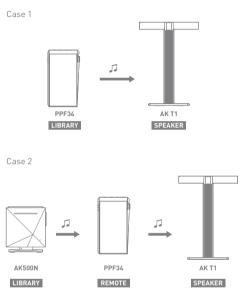

Case 3



Case 4

