



Hardware and Software Guide

HP Tablet PC Series

Document Part Number: [367426-001](#)

December 2004

© 2004 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Hardware and Software Guide

HP Tablet PC Series

First Edition December 2004

Reference Number: tc4200

Document Part Number: [367186-001](#)

Contents

1 Tablet PC Features

Pen Components	1-1
Top Components	1-2
Lights	1-2
Pointing Devices	1-4
Buttons	1-5
Pen-Activated Buttons	1-6
Keys	1-7
Front Components	1-9
Rear Components	1-11
Right-Side Components	1-13
Left-Side Components	1-15
Bottom Components	1-17
Additional Hardware Components	1-18

2 Power

Power Control and Light Locations	2-1
Selecting a Power Source	2-4
Standby and Hibernation	2-5
Standby	2-5
Hibernation	2-5
Initiating Standby, Hibernation or Shutdown	2-6
When You Leave Your Work	2-6
When the Power Supply Is Uncertain	2-7
When Using Infrared Communication or Drive Media	2-7

Using the Default Power Settings	2-8
Turning the Tablet PC or Display On or Off	2-8
Initiating or Restoring from Hibernation	2-9
Initiating or Resuming from Standby	2-10
Using Emergency Shutdown Procedures	2-11
Managing Power Options	2-11
Accessing the Power Options Window	2-12
Displaying the Power Meter Icon	2-12
Setting or Changing a Power Scheme	2-12
Using a Security Password	2-13
Processor Performance Controls	2-13
Using Battery Packs	2-15
Identifying Battery Packs	2-16
Inserting or Removing a Primary Battery Pack	2-16
Attaching or Detaching an Optional Travel Battery	2-18
Charging Battery Packs	2-21
Charging the Primary Battery	2-22
Charging an Optional Travel Battery	2-23
Charging a New Battery Pack	2-23
Charging an In-Use Battery Pack	2-23
Monitoring the Charge of a Battery Pack	2-24
Obtaining Accurate Charge Information	2-24
Displaying Charge Information on the Screen	2-24
Managing Low-Battery Conditions	2-25
Identifying Low-Battery Conditions	2-26
Resolving Low-Battery Conditions	2-26
Calibrating a Battery Pack	2-28
When to Calibrate	2-28
How to Calibrate	2-28
Conserving Battery Power	2-31
Conserving Power As You Work	2-31
Selecting Power Conservation Settings	2-32
Storing a Battery Pack	2-32
Disposing of a Used Battery Pack	2-33

3 Pointing Devices and Keyboard

Using a Pointing Device.	3-1
Using the Pointing Stick	3-2
Using the TouchPad.	3-3
Using an External Mouse	3-4
Setting Pointing Device Preferences	3-4
Using Hotkeys	3-5
Hotkey and Shortcut Key Quick Reference	3-6
Initiating Standby (fn+f3)	3-6
Switching Displays (fn+f4)	3-7
Viewing Battery Charge Information (fn+f8)	3-7
Decreasing Screen Brightness (fn+f9)	3-8
Increasing Screen Brightness (fn+f10)	3-8
Ambient Light Sensor (fn+f11)	3-8
Displaying System Information (fn+esc)	3-8
Using Hotkeys with External Keyboards	3-8
Keypads	3-9
Using the Internal Keypad.	3-9
Using an External Keypad.	3-11
Using Presentation Mode	3-12
Using Quick Launch Buttons	3-13
Quick Launch Buttons Control Panel	3-14
Accessing the Quick Launch Buttons Control Panel	3-14
Setting Presentation Mode Preferences	3-15
Setting Advanced Preferences	3-17

4 Pen and Command Controls

Pen	4-1
Entering Information with the Pen	4-2
Calibrating the Pen	4-4
Setting Pen Preferences	4-5

Command Controls	4-6
Identifying Command Controls	4-6
Command Controls Quick Reference	4-7
Using Command Controls	4-8
Setting Command Control Preferences	4-11
On-Screen Keyboard	4-14

5 Multimedia

Using Audio Features.	5-1
Using the Audio-In (Microphone) Jack	5-2
Using the Audio-Out (Headphone) Jack	5-2
Adjusting the Volume	5-3
Using Video Features.	5-4
Using the S-Video Out Jack	5-5
Connecting a Monitor or Projector	5-6
Using CD and DVD Software	5-7
Observing the Copyright Warning	5-7
Installing Software.	5-8
Enabling AutoPlay.	5-9
Installing the Universal Disc Format Reader	5-9
Using Windows Media Player.	5-10
Using WinDVD Player	5-10
Using WinDVD Creator Plus (Select Models Only)	5-10
Using Sonic RecordNow!	5-11
Changing DVD Region Settings	5-11

6 Hardware Components

Using Drives.	6-1
Caring for Drives.	6-1
Adding a Drive to the System	6-3
Identifying the Hard Drive Light.	6-4
Replacing the Primary Hard Drive	6-4

Using PC Cards	6–9
Inserting a PC Card	6–10
Removing a PC Card	6–11
Using SD Cards	6–12
Inserting an SD Card	6–12
Removing an SD Card	6–13
Adding and Upgrading Memory Modules	6–14
Adding or Upgrading a Memory Module in the Expansion Memory Slot	6–14
Upgrading the Memory Module in the Primary Memory Module Slot	6–19
Effects of Increasing Memory	6–24
Connecting a Modem Cable	6–25
Using the Modem Cable	6–26
Using a Country-Specific Adapter	6–26
Connecting a Network Cable	6–28
Linking to An Infrared Device	6–29
Setting Up an Infrared Transmission	6–30
Using Standby with Infrared	6–31
Connecting a USB Device	6–32
Using a USB Device	6–32
Enabling USB Legacy Support	6–33
Connecting Optional External Devices	6–33
Connecting an Optional External MultiBay and External MultiBay II	6–34

7 Q Menu and Desktop Video Profiles

Q Menu	7–1
Identifying Q Menu Controls	7–2
Displaying and Closing the Q Menu	7–2
Selecting an Item from the Q Menu	7–3
Obtaining Information About System-Defined Items	7–3
Setting Q Menu Preferences	7–4
Using a System-Defined Item	7–9

Desktop Video Profiles	7–16
Identifying Profiles and Modes	7–16
Using the Default Profiles	7–21
Enabling the Default Profiles	7–23
Customizing the Profiles (Optional)	7–24
Change Mode Service	7–26
Tablet PC Button Driver	7–27

8 Wireless

Wireless Local Area Network (Select Models Only) . . .	8–3
Connecting Your Wireless Tablet PC to a Corporate WLAN	8–4
Connecting Your Wireless Tablet PC to a Public WLAN	8–4
Setting Up a WLAN in Your Home	8–5
Using a WLAN Connection	8–6
Using Wireless Security Features	8–7
Installing Wireless Software (Optional)	8–7
Troubleshooting 802.11 Wireless Devices	8–9
Bluetooth (Select Models Only).	8–10
Turning On, Turning Off, Enabling and Disabling the 802.11 Wireless and Bluetooth Devices	8–12
Turning On the 802.11 Wireless and Bluetooth Devices	8–14
Turning Off and Disabling the 802.11 Wireless and Bluetooth Devices	8–15

9 Security

Security Features Quick Reference	9–1
Setting Security Preferences in Computer Setup	9–2
Using Passwords	9–3
HP and Windows Passwords	9–4
HP and Windows Password Guidelines	9–5

Using Power-On Passwords	9-6
Setting Power-On Passwords	9-6
Entering Power-On Passwords	9-7
Requiring a Power-On Password at Restart	9-7
Using HP Administrator Passwords	9-8
Setting HP Administrator Passwords	9-8
Entering HP Administrator Passwords	9-9
Using DriveLock	9-9
Setting DriveLock Passwords	9-10
Entering DriveLock Passwords	9-12
Requiring a Drivelock Password at Restart	9-12
Changing DriveLock Passwords	9-13
Removing DriveLock Protection	9-14
Disabling a Device	9-15
Using System Information	9-15
Setting System Information Options	9-16
Firewall Software	9-16
Connecting an Optional Security Cable	9-19
HP ProtectTools Security Manager (Select Models Only)	9-20
Embedded Security for ProtectTools	9-20
Credential Manager for ProtectTools	9-21
BIOS Configuration for ProtectTools	9-21
Smart Card Security for ProtectTools	9-22

10 MultiBoot

Understanding the Default Boot Sequence	10-1
Enabling Bootable Devices in Computer Setup	10-3
Understanding MultiBoot Results	10-4
Setting MultiBoot Preferences	10-5
Setting a New Default Boot Sequence	10-5
Setting a MultiBoot Express Prompt	10-6
Entering MultiBoot Express Preferences	10-7

11 Computer Setup

Using Computer Setup	11-1
Accessing Computer Setup	11-2
Restoring Computer Setup Defaults	11-2
Selecting from the File Menu	11-3
Selecting from the Security Menu	11-4
Selecting from the Tools Menu	11-6
Selecting from the Advanced Menu	11-6

12 HP Client Management Solutions

Configuration and Deployment	11-2
HP Client Manager Software	11-2

13 Software Update and Recoveries

Preparing to Update Software	11-1
Obtaining the Support Software CD	11-2
Accessing Tablet PC Information	11-2
Downloading Software from the Internet	11-3
Downloading System ROM	11-4
Downloading Other Software	11-5
System Recovery	11-5
Safeguarding Your Data	11-6
Setting System Restore Points	11-6
Repairing the Operating System	11-7
Reinstalling the Operating System	11-7
Reinstalling Device Drivers and Other Software	11-9

14 Specifications

 
Operating Environment	11-1
Rated Input Power	11-2

Index

1

Tablet PC Features

Pen Components

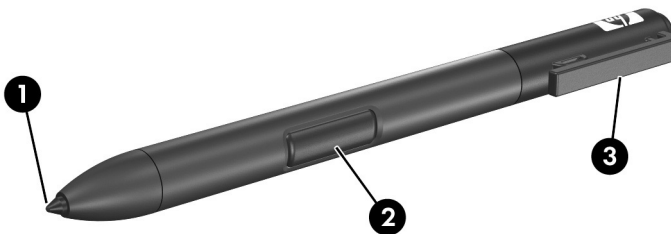


Component	Description
1 Pen tip	Interacts with the tablet PC whenever the tip is touching the screen or within 1.27 cm (0.5 inch) of the screen. When tapped on or held over a pen-activated button, activates the button.

Component	Description
② Pen button	Functions like the right button on an external mouse.
③ Pen tether eyelet	Used with the tether eyelet on the tablet PC, enables you to tether the pen to the tablet PC.

Top Components

 
Lights

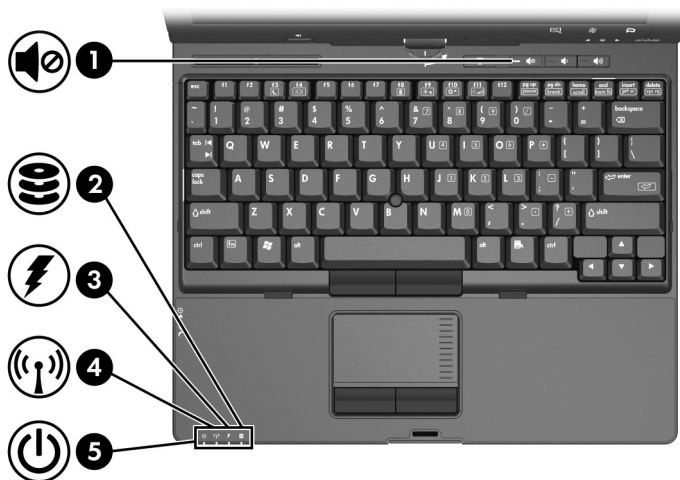

Component	Description
① Volume mute light	On: System sound is turned off.
② caps lock light	On: Caps lock is on.
③ IDE drive light	On: A drive in the hard drive bay is being accessed.

Component	Description
④ Battery charge light	Amber: A battery pack is charging. Green: A battery pack is close to full charge capacity. Blinking amber: A battery pack that is the only available power source has reached a low-battery condition. When the battery reaches a critical low-battery condition, the battery light begins blinking more quickly. Off: If the tablet PC is connected to an external power source, the light is turned off when all batteries in the tablet PC are fully charged. If the tablet PC is not connected to an external power source, the light is turned off until the battery reaches a low-battery condition.
⑤ Power/standby light	Green: The tablet PC is on. Blinking green: The tablet PC is in Standby mode.
⑥ Wireless light	On: An integrated wireless device has been enabled.
⑦ num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

 Pointing Devices

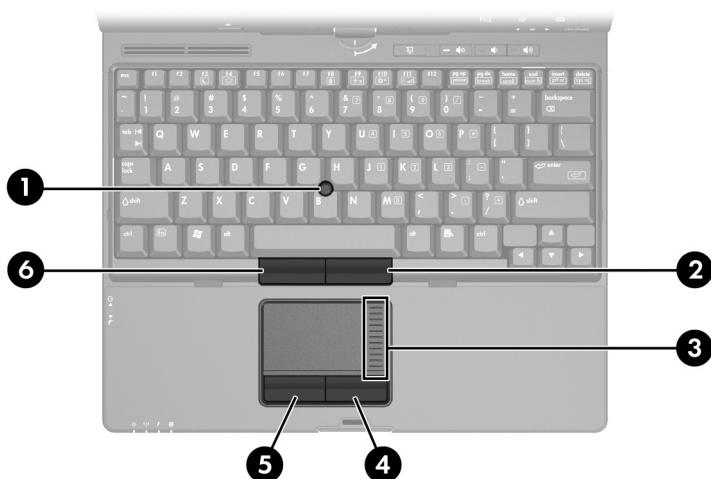


Component	Description
① Pointing stick	Moves the pointer and selects or activates items on the screen.
② Right pointing stick button	Functions like the right button on an external mouse.
③ Touchpad scroll zone*	Scrolls upward or downward.
④ Right TouchPad button*	Functions like the right button on an external mouse.
⑤ Left TouchPad button*	Functions like the left button on an external mouse.

Component	Description
⑥ TouchPad*	Moves the pointer and selects or activates items on the screen. Can be set to perform other mouse functions, such as scrolling, selecting, and double-clicking.
⑦ Left pointing stick button	Functions like the left button on an external mouse.

*This table describes default settings. For information about changing the functions of TouchPad features, refer to the [“Setting Pointing Device Preferences”](#) section in [Chapter 3, “Pointing Devices and Keyboard.”](#)

 
Buttons

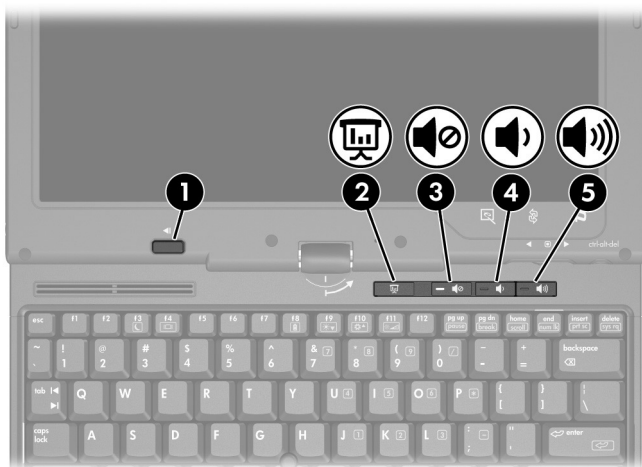

Component	Description
① Presentation mode button	Turns on Presentation mode.
② Volume mute button	Turns off tablet PC sound.

Component	Description
③ Volume down button	Decreases tablet PC sound.
④ Volume up button	Increases tablet PC sound.
⑤ Pen eject button	Ejects the pen from the pen holder.

 Pen-Activated Buttons

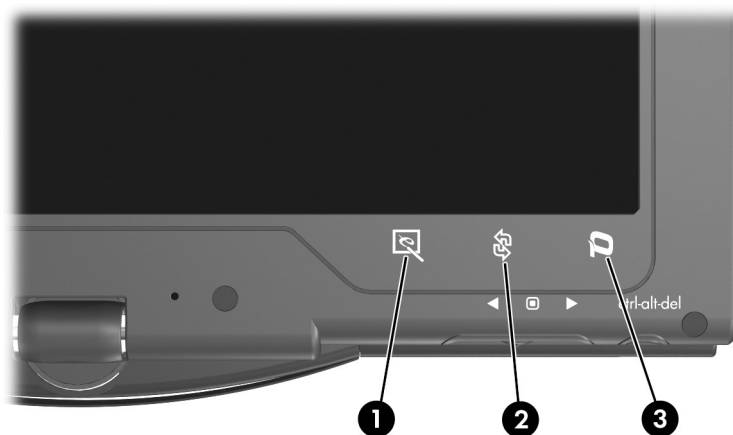


Component	Description
① Tablet PC Input launch button*	When Windows is running, opens the Microsoft Tablet PC Input Panel application, which includes a handwriting pad and an on-screen keyboard.

Component	Description
② Rotate button*	Switches the image between landscape and portrait orientation.
③ Q Menu button*	When Windows is running, opens or closes the Q Menu.

*This table describes default settings. For information about changing the functions of the Tablet PC Input launch button, rotate button, and Q Menu button, refer to [Chapter 4, "Pen and Command Controls."](#)

 
Keys

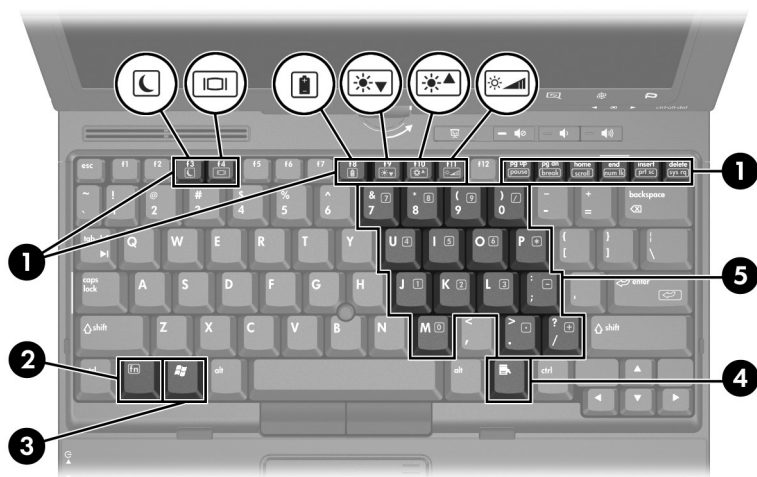


Component	Description
① Function keys	Executes frequently used system functions when pressed in combination with the fn key.
② Keypad keys	Can be used like the keys on an external numeric keypad.

Component	Description
③ Windows applications key	Displays a shortcut menu for items beneath the pointer.
④ Windows logo key	Displays the Microsoft Windows Start menu.
⑤ fn key	Executes frequently used system functions when pressed in combination with a function key or the ESC key.

 Front Components

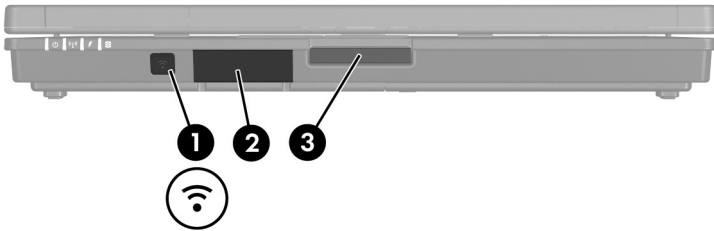

Component	Description
❶ Infrared port	Provides wireless communication between the tablet PC and an optional IrDA-compliant device.
❷ Bluetooth® antenna*	<p>Sends and receives Bluetooth device signals.</p> <p> Exposure to Radio Frequency Radiation. The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact during normal operation is minimized. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antennae should be not less than 20 cm (8 inches) during normal operation, including when the tablet PC display is closed.</p>
❸ Display release latch	Opens the tablet PC.

*The antennae is available on only select models. The antennae is not visible from the outside of the tablet PC. For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Rear Components



Component	Description
① USB port	Connects USB 1.1- and 2.0-compliant devices to the tablet PC using a standard USB cable, or connects an optional external MultiBay or MultiBay II to the tablet PC. The external MultiBay must also be connected to an external power source.
② RJ-11 (modem) jack	Connects a modem cable.
③ RJ-45 (network) jack	Connects a network cable.
④ Power connector	Connects an AC adapter or an optional Automobile Power Adapter/Charger, or Aircraft Power Adapter.
⑤ External monitor port	Connects an optional external monitor or overhead projector.

Component	Description
⑥ S-Video out jack	<p>Is a 7-pin, dual-purpose jack. It connects an optional S-Video device, such as a television, VCR, camcorder, overhead projector, or video capture card, with an optional, standard (4-pin) S-Video cable.</p> <p>The extra 3 pins also enable an optional S-Video-to-composite adapter to be used with the tablet PC.</p>
④ Jog dial*	<p>Functions like enter and the up and down arrow keys on a standard keyboard.</p> <ul style="list-style-type: none">■ Press inward to enter a command.■ Rotate upward to scroll upward.■ Rotate downward to scroll downward.
⑤ Windows Security button*	<p>When pressed with the pen tip or a small object like the end of a paper clip while:</p> <ul style="list-style-type: none">■ Windows is open, enters the ctrl+alt+delete command.[†]■ The Setup utility is open, enters the reset command.

*This table describes default settings. For information about changing the functions of the Windows security button and jog dial, refer to [Chapter 4, "Pen and Command Controls."](#)

†To protect your work and the system, the ctrl+alt+delete command cannot be entered using the **Ctrl**, **Alt**, and **Del** keys on the on-screen keyboard.


Right-Side Components



Component	Description
❶ Audio-out (headphone) jack	Produces system sound when connected to optional powered stereo speakers, headphones, headset, or television audio.
❷ Audio-in (microphone) jack	Connects an optional monaural or stereo microphone.
❸ USB port	Connects USB 1.1- and 2.0-compliant devices to the tablet PC using a standard USB cable, or connects an optional external MultiBay or MultiBay II to the tablet PC. The external MultiBay must also be connected to an external power source.

Component	Description
④ PC Card eject button	Ejects PC Cards from the PC Card slot.
⑤ PC Card slot	Supports optional Type I, Type II, or Type III 32-bit (CardBus) or 16-bit PC Cards.
⑥ SD Card slot	Accepts SD (Secure Digital) Memory Cards.

 Left-Side Components

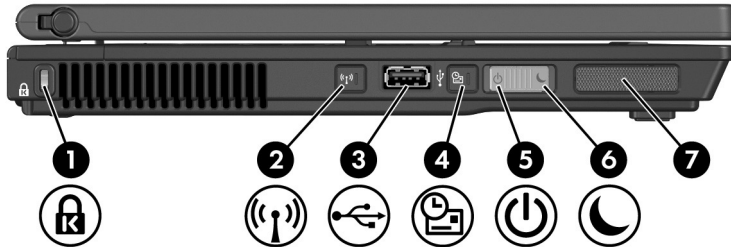


Component	Description
❶ Security cable slot	Attaches an optional security cable to the tablet PC. ⚠ Security solutions are designed to act as deterrents. These deterrents may not prevent a product from being mishandled or stolen.
❷ Vent	Enables airflow to cool internal components. ⚠ To prevent overheating, do not obstruct vents. Using the tablet PC on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.
❸ Wireless button*	Turns on wireless LAN or Bluetooth.

Component	Description
④ USB port	Connects USB 1.1- and 2.0-compliant devices to the tablet PC using a standard USB cable, or connects an optional external MultiBay or external MultiBay II to the tablet PC. The external MultiBay must be connected to an external power source.
⑤ HP Information Center button	content to come
⑥ Power/standby switch*	<p>When the tablet PC is</p> <ul style="list-style-type: none">■ Off, slide to the left and release to turn on the tablet PC.■ In Standby, slide to the right or left and release to exit Standby.■ In Hibernation, slide to the right or left and release to exit Hibernation.■ On, slide to the right and release to enter Standby. <p>If the tablet PC has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, slide to the left and hold for 5 seconds to turn off the tablet PC.</p>
⑦ Speaker	Produces tablet PC sound.
⑧ Pen holder	Secures the pen to the tablet PC.


*This table describes default settings. For information about changing the functions of the power features, refer to the [“Managing Power Options”](#) section in [Chapter 2, “Power.”](#) For information about changing the functions of the wireless features, refer to [Chapter 8, “Wireless.”](#)

 Bottom Components

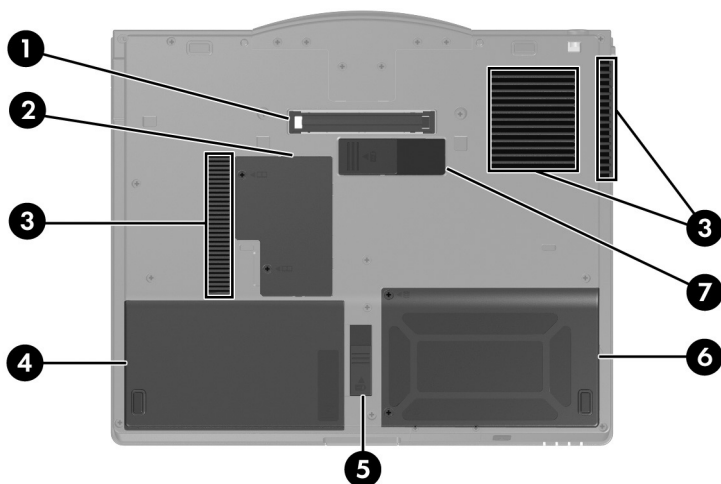

Component	Description
① Docking connector	Connects the tablet PC to an optional docking device.
② Vents (3)	Enable airflow to cool internal components. △ To prevent overheating, do not obstruct vents. Using the tablet PC on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.
③ Travel battery connector	Connects an optional travel battery.
④ Hard drive bay	Holds the primary hard drive.
⑤ Primary battery release latch	Releases the primary battery pack from the battery bay.
⑥ Primary battery bay	Holds the primary battery pack.
⑦ Memory module compartment	Contains one primary memory slot (populated).

 Additional Hardware Components

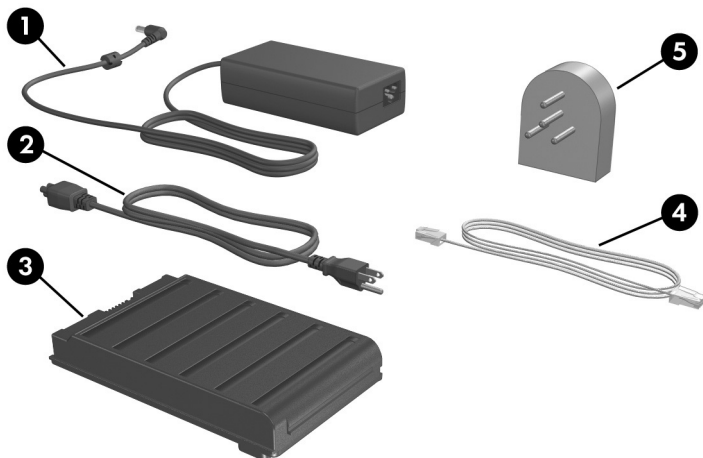

Component	Description
① AC adapter	Converts AC power to DC power.
② Power cord*	Connects an AC adapter to an AC wall outlet.
③ Primary battery pack*	Runs the tablet PC when the tablet PC is not connected to external power.
④ Modem adapter*	Adapts the modem cable for a non-RJ-11 telephone jack.
⑤ Modem cable*	Connects a modem to a telephone jack or a country-specific modem adapter.

*Power cords, modem cables, and modem adapters vary in appearance by region and country. Battery packs vary by model.