

6. SETUP PHOTOS

6.1. STANDARD CONFIGURATION


DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP





6.2. BRIDGE MODE CONFIGURATION

DYNAMIC FREQUENCY SELECTION MEASUREMENT SETUP

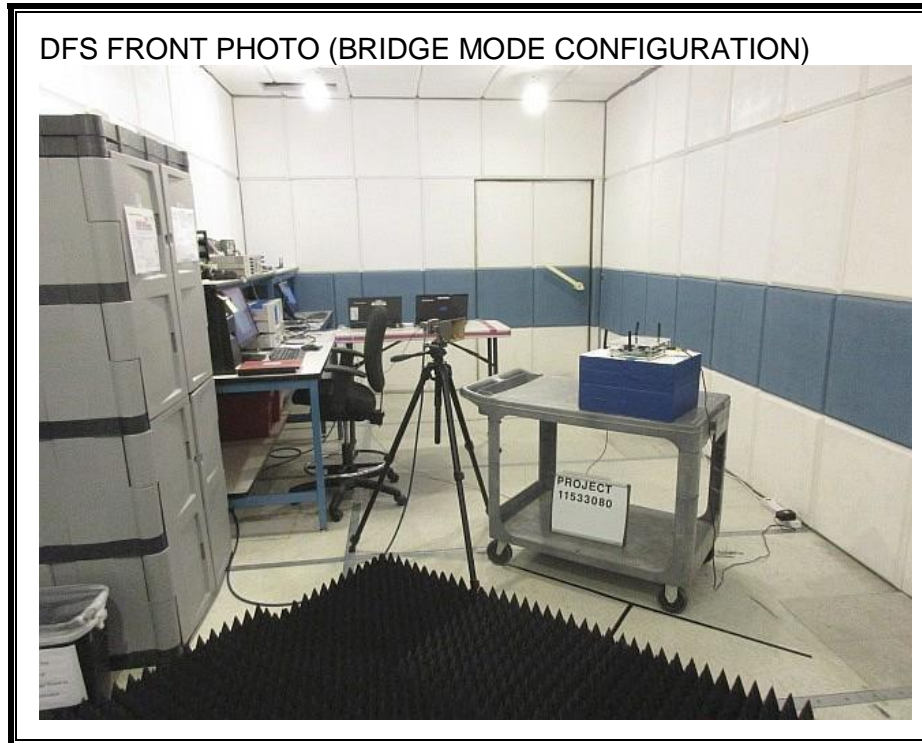



END OF REPORT