

Sprint PCS[®]

The clear alternative to cellular.SM

www.sprintpcs.com

Table of Contents

1. Getting to Know Your PCS Vision Camera	3
Features of Your PCS Vision Camera	4
Cleaning the Lens and Viewfinder	4
Using the Battery	5
Camera Precautions	6
Troubleshooting	7
Getting Help	8
2. Using Your PCS Vision Camera	9
Front and Back View of Camera	10
Turning Your Camera ON and OFF	11
Viewing the Status LCD	11
Taking Pictures	12
Connecting the Camera to a PCS Phone [need to verify]	13
Registering for PictureShare [need info]	14
Transferring Pictures Directly From Your Camera to a Personal Computer [verify]	14
3. The PCS PictureShare WAP Site	15
Managing Pictures With Your PCS Phone [need to verify]	16
Managing Pictures With the PCS PictureShare WAP Site [need to verify]	17
4. The PCS PictureShare Web Site	21
Accessing the PCS PictureShare Web Site	22
Picture Inbox	22
Albums	26
Guest Books	28
Account Info	29
5. Terms and Conditions & Warranty Information	31
Terms and Conditions of Service	32
Manufacturer's Warranty	33
Index	35

Your PCS Vision Camera

Welcome – you've made the right choice

Sprint built the largest all-digital, all-PCS nationwide network from the ground up, reaching more than 230 million people. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations and innovative products.

Your PCS Vision Camera allows you to take VGA-quality digital pictures and send them to your friends and family – wherever and whenever you want. This well-designed camera is easy-to-use and attaches to Samsung N400 and Samsung A500 phones.

When your camera is connected to a phone, you can upload and share pictures instantly via email with the PCS PictureShare service . The PCS PictureShare service is also available through the Web on a personal computer for picture enhancement and advanced management features.

Since you're probably eager to begin using the camera, we encourage you to flip to Section One – Getting Started With Your PCS Vision Camera. This section provides basic phone information and lets you know how to contact Sprint should you have any questions.

Thank you for choosing Sprint and enjoy your new camera.

Getting to Know Your PCS Vision Camera

In This Section

- ▶ Features of Your PCS Vision Camera
 - ▶ Cleaning the Lens and Viewfinder
 - ▶ Using the Battery
 - ▶ Camera Precautions
 - ▶ Troubleshooting
 - ▶ Getting Help
-

This section walks you through the basic information and features of your PCS Vision Camera. Once you have completed this section, you're ready to explore the advanced features of your new camera and PCS PictureShare service.

Features of Your PCS Vision Camera

Congratulations on the purchase of your PCS Vision Camera. This camera is lightweight, easy-to-use, reliable and offers many significant features:

- ▶ The PCS Vision Camera provides quality pictures by simply pressing a button (page xx).
- ▶ Review, delete and upload pictures from your phone (page xx).
- ▶ The PCS PictureShare WAP service on your phone lets you share and comment on pictures via email (page xx).
- ▶ You can access the PCS PictureShare Web service from a personal computer for picture enhancement and management features (page xx).

Cleaning the Lens and Viewfinder

To clean your lens or viewfinder:

1. Blow gently on the lens or viewfinder to remove dust and dirt.
2. Wipe the lens or viewfinder gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless they are designed specifically for camera lenses.



Note: Do not wipe your camera lens or viewfinder with a chemically-treated eyeglass lens tissue.

Using the Battery

Installing the Battery

To insert a battery into the camera:

1. Open the connector cover.
2. Remove the connector.
3. Slide open the battery cover (refer to the figure).
4. Insert the battery.

WARNING: UPLOAD YOUR PICTURES BEFORE YOU REPLACE THE BATTERY. OTHERWISE, YOU WILL LOSE THE PICTURES.



Battery Precautions

Follow these precautions when installing a battery:

- ▶ Use only the size and type specified.
- ▶ Be sure to follow the correct polarity. A reversed battery may cause damage to the camera.
- ▶ If you will not use the camera for a long period of time, save all the pictures and remove the battery to prevent damage or injury from battery leakage.

WARNING: UPLOAD ALL PICTURES BEFORE THE BATTERY IS EMPTY.

Camera Precautions

Be sure to observe the following precautions when using your camera:

- ▶ Do not open the case of the camera for any reason. Always leave service to authorized repair facilities.
- ▶ Keep the camera away from water and other liquids. Do not use the camera when it is raining or snowing. Your camera can be damaged by water or any other liquids.
- ▶ If foreign matter or water gets into your camera, turn the power off immediately and contact your local authorized repair facilities or service.
- ▶ The image data stored in the camera's memory can be deleted by physical damage or malfunction of your camera. Be sure to keep backup copies of your images by transferring them to a personal computer.
- ▶ Under a circumstance of electrostatic discharge, the camera might malfunction. You may need to reset the camera.
- ▶ Do not take a picture while walking or operating a vehicle.
- ▶ High temperatures can damage your camera. Try not to leave your camera in a sealed vehicle or in direct sunlight.
- ▶ Do not place the camera in unstable locations where the camera may fall and be damaged.
- ▶ Pressing or touching the Status LCD Display or lens can damage your camera.
- ▶ When the camera is on, removing the battery may delete saved images.
- ▶ Try to remove the battery when the camera is not in use for long periods of time.
- ▶ Only a 3V Lithium Battery (CR123A) can be use.
- ▶ Dispose of the battery in a manner that complies with applicable laws.

Troubleshooting

Symptom: Camera won't turn on

Possible Causes: 1) Battery was not installed correctly; 2) Battery is dead or weak

Possible solutions: 1) Install battery correctly; 2) Replace battery

Symptom: Poor quality pictures

Possible Causes: 1) Poor lighting; 2) The user moved his or her hands while taking a picture; 3) The lens is dirty or smeared

Possible Solutions: 1) Take picture in better lighting; 2) Hold camera steady when taking a picture; 3) Clean the lens with a soft cloth

Symptom: Daylight picture is too dark

Possible Cause: The subject is in front of bright light

Possible Solution: Change the subject's position

Symptom: Can't take a picture

Possible Causes: 1) Memory is full; 2) Power is off; 3) Battery is dead or weak

Possible Solutions: 1) Connect to the PCS phone and transfer pictures; 2) Turn power on; 3) Replace battery

Symptom: Picture processed is not stored in the memory

Possible Cause: Poor light

Possible Solution: Take picture again in better lighting

Symptom: Part of the picture is missing

Possible Cause: Something was blocking the lens

Possible Solution: Keep hand, fingers, etc. away from the lens

Symptom: Can't transfer image to phone

Possible Causes: 1) Power is off; 2) The PCS phone is not in the correct mode

Possible Solutions: 1) Turn power on; 2) Make sure the PCS phone is in the right mode to transfer image.

Getting Help

Visiting Our Web Site

Stop by www.pictures.sprintpcs.com and sign in to manage your pictures or get help. Access frequently asked questions and other useful information by clicking the **Help** tab. You can also:

- ▶ View comments in your Guest Books
- ▶ Create and organize albums
- ▶ Access your account information
- ▶ Purchase accessories
- ▶ And more

PCS Customer Service Solutions

Claire, your virtual service representative, is available to assist you 24 hours a day, seven days a week on the PCS Customer Service Solutions phone line. Simply dial 1-888-211-4PCS (4727) from any phone or press *** 2 OK** from your PCS Phone while on the PCS Nationwide Network.



Note: If you need to reach PCS Customer Service Solutions while you are off the PCS Nationwide Network, dial 1-888-211-4PCS (4727).

Once you're connected with PCS Customer Service Solutions, Claire can guide you through a number of helpful account services. Simply speak in a natural voice and your virtual service representative can help you learn more about PCS Products and Services, get PCS Coverage by zip code, provide a copy of your invoice and much more.



Note: *** 2** calls are free from your PCS Phone and the minutes are not subtracted from your monthly service plan.

2

 
Using Your PCS Vision Camera

In This Section

- ▶ Front and Back View of Camera
- ▶ Turning Your Camera On and Off
- ▶ Viewing the Status LCD
- ▶ Taking Pictures
- ▶ Connecting the Camera to a PCS Phone
- ▶ Registering for PCS PictureShare

Your PCS Camera provides quality digital pictures that you can view and share with others.

Front and Back View of Camera

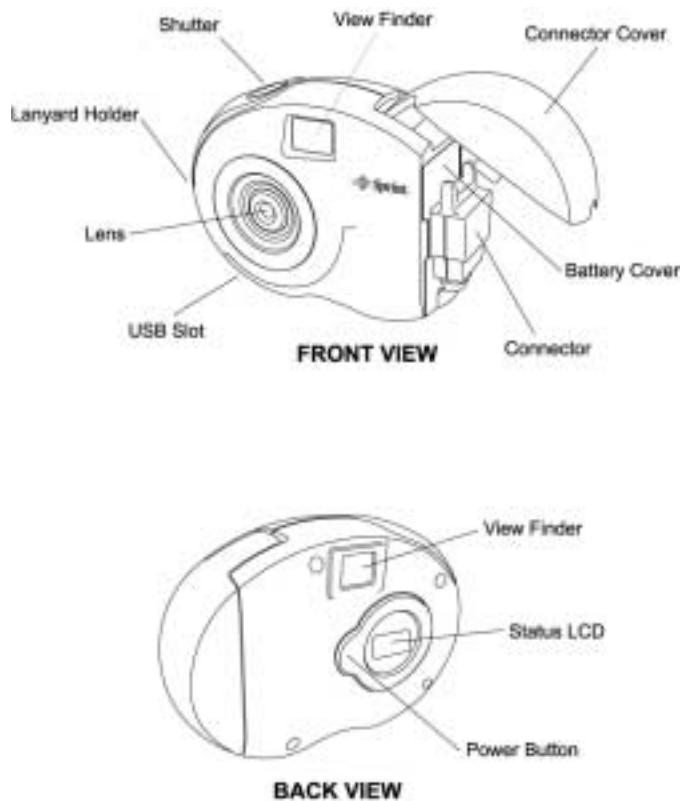

Turning Your Camera ON and OFF

To turn your camera on:

- ▶ Press and hold the power button until the Status LCD display is active.

To turn your camera off:

- ▶ Press and hold the power button until the Status LCD display turns off.

Your camera's automatic power-off feature:

- ▶ The camera automatically turns off when it is untouched for more than xx seconds.

Viewing the Status LCD

These symbols are displayed on the Status LCD.



- ▶  Battery power is high.
- ▶  Battery power is low and should be replaced soon.

 
Taking Pictures

To take a picture, position your subject in the viewfinder and hold the camera steady. Then, press the shutter button until the camera beeps.

Picture Storage

Your camera can store up to 36 pictures. The picture counter on the Status LCD keeps track of your remaining pictures. The Status LCD blinks when you cannot store any more pictures.

Tip: Make sure your fingers are not in front of the lens when you take a picture.

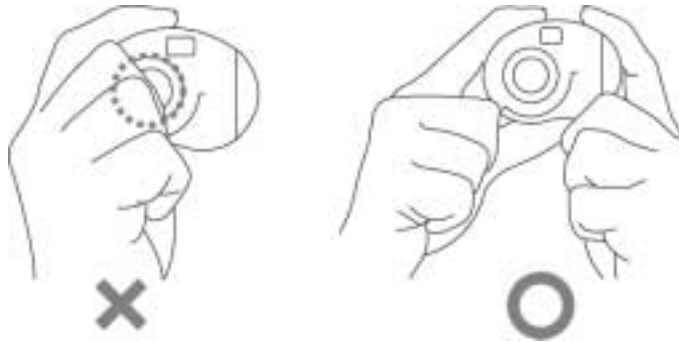

Connecting the Camera to a PCS Phone *[need to verify]*

To connect your camera to a PCS phone:

1. Open the connector cover.
2. Remove the connector.
3. Insert the connector into the bottom of your phone.



4. After connecting your camera to the phone, select **Pictures** from the phone's main menu and press **OK**.
5. Highlight **Camera** and press **OK**. If it is the first time you are accessing PCS PictureShare, you will be prompted to create an account with email, telephone and password information.

To select an option, press **OK**.

- ▶ **Preview** to display the first picture and file size.
- ▶ **Upload** to send your pictures to www.pictures.sprintpcs.com. If you have not registered for an account, you will be prompted to enter a user name and password.
- ▶ **Next** to display the next picture. (You can also use your phone's keys to display the next or previous picture.)
- ▶ **Delete** to erase the selected picture.

Registering for PictureShare *[need info]*

You will be prompted to register for PictureShare when you upload pictures to your phone the first time.

To register:

- 1.
- 2.
- 3.

Transferring Pictures Directly From Your Camera to a Personal Computer *[need to verify]*

Before you download pictures from your camera, you must first install the camera driver on your personal computer.



Note: Do not connect the camera to your personal computer until you have completed the driver installation.

To download the camera driver software:

1. From your personal computer, go to www.pictures.sprintpcs.com and sign in to your account.
2. Click the **Help** tab.
3. Click on the camera driver software link. Automated screens will walk you through the installation process and provide instructions on how to transfer pictures.

3

The PCS PictureShare WAP Site

In This Section

- Managing Pictures With Your PCS Phone
- Managing Pictures With the PCS PictureShare WAP Site

You can send your digital pictures to other PCS Phones or download them to a Web site where you can share, edit and leave comments on them.

[WE NEED SOME MORE INFORMATION FOR THIS SECTION]

Managing Pictures With Your PCS Phone *[need to verify]*

To view, delete or send pictures:

1. From the main menu, highlight **My Pictures** and press **OK**. The number of picture stored in the camera will be displayed.
2. To select a menu option, highlight it and press **OK**.
 - ▶ **Preview** to display the first picture and file size.
 - ▶ **Upload** to send your pictures to www.pictures.sprintpcs.com. If you have not registered for an account, you will be prompted to enter a user name and password.
 - ▶ **Next** to display the next picture. (You can also use your phone's keys to display the next or previous picture.)
3. After selecting a picture, highlight **Menu** and press **OK**. Then, select the following option:
 - ▶ **Upload this picture** to send the picture to www.pictures.sprintpcs.com. After pictures have been successfully transferred, they are automatically deleted from the camera.
If the picture fails to upload, an error message is displayed. Highlight **Resume** and press **OK** to continue uploading.
 - ▶ **Delete this picture** to erase the picture.
 - ▶ **Delete this picture** to erase the picture.
 - ▶ **Upload all pictures** to send your pictures to www.pictures.sprintpcs.com. If you have not registered for an account, you will be prompted to enter a user name and password.
 - ▶ **Delete all pictures** to erase all pictures.
 - ▶ **Exit** to return to the main camera menu.

Note: For complete PCS Phone instructions, visit www.sprintpcs.com/manage. There you can view the phone user's guide.

Managing Pictures With the PCS PictureShare WAP Site *[need to verify]*

By accessing your PCS PictureShare account from your phone's Web browser, you can view and share pictures stored in your Picture Inbox and Albums. (Access the following features from the **Picture Albums/Album List** screen.)

To share pictures with text messages via e-mail:

1. Highlight the album that contains the picture you want to share and click **View**.
2. Highlight the picture you want to share and click **Options**.
3. Select **Share Picture**.
4. Enter an email address or select one from your address book by clicking **To**. (You can also enter a text message.)
5. Click **Send**.

To share albums with text messages via e-mail:

1. Highlight the album you want to share and click **Share**.
2. Enter an email address or select one from your address book by clicking **To**. (You can also enter a text message.)
3. Click **Send**.

To move or copy pictures from the Picture Inbox to Albums:

1. Highlight your Picture Inbox and click **View**.
2. Highlight the picture you want to share and click **Options**.
3. Select **Move/Copy Pictures**.
4. Select **Move Pictures** or **Copy Pictures**.
5. Highlight the album you want to copy or move the picture to and click **OK**.

To rename or create Albums:

1. Highlight the album you want to rename. If you want to create a new album, do not highlight an album.
2. Click **Options**.
3. Select **Rename** or **Create**.
4. Edit the album title you are renaming or enter the name of your new album.

To delete Albums:

1. Highlight the album you want to delete.
2. Click **Options**.
3. Select **Delete**.
4. If you are sure you want to delete this album, click **Yes**.



The PCS PictureShare Web Site

In This Section

- ▶ Accessing the PCS PictureShare Web Site
 - ▶ Picture Inbox
 - ▶ Albums
 - ▶ Guest Books
 - ▶ Account Info
-

By using the PCS PictureShare Web service on your computer, you can send, enhance and add and review comments on all your pictures.

Accessing the PCS PictureShare Web Site

By accessing your PCS PictureShare account from a computer's Web browser, you can view and share pictures stored in your Picture Inbox and Albums. Sign in to your account at www.pictures.sprintpcs.com by using your PCS Phone Number and password.

Picture Inbox



To select an option, click on the following link or button:

Inbox Options

- ▶ **Share Inbox** to send the pictures in your Inbox. (See “Sharing Pictures and Albums” on page xx.)
- ▶ **Slideshow** to display the pictures in your Inbox.
- ▶ **Move Pictures** to move pictures from your Inbox into an Album. (See “Moving Pictures” on page xx.)

Picture Options

- ▶ **Edit** to change the caption of the picture.
- ▶ **Share Picture** to send the selected picture. (See “Sharing Pictures and Albums” on page xx.)
- ▶ **Enhance** to customize the picture with your own personal effects. (See “Enhancing Pictures” on page xx.)
- ▶ **Rotate** to turn the picture clockwise.
- ▶ **Delete** to delete the picture.

Sharing Pictures and Albums

1. Click on **Share Inbox** to send all your pictures or **Share Picture** to send an individual picture.



2. Enter an email address or select one from your Address Book. (You can send the picture to everyone in your Address Book by clicking on **Share to All**.)
3. Enter a text message.
4. Select whether or not you want to be notified when guests leave comments. You can carry on a conversation with all of your guests – it's a fun way to keep in touch. (See “Guest Books” on page xx.)



5. To select an option, click on the link:

- ▶ **Send** to send the picture(s) and message in an email. Your message will appear in the email with a link to the picture.
- ▶ **Preview** to see the picture(s). (Click on the Comments tab to display the recipient and your message.)
- ▶ **Cancel** to return to the Picture Inbox.

Enhancing Pictures



1. Click on the picture you want to edit or the **Enhance** link next to the picture.
2. To select an option, click on the link:

Picture Options

- ▶ **Share Picture** to send the picture. (See “Sharing Pictures and Albums” on page xx.)
- ▶ **Edit** to change the caption of the picture.
- ▶ **Rotate** to turn the picture clockwise.
- ▶ **Delete** to erase the picture.
- ▶ **Enlarge** to display a larger image of the picture.

Album Options

- ▶ **Share Album** to send the Album where the picture is stored. (See “Sharing Pictures and Albums” on page xx.)
- ▶ **Slideshow** to display the pictures in the Album.

Picture Enhancements

- ▶ **Lighten Subject** to adjust the picture’s lightness.
- ▶ **Darken Subject** to adjust the picture’s darkness.
- ▶ **Crop** to crop the size of the picture.
- ▶ **Antique** to give the picture an older look.
- ▶ **Black and White** to change the picture from color to black and white.
- ▶ **Soft Focus** to soften the focus of the picture.

Picture Fun

- ▶ **Comic Bubble** to add a bubble with words to the picture..
- ▶ **Cartoon** to make the picture look like a comic book.
- ▶ **Line Drawing** to change the picture into black and white lines.



 
Comic Bubble Picture

Moving Pictures

1. Click the **Move Pictures** link in the Organize Your Pictures section.
2. Click on the pictures or selection boxes next to the pictures that you want to move.
3. Select an album from the drop-down menu.
4. Click **OK**.

Albums

Album List

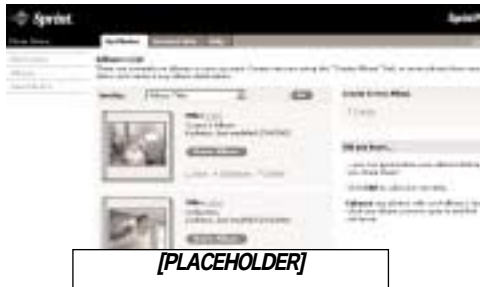

To select an option, click on the following link or button:

Album Management

- ▶ **Sort By** to sort the albums. Select an option from the pull-down menu and click **Go**.
- ▶ **Create** to create a new album.

 
Album Options

- ▶ **Edit** to change the album title.
- ▶ **Share Album** to send the album. (See “Sharing Pictures and Albums” on page xx.)
- ▶ **View** to display the pictures in the album. (See “Thumbnail View” on page xx.)

Tip: You can also click the album cover to display the Thumbnail View.

- ▶ **Slideshow** to display the pictures automatically.
- ▶ **Delete** to delete the album.

Thumbnail View

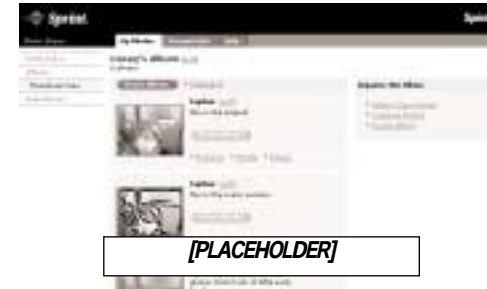

To select an option, click on the following link or button:

Album Management

- ▶ **Move/Copy Pictures** to transfer or copy the pictures into a different album.
- ▶ **Organize Pictures** to change the order of the pictures.
- ▶ **Delete Album** to delete the album .

Picture Options

- ▶ **Edit** to change the caption of the picture.
- ▶ **Share Picture** to send the selected picture. (See “Sharing Pictures and Albums” on page xx.)
- ▶ **Enhance** to customize the picture with your own personal effects. (See “Enhancing Pictures” on page xx.)
- ▶ **Rotate** to turn the picture clockwise.
- ▶ **Delete** to delete the picture .

Guest Books



To select an option, click on the following link or button:

Guest Book Management

 
- ▶ **Sort By** to sort the guest books. Select an option from the pull-down menu and click **Go**.

Guest Book Options

- ▶ **Delete** to delete the guest book.
- ▶ **Comment** to add a comment to the guest book. Enter a message in the New Comment field and click **Add Comment**. (If Comment Notification is turned on, the owner of the guest book will be notified when you add the comment.)

Account Info

Overview

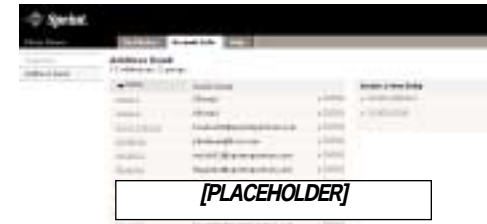

The Account Overview displays Contact and Account information.

To select an option, click on the following link:

 
Address Book Management

- ▶ **Name** to sort your addresses alphabetically by their name. (The arrow next to Name indicates if the order is ascending or descending.)
- ▶ **Email/Group** to sort your addresses alphabetically by their email address or group name. (The arrow next to Email/Group indicates if the order is ascending or descending.)
- ▶ **Create Address** to create a new address (name and email address).
- ▶ **Create Group** to create a group using existing addresses.
- ▶ **Change Login Name** to change the name used to log in to PCS PictureShare.

Address and Group Management

- ▶ **[Group Name or Address]** to edit the group or address.
- ▶ **Delete** to delete the address or group.

Address Book

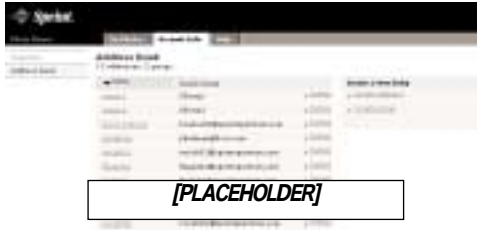

To select an option, click on the following link:

Contact Management

- ▶ **Edit Contact Info** to change the name, email address or password.
- ▶ **Change Password** to change the password used to log in to PCS PictureShare.
- ▶ **Change Login Name** to change the name used to log in to PCS PictureShare.

Account Management

- ▶ **Cancel my Account** to cancel your PCS PictureShare account.
- ▶ **Change Password** to change the password used to log in to PCS PictureShare.
- ▶ **Change Login Name** to change the name used to log in to PCS PictureShare.

5

Terms and Conditions & Warranty Information

In This Section

- ▶ **Terms and Conditions of Services**
- ▶ **Manufacturer's Warranty**

This section contains the Terms and Conditions of Services and the manufacturer's warranty for your PCS Vision Camera.

Terms and Conditions of Service

[NEED Ts AND Cs TEXT]

Manufacturer's Warranty

[NEED WARRANTY TEXT]

Index

A

Account Info 29
Albums 26

B

Battery
 Installing 5
 Precautions 5

C

Connecting the Camera to a PCS
Phone 13

E

Enhancing Pictures 24

G

Guest Books 28

P

Photo Inbox 22
PictureShare WAP Site 17
PictureShare Web Site 22

S

Sprint PCS Customer Service
Solutions 8

T

Terms and Conditions of Service
32
Troubleshooting 7

W

Warranty 33

FCC NOTICE

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This Device may not cause harmful interference, and
(2) This device must accept any interference received,
including interference that may cause undesired
operation.

CAUTION : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.