


1 Appearance

The AirPresence Key is used with Huawei videoconferencing endpoints to share content in conferences.

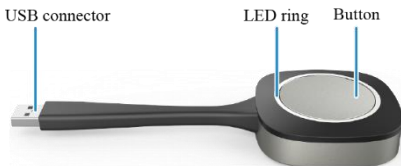

- **USB Connector**

Connects the AirPresence Key to an endpoint or PC.

- **Button**

Press the button to start or stop sharing the PC desktop.

- **LED Ring**

It is the status indicator of the AirPresence Key.

When the indicator is...	The AirPresence Key is...
Off	Not connected to any PC or endpoint.
Steady green	<ul style="list-style-type: none">● Connected to an endpoint and paired with it.● Connected to a PC.
Blinking green	<ul style="list-style-type: none">● Connected to an endpoint and being upgraded.● Connected to an endpoint and pairing with it.● Connecting to a PC.
Steady red	Faulty.

2 Configuration

Connect the AirPresence Key to an endpoint to pair them. The pairing is complete when the pairing success message is displayed on the endpoint's user interface.

3 Installation

Before using the AirPresence Key on a PC for the first time, install its program on the PC.

- 1 Connect the AirPresence Key to the USB port on the PC.
- 2 Choose **Program > Computer > AirPresence** and double-click the program file. Then install the AirPresence Key program by following the wizard.
 - Program file on a Windows PC:
AirPresenceKey.exe
 - Program file on a Mac:
AirPresenceKey.pkg
🔍 To install the AirPresence Key program on a Mac, you will be asked to enter the system user name and password first.

4 Operation

To use the AirPresence Key to share the PC desktop:

- 1 Connect the AirPresence Key to the USB port on the PC. The connection is successful when the connection success message is displayed. The LED ring turns steady green.
- 2 Press the button on the AirPresence Key to start sharing the PC desktop. You will see the shared desktop on the screen of the monitor connected to the endpoint. To stop sharing, press the button on the AirPresence Key again.

5 Specifications

The following table lists the physical specifications of the AirPresence Key.

Item	Specification
Power supply	5 V DC
Maximum power consumption	1.5 W
Ambient temperature	<ul style="list-style-type: none">• Operating state: 0 °C to 40 °C (32 °F to 104 °F)• Non-operating state: -40 °C to +70 °C (-40 °F to +158 °F)
Relative humidity	<ul style="list-style-type: none">• Operating state: 10% to 80%• Non-operating state: 0% to 95%
Product dimensions (H x W x D)	59.6 mm x 18.5 mm x 162 mm (2.35 in. x 0.73 in. x 6.38 in.)
Product dimensions (H x W x D)	94.5 mm x 28 mm x 199 mm (3.72 in. x 1.10 in. x 7.83 in.)
Net weight	75 g (0.17 lb)
Gross weight	195 g (0.43 lb)

The following table lists the operating systems and PC supported by the AirPresence Key.

Item	Specification
Windows	<ul style="list-style-type: none"> • Recommended hardware: quad-core (or higher) CPU and 1 GB (or higher) RAM memory • Windows 7, 8, 8.1, and 10 (32- and 64-bit)
Mac	<ul style="list-style-type: none"> • Recommended hardware: dual-core (or higher) CPU, 2.2 GHz (or higher) dominant frequency, and 1 GB (or higher) RAM memory • macOS 10.7–10.11 (32- and 64-bit)

The following table lists the resolution and frame rates that the AirPresence Key supports for the shared content.

Item	Specification
Windows	<ul style="list-style-type: none"> • Local conference: up to 1080p 25 fps • Remote conference: up to 1080p 5 fps
Mac	<ul style="list-style-type: none"> • Local conference: up to 1080p 25 fps • Remote conference: up to 1080p 5 fps