



# **HUAWEI G2800S**

---

**GSM Mobile Phone**

## **User Guide**

---

Copyright © Huawei Technologies Co., Ltd. 2011.  
All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

#### Trademarks and Permissions



**HUAWEI**, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, products, services, and company names mentioned are the property of their respective owners.

#### Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of the local network, and may not be activated or may be limited by local network operators or network service providers. Thus,

---

the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

#### **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

#### **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

---

## Table of Contents

<b>1 Getting to Know Your Phone.....</b>	<b>1</b>
Your Phone .....	1
Keys and Functions .....	2
Screen Icons.....	4
<b>2 Getting Started .....</b>	<b>5</b>
Installing the SIM Cards and the Battery.....	5
Installing a microSD Card.....	6
Charging the Battery.....	6
Phone Lock.....	7
PIN and PUK .....	7
Locking and Unlocking the Keypad.....	7
<b>3 Voice Services .....</b>	<b>8</b>
Making a Call.....	8
Answering a Call.....	9
<b>4 Text Input.....</b>	<b>10</b>
Changing the Text Input Mode.....	10
Entering a Letter.....	11
Entering a Digit.....	11
Entering a Symbol .....	11
<b>5 Messaging .....</b>	<b>11</b>
Sending a Text Message .....	11

---


<b>6 Phonebook</b> .....	<b>12</b>
Creating a Contact .....	12
Searching for a Contact .....	12
<b>7 Audio Player</b> .....	<b>12</b>
<b>8 FM Radio</b> .....	<b>13</b>
<b>9 Warnings and Precautions</b> .....	<b>14</b>

---

# 1 Getting to Know Your Phone

## Your Phone

The following figure shows the appearance of your phone and is provided for your reference only.

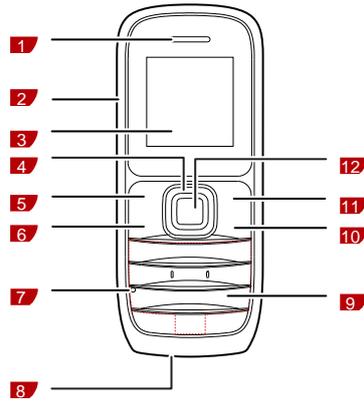

1	Earpiece	7	Microphone
2	Charger/Headset interface	8	Torch
3	Screen	9	Number keys
4	Navigation keys	10	End/Power key
5	Left soft key	11	Right soft key
6	Call/Answer key	12	Confirm key

## Keys and Functions

Press ...	To ...
	<ul style="list-style-type: none"> <li>• Make a call.</li> <li>• Answer an incoming call.</li> <li>• View call logs in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power the phone on or off (press and hold the key for about 3 seconds).</li> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> </ul>
	Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.
	<ul style="list-style-type: none"> <li>• Access the main menu in standby mode.</li> <li>• Confirm a selection.</li> </ul>

Press ...	To ...
	<p>Access the functions assigned to the navigation keys in standby mode.</p> <p>To customize the functions assigned to the navigation keys, select <b>Menu &gt; Settings &gt; Phone settings &gt; Shortcuts &gt; Dedicated key</b>.</p>
<b>0-9</b>	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call voicemail in standby mode (press and hold the <b>1</b> key for about 3 seconds).</li> <li>• Speed-dial phone numbers in standby mode (press and hold the <b>2-9</b> keys for about 3 seconds).</li> <li>• Select an option labeled with the corresponding number.</li> </ul>
<b>*</b>	<ul style="list-style-type: none"> <li>• Enter * (press the key once), + (press the key twice), <b>P</b> (press the key three times), and <b>W</b> (press the key four times) in standby mode.</li> <li>• Display the symbol list in editing mode.</li> <li>• Turn the torch on or off in standby mode (press and hold the key for about 3 seconds).</li> </ul>
<b>#</b>	<ul style="list-style-type: none"> <li>• Enter #.</li> <li>• Switch between text input methods in editing mode.</li> <li>• Lock the keypad in standby mode (press and hold the key for about 3 seconds).</li> </ul>

## Screen Icons

Icon	Indicates ...
	Signal strength.
	The alert type is <b>Ring</b> .
	The alert type is <b>Vibrate only</b> .
	The alert type is <b>Vibrate and ring</b> .
	The alert type is <b>Vibrate then ring</b> .
	The alert type is <b>Silent</b> .
	<b>Headset</b> profile activated.
	Missed calls.
	Call forwarding enabled.
	New text messages.
	Alarms activated.
	Keypad locked.
	Battery level.


---

## 2 Getting Started


### Installing the SIM Card and the Battery

When installing a SIM card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

Before removing the battery and the SIM card, ensure that your phone is powered off.

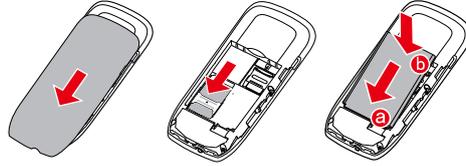

## Installing a microSD Card

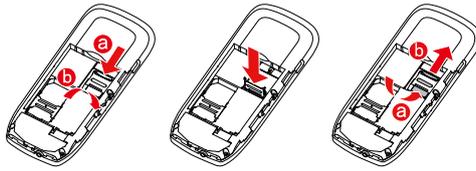

## Charging the Battery

1. Connect the charger to an AC power socket.
  2. Connect the charger to the phone's charger jack.
  3. Wait until the battery is fully charged.  
While the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.
-  When you charge a completely exhausted battery, the charging icon may appear several minutes later.
4. Disconnect the charger from the phone.
  5. Disconnect the charger from the AC power socket.

## Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. You can change the preset phone unlock code (**1122**) to any number of four to eight digits.

If you forget the phone unlock code, contact your service provider.

## PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

If you enter the incorrect PIN a specified number of times, the phone prompts you to enter the PUK.

If you enter the incorrect PUK a specified number of times, the SIM card will become permanently invalid. If this occurs, contact your service provider for a new SIM card.

## Locking and Unlocking the Keypad

To lock the keypad, press and hold **#** for about 3 seconds in standby mode. To unlock the keypad, press  (**Unlock**) then **\*** in quick succession.

If the **Auto keypad lock** function is enabled, the phone will lock the keypad automatically after being idle in standby mode for a pre-defined period.



When the keypad is locked, you can press  to answer a call or make an emergency call.

## 3 Voice Services

### Making a Call

1. In standby mode, enter a phone number.
    - To make an international call, press \* twice to enter the plus sign (+). Then enter the country code or region code, area code, and phone number.
    - To call an extension, enter the phone number, press \* three times to enter P, and enter the extension number.
  2. Press  to dial the number.
  3. Press  to end the call.
-  • You can also make a call from call logs, contacts, and messages.
- During a call, you can press  or  to adjust the in-call volume.

## Answering a Call

When there is an incoming call:

- Press  to answer the call.
- Press  to reject the call.
- Press  (**Reject**) to reject the call.

If the any key answer function is enabled, you can press any key

except  and  to answer a call.

---

## 4 Text Input

### Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Press **#** to switch between text input modes.

Indicator	Text Input Mode
<b>ABC</b> and <b>abc</b>	Multi-tap input modes
<b>123</b>	Number input mode



- Press  (**Clear**) once to delete the last character entered. Press and hold  (**Clear**) for about 3 seconds to delete all the characters.
- In any input mode, press **\*** to display the commonly used symbol list.
- In any input mode (except the "123" input mode), press **0** to enter a space. In "ABC" or "abc" input mode, press **0** twice to enter **o**.

### Entering a Letter

In "ABC" or "abc" input mode, press the key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter, and so on.

### Entering a Digit

In "123" input mode, simply press the number key labeled with the desired digit.

### Entering a Symbol

1. Press  to display the symbol list.

2. Press  to scroll to the desired symbol.

3. Press  to enter the desired symbol.

## 5 Messaging

### Sending a Text Message

1. Select **Menu** > **Messages** > **Write message**.
2. Write the message.
3. Press  and enter the recipient's phone number or add a recipient from **Contacts** or **Call logs**.

- 
4. Press  to send the message.

## 6 Phonebook

### Creating a Contact

1. Select **Menu > Phonebook > Add new contact**.
2. Edit the contact information.
3. Press  to save the contact.

### Searching for a Contact

1. Select **Menu > Phonebook > Contacts**.
2. Enter the first letter of the contact name in the search bar. Contacts who have names that start with this letter will be displayed.

## 7 Audio Player

1. Select **Menu > Audio player**.
2. Select an audio clip.
3. Press  or  to play the audio clip. When the audio clip is being played:

- 
- Press  or  to pause or continue.
  - Press  or  to adjust the volume.
  - Press  or  to switch songs.

## 8 FM Radio

Your phone comes with a built-in FM radio antenna. You can listen to the FM radio without a headset.

1. Select **Menu > Fun & Games > FM radio** to access the **FM radio** screen.

2. Press  (**Options**) and select **Power on/off** to turn the FM radio on or off.

3. On the **FM radio** screen, you can:

- Press  or  to adjust the volume.
- Press  or  to switch between channels.
- Press  (**Options**) for options such as **Power on/off**, **Manul input**, **Channel list**, Volume, and **Preset auto search**.

---

## 9 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

### Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

### Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your

---

vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

#### Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.

- 
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
  - Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

#### Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.

- 
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
  - Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

#### Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

#### Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

#### Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

#### Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.

- 
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
  - Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
  - Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
  - Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
  - If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
  - If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
  - If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.

- 
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
  - Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

#### Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- 
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
  - Before you clean or maintain the device, power off the device and disconnect it from the charger.
  - Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
  - Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

#### Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

#### Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing

---

Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.901 W/kg, and when properly worn on the body is 0.552 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is Z.ZZZ W/kg, and when properly worn on the body is S.SSS W/kg.

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

---

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

#### EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

---

For the declaration of conformity, visit the Web site  
[www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).



Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: 01 NO.: XXXXXX