

## UT-2500 Universal Transmitter User's Manual

### **Introduction:**

The UT-2500 transmitter is compatible with any 2500 series receiver. The UT-2500 has several methods of activation. First, it has a push button that can be used as a panic button or door bell. Second, when the magnet (included) is moved away, the transmitter will also be activated. Third, it has terminals for a normally open (N/O) or normally closed (N/C) input. These inputs can be used with any detector contacts. When the transmitter is activated, it will send a signal to the receiver which will sound one of four different tones (Classical, Westminster Chime, Ding Dong, or Whistle) for a few seconds, or activate the relay outputs.

### **Operation:**

1. Open the bottom with a screw driver to reveal the battery connectors, dip switches and input terminals.
2. Connect a CR2 lithium battery to the transmitter
3. Set the dip switches 1-8 on the transmitter to match the receiver.
4. Set dip switches 9 and 10 to control the desired zone, tune, and relay output.
5. Mount the transmitter on any wall using the mounting bracket.
6. Mount the magnet on left side or right side of the transmitter within 2cm distance.

### **Warning:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.