

Settings & Programming

Press and hold the **MRK** and **SEN** buttons to access Programming. To exit Programming, simply wait a few seconds without pressing a button. The unit will display **Completed** to confirm your selections.

Press MRK to go from one category to the next		Press VOLUME + or - to change your setting within a category
User Mode	Advanced* Novice	Access and customize all Settings and Programming Access and customize units and display color, (all other Settings are set to factory defaults) <i>NOTE: Switch to advanced mode to view all settings</i>
Pilot	Scanning* Full Word	Scanning Bar with Full Word Full Word: AutoScan, Auto NoX, or Highway
Display Color	Blue*/Green/Red/Amber	Set color to match your vehicle's dash display
Speed Display	On* Off	Displays current speed Displays battery voltage
Speed Mute	Off / 20-160 mph 20 mph*	Offers double beep alert tones below specified speed
Over Speed	Off / 20-160 mph 70 mph*	Reminds you when you exceed a specified speed
Signal Strength Meter	Standard* Tech Threat Basic	Single band with bar graph of signal strength Single band with numeric frequency Multiple bands with bar graph of signal strengths Basic messages replace bands: Caution (if traveling below Speed Mute limit) Slow Down (if traveling above Speed Mute limit)
Tones	Standard* Mild	Standard Beltronics alert tones Mild alert tones
AutoMute	On* / Off	Automatically reduces audio during alert
AutoLock	On* / Off	Automatically stores and locks out false alarms
Units	English*/Metric	Units for distance and speed
Voice	On* / Off	Voice announcements
GPS Filter	On* / Off	Enables GPS-powered features
AutoPower	Off 1 Hour 2 Hours 4 Hours* 8 Hour	Power turns on or off depending on your vehicle's ignition type (constant power or switched) Powers off automatically after 1 hour Powers off automatically after 2 hours Powers off automatically after 4 hours Powers off automatically after 8 hours <i>NOTE: If AutoPower is on, the display screen goes blank after 30 minutes to save screen life. Display screen will turn on automatically after you reach 10 MPH</i>
Bands	Default* Modified	Default settings for North America Customize the bands you want to monitor
Press SEN to go from one Band category to the next		Press VOLUME + or - to change your setting within a category
X Band	On* / Off	Automatically rejects traffic flow sensors-monitoring false alarms
K Band	On* / Off	
Ka Band	On* / Off	
Ka-POP	On / Off *	
Laser	On* / Off	
TSR	On* / Off	Automatically rejects traffic flow sensors-monitoring false alarms
Markers	Default* Modified	Default settings Customize the types of locations you want to be alerted to
Press SEN to go from one Marker category to the next		Press VOLUME + or - to change your setting within a category
Other	On* / Off	Other location
Redlight	On* / Off	Red light camera
Red & Speed	On* / Off	Red light & speed camera
Speed Cam	On* / Off	Speed camera
Speed Trp	On* / Off	Speed trap
Air Patrol	On / Off *	Air patrol

Clear Locations	Marked Lockouts Defender Format	Clear all user Marked locations. Press SEN button to confirm Clear all lockouts. Press SEN button to confirm Clear all Defender data. Press SEN button to confirm Clear Defender database, all markers, and all lockouts. Press SEN button to confirm
-----------------	--	---

***Default Setting**


FCC NOTE: Modifications not expressly approved by the manufacturer could void the user's FCC granted authority to operate the equipment.

FCC ID: QL4G7M5.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Using GT-7

1. Plug small end of SmartCord into modular jack on GT-7 and large end of SmartCord into your car's lighter/accessory socket.
2. GT-7 should power on automatically. If not, press the device's power button.

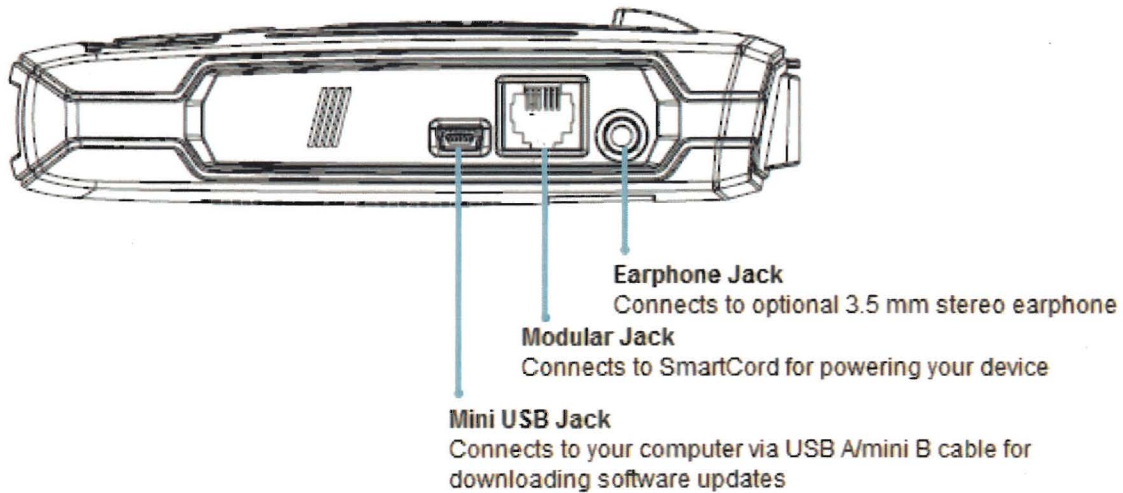

Using SmartCord

- Mute Button: Press to mute an alert; press three times to lock out a false alert; press twice while receiving a locked-out alert to unlock.
- Alert Light: Blinks orange when receiving an alert.
- Power Light: Lights blue when receiving power.

