



- The Bluetooth-enabled printer should be shown on the right pane.

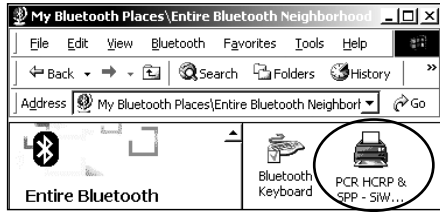

- Double-click on the Bluetooth-enabled printer icon. If this is the first time your Bluetooth-enabled computer connects to the Bluetooth-enabled printer, click OK in the below dialog box to install the printer drivers.

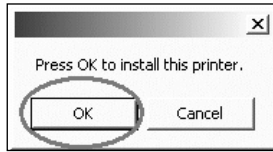

- Open the file to be printed.


From the file launched application, select File and then Print.

From the Print dialog box, click the pull-down menu of Name, select EPSON Stylus COLOR 480SXU (copy 2) printer from the Print dialog box and click OK to print the file. Your printer name maybe differs from this example, please select the right printer.


- While the printing job is running, you can find that the Bluetooth-enabled printer icon and the Bluetooth icon resides on the system tray are changed to green indicating CONNECTED MODE. After the printing job is finished, these two icons will go back to READY MODE.

6 Verifying The Bluetooth-Enabled Printer Installation

Click Windows Start menu -> Settings -> Printers, you can find there are two new printer icons added on the Printers Folder. The EPSON Stylus COLOR 480SXU (Copy 2) printer allows you to print documents by using wireless Bluetooth technology; however, the EPSON Stylus COLOR 480SXU printer allows you to print documents without using Bluetooth technology. You may rename the printer name to your favorite names.

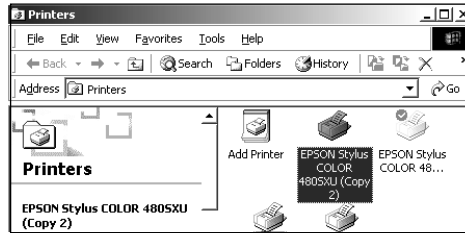

Right-click mouse button on the EPSON Stylus COLOR 480SXU (copy 2) printer icon and select Properties from the short-cut menu. From the Properties dialog box, click Ports tab, and make sure the check box of Bluetooth port is checked. Click OK to close the dialog box.

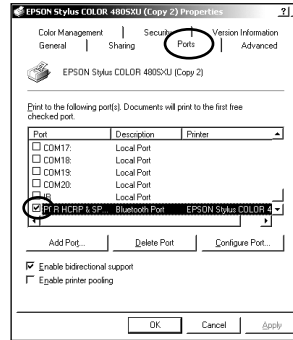

7 Compatible Printer List

The following Printer models are a partial supported printers and the list will be updated continually.

Note: Supporting a specific printer model in most cases will support all printer models which belong to the same printer family.

Printer Manufacturer	Printer Model
HP	DeskJet 450, DeskJet 916c, DeskJet 920cvr, DeskJet 920cxi, DeskJet 930c, DeskJet 930cm, DeskJet 932c, DeskJet 934c, DeskJet 935c, DeskJet 940c, DeskJet 940cvr, DeskJet 940cw, DeskJet 940cxi, DeskJet 948c, DeskJet 950c, DeskJet 952c, DeskJet 955c, DeskJet 957c, DeskJet 959c, DeskJet 960c, DeskJet 960cse, DeskJet 960cxi, DeskJet 970, DeskJet 975, DeskJet 980cxi, DeskJet 990cm, DeskJet 990cse, DeskJet 995c, DeskJet 1120, DeskJet 1125, DeskJet 1220, DeskJet 3320, DeskJet 3323, DeskJet 3325, DeskJet 3810, DeskJet 3816, DeskJet 3820, DeskJet 3822, DeskJet 5550, DeskJet 5551, DeskJet 6122, DeskJet 6127, DeskJet 9300, PhotoSmart P1000, PhotoSmart P1100, PhotoSmart P1115, PhotoSmart P1215, PhotoSmart P1218, PhotoSmart P1315, PhotoSmart 7150, PhotoSmart 7345, PhotoSmart 7350, PhotoSmart 7550, PhotoSmart 130 Business Inkjet 2200, Business Inkjet 2230, Business Inkjet 2250, Business Inkjet 2280, OfficeJet D, OfficeJet K, OfficeJet V, OfficeJet G, OfficeJet 5100 series, OfficeJet 6100 series, OfficeJet 7100 series, PSC 750, PSC 900, PSC 2100, PSC 2150, PSC 2200, LaserJet 4, LaserJet 5, LaserJet 6L, LaserJet 6P, LaserJet1000, LaserJet1005, LaserJet1100, LaserJet1150, LaserJet1200, LaserJet1300, LaserJet2100, LaserJet3200
EPSON	DeskJet Stylus C40s, DeskJet Stylus C40ux, DeskJet Stylus C42ux, DeskJet Stylus C60, DeskJet Stylus C61, DeskJet Stylus C62, DeskJet Stylus C80, DeskJet Stylus C80N, DeskJet Stylus C80WN, DeskJet Stylus C82, DeskJet Stylus C82N, DeskJet Stylus 480, DeskJet Stylus 480SX, DeskJet Stylus 480SXU, DeskJet Stylus 850, DeskJet Stylus 850N, DeskJet Stylus 850Ne, LaserJet EPL-5900, LaserJet EPL-6100
Canon	DeskJet S520, DeskJet S200, DeskJet S9000, DeskJet S100, DeskJet S300
Minolta QMS	LaserJet PagePro1250

This document is subject to change without notice.