


Front 黑色

RF-666



Wireless Trackball Keyboard

USER'S MANUAL

System requirements

- IBM or compatible PC
- Microsoft Windows Operating System
- Performance-oriented processor or above
- One available USB port

OS support

- Windows VISTA
- Windows XP
- Windows 2000/NT
- Windows ME

Introduction

Thank you for your patronage of purchases our RF-666 Wireless Trackball Keyboard. For your own safety, please read this manual thoroughly before using this product. After you have read this manual, please keep it in place for reference when necessary.

Contents in this package

The following items are included in the package. Please make sure all items are accounted for as you open the package. If there was any item missing or damaged, please contact the reseller where the product was purchased or our support center.

- Wireless Keyboard x 1
- USB 2.0/4-pin receiver x 1
- Installation CD x 1
- Manual x 1
- AA/Alkaline batteries x 2

Warning

Zippy Technology Corporation and its respective distributors and resellers are not responsible for any malfunction, damage or personal injury incurred by the user's personal computer or misuse of this product.

Any malfunction, damage or personal injury caused by the malfunctioning or damage of the user's personal computer or misuse of this product.

Any attempt to dismantle, change or modify this product in any manner.

Warning

Please do not use this product in any wet, or dry environment. Failure to do so may shorten the life of this product and they cause body harm.

Please keep this product as far away from Radio Frequency interference areas as possible.

This is not an outdoor product. Exposing this product to the elements may cause damage to the product and body harm to its users.

Please do not use pesticides, herbicide or other based solution to clean this product.

Warning information

This product is covered by a One-Year Manufacturer's Warranty, starting from the date of purchase. The warranty covers for those repair in accordance with the contents stated herein but does not cover user and tear and any malfunction or damages as result of improper usage as stated in this manual.

Specifications

- Product**
 - Dimensions: 355 x 167 x 37mm
 - Weight: 575g (with Battery)
 - Key Number: 86/87/88 Keys (By language)
 - Battery: 2 x AA batteries
 - Battery Life: 2 Month (based on average usage)
- ID unique ID for each keyboard**
 - Radio Frequency: 2.4 GHz
 - Hot Keys: Back skip, Next skip, Play/Pause, Stop, Mute, Volume up, Volume down, WIN+
- Mouse**
 - Trackball mouse
 - Resolution: 400, 800, 1200dpi (adjustable)
 - Radio Frequency: 2.4 GHz
- Package Contents**
 - Dimensions: 414x156
 - Weight: 103g
 - Interface: USB v1.1

Installation Procedure

A. Setting up the Dongle Receiver

- Plug the dongle receiver (FIG. 2) into an available USB port
- Wait for operating system to install drivers for the dongle receiver, keyboard and mouse

B. Setting up the Keyboard and Mouse

- Open the keyboard battery compartment cover and insert the two pieces of AA Alkaline batteries. Make sure they are properly installed (FIG. 1)
- Replace the keyboard's battery compartment cover, and switch the ON/OFF button to "ON" position.
- Unpack the keyboard and mouse have found in the factory and it can be used after inserting batteries. If the keyboard and mouse cannot be recognized from system, please follow steps below.

- Press the [E] button of receiver and the LED light will start to blink.
- Press the RESET button of keyboard and the LED light will stop blinking.
- If the keyboard and mouse cannot be connected after setup, please repeat the steps 4-6 to reset the ID button.

Battery Low

- Built-in LED light for low power indicator. Low battery is indicated by the illumination of the LED light, which is located on the top-left. Please replace the battery when the LED light is up.
- When the keyboard is entered sleep mode, please press any keyboard button or mouse button to wake it up.
- We recommend using alkaline batteries for the keyboard.
- You may need to reset the keyboard connection status after replacing new batteries for the keyboard.

Keyboard






FIG. 1

Back 黑色

Placement




FIG. 2

Hotkey Functions

There are 8 hotkey buttons for quick access under the Windows operating system. Please refer to the following section on their functions.




FIG. 3

Home page | Press once to start Internet browser.

Volume down | Press once to decrease the volume.

Volume up | Press once to increase the volume.

Mute | Press once to mute sound from a CD or a video file, and press once again to resume sound.

Stop | Press once to stop playing the CD.

Back Skip | Press once to skip back to previous track. Press and hold to search for a desired position at high-speed backward, and release the button to resume normal play.

Play/Pause | Press once to start playing the CD, and press once again to stop playing the CD temporarily, and press once again to resume playing.

Next Skip | Press once to skip to next track. Press and hold to search for a desired position at high-speed forward, and release the button to resume normal play.

Media Center Edition Features

The RF-666 Keyboard embedded Microsoft Media Center function. Media Center delivers a powerful and familiar way to enjoy all of your digital entertainment—photos, music, TV, movies, home videos, radio, and a world of applications and services whether you're sitting in front of your Windows desktop or across the room with a remote control.

MCC: Press once to launch the Media Center.

My TV: Offers a simple way to browse, switch, and record TV, even on multiple channels at the same time.

My Music: Offers access to your personal and online music collection.

My Pictures: Provides a fun new way to instantly enjoy and share your digital photos.

My Video: Offers an alternate view of your My Video folder in Windows, organizing files and folders by date or by name and displaying a thumbnail image for each clip.

Record TV: Record what you're watching while you're watching it, or record something that is scheduled.

DVD: Play DVD movies on your Media Center PC.

Fast Forward: Press once to play scenes fast forward.

Fast Rewind: Press once to play video fast backward.

Complex key function


The Blue printed indicator can be functioned by holding the "Fn" key and press the blue operation key. Please refer to the following section on Fast Functions.

Complex Key	Instruction	Complex Key	Instruction
	MCC		My TV
	My TV		My Music
	My Music		My Pictures
	My Home		Record TV
	My Pictures		DVD
	Mouse Button 400 dpi		Mouse Button 1000 dpi
	Mouse Button 800 dpi		

Number Lock, Scroll Lock, Cap Lock indication software

The CD in the package provide the Number Lock, Scroll Lock, Cap Lock indicated function. The software will show the Number Lock, Cap Lock and Scroll lock information on the screen when it was installed to the system. If the installation does not show automatically, please open the computer -> [CD-ROM], and double click "setup.exe" icon.

After install keyboard status indication software, you will find 3 small icons in your task bar as follows:



When you click up the Number pad, cap or scroll the light will show green color, otherwise it will show the gray color.

Uninstall the software

Right click the Slim Multimedia icon in the taskbar, Left click [Uninstall Multimedia] from the menu, then the Slim Multimedia icon will disappear from the taskbar.

Click Start -> Program -> [RF Status] -> uninstall, and uninstall according to the instructions on the screen.

FCC Statement on CLASS B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV technician for help.

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

(1) This device may not cause harmful interference and

(2) This device must accept any interference received, including interference that may cause undesired operation

折法: 左右S折, 封面朝外

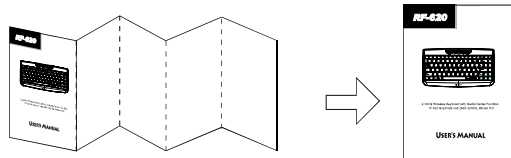

- 注意:
- 須正反面(雙面)印刷,
 - 印刷面不可產生影像模糊或有餘影
 - 裁切邊不可有裁切不良現象
 - 交貨時, 需左右S折, 封面需朝正面

				日期	2008/06/16	比例	1:1	單位	MM	機種	RF666	尺寸	(L)525.0x(W)148.0mm(未折含)	
				設計	廖勤演	公差	±1.0mm	版次	1			料號	NA	
日期	設計	修改	內容敘述	確認	廖路紅	材質	70P模造紙							