

CL-3361
USER' S MANUAL

Contents

Prior To Use 1

Congratulations	1
Safety Precautions	1
Unpacking	3
Phone Layout and Keys Function	4
Keys Description	6
LCD Window Icons Description	8
Connecting Lines	9
Installing Batteries	9
Charging Handset	10
Using Handset Carrying Clip	11
Turning Handset On/Off	12

Basic Functions 13

Making a call	13
Receiving a call	14
Muting the Microphone	15
Adjusting Voice Volume	15
Ringer Setting	16
Last Number Redial	17
CID Book	19
Key Lock	21
Selecting a Language	21
Auto Answer	22
HS Name	23
Range Alarm	23
Paging	24
Dial Mode	24
Handsfree	25
Flash Signal	25

Contents


Advanced Functions	26	Feature List	52
Menu Navigation	26	Troubleshooting	54
Menu Map	27	Answering System Solutions	55
Phone Book	28	Technical Specifications	56
One-Touch Memories	31		
BS Settings	32		
HS Settings	34		
Registration	38		
Calling with more than one Handset	39		
Caller ID on call waiting	41		
TAM Functions	42		
Announcement	42		
Message	45		
TAM Setting	47		
Remote Control	51		



If you subscribe to a DSL service

Please attach a noise filter (contact your DSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:

- Noise is heard during conversations.
- Caller ID features do not function properly.

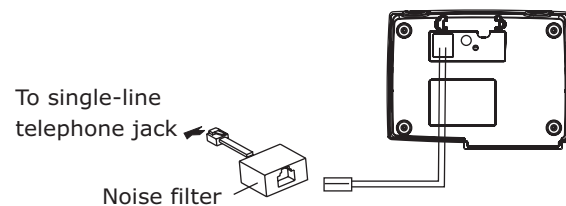

Technical Specifications

Frequency Range	1.91~1.93GHz
Channels	120 Duplex channels
Carrier Power	<250mW
Modulation	GFSK
Frequency Stability	< \pm 50 KHz
Charging time	15 hours
Ambient temperature	Normal: 15°C ~ 35°C, Extreme: 0°C ~ 40°C
Humidity	0%~90%
Weight (grams)	Base: 143.4; Handset: 128.2
Dimensions (mm)	Base: 130 x 100 x 68; Handset: 168 x 58 x 37
Power Supply	Base input: 7.5V, 300mA; Handset input: Ni-MH: 1.2V x 3, 600mA

Prior To Use

Congratulations

on purchasing our high quality product.

Please read the manual carefully to find out all features and how your telephone works, so you can get the best out of your new phone.

Safety Precautions

To reduce the risk of electrical shock and injury, please follow these basic safety precautions before using the phone.

1. Carefully read and observe the instructions in this manual.
2. Follow all warnings marked on the unit.
3. When cleaning, unplug the phone first, then use a damp cloth to wipe. Do not use liquid or aerosol cleaners.
4. Do not place objects on the line cord that may cause damage.
5. Do not use this phone in wet surroundings or environments where there is a risk of explosion.
6. Avoid spilling of any liquid on the phone.

- Unplug this phone from the wall outlet and refer servicing to qualified service personnel only.
- Pay attention to the polarity of the batteries, insert the rechargeable batteries in accordance with polarity symbols (this instruction is found in the installing batteries section.)
- Use only **the batteries indicated in the User's Manual** - Lexel Battery (Shenzhen) company Ltd., Type number LH060-3AH45 Ni-MH Cylindrical Cell; (3X1.2V AAA size/600mAh Ni-MH) rechargeable battery.

CAUTION

Risk of explosion if battery is replaced by an Incorrect type.

- Do not mix exhausted batteries with full batteries. Exhausted batteries shall not be disposed of with the usual household waste or in a fire.
- If you are sure you will not be going to use the handset over a month, please take out the batteries from the battery compartment.
- Use only **the power supply indicated in the User's Manual** - Tenpao brand; model number **G090030D25** power supply.
- Keep the phone out of the reach of children.
- Use the phone only in the described manner.
- Stop using the phone if it becomes damaged.

Answering System Solutions

The system always plays Announce2.

- Answering system memory may be full. Erase some messages.**

Incoming messages are incomplete.


- Answering system memory is full. Erase some messages.**

Troubleshooting

Symptom	Check & Remedy
No operation	<ul style="list-style-type: none"> • Check that the power adapter is properly connected. • Check that the telephone line cord is properly connected. • Check that the handset batteries in full power. • Check that the handset batteries are installed properly.
No dial tone	<ul style="list-style-type: none"> • Check that the telephone line cord is properly connected. • Check that the power adapter is properly connected.
Nothing appears on the display	<ul style="list-style-type: none"> • Check that the handset batteries are installed properly. • Check that the handset batteries in full power. • Check that the handset is on.
Handset seems to have very short battery life	<ul style="list-style-type: none"> • Check the charge contacts. • Consistently short battery life may indicate that replacement of the batteries is necessary. • Make sure the right batteries be used.
Caller's number is not displayed	<ul style="list-style-type: none"> • Make sure you have subscribed to a Caller ID service via your network provider. • The caller may have withheld their details. • Let the phone ring a couple of times as there may be a delay in receiving the Caller ID information.

■ Unpacking


Once you have unpacked your phone, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call your dealer.

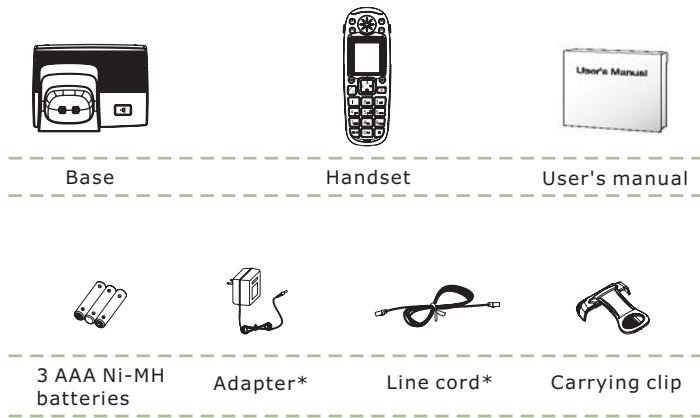

*The shape of the plugs can vary according to each country's specification.

Phone Layout and Keys Function

Handset

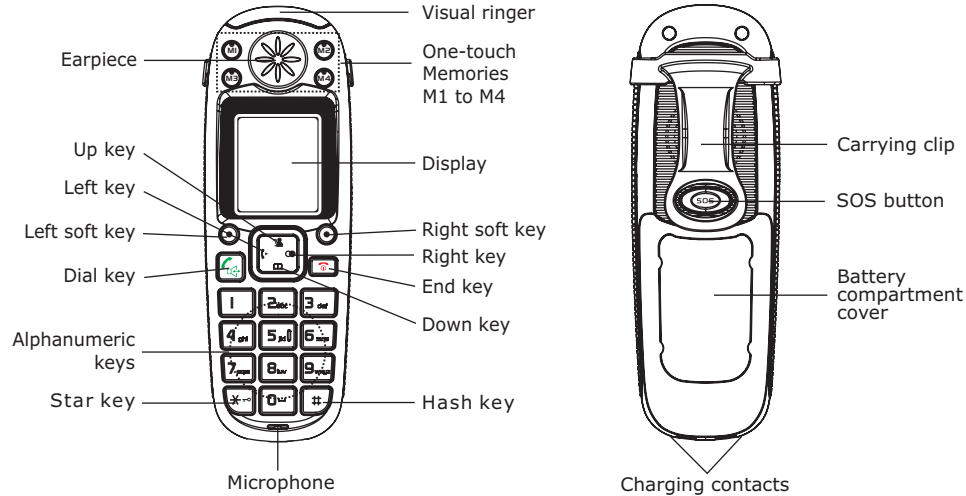

Feature List (continued)

Note:

- The caller ID feature is only available if you subscribe to a Caller Display service from your network provider.

TAM Functions


- **Digital Answering System**
- **Menu Driven Interface**
- **Maximum 15 Minutes of Recording Time which includes Incoming Messages**
- **Toll Saver Function**
- **Multiple Languages**
- **Remote control**
- **Answer on/off selection**
- **New message alert**

Feature List

- 1.9GHz DECT technology
 - Large 2.0" LCD (128 x 64 dots matrix display)
 - Up to 5 handsets for optional for one base
 - Up to 4 bases for optional for one handset
 - LCD contrast adjustable
 - Phonebook with up to 50 groups
 - 10 VIP numbers setting from phonebook
 - Redial book with up to 10 entries
 - 5 melodic and 5 monophonic ring tones and volume selectable (5 levels+off)
 - Wall mounting
 - Shaker and visual ringer
 - 5 one-touch memory speed dial buttons
 - Key tone ON/OFF selectable
 - Full handsfree speakerphone
 - Internal call
 - Call transfer
 - 3-way conference call
 - Receiver/Speaker volume adjustable
 - Mute
 - PIN protection
 - Predialing
 - Redial, Flash, Pause
 - DTMF/PULSE dialing mode selectable
 - FLASH time selectable
 - Call duration display
 - Real time clock (set time)
 - Keypad lock
 - Multiple languages selectable
 - Auto answer ON/OFF selectable
 - Alarm clock include snooze option
 - Handset Name setting
 - Backlight on LCD and keypad
- Caller ID**
- FSK and DTMF dual system Caller ID
 - Caller ID / Call Waiting
 - Caller ID list with up to 40 entries
 - Incoming calls can be called back/added to phonebook/deleted
 - New call indicator
 - Message waiting

Phone Layout and Keys Function (continued)

Base

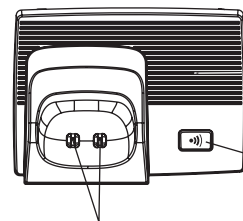


Charge pins

Charge indicator lights steadily while the handset is charging.

Page button

Bottom View

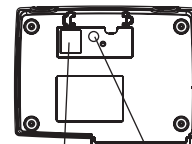

Phone Line Jack

Power Jack

■ Keys Description



Dial key

Make/Answer a call.



End key

End a call.

Long press to activate power on/off, as described in page 12.

Navigation key:

Up key

Scroll up through lists and menu options.

Increase the earpiece/speakerphone volume during a call.

Enter the CID book, as described in page 19.

Down key

Scroll down through lists and menu options.

Decrease the earpiece/speakerphone volume during a call.

Enter the Phonebook, as described in page 29.

Left key

Set up an internal call to another handset.

Transfer an incoming call to another handset.

Set up a conference call with an external line and an internal handset.

■ Remote Control







You can access many features of your answering machine remotely from any touch tone telephone. A four-digit security code (remote code) is required to access the system and the factory default one is 0000. To enter remote access:






1. Dial your telephone number from any touch tone telephone.
2. When the Announce1/Announce2 starts to play, you may enter the remote access mode by inputting the remote code.
3. After you enter the remote code, the system will play the menu of commands. You can then follow the commands to operate.


Note:

- If you enter the remote code incorrectly the answering machine will announce you to enter the code again. You are then given two more attempts to enter the correct remote code before the line is disconnected.

Remote access commands

Button	Function
	Play the main menu
	Play the new messages
	Play the saved messages
	Delete all the messages
	Switch the answering machine on/off
	Record Announce1/2 (Depends your setting)

 When you press  or  key to play back the messages, press  to replay current message, press  to stop, press  to delete current message.



After you record the Announce1/Announce2, press the  key to finish. The system will play the announcement you have recorded.

Note:

- You had better stop playing message before hanging up.

 
TAM Reset

This function allows you to reset the TAM settings to the factory default.

1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  key to choose the **TAM Default**, press the **Select** soft key. You will be prompted to enter the PIN code.
4. Enter the PIN code (the default one is 0000), then press the **Reset** soft key. If the PIN code is validated all TAM settings will return to the factory default, otherwise a warning tone will be heard and the settings will remain.

Result: After resetting, the TAM will reset and return to Standby mode.

■ Keys Description (continued)



Right key

Enter the redial book, as described in page 17.
Insert a pause when pre-dialing a number.

Left/Right soft key

Perform the functions indicated by the text immediately over it (on the bottom line of the display) which changes time by time.


Star key

Press and hold to turn on/off keypad lock function.
Set up a conference call, as described in page 40.

One touch memories

You can store up to 5 numbers in One touch memories (M1 to M4, SOS)

O key

In Standby mode press and hold this key until the  icon appears to activate the shaker and visual ringer function. Press and hold this key again until the icon disappear to deactivate it.

LCD Window Icons Description



New Call

Indicates you have missed one or more calls.



MSG Waiting

Indicates you have one or more voice messages.



Off Hook

Indicates the line is engaged.



Hands-free

Indicates the handsfree function is enabled.



Battery Icon

Indicates battery charge level.



Shaker Icon

Indicates the shaker and visual ringer is enabled.



Signal Icon

Indicates the current signal strength. If the handset is too far from the base, this icon will blink on the LCD.



Alarm Icon

This icon appears when you set an alarm to ring at a specified time.



Keypad Lock

This icon appears when the keypad is locked.






ICM Icon

This icon appears when you have new message(s).



Voice Prompt Language

You are able to select the language used to play the voice prompt messages.

1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  key repeatedly to choose **TAM Language**, press the **Select** key.
4. The languages will be displayed. Use the  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press the **Select** key to choose the required language and you will hear a confirm beep.




Remote Code

To operate your answering machine remotely from another phone you need to enter the remote code. For security reasons you had better change this code (the default one is 0000). For more details please refer to par. **Remote Control**.

1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  key repeatedly to choose **Remote Code**, press the **Select** key.
4. The LCD shows the current remote code. Enter the new code you want to set, press the **OK** key.

Answer mode Select

The answering machine operates in two modes, "answer and record (Announce1)" or "answer only (Announce2)". Each mode comes with a pre-set announcement that is played to your callers. You can choose the desired mode as follows:




1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  key repeatedly to choose **ANNC Select**, press the **Select** key.
4. Use the  key to choose **Announce1** or **Announce2**, press the **Select** key.

Notes:

- If you choose Announce2, the caller hears your announcement but will not be able to leave a message.
- The Announce2 is also played when your answering machine becomes full.


Set the ring delay

The ring delay is the number of rings after the answering machine takes an incoming call and plays your announcement. You can select from 2 to 6 rings or Toll Saver mode. If you select **Toll Saver**, when there are new messages waiting to be played back, the answering machine will respond after 3 rings, otherwise it will respond after 6 rings.

1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  key repeatedly to choose **Set Ring**, press the **Select** key.
4. Use the  key to choose the answer rings (**2 Rings ~ 6 Rings** or **Toll Saver**), press the **Select** key.

Connecting Lines


1. Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet.
2. Connect the modular end of the AC power adapter to the power jack of the base, then plug the AC adapter into a standard AC wall outlet.

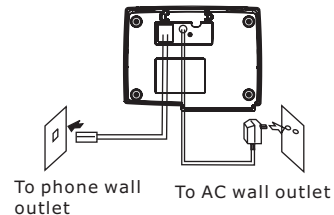

Installing Batteries

The rechargeable Ni-MH batteries (AAA size) come with your phone. Install the battery before using your phone.

1. Slide the battery cover in the direction of the arrow and pull it out.
2. Insert new batteries as indicated, matching correct polarity (+,-).

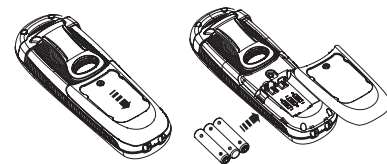

Note:

- Reversing the orientation may damage the handset.