

■ Installing Battery (continued)

3. To replace the battery cover, slide the cover up until it snaps in place.



Notes:

- The batteries need to be replaced if they do not recover their full storage capacity after recharging.
- When replacing the batteries, always use good quality Ni-MH AAA re-chargeable batteries. Never use other battery.

■ Charging Handset

! Important Note: Before initial operation, **YOU SHOULD FULLY CHARGE THE HANDSET** for about **14-16** hours.

To charge the handset, place it on the base.



Result: When you place the handset on the base, the handset automatically turns on and the **Charge** indicator lights on during the charge.



■ TAM Setting



TAM On/Off

You are able to switch the answering machine on or off.


1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press **Select** key again to choose **TAM On/Off**.
4. Use the  key to choose **On** or **Off**, press the **Select** key.

TAM Alert

A tone will sound when a new message is received. You are able to switch the tone on or off.

1. Press the **TAM** soft key in Standby mode.
2. Press the  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the Down key to choose **TAM Alert**, press **Select** key.
4. Use the  key to choose **On** or **Off**, press the **Select** key.

Delete all the messages


1. Press the **TAM** soft key in Standby mode.
2. Press the **Down** key to choose **Message**, use the **Select** key to confirm.
3. Press the  key repeatedly to choose **Delete All**, press the **Select** key to confirm.
4. The LCD will show **Confirm ?**. Press the **OK** key to delete all the messages or press the **Cancel** key to exit.

Note:


- Up to 15 minutes messages can be recorded.

Record the memo

You can use your phone to record memo messages (each can be up to 3 minutes) for another user of your phone. The memo can be played back as a message.

1. Press the **TAM** soft key in Standby mode.
2. Press the **Down** key to choose **Message**, use the **Select** key to confirm.
3. Press the  key repeatedly to choose **Memo Record**, press the **Select** key to confirm.
4. You can record your message after a tone. Recording will stop automatically after 3 minutes. You can also confirm and end the recording by pressing the **OK** key. During recording the LCD shows "**Recording...**".

Note:

 
- If someone leaves you a memo, the  icon will appear in the standby mode on the LCD.

Using Handset Carrying Clip

The supplied handset carrying clip allows you to conveniently carry the handset with you. It clips easily to your belt, waist band, or shirt pocket.


If you want to remove the carrying clip:


Insert a screw driver along the edge of one of its arms and release the clip. Then lift it off.

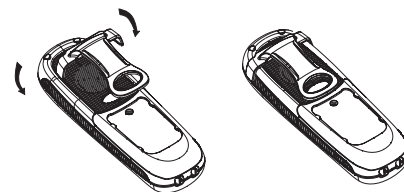

■ Turning Handset On/Off


If the handset is in power off mode, when you place the handset on the base, it automatically turns on. To turn the handset on or off in Standby mode, follow these steps:

 1. To turn on the handset when it's off, press and hold the  key until you switch the display on. On power up, the handset will enter subscription mode and search for a registered base. A message as shown below will be displayed to the user, and the signal icon will flash.



Note:

- *If the handset is successful in finding a base, the handset will enter the Standby mode, the display will show handset number and the handset name (if you have one saved as described on page 23), signal icon, battery icon and current time. If the handset is not successful in finding a base, the handset will behave according to the **Out Of Range** condition.*

2. To turn the handset off, keep the  key pressed until the display turns off.

Note:

- *Nothing will appear on the LCD when battery power is very low. **YOU SHOULD FULLY CHARGE THE HANDSET BEFORE USING.***

 
■ Message

The feature allows you to leave a message to the owner who is not at home. When a call is received in answer-record mode, the machine will play Announce1, and then performs message recording. The process is as follows:


After N times ringing, the phone enters answer-record mode automatically and starts to play Announce1. The caller can start to record after a tone.

Play New/Saved Messages

1. Press the **TAM** soft key in Standby mode.
2. Press the **Down** key to choose **Message**, use the **Select** key to confirm.
3. Press the **Select** key again to choose **New MSG** or press the **Down** key to choose **Saved MSG**, press the **Select** key to confirm.

4. The phone will announce "**You have N new message(s)**" or "**You have N saved message(s)**". The relevant messages will be played one by one. During the process the **In use** indicator will blink. You can use the  key to delete the current message or the **Back** soft key to stop the playing and exit.

Note:


- *The messages are played through the handset speakerphone as default. If you want to switch to handset receiver, press the  key.*

Play Announce1/Announce2

You can play the current Announce1/2.


1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Announce**.
3. Press **Select** soft key to choose **Announce1** or press the **Down** key to choose **Announce2**, then press the **Select** key to confirm.
4. Press the **Select** soft key to choose **Playback**.
5. The current Announce1/2 will be played. During the process you can use the **Back** soft key to stop and exit.


Restore Announce1/Announce2

1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Announce**.
3. Press **Select** soft key to choose **Announce1** or press the **Down** key to choose **Announce2**, then press the **Select** key to confirm.
4. Press the  key repeatedly to choose **Default**, press the **Select** key to confirm.
5. The LCD will show **Confirm ?**. Press the **Select** key to restore the default Announce1 /Announce2 or press the **Back** key to cancel.

Basic Functions

Making a Call


1. Pick up the handset and press the  key.

Result: The  icon appears on the LCD.

2. Dial a telephone number.

Note:

- You can store up to 10 telephone numbers in memory for automatic dialing.

3. To end the call, either press the  key or replace the handset on the base.

Note:


- To make a call to the last number you dialed, use the **Redial** feature. For details, see page 17.

You can enter the desired phone number in Standby mode, which allows you to make corrections before dialing. Follow these steps:


1. Enter a telephone number (up to 32 digits). Check it. You can also use the **Right** key to insert a pause.



Note:

- If you make a mistake while entering a number, press the **Erase** soft key to clear the last digit.

2. When the number appears correctly, press the  key.





■ Receiving a Call

When a call is received, the **In use** indicator on the base will blink. The **New Call** information will appear, too. If the caller can be identified, the caller's phone number is displayed. If the caller cannot be identified, only the **New Call** information displays. If you have a voice message, the **"MSG WTG ON"** and  icon will be show on the LCD.

1. To answer the call, press the  key. If you have activated the Auto Answer function, when the handset is on the base, simply lift it up to answer.
2. You can speak. To end the call, either press the  key or replace the handset on the base.

Result: After you hang up the call, the LCD displays the call duration.



Notes:

- You can select the ringer volume by using the  key when the phone rings with an incoming call.
- If you want to delete the  icon, press the **Up** key in standby mode, then press and hold the  key. After that, press the  key to return to standby mode. (The handset must be registered to the base.)
- If the polyphonic ring tone is set, the ring tone may continue for 4 seconds after the caller's hang-up or after the parallel phone had answered the calling.

Record Announce2

Announce-only Announce2 is an answer-only message. If you have not record Announce2 before, the unit will play the default one **"Hello, your call cannot be taken at the moment, please call back later"**.

If you want to change Announce2, do the following steps to update it:

1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Announce**.
3. Press  key repeatedly to choose **Announce2**, then press the **Select** key to confirm.
4. Press the  key repeatedly to choose **Record**, press the **Select** soft key.
5. You can record your message after a tone. Recording will stop automatically after 3 minutes. You can also confirm and end the recording by pressing the **OK** key. During recording the LCD shows **"Recording..."**.

Note:

- If you record/playback/restore Announce1 or Announce2, the answer mode (refer to par. **Answer mode Select**) will be switched to the corresponding mode automatically.

■ Announcement


It is necessary to record the announcement which requests the caller to leave a message when nobody is at home. The answer and record message (Announce1) and the answer only message (Announce2) can be up to 3 minutes respectively.

Record Announce1

Auto-answer Announce1 is a conventional message requesting you to leave a message. If you have not record Announce1 before, the unit will play the default one "**Hello, your call cannot be taken at the moment, to record your message, please speak after the tone**".

If you want to change Announce1, do the following steps to update it:

1. Press the **TAM** soft key in Standby mode.

2. Press the **Select** soft key to choose **Announce**.
3. Press **Select** key again to choose **Announce1**.
4. Press the  key repeatedly to choose **Record**, press the **Select** soft key.
5. You can record your announcement after a tone. Recording will stop automatically after 3 minutes. You can also confirm and end the recording by pressing the **OK** key. During recording the LCD shows "**Recording...**".

■ Muting the Microphone


During a conversation, you can temporarily switch your phone's microphone off, so that the other party cannot hear you.

Example: You want to say something to another person in the room but do not want the other party to hear you.

To mute your microphone, press the **Mute** soft key during the conversation. The "**Call Muted**" appears on the LCD.

To unmute the microphone, press the **Mute** soft key again. You will restore the normal condition.




■ Adjusting Voice Volume


During a conversation, you can use the  key to adjust the level of the earpiece (or the handsfree speakerphone one, if activated) volume from **V.1** to **V.5**. The selected volume will be displayed on the LCD.

You can also select the earpiece volume or the speaker volume by the **Audio Setup** in Menu under **HS Settings**, as described in page 35.

Ringer Setting

You can select your own external (from the telephone Network) or internal (from other handsets registered to the same base) ring tone and adjust the volume.

1. Press the **Menu** soft key.
2. Press the  key to choose **HS Settings** menu, then press the **Select** soft key.
3. Press the  key to choose **Ring Setup**, press the **Select** soft key.
4. Press the **Select** soft key to choose **INT Ring** or press the **Down** key to choose **EXT Ring**, press the **Select** soft key.
5. Press the  key to choose **Melody** or **Volume**, press the **Select** soft key.

Result: You can select the ring tone from Melody 1 to 10 or adjust the volume from Volume 1 to 5. You can also turn the ringer Off. Each time you press the  key, the handset sounds the selected melody or loudness.

6. Press the **Save** soft key to confirm.

 
Notes:

- If you set to turn the ringer OFF, when a call comes in, only the **New Call** information appears on the LCD.
- If you activate the shaker and visual ringer function, when a call comes in the handset will shake and the visual ringer will also flash with the ringer you have set.

Caller ID on call waiting


When you subscribe to Call Waiting service from your local telephone company, the telephone will display the name and number of the second caller while you are having a conversation.

Caller ID info displayed



Caller 1
436-1234

 Caller two's information is displayed



Caller 1
4
Caller 2
291-5678


 

1. When you are on the line, the telephone will automatically display the name and number of the second caller.
2. Press the **Flash** soft key to answer the second caller.
3. When you have finished, press the **Flash** soft key to continue with your conversation with the first caller.

Note:

- If you have transferred an external call to another handset, you cannot use the call waiting function via the second handset.

Setting up a 3-way conference call

When you have both an external call and an intercom call in progress, you can set up a three-way conference call, like this:

1. During an external call, press the **Left** key and then the number of the handset you want to join the 3-way call.
2. The called party press  key to answer.
3. The calling party can press the  key to start the 3-way call.
4. Either of the two internal handsets can press the  key to leave the conference call at any time.

Note:

- If one of the handsets drops the conference call, the remaining handsets will continue the conference.

Last Number Redial



1. Press the **Right** key in Standby mode.

Result: The LCD displays the last number you dialed.

2. Press the  key to dial out the number.

Your phone allows you to retrieve the last 10 numbers you have dialed and recall them quickly.

Search for and dial a number in Redial Book


1. Press the **Right** key in Standby mode.
2. If you want to scroll through the memory, press the  key repeatedly until you find out the number you want to dial.
3. Press the  key to dial out the number.

Notes:


- If no numbers are found, "**Empty**" is displayed.
- When the redial book is full, each time you dial a new number, the oldest number stored in the redial book is automatically erased, and it is updated.

Use Redial Book options

Using the redial book options, you can add a number to phone book or delete a number in the redial book.

1. Press the **Right** key.
2. Scroll to the desired number by using the  key.
3. When the number appears on the display, press the **More** soft key to choose the desired option:

- **Add to PB:** allows you to add the number to the phone book. Complete storing the entry by starting from step 4 described in par."Adding the Phone Book Entries" (obviously, you will find the number already entered in the appropriate field).
- **Delete:** allows you to delete the selected number.
- **Delete All:** allows you to delete the whole redial book.

4. To return to Standby mode, press the  key.

Note:

- At step 3, when you select **Delete** or **Delete All** options, a message "**Confirm ?**" will further ask you to confirm the deletion. To confirm press the **Del** or **Del All** soft key, to escape press the **Cancel** soft key.



■ Calling with more than one Handset

If you have more than one handset registered to the same base, you can make internal calls and transfer an external call between the registered handsets.



Making an internal call

1. Press the **Left** key, the LCD displays as follows, then enter the number of the handset you want to call.





2. If the destination handset is not available, the handset will return to standby mode. If the handset entered is valid, the called handset will ring and display **HSX Calling**. The handset user can press the  key to answer the internal call.
3. At the end of your conversation, press the  key.

Note:

- During the internal call, if an external comes in, the LCD will show the caller's number. You should press the  key to end the internal call first then press the  key to answer the call.


Call transfer between handsets



You can transfer an external call between the handsets those are registered to the same base.

1. During an external call, press the **Left** key and then the number of the handset you want to transfer the call to.
2. If the called party can answer your call, he/she can press the  key to talk with you. At this time you can inform him/her of the incoming call.
3. When the called handset answers, press the  key or replace the handset to the base to complete the transfer.

■ Registration



The supplied handset is already registered with the number 1. You can register up to 5 handsets to your base unit in order to share the same line with other people.

Before registering a handset to the base, you should press and hold base unit  key for about 5 seconds then release it.

1. Press the **Menu** soft key.
2. Press the  key to choose **Registration**, then press the **Select** soft key.
3. Use the  key to scroll through the Base names list, press the **Select** soft key to choose a base to your necessary. The handset will search for the requested base and the relevant information will flash on the LCD.

4. If the base is found, and the handset is successfully registered, you will be prompted to enter the PIN code (the default one is 0000). On validation of the PIN code, the Registration tone will sound and the Base assigns a number to the handset. If the PIN code entered is invalid, a warning tone will sound, and the handset will return to the previous registration state.
5. If the base is not found, the handset will behave according to the Out of Range condition.

■ CID Book



When you receive a call, if the caller's information is transmitted from the network on which the call was made (and the caller doesn't hide it), the caller's phone number is displayed. Moreover, when there is a received call which you missed, the  icon will appear on the LCD. If the CID memory is full, the  icon will blink on the LCD.

Out Of Area - This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.



Private - If the caller has exercised the option to prevent his name and number from being sent, the message will show on the LCD.

View and dial any of the CID numbers


1. Press the **Menu** soft key.

2. Use the **Select** soft key to choose the **CID Book**, and if available, the numbers are displayed. (You can also access the CID book directly by pressing the **Up** key in standby mode.)
3. Use the  key to view the numbers, you can make a call by a press of the  key. You can also add the entry to the phonebook.

Note:



- At step 3, each item of the incoming list is marked with the  icon if the call has been reviewed or with the  icon if the call hasn't been reviewed yet.

Add CID Number to Phone Book


1. Perform steps 1 and 2 of previous paragraph.
2. Use the  key to view the numbers, when the desired number displays on the LCD, Press the **More** soft key to enter **Add to PB** menu.
3. Press the **Select** soft key, you are prompted to enter the name.

4. Enter the name and press the **Next** soft key, then you can modify the number you want to store.
5. Press the **Next** soft key, you are able to select the ring tone from Melody 1 to Melody 10, press the **Save** soft key to confirm and exit, you will hear a confirm beep.

Delete a number in the CID Book

1. Perform steps 1 and 2 of paragraph "View and dial any of the CID numbers".
2. Scroll to the number you want to delete by using the  key.
3. When the desired number appears on the display, press the **More** soft key.
4. Use the  key to choose **Delete**, press the **Select** soft key. The display will show "**Confirm ?**". Press the **Del** soft key to confirm, you will hear a beep and the LCD shows the next number.

Delete all numbers in the CID Book

1. Perform steps 1 and 2 of paragraph "View and dial any of the CID numbers".
2. Press the **More** soft key and use the  key to choose **Delete All** menu, then press the **Select** soft key.
3. The display shows "**Confirm ?**", press the **Del All** soft key to confirm.



Result: You hear a beep and the phone returns to the Standby mode after clearing all the CID numbers.

Note:

- If you press the **Up** key in standby mode to enter CID book, you cannot access the CID options. To add CID number to Phone book or delete the CID numbers, you should access CID book through the menu.


Selecting a Base

This function allows you to select a base from those already registered to the handset. You can access the options by scrolling the menu.

1. Perform steps 1 and 2 of paragraph "Setting Alarm".
2. Press the  key to choose **Select Base** menu, press the **Select** soft key.
3. You can use the  key to select the base you want, then press the **Select** soft key. If you select a non-existent base, the handset will sound a warning tone.
4. The display will show **Selected BS X**. Press the **Select** soft key to confirm. A confirm tone will be heard.

HS Reset




This function allows you to reset the Handset settings to the factory default.

1. Perform steps 1 and 2 of paragraph "Setting Alarm".
2. Press the  key to choose the **HS Reset** menu, press the **Select** soft key. You will be prompted to enter the PIN code.
3. Enter the PIN code (the default one is 0000), then press the **Reset** soft key. If the PIN code is validated all handset settings will return to the factory default, otherwise a warning tone will be heard and the settings will remain.

Result: After resetting, the handset will reset and return to Standby mode.

LCD Contrast Setting




The adjustment allows you to optimize the visibility of the display by changing its contrast according to the environment conditions.

1. Perform steps 1 and 2 of paragraph "Setting Alarm".
2. Press the  key repeatedly to choose **LCD Contrast**, then press the **Select** soft key.
3. Use the  key repeatedly to choose among the 17 available contrast levels, then press the **Save** soft key.
4. Press the  key to return to standby mode.


Setting Date & Time

1. Date & Time Format

1. Perform steps 1 and 2 of paragraph "Setting Alarm".

2. Press the  key to choose **Date & Time** menu, press the **Select** soft key.
3. Use the  key to choose **Date Format** or **Time Format**, press the **Select** soft key.
4. You can use the  key to choose the Date format (**DD-MM/MM-DD**) or the Time format (**12-Hour/24-Hour**), press the **Save** soft key to save.


2. Setting date & time


 
1. Perform steps 1 and 2 of previous paragraph.
2. Press the  key to choose **Set Date** or **Set Time** menu, press the **Select** soft key.
3. Enter the current date/time by numeric keypad and press the **Save** soft key to save and exit.

Notes:

- If you select **12-Hour**, **AM/PM** will appear on the right of the time in standby mode.
- At step 3 you need to enter the time in **24-Hour** format.


Key Lock



If you turn this feature on, all keys will be locked. You can answer calls by using the  key on the phone. But when you hang up, the phone returns to the locked mode. This feature is useful to avoid pressing keys by mistake.

To lock the keys, in the Standby mode just keep the  key pressed till the display shows "**HS Locked**", then the  icon appears.

Selecting a Language



The Handset supports multiple predefined languages. You can change the language used to display the menu messages.

1. Press the **Menu** soft key.
2. Press the  key repeatedly to choose **HS Settings**, press the **Select** soft key.

To unlock the keys, keep the  key pressed again till the key lock icon  disappears from the display.




Note:

- In locked mode, if you press any key, the phone will generate an error tone, and the "**HS Locked**" message will be redisplayed.

3. Use  key to choose **Language**, then press the **Select** soft key.
4. The languages will be displayed. Use the  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press **Save** soft key to select the required language and you will hear a confirm beep.

■ Auto Answer

With this feature, you can answer a call by just picking up the handset from the base without pressing any key.




1. Press the **Menu** soft key.
2. Press the  key repeatedly to choose **HS Settings**, press the **Select** key.
3. Use the  key to choose **Auto Answer**, then press the **Select** soft key.
4. Use the  key to choose **On/Off** to enable/disable the function, then press the **Save** soft key, you will hear a confirm beep.

Note:

- *When the answering machine starts working, this feature will be deactivated.*



■ Audio Setup

You can also use the menu to adjust the audio volume.

1. Perform steps 1 and 2 of previous paragraph.
2. Press the  key to choose **Audio Setup** menu, press the **Select** soft key.
3. Use the  key to choose **Speaker V.** or **Earpiece V.**, press **Select** soft key.
4. The display show the current setting. Use the  key to choose the volume level (Volume 1 -Volume 5), press the **Save** soft key.

■ Key Tone

Every time you press a key, your handset acknowledges it with a key tone. You can disable the key tones for a silent use. In certain error conditions, a warning tone will sound when an incorrect key is pressed.

1. Perform steps 1 and 2 of paragraph "Setting Alarm".
2. Press  key to choose **Tone Setup** menu, press the **Select** soft key.
3. Press the **Select** soft key again to choose **Key Tone**.
4. You can use the  key to choose **On** or **Off** to enable or disable the function.
5. Press the **Save** soft key.



Note:


- *For normal use, we recommend you leave the key tone enabled. This makes the phone easier to use.*

■ HS Settings


Setting Alarm

You are able to set the alarm on the handset and adjust the alarm settings.

1. Press the **Menu** soft key.
2. Press the  key to choose **HS Settings**, then press the **Select** soft key.
3. Press the **Select** soft key to choose **Alarm** menu.
4. The display shows the current set. Use the  key to select **On/Off**, press the **Select** soft key.
5. If you select **On**, the display indicates you to enter the time in **HH:MM** format. Use the numeric keypad to enter.


6. Press the **Next** soft key, a beep sounds and the display shows **Snooze On/Off**, you can press the  key to enable or disable the snooze function on the alarm and press the **Save** soft key.
7. When the alarm sounds, press any key to switch it off.


Notes:

- At step 5 you need to enter the time in 24-Hour format.
- If you press any key at the right time the alarm to ring, the alarm will be silent.
- If you choose **Snooze On**, the alarm will ring at regular intervals of 11 minutes. If you press the  key when the alarm sounds, the option will be switch to **Snooze Off**.

■ HS Name


Using this feature, you can define a name of the handset in order to easily recognize your handset if you have more than one registered on the same base. To set the handset name:




1. Press the **Menu** soft key.
2. Press the  key repeatedly to choose **HS Settings**, press the **Select** soft key.

3. Use the  key to choose **HS Name**, then press the **Select** soft key.
4. You can enter the handset name (up to 12 characters) by using the alphanumeric keys (use the **Erase** soft key to delete the incorrect characters), then press the **Save** soft key to confirm and exit. The handset name will be displayed above your handset number in standby mode.

■ Range Alarm


A beep will sound when the handset is out of range of the Base. You are able to select to enable/disable this audible warning.

1. Press the **Menu** soft key.
2. Press the  key repeatedly to choose **HS Settings**, press the **Select** soft key.

3. Use the  key to choose **Tone Setup**, then press the **Select** soft key.
4. Use the  key to choose **Range Alarm**, then press the **Select** soft key.
5. Use the  key to choose **On/Off** to enable/disable this audible warning, then press the **Save** soft key, you will hear a confirm beep.



Paging


You can page the handset from the base unit making it ring with a special tone. It's useful to locate a lost handset.

Press the  key on the base unit (less than 5 seconds), all the handsets registered to the base will ring for about 60 seconds.


Dial Mode


You can select to change the dial mode by the following steps:

1. Press the **Menu** soft key.
2. Press the  key repeatedly to choose **BS Settings**, and press the **Select** soft key.
3. Use the  key to choose **Dial Mode**, then press the **Select** soft key.

To stop paging, press the  key on the base again or any key on the handset.

Note:

- *On a long  key press, more than or equal to 5 seconds, the base will enter subscription mode. For details, see page 38.*


4. You can press the  key to select the required dial mode options (**Tone/Pulse**) and press the **Save** soft key. A confirm beep will be heard.

Note:

- *If you are not sure which dialing mode to select, please contact your local service provider.*


Modify PIN

This function allows you to change the PIN number of the currently active Base. The default PIN is 0000.

1. Perform steps 1 and 2 of paragraph "Terminate HS".
2. Use the  key to choose **Modify PIN** menu, press the **Select** soft key.
3. The display shows "**PIN?**". Enter the current PIN, then press the **Next** key. If the old PIN code is validated, you will be prompted to enter a new PIN code. If the old PIN is not validated, a warning beep will sound and you will be returned to the **Modify PIN** menu.
4. Enter the new PIN, press the **Next** key. You will be requested to confirm the PIN code. Enter the new PIN again then press the **Save** soft key to confirm and exit.

BS Reset

This function allows you to reset the Base setting to the factory default.



1. Perform steps 1 and 2 of paragraph "Terminate HS".
2. Press the  key to choose **BS Reset** menu, press the **Select** soft key. You will be prompted to enter the PIN code.
3. Enter the PIN code (the default PIN is 0000), then press the **Reset** soft key. If the PIN code is validated all base settings will be reset to the factory default, otherwise the settings will remain.

Result: After resetting, the base will be reset and the handset will return to Standby mode.

■ BS Settings



Terminate HS

This function allows you to delete a handset registration from the base.

1. Press the **Menu** soft key.
2. Press the  key to choose **BS Settings**, then press the **Select** soft key.
3. Press the **Select** soft key to choose the **Terminate HS** menu. The display shows "**PIN?**" to prompt you to enter the PIN Code (The default PIN Code is "0000"). Then press the **OK** soft key.
4. Use the  key to select a handset. If you select the current handset or a non-existent handset, a warning tone will sound.
5. Press the **Select** soft key to confirm, and the selected handset will behave according to the Out Of Range condition.


 
Flash Time

You can select to change the Flash time by the following steps:

1. Perform steps 1 and 2 of previous paragraph.
2. Use the  key to choose **Flash Time** menu. Press the **Select** soft key.
3. The display shows the current setting. Use the  key to select **Flash-1 /Flash-2**, press **Save** soft key.


 
■ Handsfree

During a call, you may turn on the speakerphone built in the handset. In this mode you can simply put your handset on a surface (e.g. a desk) and enjoy the comfort of the handsfree conversation.

To turn the feature on, press the  key during a call (line engaged). The  icon appears on the LCD.

■ Flash Signal

When the line is engaged, pressing the **Flash** soft key sends the Flash signal. This key is used in conjunction with special services (e.g. call waiting) which can be available in your phone network. For further details please contact your network telephone company.

To turn the feature off, and keep on talking in normal mode, press the  key again. The  icon will disappear.


Notes:

- Before putting the handset near your ears, be sure you have turned the speakerphone off.
- To adjust the speakerphone volume, see page 15 or page 35.

To use the said special services, just press the **Flash** soft key while the line is engaged: the display will show **R**.


■ Menu Navigation

To access a menu option:

1. To display menu items, press the **Menu** soft key.
2. To scroll through menu options, press the  key repeatedly.
3. To select a menu, press the **Select** soft key when the desired menu appears on the LCD.
4. Repeat if necessary.


To return to Standby mode from any menu:

If you press the **Back** soft key from any menu, the phone returns to the previous screen.

To return to Standby mode from any menu, press the  key.

Also, the phone will automatically return to Standby mode from any menu if no key is pressed for about 40 seconds.


Note:

- In standby mode, you can press  key to switch the backlight on/off.


■ One-Touch Memories

You can store up to 5 numbers in direct memory. All the number will be stored in phone book.

Storing Memory Numbers

1. Press the memory key (M1 to M4 or SOS) in Standby mode.
2. The display shows "**Number ?**". Enter the desired number (up to 20 digits), press the **Next** soft key.
3. Use the  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.

Viewing Memory Numbers

1. In the Standby mode, press the **Down** key.
2. Press the  key repeatedly until the desired number is displayed.

Dialing from One-touch Memories

In the Standby mode, press **M1** to **M4** or **SOS** button to dial out the corresponding number.

Editing Memory Numbers

Perform the steps of the "Editing the Phone book Entries" paragraph.


Note:

- The memory default names are M1: to M4:, SOS, you can add something behind them but cannot delete the default name. e.g. you can modify M1 as M1: home.




Deleting Memory Numbers

Perform the steps of the "Deleting the Phone book Entries" paragraph.



Dialing a Number from Phone book

Find out the number you want to dial. Refer to "Viewing the Phone book Entries". Then press the  key or **Dial** soft key.

Editing the Phone book Entries

1. Perform steps 1 and 2 of paragraph "Adding the Phone book Entries".
2. Press the  key to choose **Edit** menu. Press the **Select** soft key.
3. Press the  key repeatedly until the entry you want to edit displays, press the **Select** soft key to confirm.
4. If necessary, press the **Erase** soft key to clear the digit(s) then enter the desired name and number, press the **Next** soft key to save.
5. Use the  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.

Deleting the Phone book Entries

1. Perform steps 1 and 2 of paragraph "Adding the Phone book Entries".
2. Press the  key to choose **Delete**. Press the **Select** soft key.
3. Press the  key repeatedly until the name you want to delete displays, then press the **Select** soft key. The display shows "**Confirm ?**". You can press the **Del** soft key to delete it or press the **Cancel** key to exit.
4. In step 2, if you choose **Delete All** menu and press the **Select** soft key, the display will show "**Confirm ?**". You can press the **Del All** soft key to delete all the entries or press the **Cancel** key to exit.

PB Status

The PB Status shows the number of phone book entries already stored. When the **PB Status** shows on the LCD, press the **Select** soft key to enter it.

Menu Map

1. CID Book *(see page 19)*

2. Phonebook

New *(see page 29)*
Edit *(see page 30)*
Delete *(see page 30)*
Delete All *(see page 30)*
PB Status *(see page 30)*

3. BS Settings

Terminate HS *(see page 32)*
Dial Mode *(see page 24)*
Flash Time *(see page 32)*
Modify PIN *(see page 33)*
BS Reset *(see page 33)*

4. HS Settings

Alarm *(see page 34)*
Audio Setup *(see page 35)*
Ring Setup *(see page 16)*
Tone Setup *(see page 23, 35)*
Language *(see page 21)*
HS Name *(see page 23)*

Auto Answer *(see page 22)*
LCD Contrast *(see page 36)*
Date & Time *(see page 36)*
Select Base *(see page 37)*
HS Reset *(see page 37)*

5. Registration *(see page 38)*

6. TAM

Announce *(see page 42)*
Message *(see page 45)*
TAM Setting *(see page 47)*

Phone Book



The phonebook built in your cordless phone allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the phone number.

Character Map

To enter a specific alphanumeric character, press one or more times the relevant key for the required character according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order
0	(spc) 0 ? & / . , !
1	1 @ _ + - " () %
2	A B C a b c 2
3	D E F d e f 3
4	G H I g h i 4
5	J K L j k l 5
6	M N O m n o 6
7	P Q R S p q r s 7
8	T U V t u v 8
9	W X Y Z w x y z 9

Adding the Phone book Entries

1. Press the **Menu** soft key.
2. Press the  key repeatedly to choose **Phonebook**, press the **Select** soft key.
3. Press the **Select** soft key to choose **New**.
4. The display shows "**Name ?**". Enter the name you want to use, then press the **Next** soft key to confirm. The display shows "**Number ?**". Enter the desired number (up to 20 digits), press the **Next** soft key.
5. Use the  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.
6. Repeat if necessary.


Note:

- If you make a mistake while entering a number, use the **Erase** soft key to correct it. Each time you press the key, the last digit is deleted. To clear all digits, press and hold the **Erase** key.

Using a Pause

A pause is useful when you access an interactive voice response system, such as an automated banking system. A pause provides a delay of 3 seconds. If you want to insert a pause when you dial a number in Standby mode or store a number in memory, press the **Right** key. The letter **P** will appear at the pause entry.

Viewing the Phone book Entries

1. In the Standby mode, press the **Down** key.
2. Press the  key repeatedly until the desired entry is displayed.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Privacy of communications may not be ensured when using this telephone!