

# Wi-Fi Doorbell

CL-3239

Quick Guide

## Unpacking

Once you have unpacked your product, make sure that all the parts shown below are available. If any pieces are missing or broken, please get in touch with your dealer.



Doorbell



Wall-mount Case



Cover Plate



Quick Guide



Screwdriver

 


Anchors and  
Screws

## Introduction


The Wi-Fi doorbell is a smart video doorbell that allows you to answer your door with smartphones and tablets anytime anywhere.

## Layout

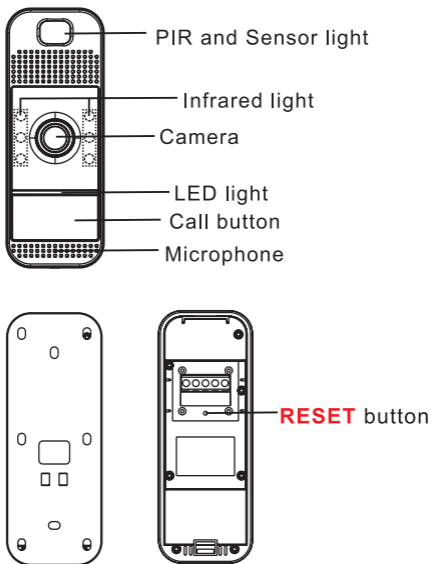

## Screwdriver

 
You can replace the screwdriver's heads as per your needs.

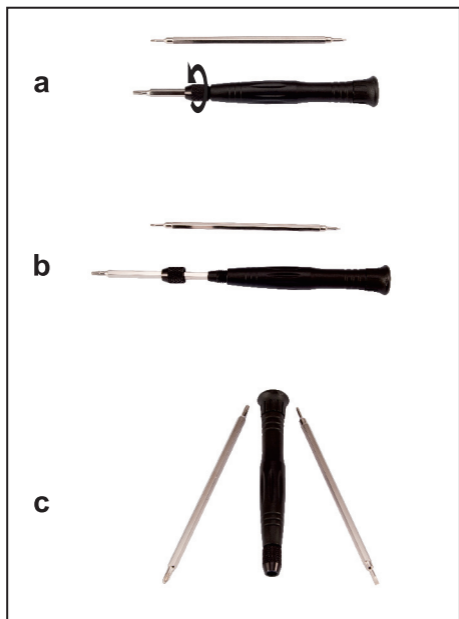

## Diagram For Connection


Remove your existing doorbell from the wall and disconnect the wires, then connect this doorbell to your existing wires.

 It doesn't matter which wire connects to which screw.

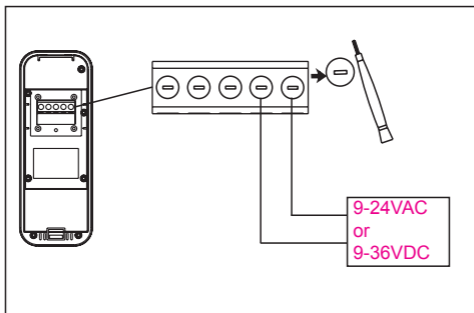


## Diagram For Installation

 After the connection, install the cover plate to the doorbell.

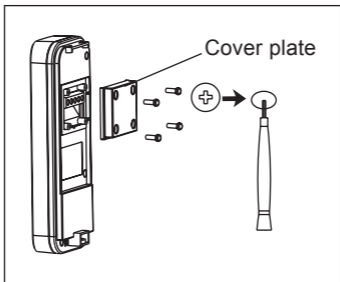


## Wall-mount Case Installation

 
1. Choose a proper location for the doorbell. Be sure to consider the average height of visitors.
2. line up the wall-mount case using the provided mounting level, install the wall-mount case and screws with the holes in the wall.
3. Install the doorbell into the wall-mount case.
4. Insert and tighten a screw to finish the installation.

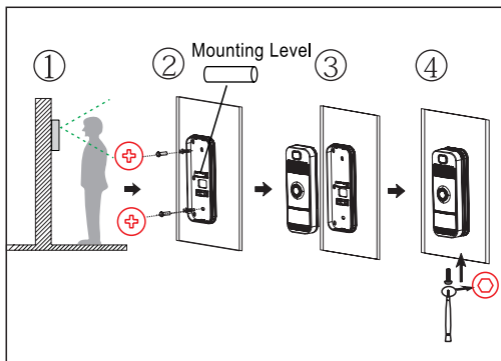

# Operations

## iCreBell APP Introduction

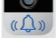 1. Download the iCreBell APP  from app store.
2. Install iCreBell APP on your smartphones.
3. Launch the APP.

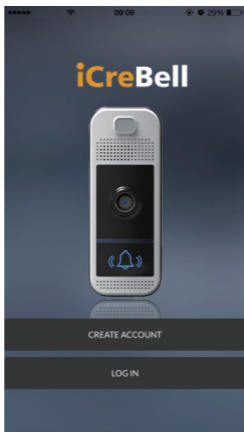



# Operations

## iCreBell APP Introduction

Follow the instructions and start the registration.

**Note:** Password must be at least 8 characters and contains numbers, uppercase letters and lowercase letters.

REGISTER

You could use iCreBell account to log in too.

EMAIL/ACCOUNT NAME

PASSWORD

ENTER

Forgot your password? Find back here.

REGISTER

LOG IN

You could use iCreBell account to log in directly.

EMAIL

PASSWORD


RE-ENTER PASSWORD



CONFIRM

LOG IN

# Operations


## iCreBell APP Introduction

  Press  to enter account management.

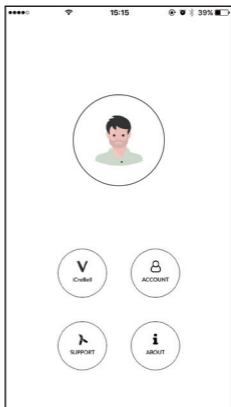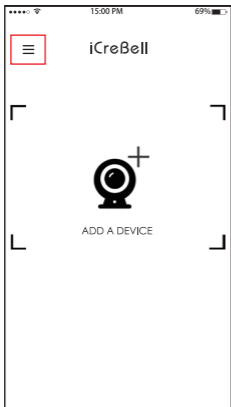

# Operations

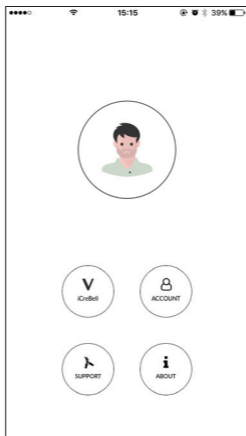 

## iCreBell APP Introduction

 


1. **iCreBell**: Enter the iCreBell homepage.
2. **ACCOUNT**: Holds account information.
3. **SUPPORT**: Frequently asked questions and the solutions.
4. **ABOUT**: APP version

## Operations

### iCreBell APP Introduction - Account


1. Press  to change the profile picture.
2. Press  to view and change the account information.

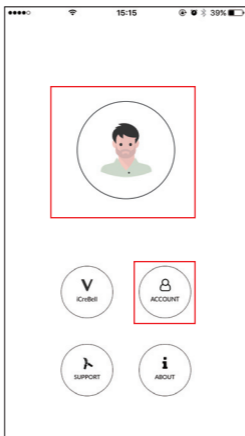

# Operations

## iCreBell APP Introduction - Account

 3. View and change the account information.

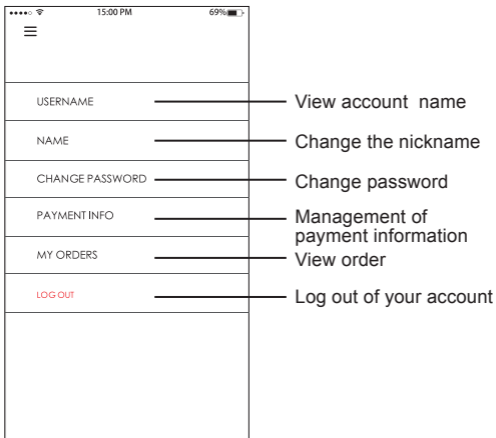

# Operations

## iCreBell APP Introduction - Screen

 
1. Tap any part of the view screen.



# Operations

## iCreBell APP Introduction - Screen

2. Operate according to the icon.

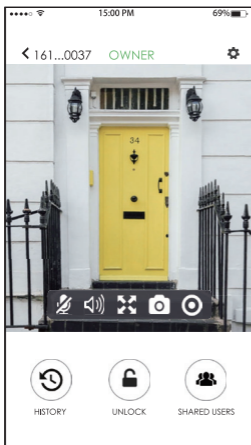

Sound off



Volume



Full screen




Screen shot




Record the video

# Operations
 
## Add doorbell in iCrebell account

1. Press  to add the a device.

ADD A DEVICE

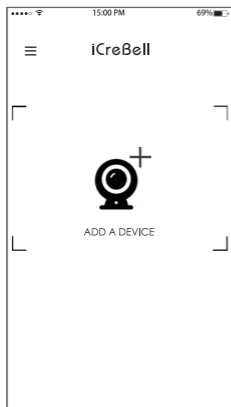




# Operations

## Add doorbell in iCrebell account

 2. Connect the iCreBell with AC or DC power, then press **NEXT**.


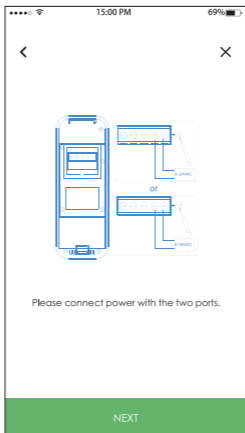


## Operations

### Add doorbell in iCrebell account

3. Please wait for the white light indicator flashes slowly, then using the small screwdriver to press the **RESET** button to reset the iCreBell, and when the white light indicator flashes rapidly, press **NEXT**.

  **Note:** Please make sure your mobile device is connected to Wi-fi before this operation.

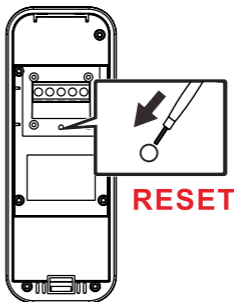
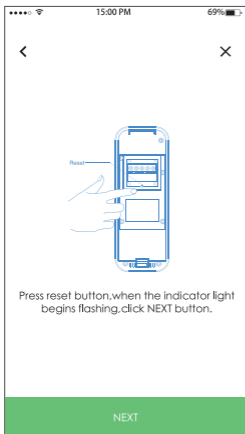


## Operations

### Add doorbell in iCrebell account

4. Make sure all the devices are on the same network, then press **NEXT**.

  5. Connect to the Wi-Fi network, then press **GENERATE**.

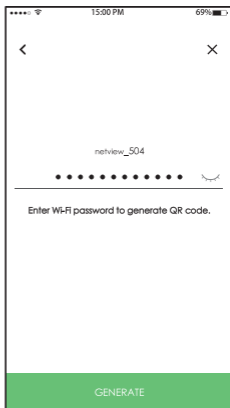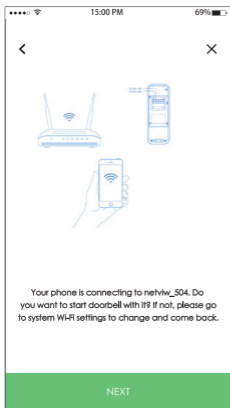

**Note:** Only support **2.4GHz** Wi-Fi.

## Operations

### Add doorbell in iCrebell account

6. Scan the QR code with the doorbell camera, once you heard 'Ding Dong', press **NEXT**.



## Operations

### Add doorbell in iCrebell account

#### 7. Establish the connection

Once you scan the QR code and establish the Wi-Fi connection. **Please wait for the blue light indicator to flash slowly** after you hear a cheerful music, then press **NEXT**.

 


**Note:** Please reset the doorbell and scan the QR code again if you can not see the blue light indicator flash slowly.

## Operations

### Add doorbell in iCrebell account


8. Wait for the iCreBell to connect with the network.

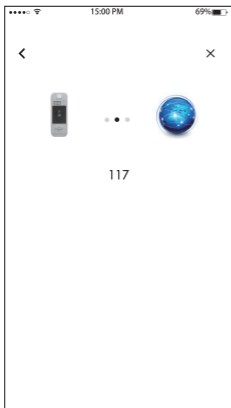


**Note:** When the Wi-Fi configuration is successful, press **X** to complete the connection.

## Operations
 
### iCreBell APP Introduction - Setting

Press  to enter the **settings** menu.


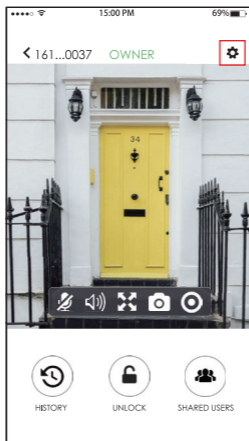


# Operations

## iCreBell APP Introduction - Setting

### View and modification of your device information

  Press **DEVICE INFORMATION**.

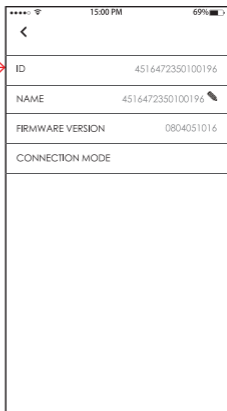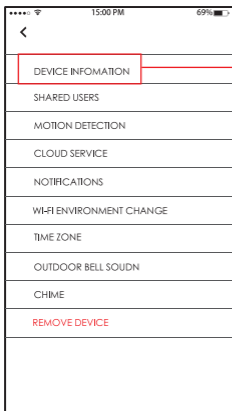




# Operations

## iCreBell APP Introduction - Setting Management of shared users

1. Press  
**SHARED USERS.**


 
2. Press  to add  
new users

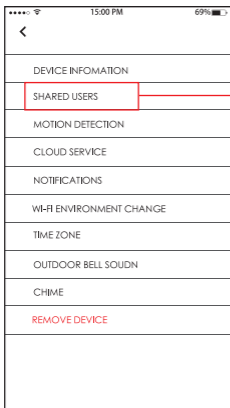

# Operations

## iCreBell APP Introduction - Setting Adjustment of detection parameters

 
 
1. Press **MOTION DETECTION**
2. Adjust parameters as needed.

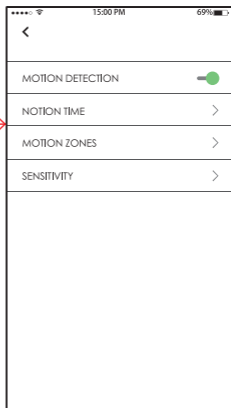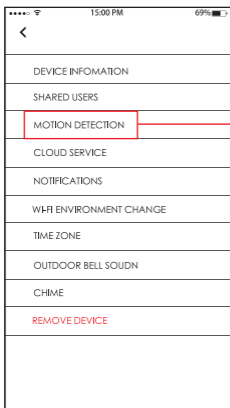

# Operations

## iCreBell APP Introduction - Setting View the cloud service recording

  
1. Press **CLOUD SERVICE**.
2. Select the recording mode and **confirm**.

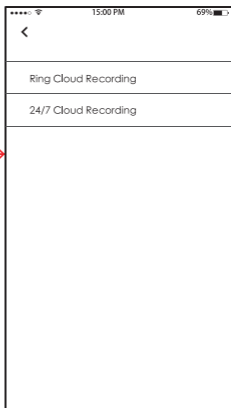
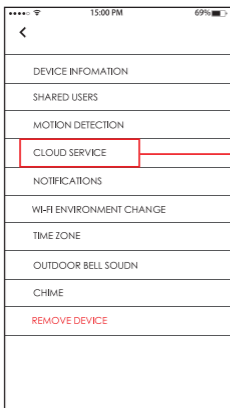


# Operations

## iCreBell APP Introduction - Setting Notification Toggle

1. Press **NOTIFICATIONS**.

  2. Press  to toggle the options between **ON** and **OFF**.

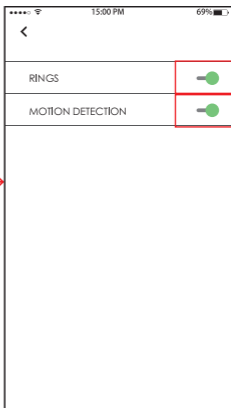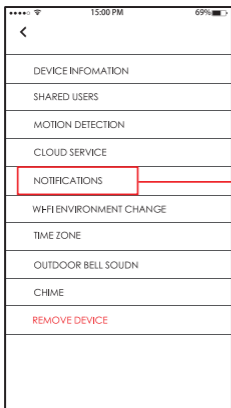


# Operations

## iCreBell APP Introduction - Setting

### Wi-Fi environment change

 1. Press **Wi-Fi ENVIRONMENT CHANGE**.
2. Select Wi-fi network you want to edit.

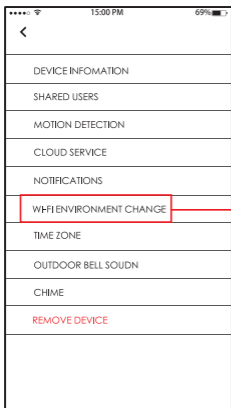



# Operations

## iCreBell APP Introduction - Setting Time zone setting

1. Press

**TIME ZONE.**

 
 
2. Select time zone in the scroll area and press **OK** to confirm.

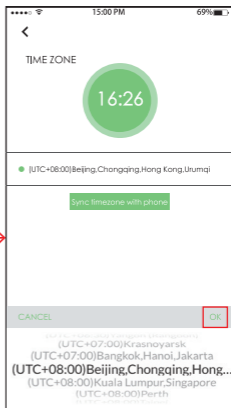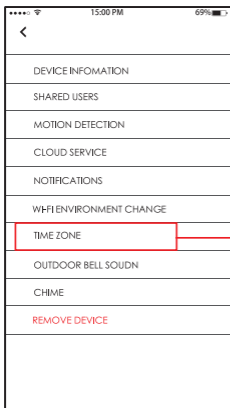

# Operations

## iCreBell APP Introduction - Setting Adjust the volume of outdoor bell

  1. Press **OUTDOOR BELL SOUND**.
2. Move ▲ to adjust the volume.

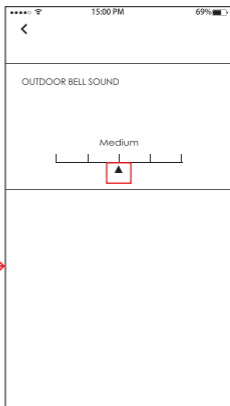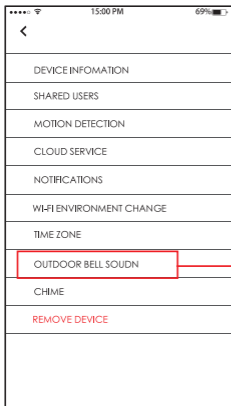



# Operations

## iCreBell APP Introduction - Setting Set indoor chime

1. Press **CHIME**.

2. Select the Doorbell type in the scroll area and press **OK** to confirm.

  Press  to toggle between **ON** and **OFF**.

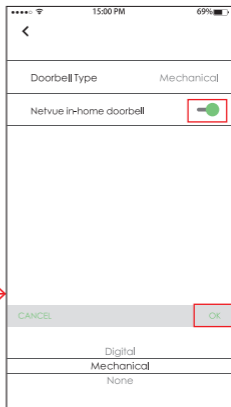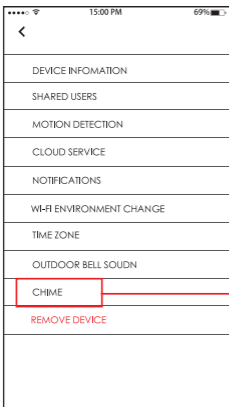



# Operations

 
 
## Delete doorbell in iCrebell account

### NOTE:

To protect your privacy, please ensure to delete your doorbell device from APP if you must remove the doorbell or change phones.

1. Select the doorbell which you want to delete.


2. Press 

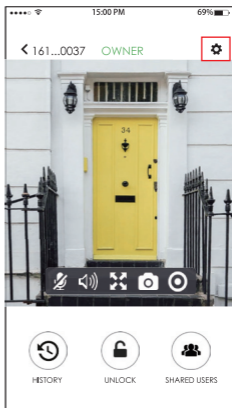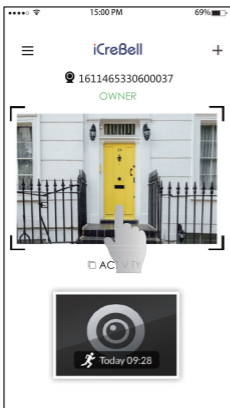


# Operations

## Delete doorbell in iCrebell account

 3. Press **REMOVE DEVICE.**

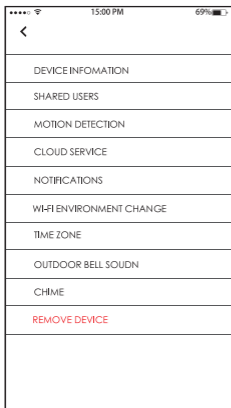

 4. Press **REMOVE** to confirm.

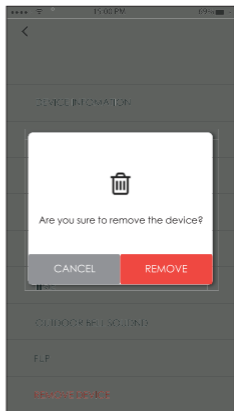


# Operations

## iCreBell APP Introduction

### Decline a call

1. Press    
DECLINE

 
2. Select the reject mode.

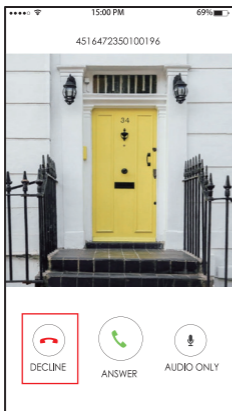


# Operations

## iCreBell APP Introduction - History

 1. Press  HISTORY

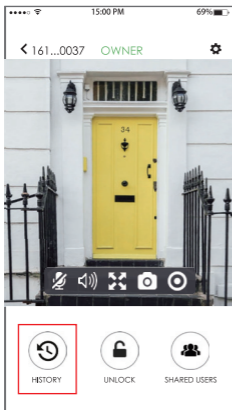

 2. Press **ALL**, **MOTIONS** or **RINGS** to view history.

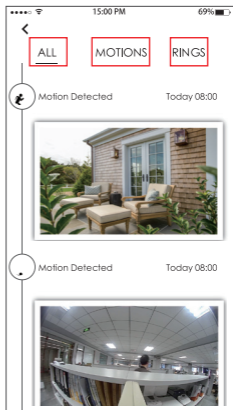

## FCC and IC Regulations

### **FCC Information For Users**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: QMH-CL3239

### **IC Statement and Warning**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC ID:4002A-CL3239

## **Safety way to remove the battery or the battery from the equipment:**

Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. Do not remove battery incorporated with product for your safety. If you need to replace the battery, take it to the nearest authorized EcoBoulder+ service point or dealer for assistance.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. WEEE directive

