

A6BT, CL-3675BT

USER' S MANUAL

Contents

Prior To Use 1

Congratulations	1
Safety Precautions	1
Unpacking	3
Phone Layout and Keys Function	4
Keys Description	7
LCD Description	9
Connecting Lines	10
Installing Batteries	11
Charging Handset	12
Using Headset	12
Using Handset Carry Clip	13
Turning Handset On/Off	14
Key Lock	15

Bluetooth 16

Pairing with your Headset	16
---------------------------	----

Connecting your Headset	16
Disconnecting your Headset	18
Removing a Paired Headset	18

Basic Functions 19

Making a Call	19
Receiving a Call	20
Muting the Microphone	21
Amplification Function	21
Using Audio and Headset Jacks	22
Handsfree	22
Ringer Setting	23
Last Number Redial	24
Call List	26
Selecting a Language	28
Paging	29
Flash Signal	29
One-touch Memories	30

Contents

Handset Operations	31
Menu Navigation	31
Menu Map	32
Phone Book	33
Base Settings	37
Handset Settings	39
Registration	45
Default	46
Caller ID on Call waiting	47
Feature List	48
Troubleshooting	49
Technical Specifications	50

Prior To Use

■ Congratulations

on purchasing our high quality product.

Please read the manual carefully to find out all features and how your telephone works, so you can get the best out of your new phone.

■ Safety Precautions

To reduce the risk of electrical shock and injury, please follow these basic safety precautions before using the phone.

1. Carefully read and observe the instructions in this manual.
2. Follow all warnings marked on the unit.
3. When cleaning, unplug the phone first, then use a damp cloth to wipe. Do not use liquid or aerosol cleaners.
4. Do not place objects on the line cord that may cause damage.
5. Do not use this phone in wet surroundings or environments where there is a risk of explosion.
6. Avoid spilling of any liquid on the phone.

Technical Specifications

Frequency Range	1920-1930MHz
Channels	60 Duplex channels
Carrier Power	<100mW
Modulation	GFSK
Frequency Stability	< \pm 50 KHz
Charging time	15 hours
Ambient temperature	Normal: 15°C ~ 35°C, Extreme: 0°C ~ 40°C
Humidity	0%~90%
Dimensions (mm)	Base: 124.4 x 114 x 78; Handset: 187 x 60 x 39
Power Supply	Base: 7.5V, 500mA; Handset input: Ni-MH 1.2V x 3, 800mAh

 **Design and specifications are subject to change without notice.**


Troubleshooting

Symptom	Check & Remedy
No operation	<ul style="list-style-type: none">• Check that the power adapter is properly connected.• Check that the telephone line cord is properly connected.• Check that the handset batteries in full power.• Check that the handset batteries are installed properly.
No dial tone	<ul style="list-style-type: none">• Check that the telephone line cord is properly connected.• Check that the power adapter is properly connected.
Nothing appears on the display	<ul style="list-style-type: none">• Check that the handset batteries are installed properly.• Check that the handset batteries in full power.• Check that the handset is on.
Handset seems to have very short battery life	<ul style="list-style-type: none">• Check the charge contacts.• Consistently short battery life may indicate that replacement of the batteries is necessary.• Make sure the right batteries be used.
Caller's number is not displayed	<ul style="list-style-type: none">• Make sure you have subscribed to a Caller ID service via your network provider.• The caller may have withheld their details.• Let the phone ring a couple of times as there may be a delay in receiving the Caller ID information.
Unsuccessful operation	<ul style="list-style-type: none">• Remove the batteries of your handset, and then re-install them again.

7. Unplug this phone from the wall outlet and refer servicing to qualified service personnel only.
8. Pay attention to the polarity of the batteries, insert the rechargeable batteries in accordance with polarity symbols (this instruction is found in the installing batteries section.)
9. Use only **the batteries indicated in the User's Manual**. Never use other ordinary batteries or conventional alkaline batteries. Otherwise this may not only cause personal injuries but also damage to the unit.
10. Do not mix exhausted batteries with full batteries. Exhausted batteries shall not be disposed of with the usual household waste or in a fire.
11. If the handset will not be used for a long period of time, remove the batteries to prevent possible leakage.
12. Use only **the power supply indicated in the User's Manual**.
13. Keep the phone out of the reach of children.
14. Use the phone only in the described manner.
15. Stop using the phone if it becomes damaged.

■ Unpacking

Once you have unpacked your phone, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call your dealer.

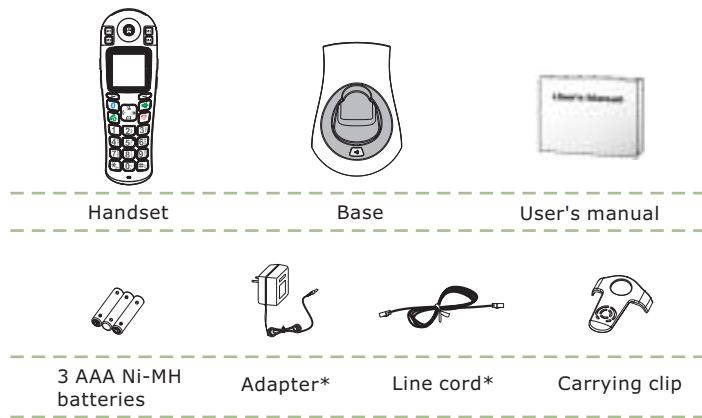

*The shape of the plugs can vary according to each country's specification.

 
Feature List

- **DECT 6.0 technology**
 - **Large 2.0" LCD (128 x 64 dots matrix display)**
 - **Bluetooth connection**
 - **Call switch between DECT handset and your Bluetooth headset**
 - **Up to 5 handsets for optional for one base**
 - **Up to 4 bases for optional for one handset**
 - **LCD contrast adjustable**
 - **Phonebook with up to 50 entries**
 - **Amplification up to +40dB**
 - **Amplified Headset jack**
 - **HAC compatible**
 - **9 VIP ring tones setting for phonebook entries**
 - **Redial book with up to 10 entries**
 - **10 melody ringer and volume selectable**
 - **Full handsfree speakerphone**
 - **Vibrating loud ring signaler**
 - **4 one-touch memory speed dial buttons**
 - **1 SOS button**
 - **Predialing**
 - **Receiver/Speaker volume adjustable**
 - **Redial, Flash, Pause, Mute**
 - **Real time clock (set time)**
 - **Call duration display**
 - **Keypad lock**
 - **Multiple languages selectable**
 - **Auto answer ON/OFF selectable**
 - **Alarm clock include snooze option**
 - **Handset Name setting**
 - **Backlit LCD screen and keypad**
- Caller ID**
- **FSK and DTMF dual system Caller ID**
 - **Caller ID / Call Waiting**
 - **Caller ID list with up to 20 entries**
 - **Incoming calls can be called back/added to phonebook/deleted**
 - **New call indicator**
 - **Message waiting**


Caller ID on Call waiting

When you subscribe to Call Waiting service from your local telephone company, the telephone will display the name and number of the second caller while you are having a conversation.

Caller ID info displayed



Caller two's information is displayed

 


1. When you are on the line, the telephone will automatically display the name and number of the second caller.
2. Press the **Flash** soft key to answer the second caller.
3. When you have finished, press the **Flash** soft key to continue with your conversation with the first caller.

Note:


- If you have transferred an external call to another handset, you cannot use the call waiting function via the second handset.

Phone Layout and Keys Function

Handset

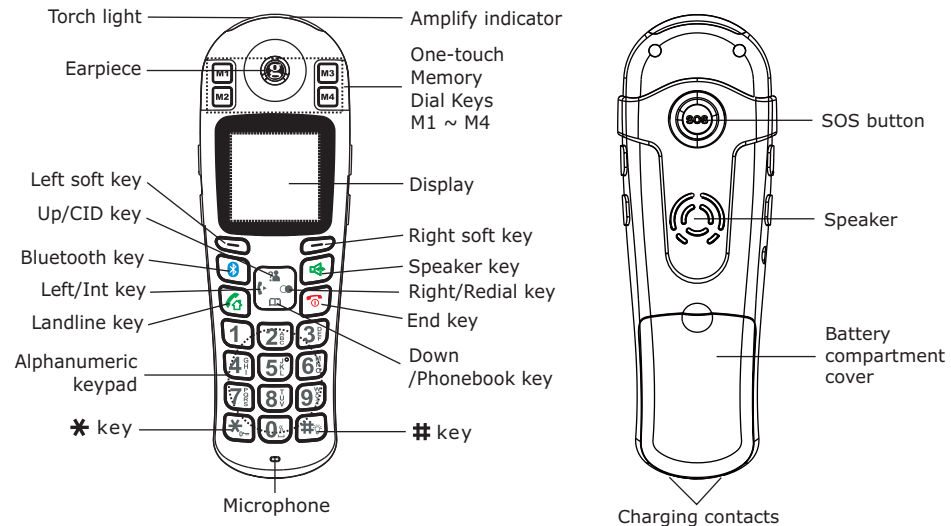

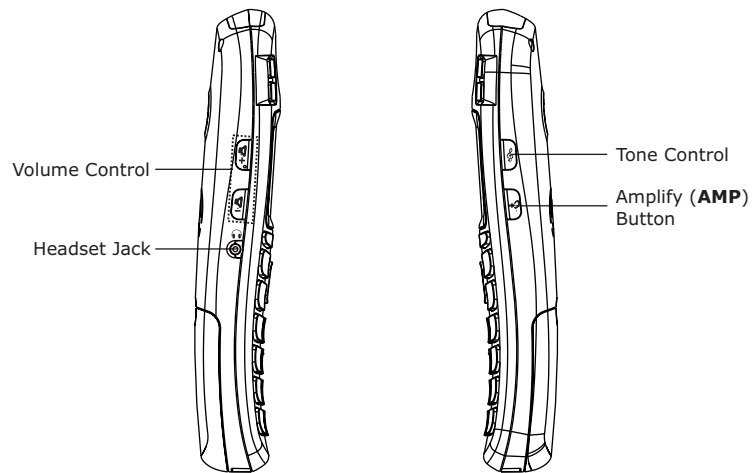

■ Phone Layout and Keys Function (continued)



■ Default


If you reset the handset, all the features will be restored to the factory initial settings.



1. Press the **Menu** soft key.
2. Press  or  key to choose **Default**, then press the **Select** soft key.
3. Enter the PIN code (the default one is 0000), then press the **Select** soft key. If the PIN code is correct the display will show **Confirm**, otherwise the phone will return to the previous menu. Press the **Select** soft key to confirm, press the **Back** soft key to cancel and exit.

Result: After the resetting, all the settings will be restored to the factory default.

■ Registration

The supplied handset is already registered with the number 1. You can register to your base additional handsets (up to 5 in total) in order to share the same line with other people.


Before registering a handset to the base, you should press and hold the  key located on the front panel of the base until a prompt tone is heard.

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose the **Registration**, then press the **Select** soft key.
3. If the base is found, the Registration tone will sound and then the base assigns a number to the handset, otherwise a warning tone will sound, and then the handset returns to the previous registration state.


4. If the base is not found, the handset will behave according to the Out of Range condition.

■ Phone Layout and Keys Function (continued)

Base

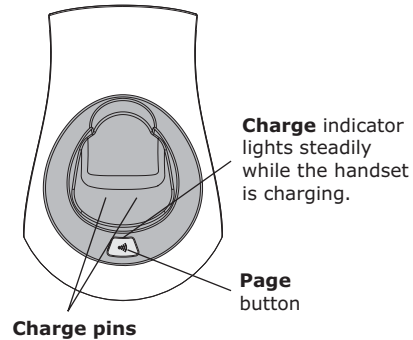

Rear View

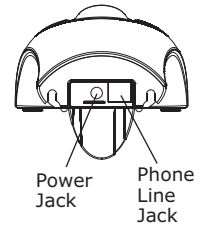

Keys Description



Landline key

Make/Answer calls.



Bluetooth key

Make/Answer calls through a Bluetooth headset.



Speaker key

Activates the speakerphone if pressed during a call, as described in page 22.



End key

End a call.

Long press to activate power on/off, as described in page 14.

Navigation key:



Up/CID key

Scroll up through lists and menu options.

Increase the earpiece/speakerphone volume during a call.

Enter the Call list, as described in page 26.



Down/Phonebook key







Scroll down through lists and menu options.

Decrease the earpiece/speakerphone volume during a call.

Enter the Phonebook, as described in page 34.









Selecting a Base

This function allows you to select a base from those already registered to the handset. You can access the options by scrolling the menu.



1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press  or  key to choose **Selected BS** menu, press the **Select** soft key.
4. You can use  or  key to select the base you want, then press the **Select** soft key.
5. The display will first show **Searching** then **BS Selected**.

Setting Date & Time

1. Date & Time Format

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press  or  key to choose **Date & Time** menu, press the **Select** soft key.
4. Use  or  key to choose **Date Format** or **Time Format**, press the **Select** soft key.
5. You can use  or  key to choose the Date Format (**DD-MM-YY/MM-DD-YY**) or the Time Format (**12 - Hour/24 - Hour**), press the **Save** soft key to save.

2. Setting date & time

1. Perform steps 1 to 3 of previous paragraph.
2. Press  or  key to choose **Set Date** or **Set Time** menu, press the **Select** soft key.
3. Enter the current date/time by numeric keypad and press the **Save** soft key to save and exit.

Notes:

- If you select **12 - Hour**, **AM/PM** will appear on the right of the time in standby mode.
- At step 3 you need to enter the time in **24-Hour** format.

Keys Description (continued)



Redial key

Enter the redial book, as described in page 24. Insert a pause when pre-dialing a number.

Left/Right soft key

Perform the functions indicated by the text immediately over it (on the bottom line of the display) which changes time by time.

One-touch memories

Store up to 5 numbers for one-touch memory dialing.

*** key**

Press and hold to turn on/off keypad lock function.

key

Press and hold to turn on/off torch function.

LCD Description



New Call

Indicates you have missed one or more calls.



MSG Waiting

Indicates you have one or more voice messages.



Off Hook

Indicates the line is engaged.



Hands-free

Indicates the handsfree function is enabled.



Battery Icon

Indicates battery charge level.



Keypad Lock

This icon appears when the keypad is locked.



Signal Icon

Indicates whether the current signal exists or not. If the handset is too far from the base, this icon will blink on the LCD.









Alarm Icon

This icon appears when you set an alarm to ring at a specified time.







Auto Answer

With this feature, you can answer a call by just picking up the handset from the charger without pressing any key.

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** key.
3. Use  or  key to choose **Auto Answer**, then press the **Select** soft key.
4. Use the  or  key to choose **On/Off** to enable/ disable the function, then press the **Select** soft key, you will hear a confirm beep.





Amplified

When the amplification feature is set to **On**, the amplify function will be on every time a call starts. You will no longer need to press the **AMP** key with every phone conversation.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press  or  key to choose the **Amplified** menu, press the **Select** soft key.
4. You can use  or  key to choose **On** or **Off** to enable or disable the function.
5. Press the **Save** soft key.







HS Name

Using this feature, you can define a name of the handset in order to easily recognize your handset if you have more than one registered to the same base. But when you reset the handset, the handset name will be deleted.

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.
3. Use  or  key to choose **HS Name**, then press the **Select** soft key.
4. You can enter the handset name (up to 12 characters) by using the alphanumeric keys (use the **Erase** soft key to delete the incorrect characters), then press the **Save** soft key to confirm and exit. The handset name will be displayed above your handset number in standby mode.


LCD Contrast Setting

The adjustment allows you to optimize the visibility of the display by changing its contrast according to the environment conditions.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press  or  key repeatedly to choose **LCD Contrast**, then press the **Select** soft key.
4. Use  or  key repeatedly to choose among the 17 available contrast levels (0~16), then press the **Save** soft key.

Connecting Lines


1. Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet.
2. Connect the modular end of the AC power adapter to the power jack of the base, then plug the AC adapter into a standard AC wall outlet.

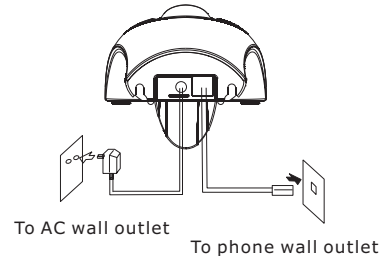

■ Installing Batteries

The three rechargeable Ni-MH batteries (AAA size, 1.2V, 800mAh) come with the handset. Install the batteries before use. The batteries need to be replaced if they do not recover their full storage capacities after recharging.

1. Slide the battery cover in the direction of the arrow and pull it out.
2. Insert new batteries as indicated, matching correct polarity (+,-).
3. To replace the battery cover, slide the cover up until it snaps in place.

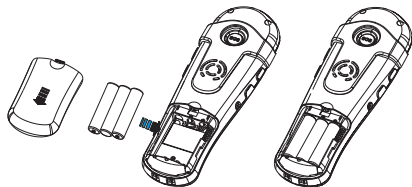







Notes:

- Reversing the orientation may damage the handset.
- When replacing the batteries, always use good quality Ni-MH AAA re-chargeable batteries. Never use other battery.

Key Tone

Every time you press a key, your handset acknowledges it with a key tone. You can disable the key tones for a silent use. In certain error conditions, a warning tone will sound when an incorrect key is pressed.








1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press  or  key to choose **Tone Setup** menu, press the **Select** soft key.
4. Press the **Select** soft key again to choose **Key Tone**.
5. You can use  or  key to choose **On** or **Off** to enable or disable the function.
6. Press the **Select** soft key.

Note:

- For normal use, we recommend you leave the key tone enabled. This makes the phone easier to use.

Range Alarm


 


A beep will sound when the handset is out of range of the Base **during a call**. You are able to select to enable/disable this audible warning.



1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.
3. Use  or  key to choose **Tone Setup**, then press the **Select** soft key.
4. Press the  key to choose **Range Alarm**, then press the **Select** soft key.
5. Use  or  key to choose **On/Off** to enable /disable this audible warning, then press the **Select** soft key, you will hear a confirm beep.

■ Handset Settings


Setting Alarm

You are able to set the alarm on the handset and adjust the alarm settings.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press the **Select** soft key to choose **Alarm** menu.
4. The display shows the current set. Use the  or  key to select **On/Off**, press the **Select** soft key.
5. If you select **On**, the display indicates you to enter the time in **HH:MM** format. Use the numeric keypad to enter.

6. Press the **Select** soft key, the display shows **Snooze**, press the **Select** soft key. Then you can press  or  key to choose **On** or **Off** and press the **Select** soft key.
7. When the alarm sounds, press any key to stop the alarm sound.

Notes:

 
- At step 5 you need to enter the time in 24-Hour format.
- If you press any key at the right time the alarm to ring, the alarm will be silent.
- If you choose **Snooze On**, the alarm will ring at regular intervals of 11 minutes. If you press the  key when the alarm sounds, the option will be switched to **Snooze Off**.

■ Charging Handset

! Important Note: Before initial operation, **YOU SHOULD FULLY CHARGE THE HANDSET** for about **15 hours**.

To charge the handset, place it on the base.

Result: When you place the handset on the base, the handset automatically turns on.




■ Using Headset (optional)

The headset jack is located in the left side of the handset and is 2.5mm standard plug. Simply plug the headset into this jack and the headset will be activated.

Note:

- When the headset is plugged into the headset jack the microphone on the handset will be deactivated.

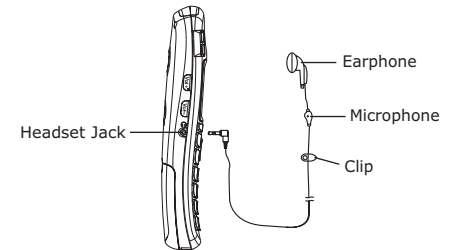


■ Using Handset Carrying Clip

The supplied handset carrying clip allows you to conveniently carry the handset with you. It clips easily to your belt, waist band, or shirt pocket.





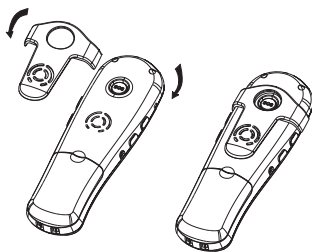

If you want to remove the carrying clip:

Insert a screw driver along the edge of one of its arms and release the clip. Then lift it off.







Flash Time

You can select to change the Flash time by the following steps:

1. Press the **Menu** soft key.
2. Press  or  key to choose **BS Settings**, then press the **Select** soft key.
3. Press  or  key to choose **Flash Time**, then press the **Select** soft key. The display shows the current setting.
4. Press  or  key repeatedly to choose among **100ms**, **300ms** and **600ms**, press **Select** soft key.

Modify PIN





This function allows you to change the PIN number of the currently active Base. The default PIN is 0000.

1. Press the **Menu** soft key.
2. Press  or  key to choose **BS Settings**, then press the **Select** soft key.
3. Use  or  key to choose **Modify PIN** menu, press the **Select** soft key.
4. The display shows "**PIN?**". Enter the current PIN, then press the **Select** key. If the old PIN code is correct, you will be prompted to enter a new PIN code, otherwise a warning beep will sound and the handset will return to the **Modify PIN** menu.
5. Enter the new PIN, press the **Select** key. You will be requested to confirm the PIN code. Enter the new PIN again then press the **Select** soft key to confirm and exit.

■ Base Settings






Delete HS

This function allows you to delete a handset registration from the base.

1. Press the **Menu** soft key.
2. Press  or  key to choose **BS Settings**, then press the **Select** soft key.
3. Press the **Select** soft key to choose **Delete HS** menu. The display shows "PIN?" to prompt you to enter the PIN Code (The default PIN Code is "0000"). Then press the **Select** soft key.
4. Use  or  key to select a handset, press the **Select** soft key. If you select the current handset you are using or if you select a non-existent handset, a warning tone will be heard.
5. After that, the selected handset will behave according to the unregistered condition.


 

Dial Mode

You can select to change the dial mode by the following steps:

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **BS Settings**, and press the **Select** soft key.
3. Press  key to choose **Dial Mode**, then press the **Select** soft key.
4. You can press  or  key to select the required dial mode options (**Tone/Pulse**) and press the **Select** soft key. A confirm beep will be heard.

■ Turning Handset On/Off

If the handset is in power off mode, when you place the handset on the base, it automatically turns on. To turn the handset on or off in standby mode, follow these steps:



1. To turn on the handset when it's off, press and hold the  key until you switch the display on. On power up, the handset will enter subscription mode and search for a registered base. A message as shown below will be displayed to the user, and the signal icon will flash.
- A screenshot of a handset display. At the top left, there are three signal strength bars. At the top right, there is a battery level icon. In the center of the screen, the word "Searching" is displayed in a white font on a dark background.
2. To turn off the handset, keep the  key pressed until the display disappears.



If the handset is successful in finding a base, the handset will enter the standby mode, the display will show handset number and the handset name (if you have one saved as described on page 40), signal icon, battery icon and current time. If the handset is unsuccessful in finding a base, the handset will behave according to the Out of Range condition.



Note:

- Nothing will appear on the LCD when battery power is very low. **YOU SHOULD FULLY CHARGE THE HANDSET BEFORE USING.**

■ Key Lock

If you turn on this feature, all keys will be locked. You can answer calls by using the  or  key. But when you hang up, the phone returns to the locked mode. This feature is useful to avoid pressing keys by mistake.

To lock the keys, in the standby mode just keep the  key pressed till the display shows the  icon.




To unlock the keys, keep the  key pressed again till the key lock icon  disappears from the display.

Note:








- *In locked mode, if you press any key, the phone will generate a warning tone.*

PB Status






The PB Status shows the number of phone book entries already stored.

1. Press the **Menu** soft key.
2. Press  key to choose **Phonebook**, press the **Select** soft key.
3. Press the **Select** soft key, the display shows **New**, press  or  key to choose **PB Status**, press the **Select** soft key to confirm.
4. The display shows the current phonebook status, for example, **07/50 Used**. It means the phonebook entries can be up to 50, and 7 ones have been stored.

Editing the Phone book Entries

1. Press the **Menu** soft key.
2. Press  key to choose **Phonebook**, press the **Select** soft key.
3. Press  or  key repeatedly until the entry you want to edit displays, press the **Select** soft key to confirm.
4. The display shows **New**, use the  or  key to move on to **Edit**, press **Select** soft key to choose it.
5. If necessary, press the **Erase** soft key to clear the digit(s) then enter the desired name and number, press the **Save** soft key.
6. Use  or  key to select the ring you like to associate with the number, press the **Select** soft key to confirm.

Deleting the Phone book Entries



1. Press the **Menu** soft key.
2. Press  key to choose **Phonebook**, press the **Select** soft key.
3. Press  or  key repeatedly until the name you want to delete displays, then press the **Select** soft key.
4. Press  or  key to choose **Delete**, press the **Select** soft key to confirm. Then the display shows the next entry.
5. At step 4, if you choose **Delete All** menu and press the **Select** soft key, the display will show "**Confirm**". You can press the **Select** soft key to delete all the entries or press the **Back** soft key to cancel and exit.

Bluetooth






All the information of your Bluetooth headset, please check your headset's manual.

■ Pairing with your Headset

Up to 8 devices can be paired with your Bluetooth handset.

1. Make your Bluetooth headset to enter the pairing mode. For more details, refer to your headset user's guide.
2. Press the **Menu** soft key.
3. Press  or  key to choose **Bluetooth** menu, then press the **Select** soft key.
4. Press the **Select** soft key to choose **Add Device**. The LCD shows **Please wait**, and the Bluetooth LED flashes.
5. After a prompt tone occurs through your headset, the two devices are connected.

 


■ Connecting your Headset

1. Press the **Menu** soft key.
2. Press  or  key to choose **Bluetooth** menu, then press the **Select** soft key.
3. Press the  key to choose **Device List**, press the **Select** soft key.
4. The display shows all devices that have been paired before. Press  or  key to choose the desired one, press the **Select** soft key.
5. Press **Select** soft key to choose **Connect**. When the connection is successful, **the Bluetooth LED on the handset lights on**.

Note:

- To ensure your calling quality, you are recommended to use the headset within a distance of 3 meters with the handset.

Adding the Phone book Entries




1. Press the **Menu** soft key.
2. Press  key to choose **Phonebook**, press the **Select** soft key.
3. The display shows **Empty** or phonebook entries you have stored, press the **Select** soft key, press **Select** soft key again to choose **New**.
4. The display shows "**Name ?**". Enter the name you want to use, then press the **Save** soft key to confirm. The display shows "**Number?**". Enter the desired number (up to 24 digits), press the **Save** soft key.
- 5.*Use  or  key to select the ring you like to associate with the number, press the **Select** soft key.
6. Repeat if necessary.

- * If you want to set a VIP number, you should select a special ring tone for it. The ring tone should be different from the external ring you have set. You can set up to 9 VIP ring tones on the cordless handset associate with 9 VIP numbers/groups.


Note:

- If you make a mistake while entering a number, use the **Erase** soft key to correct it. Each time you press the key, the last digit is deleted.

Viewing the Phone book Entries

1. In the standby mode, press the  key.
2. Press  or  key repeatedly until the desired entry is displayed.

Dialing a Number from Phone book

Find out the number you want to dial. Refer to "Viewing the Phone book Entries". Then press the  key or **Dial** soft key.

■ Phone Book






The phonebook built in your cordless handset allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the phone number.

Character Map







To enter a specific alphanumeric character, press one or more times the relevant key for the required character according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order
0	(spc) 0 ? & / . , !
1	1 @ _ + - " () %
2	A B C a b c 2
3	D E F d e f 3
4	G H I g h i 4
5	J K L j k l 5
6	M N O m n o 6
7	P Q R S p q r s 7
8	T U V t u v 8
9	W X Y Z w x y z 9


■ Disconnecting your Headset

1. Press the **Menu** soft key.
2. Press  or  key to choose **Bluetooth** menu, then press the **Select** soft key.
3. Press the  key to choose **Device List**, press the **Select** soft key.
4. The display shows all devices that have been paired before. Press  or  key to choose the desired one, press the **Select** soft key.
5. Press **Select** soft key to choose **Disconnect**. Then a prompt tone occurs through the headset.




■ Removing a Paired Headset

1. Press the **Menu** soft key.
2. Press  or  key to choose **Bluetooth** menu, then press the **Select** soft key.
3. Press the  key to choose **Device List**, press the **Select** soft key.
4. The display shows all devices that have been paired before. Press  or  key to choose the one you want to remove, press the **Select** soft key.
5. Press the  key to choose **Remove**, then press the **Select** key to delete the headset.


Basic Functions



All descriptions in this manual assume that the telephone is in standby mode. Set the cordless handset to standby mode by pressing the  key.

Making a Call

1. Lift the handset and press  or .
2. Dial a telephone number.
3. To end the call, either press  or replace the handset on the base.



You can enter the desired phone number in standby mode, which allows you to make corrections before dialing. Follow these steps:

1. Enter a telephone number (up to 24 digits). Check it. You can also use the **Erase** soft key to delete the last digit or  key to insert a pause if necessary.

2. When the number appears correctly, press  or .

Call Switching

During a call, you can switch between the handset and the Bluetooth headset.

1. During a call with the handset, press , the call switches to the Bluetooth headset.
2. To switch back, press , the call switches back to the handset.

Notes:

- The DECT handset must be first paired and connected to the headset via Bluetooth. For more details please refer to Bluetooth section.
- Check the manual of your Bluetooth headset for more information.

Menu Map

1. CID Book (see page 26)

2. Phonebook

- New (see page 34)
- View (see page 34)
- Edit (see page 35)
- Delete (see page 35)
- Delete All (see page 35)
- PB Status (see page 36)

3. BS Settings

- Delete HS (see page 37)
- Dial Mode (see page 37)
- Flash Time (see page 38)
- Modify PIN (see page 38)

4. HS Settings

- Alarm (see page 39)
- Ring Setup (see page 23)
- Tone Setup (see page 40)
- Language (see page 28)
- HS Name (see page 41)

- LCD Contrast (see page 41)
- Auto Answer (see page 42)
- Amplified (see page 42)
- Date & Time (see page 43)
- Selected BS (see page 44)

5. Bluetooth

- Add Device (see page 16)
- Device List (see page 16)



6. Registration (see page 45)

7. Default (see page 46)

Handset Operations

■ Menu Navigation

To access a menu option:



1. To display menu items, press the **Menu** soft key.
2. To scroll through menu options, press the  or  key repeatedly.
3. To select a menu, press the **Select** soft key when the desired menu appears on the LCD.
4. Repeat if necessary.

To return to previous screen from menu:

If you press the **Back** soft key, the handset returns to the previous screen.


To return to standby mode, press the  key.




To set the answering machine:

1. Press the **TAM** soft key in standby mode.
2. To scroll through TAM options, press the  or  key repeatedly.
3. Press the **Select** soft key to confirm.

■ Receiving a Call







When a call is received, the **New Call** information will appear on the LCD. When a cell call comes in, **C** appears.

If the caller can be identified, the caller's phone number is displayed. If the caller cannot be identified, only the **New Call** information displays. If you have a voice message, the "**MSG WTG ON**" and  icon will be shown on the LCD.

1. Press  to answer a call through the handset or press  to answer a call through a connected Bluetooth headset. If you have activated the Auto Answer function, when the handset is on the base, simply lift it to answer.
2. To end the call, either press the  key or replace the handset on the base.

Result: After you hang up, the LCD displays the call duration.

Notes:

- You can select the ringer volume by using the  or  key when the phone rings with an incoming call.
- If you want to deactivate the  icon, press the  key in standby mode, then press and hold the  key. After that, press the  key to return to standby mode. (The handset must be registered to the base.)
- If the polyphonic ring tone (Melody 6~10) is set, the ring tone may continue for 4 seconds after the caller's hang-up or after the parallel phone had answered the call.

Muting the Microphone

During a conversation, you can temporarily switch your phone's microphone off, so that the other party cannot hear you.

Example: You want to say something to another person in the room but do not want the other party to hear you.

To mute your microphone, press the **Mute** soft key during the conversation. The "**Call Muted**" appears on the LCD.

To unmute the microphone, press the **Unmute** soft key on the cordless handset. You will restore the normal condition.

Amplification Function

Your phone is equipped with a specialized amplification function designed to fit your needs. During a conversation you can adjust the **Vol+** or **Vol-** control on the left side of the handset and use the **AMP** key on the right side. You can also adjust the **Tone** control to fit the levels to your hearing requirements. The selected volume will be displayed on the LCD. **By default the handset volume is set to volume 5.**



When you press the **AMP** key in receiver mode during a conversation, the red Amplify indicator on the handset lights on. If you press the **AMP** key again, the indicator will go out.

CAUTION: This telephone can produce very high (loud) sound levels. Repeated incremental exposure to amplification levels greater than 18 dB may be harmful to people without hearing loss.

 


One-touch Memories

You can store up to 5 numbers in direct memories. All the numbers will be stored in the phone book.

Storing Memory Numbers

1. Press the memory key (**M1~M4, SOS**) in the standby mode.
2. The display shows "**Number ?**". Enter the desired number (up to 24 digits), press the **Save** soft key.
3. Use  or  key to select the ring you like to associate with the number, press the **Select** soft key to confirm.

Viewing Memory Numbers

1. In the standby mode, press the  key.
2. Press  or  key repeatedly until the desired number is displayed.

Dialing from One-touch Memories

In the standby mode, press one of the memory keys (**M1~M4, SOS**) to dial out the corresponding number.

Editing Memory Numbers

Perform the steps of the "Editing the Phone book Entries" paragraph. Please refer to page 35.

Note:

 
- The memory default names are M1~M4 and SOS, you can add a name after them but cannot delete the default name. e.g. you can modify M1 to M1: home.

Deleting Memory Numbers

Perform the steps of the "Deleting the Phone book Entries" paragraph. Please refer to page 35.


■ Paging

You can page the handset from the base phone making it ring with a special tone. It's useful to locate a lost handset.


Press the  key on the base phone (less than 5 seconds), all the handsets registered to the base will ring for about 60 seconds.

■ Flash Signal

When the line is engaged, pressing the **Flash** soft key sends the Flash signal. This key is used in conjunction with special services (e.g. call waiting) which can be available in your phone network. For further details please contact your network telephone company.

To stop paging, press the  key on the base again or the **Back** soft key on the handset.

Note:

- On a long  key press, more than or equal to 5 seconds, the base will enter registration mode. For details, see page 45.

To use the said special services, just press the **Flash** soft key while the line is engaged: the display will show **R**.

■ Using Audio and Headset Jacks ■ Handsfree


 
Your handset is equipped with a Headset jack, providing total flexibility and multi-functionality. **The jack is amplified**, allowing you to adjust both the tone and volume.



Headset Jack

This jack can accommodate many hands-free headsets. Using this jack you can listen and speak through your hands-free headset.

During a call, you may turn on the speakerphone built in the handset or the base. In this mode you can enjoy the comfort of the handsfree conversation.

Cordless Handset:

To turn the feature on, press the  key during a call (line engaged). The  icon appears on the LCD.


 



To turn the feature off, and keep on talking in normal mode, press the  key again. The  icon will disappear.

Notes:

- Before putting the cordless handset near your ears, be sure you have turned the speakerphone off.
- To adjust the speakerphone volume, see page 21.

■ Ringer Setting

You can select your own external (from the telephone Network) or internal (from other handsets registered to the same base) ring tone and adjust the volume.

1. Press the **Menu** soft key.
2. Press  or  key to choose **HS Settings** menu, then press the **Select** soft key.
3. Press  or  key to choose **Ring Setup**, press the **Select** soft key.
4. Press the **Select** soft key to choose **INT Ring** or press the  key to choose **EXT Ring**, press the **Select** soft key.







Result: You can select the ring tone from Melody 1 to 10. When you adjust the ring tone, the phone sounds the selected melody.

5. Press the **Select** soft key to confirm.



At step 4, if you select **Volume**, and press the **Select** soft key, you can adjust the ringer volume from Volume 1 to Volume 5, or Volume Off to turn off the ringer. Press the **Select** soft key to confirm.

■ Selecting a Language





The handset supports up to 7 predefined languages: English, German, French, Italian, Dutch, Spanish and Portuguese. You can change the language used to display the menu messages.

1. Press the **Menu** soft key.
2. Press  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.
3. Use  or  key to choose **Language**, then press the **Select** soft key.
4. The languages will be displayed. Use the  or  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press **Select** soft key to select the required language and you will hear a confirm beep.

Add CID Number to Phone Book

1. Press the **Menu** soft key.
2. Press the **Select** soft key to choose **CID Book**.
3. Use  or  key to view the numbers, when the desired number displays on the LCD, press the **More** soft key to enter **Add to PB** menu.
4. Press the **Select** soft key, you are prompted to enter the name.
5. Enter the name and press the **Save** soft key, then you can modify the number you want to store.
6. Press the **Save** soft key, you are able to select the ring tone, press the **Select** soft key to confirm and exit, you will hear a confirm beep.


Delete the CID Numbers

1. Press the **Menu** soft key.
2. Press the **Select** soft key to choose **CID Book**.
3. Scroll to the number you want to delete by using  or  key.
4. When the desired number appears on the display, press the **More** soft key.
5. Use  or  key to choose **Delete**, press the **Select** soft key to confirm. You will hear a beep and the LCD shows the next number.
6. At step 5, if you choose **Delete All** menu and press the **Select** soft key, the display will show "**Repeat**". You can press the **Select** soft key to delete all the entries or press the **Back** key to cancel and exit.

Last Number Redial





1. Press the  key in standby mode.

Result: The LCD displays the last number you dialed.

2. Press the  key to dial out the number.

Both your cordless handset and base phone allow you to retrieve the last 10 numbers you have dialed and recall them quickly.

Search for and dial a number in Redial Book




1. Press the  key in standby mode.
2. If you want to scroll through the memory, press  or  key repeatedly until you find out the number you want to dial.
3. Press the  key to dial out the number.

Notes:

- If no numbers are found, "**Empty**" is displayed.
- When the redial book is full, each time you dial a new number, the oldest number stored in the redial book is automatically erased.

Use Redial Book options

Using the redial book options, you can add a number to phone book or delete a number in the redial book.



1. Press the  key.
2. Scroll to the desired number by using the  or  key.
3. When the number appears on the display, press the **More** soft key to choose the desired option:

- **Add to PB:** allows you to add the number to the phone book. Complete storing the entry by starting from step 4 described in par."Adding the Phone Book Entries" (obviously, you will find the number already entered in the appropriate field).
 - **Delete:** allows you to delete the selected number.
 - **Delete All:** allows you to delete the whole redial book.
4. To exit, press the **Back** soft key.

Note:

- *At step 3, when you select **Delete All** options, a message "Repeat" will further ask you to confirm the deletion. To confirm press the **Select** soft key, to cancel press the **Back** soft key.*

■ Call List






When you receive a call, if the caller's information is transmitted from the network on which the call was made (and the caller doesn't hide it), the caller's phone number is displayed. Moreover, if you missed one or more calls, the  icon will appear on the LCD. If the CID memory is full, the  icon will flash on the LCD.

Out Of Area - This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.



Private - If the caller has exercised the option to prevent his name and number from being sent, the message will show on the LCD.

View and dial any of the CID numbers

1. Press the **Menu** soft key.

2. Use the **Select** soft key to choose the **CID Book**, and if available, the numbers are displayed. (You can also access the CID book directly by pressing the  key in standby mode.)
3. Use  or  key to view the numbers, you can make a call by pressing  or . You can also add the entry to the phonebook.

Note:

- *Each item of the incoming list is marked with the  icon if the call has been reviewed or with the  icon if the call hasn't been reviewed yet.*

Customer Information

1. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
2. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
3. If this equipment [US: 6NYW400BA6BT] causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
4. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
5. If trouble is experienced with this equipment [US: 6NYW400BA6BT], for repair or warranty information, Service can be facilitated through our office at:
U.S. Agent Company name: ClearSounds Communications, Inc.
Address: 1743 Quincy Avenue #155 Naperville, IL 60540 U.S.A
Tel: +630-654-9200
Fax: 630-654-9219
If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
6. Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified. For repair procedures, follow the instructions outlined under the limited warranty.
7. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

8. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this [A6BT] does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
9. If the telephone company requests information on what equipment is connected to their lines, inform them of:
 - a) The ringer equivalence number [0.0B]
 - b) The USOC jack required [RJ11C]
 - c) Facility Interface Codes ("FIC") [02LS2]
 - d) Service Order Codes ("SOC") [9.0Y]
 - e) The FCC Registration Number [US: 6NYW400BA6BT]
10. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point. For this product the FCC Registration number is [US: 6NYW400BA6BT] indicates the REN would be 0.0.
11. If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Privacy of communications may not be ensured when using this telephone!

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. For base unit it should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Warning

CS03:

This product meets the applicable Industry Canada technical specifications. / Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

RSS(Category I Equipment):

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Radio Apparatus Containing Digital Circuits (ICES-003)

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter, shall comply with ICES-003. In such cases, the labelling requirements of the applicable RSS apply, rather than the labelling requirements in ICES-003.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.