



i-800

iCreation Inc.

Unit 202, 3621 High Way 7 East, Markham ON, L3R 0G6 Canada
TM and © iCreation Inc. All rights reserved.

**Product
Information Guide**

**Welcome. You are using Color DECT
BT phone with iPhone charger.**

**This guide contains helpful information
that enables you to enjoy all of the features
of your phone.**

Introduction

Thank you for purchasing the color DECT BT phone. Your new DECT (Digital Enhanced Cordless Telecommunications) can connect to an iPhone with Bluetooth function, which enables you to make calls through cell phone lines and landline. Enjoy these additional features, as well:

- Large displays and accessible menus.
- Color display - Customizable with wallpapers and **brightness**.
- iPhone charger - Charge an iPhone using a port on your new phone.
- Contacts list - Your personal phonebook of up to 200 listings, arranged alphabetically.
- Phonebook synchronization - You can download the phonebook from iPhone and review it via your DECT phone.
- **DECT handset controls iPhone music playing**
- Speakerphone - Enjoy handsfree conversations.
- 12 rings tones and sleep mode - Sleep mode automatically switches the phone to the minimum volume at night.
- Alarm clock
- Personal cordless network - Connect up to five handsets to your base. Each handset can access up to four additional base units in order to extend your total wireless coverage.

Because we are committed to continuous quality improvement, specifications and features may vary without prior notice.


Certain services, such as Caller ID, are available only if provided by your local telephone network.

CAUTION

The programmer port and base bolt are removable. Do not remove them when the telephone line is connected.

Technical Specifications

Frequency Range	1.92~1.93GHz
Channels	60 Duplex channels
RF Carrier Power	<100mW
Modulation	GFSK
Frequency Stability	< 50 KHz
Charging time	15 hours
Ambient temperature	Normal: 15°C ~ 35°C Extreme: -20°C ~50 °C
Humidity	0%~90%
Size (mm)	Base: 255 x 74 x 67; Handset: 178.5 x 47 x 13
Power supply	Base input: 7.5V, 2A; Handset input: Li-ion 1000mAh


 Design and specifications are subject to change without notice.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Warnings

 Your DECT BT phone has been carefully designed to give you years of safe, reliable performance. As with all electrical equipment, however, there are a few basic precautions that you should take to avoid hurting yourself or damaging the unit:

- Read the instructions in this handbook carefully. Be sure to save it for future reference.
- Read and follow all warning and instruction labels on the equipment itself.
- Be sure to use only the switching power supply in the package, and ensure that your power source matches the rating listed for it. If you are not sure, check with your dealer or with your local power company.
- Avoid strong shocks. Don't use the switching power supply if it has received any hard knocks or looks damaged in any way; immediately contact an authorised service center.
- Hold your handset firmly. Otherwise it may fall and be damaged.
- Do not operate the phone in an explosive atmosphere.
- Do not use the phone near water, or spill liquid of any kind on it. If you think that liquid has penetrated the phone, immediately unplug it, dry it with a soft, clean cloth and contact your dealer.
- Respect the environmental conditions. All of the parts of this equipment are designed for indoor use only. Never expose them to extremely hot or cold temperatures. Don't expose the cordless telephone to excessive vibrations or dusty, rainy places.
- Never try to disassemble or service the equipment by yourself (aside from the routine maintenance described in this handbook). Doing so immediately voids the warranty, and you can cause damage requiring extensive repair work. Always contact your local dealer for assistance.
- Handle the batteries properly. Particularly, strictly follow the directions stated in this guide.
- Never use the phone with non-suitable batteries, and charge them only with the supplied base. The use of any non-genuine parts can create hazards, electric shocks and other risks, and voids the warranty.
- In case of problems, please refer to this information guide or contact your dealer or the nearest official service center. Every service operation not provided by official service centers voids the warranty.
- The phone cannot be used to place calls, including emergency calls, under these conditions: during power failure, if batteries are defective or depleted, or if the keypad is locked.
- Do not use this phone near emergency medical equipment or near people with implanted electrical devices, such as pacemakers. Additionally, radio signals between the handset and the base can interfere with hearing aids, causing strong noise.

Contents

Chapter 1: Getting Started


- 7 Features List
- 9 Phone Layout
- 10 Key Functions
- 12 Handset Screen
- 13 Package Contents
- 14 Connecting
- 14 Installing the Battery
- 15 Charging
- 16 Turning On or Off the Phone
- 16 Registering a New Handset
- 17 Deactivating a Handset
- 18 Choosing the Dialing Mode
- 18 Setting Date & Time

Chapter 2: Bluetooth and Remote Control

- 20 Pairing with an iPhone
- 20 Connecting an iPhone
- 22 Disconnecting an iPhone
- 23 Removing a Paired iPhone
- 24 Remote Control for Music

Chapter 3: Basic Functions

- 26 Making a Call
- 28 Receiving a Call
- 29 Using the Speakerphone
- 29 Adjusting the Volume
- 29 Muting a Call

Symptom	Solution
The handset can only receive calls. The keypad locked.	Press and hold  .
The phone doesn't work properly with some special services or if it is connected to an exchange extension (PABX).	Check the Flash time and set it properly.
The battery charge level is very low.	Clean the charging pins, and if the problem is still not solved, replace the batteries.
Logical malfunctioning in the handset or base unit.	Try resetting the handset or the base.
Disable Bluetooth in the iPhone and then enable it again, the disconnected Bluetooth connection between the base and the iPhone cannot be automatically resumed.	Due to differences in each iPhone's software, so it is normal for some iPhone that the Bluetooth connection cannot be automatically resumed. If in this case, please establish the Bluetooth connection manually (See P20~ P21 "Connecting an iPhone").
If there are interference signals near or iPhone was taken away from the base (longer than 10 meters) ever, the phone may lose the connection with iPhone.	Switch off Bluetooth feature on iPhone, then switch it on again. / Power off the base and then power on.

Chapter 10: Additional Information

Troubleshooting

Symptom	Solution
The handset doesn't turn on.	Try charging the handset for a few minutes, then remove it from the base. If it still doesn't turn on, check the battery installation.
	If these efforts are unsuccessful, try replacing the batteries.
	Contact an authorized service center.
The handset works, but it doesn't access the base unit.	Check the connection of the switching power supply.
	Try registering the handset to the base.
The handset works and it accesses the base unit, but no dial tone is heard.	Check the connection of the phone line cord.
The handset works perfectly, but a beep occurs during phone calls.	Check the batteries charge and charge them if necessary.
There is noise and audio interference during phone calls.	Get closer to the base unit. If you can access more base units, try selecting a closer one.
The handset works perfectly, but it doesn't ring with incoming calls.	Select another ring level.

- 30 Last Number Redial
- 30 Flash Signal
- 30 Using a Pause
- 31 Out of Range Indicator
- 31 Locking the Keypad
- 32 Paging
- 32 Temporary Tone-Dial Switchover
- 33 Intercom
- 33 Transferring Calls between Handsets
- 34 Three-way Conference Calling

Chapter 4: Display and Sound

- 35 Brightness
- 35 Wallpaper
- 36 Handset Name
- 37 Ring Setting
- 38 Key Tone
- 38 Power Off Tone
- 39 Charging Tone

Chapter 5: Call Logs

- 40 Incoming Calls
- 42 Dialed Calls List

Chapter 6: Contacts

- 43 Storing Contact Entries
- 44 Character Map
- 45 Reviewing or Dialing a Number in Contacts
- 46 Speed Dial

- 46 Editing or Deleting Contacts
- 47 Download Phonebook from the iPhone

Chapter 7: Settings

- 48 Changing the Handset & Base PIN
- 50 Selecting a Base
- 51 Resetting the Handset or the Base
- 52 Auto Answer
- 53 Auto-Lock
- 53 Language
- 54 Version Information
- 54 Flash Time


Chapter 8: Date and Time

- 55 Date Format
- 55 Time Format
- 56 Alarm
- 57 Sleep Mode


58 Chapter 9: Menu Structure

Chapter 10: Additional Information

- 60 Troubleshooting
- 62 Technical Specifications

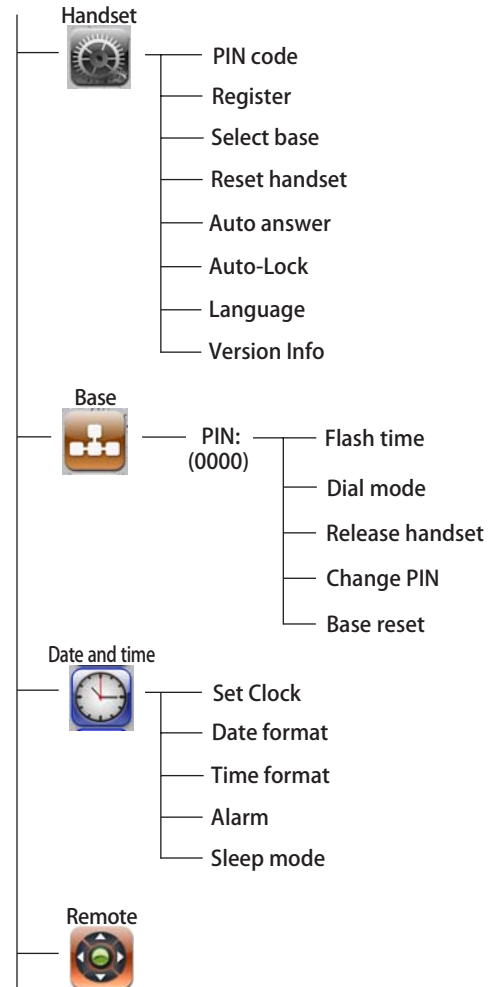

Chapter 9: Menu Structure

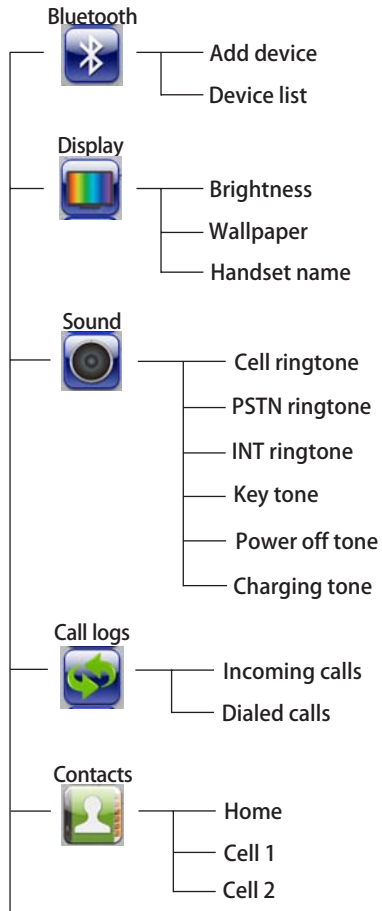

Chapter 1: Getting Started

Features List

Color DECT BT Phone

- 1.8G/1.9G and 2.4G DECT
- Charging cradle for iPhone4S/4/3GS/3G
- Bluetooth connection
- Receives and makes landline and cell phone calls
- Rotated charging cradle
- Reduce cellphone radiation
- 2 iPhones can sync. connect to the base
- Call switch between DECT phone and your iPhone
- **DECT handset controls iPhone music playing**
- **Touch keys on the handset and base**
- 2.2" TFT large color display
- Contact list (200 entries for landline, each 500 entries for cell1 & cell2)
- Phonebook synchronization
- Call log (30 missed, 30 answered, 20 dialed)
- Up to five handsets can be registered with one base
- Up to four bases can be registered with one handset
- 12 polyphonic and three monophonic ring tones
- Four ringer volume levels
- Three-way conference calling
- Call transfer
- Call hold
- Languages options
- Adjustable voice volume (5 levels)
- Adjustable brightness (**14 levels**)
- Handsfree speakerphone
- **High definition stereo speakers**
- Key tones (selectable)











- Auto answering (selectable)
- 4 selectable wallpapers
- Call duration display
- Internal calling
- Password protection
- Mute function
- Real clock (12-hour or 24-hour)
- Keypad lock
- Redial, Flash, Pause
- Preparation dialing
- Sleep mode selection
- Alarm

Landline

- FSK/DTMF Caller ID
- Incoming call indicator
- Private/Out of area notification
- Message waiting notification
- Selectable dialing mode
- Selectable Flash time

Sleep Mode

This feature enables you to not be disturbed by the ring tone at night. If the sleep mode is activated, the ring volume automatically switches to volume level 1 during the period of time that you set.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  Date and time, then press  beneath **Select**.
- 3 Press **Down**  to choose **Sleep mode**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON" to activate this feature or choose "OFF" to deactivate it, press  beneath **Select** to confirm.
- 5 If you choose "ON", enter the period of time that you define as sleep mode time, in 24-Hour format, and then press  beneath **OK**.

Note:

- **ZZ** appears on the screen.

Alarm

You can set an alarm to ring once or ring in regular intervals about every 10 minutes.

Activating the Alarm Feature

- 1 Press beneath **Menu** to display the main menu items.
- 2 Press to choose , then press beneath **Select**.
- 3 Press beneath **Select** to choose **Alarm**.
- 4 Press **Up** or **Down** to choose **"ON"**, and then press beneath **Select**.
- 5 Use the numeric keys to enter the time using the HH:MM format.
- 6 Press beneath **Select** to save the alarm time setting.
- 7 Press the **Left** or **Right** to select the ring type.
- 8 Press beneath **Select** to save the setting and return to the previous menu.
- 9 When the alarm sounds, press beneath **Stop** to stop it or press beneath **Snooze** to let it ring again after 10 minutes.

Deactivating the Alarm Feature


- 1 Perform steps 1 through 3 from the last section, and then choose **"OFF"**, and then press beneath **Select**.

Notes:


- If you selected **12-HOUR** in the **Time format** menu, enter the time in 12h format and use the **Up** or **Down** to select **AM** or **PM**.
- appears on the screen.

Phone Layout

Handset

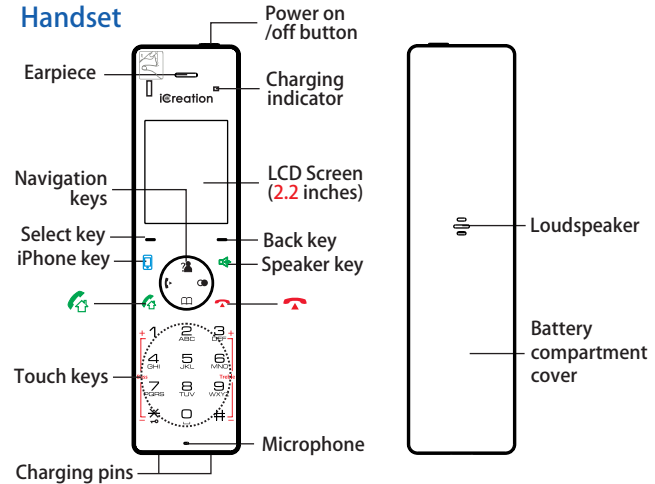

Base

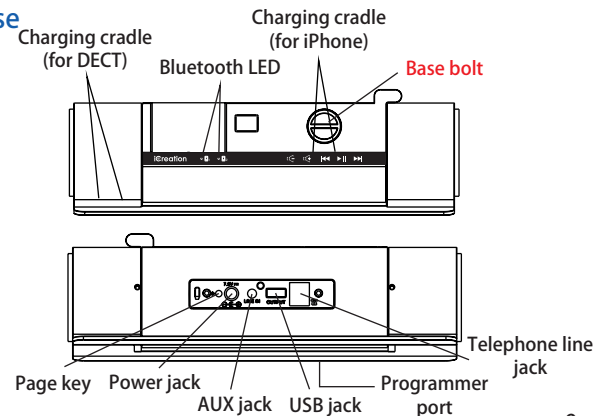

Key Functions



Press to enter # or to switch between upper case and lower case letters in the English mode.
Decrease the treble volume during music playing.



Press and hold to turn on the keypad lock function.
Decrease the bass volume during music playing.



Increase the bass volume during music playing.



Increase the treble volume during music playing.



Select keys: Press to perform the function listed above the key.



While navigating through menus, briefly press it to cancel your input and return to the main screen. During a call, briefly press it to end the call.



Press to place and answer landline calls.



Press to place and answer iPhone calls.



Press to activate the speakerphone for handsfree operation during a call.



Press to scroll up or down when browsing menus.
In standby mode:

- Left: Press to place an internal call.
- Right: Press to review outgoing calls list.
- Up: Press to view incoming calls list.
- Down: Press to review contacts.

During use:

- Up: Increases earpiece volume.
- Down: Decreases earpiece volume.

Chapter 8: Date and Time

Date Format

If you have set the date, you can choose the date format.








- 1 Press beneath **Menu** to display the main menu items.
- 2 Press to choose ^{Date and time}, then press beneath **Select**.
- 3 Press **Down** to choose **Date format**, then press beneath **Select**. Three different date formats appear, (MM/DD, DD/MM and MM-DD).
- 4 Press **Up** or **Down** to highlight the format that you prefer, then press beneath **Select**.

Time Format


If you have set the time, you can choose the time format.


- 1 Press beneath **Menu** to display the main menu items.
- 2 Press to choose ^{Date and time}, then press beneath **Select**.
- 3 Press **Up** or **Down** to choose **Time format**, then press beneath **Select**. Two different time formats appear, (12-hour and 24-hour).
- 4 Press **Up** or **Down** to highlight the format that you prefer, then press beneath **Select**.










Version Information

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose , then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Version Info**, then press  beneath **Select**. The current Handset model number, Hardware version, HS EMC code and Software version information appear.

Flash Time


During a conversation,  allows you to access special services offered by your telephone network or to transfer a call to another extension if you are connected to a PABX (Private Automatic Branch of eXchange).

If your  key does not work properly, you need to adjust the Flash time, as follows:

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose , then press  beneath **Select**.
- 3 You are prompted to enter the current base PIN code (the default PIN is **0000**). Use the numeric keys to enter and press  beneath **OK**.
- 4 Press  beneath **Select** to access **Flash time**. The current setting appears.
- 5 Press **Left**  or **Right**  to choose the desired flash time, then press  beneath **Save**. You can choose from 100ms, 120ms, 300ms or 600ms.

Select Keys

Press the left  or right  button to initiate the function shown above it, on the display.

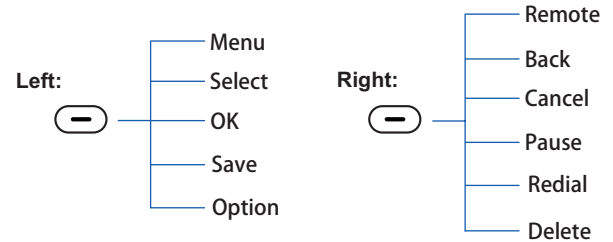















- | | |
|---------------|------------------------------------------|
| Remote | Enter the remote control for music mode. |
| Back | Return to the previous menu. |
| Cancel | Cancel your setting. |
| Delete | Clear digits or characters. |
| Pause | Insert a pause while dialing a number. |
| Redial | Redial the last-dialed number. |
| Select | Select the highlighted menu item. |
| Save | Save a contact number. |
| Option | List options during a call. |
| OK | Confirm a selection. |
| Menu | Enter the main menu: |












 
Handset Screen

The screen shows various icons.

	Signal strength. The greater the number of bars, the stronger the signal.
	The landline is engaged.
	The cellphone line is engaged.
az or AZ	Indicates the case in which letters will be entered (upper case or lower case).
0-9	Indicates that only digits can be entered.
	Battery charge level.  Fully charged status  Low battery  Very low battery warning
	Ringer volume is deactivated.
	Sleep mode is activated.
	Alarm clock is set.
	The microphone is temporarily muted during a conversation.
	Speakerphone is enabled.
	There are one or more missed calls.
	Keypad is locked.











Auto-Lock

When you have activated this feature, some time (about 25 seconds) later if no operation is taken, the keypad will be auto-locked. Then you need to press the power on button on the top of the handset to unlock it.











- 1 Press  beneath **Menu** Handset to display the main menu items.
- 2 Press  to choose , then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Auto-Lock**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON" to activate this feature or choose "OFF" to deactivate it, press  beneath **Select**.

Language

You can change the language used to display the menu messages. There are multiple languages available.

- 1 Press  beneath **Menu** Handset to display the main menu items.
- 2 Press  to choose , then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Language**, then press  beneath **Select**. The current language appears.
- 4 Press **Up**  or **Down**  to select the language that you want, press  beneath **Select**.

Resetting the Base











- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Base}, then press  beneath **Select**.
- 3 The handset prompts you to enter the current base PIN code (the default PIN is **0000**). Use the numeric keys to enter the PIN, and then press  beneath **OK**.
- 4 Press **Up**  or **Down**  to choose **Base reset**, then press  beneath **Select**.
- 5 "B Reset ?" appears. Press  beneath **OK** to confirm.
- 6 Press .

Notes:

- Be careful! When you reset the handset, you will lose any data stored in it (e.g. Numbers in the incoming and outgoing lists). Jot them down before resetting the handset.
- Resetting the base does not affect the handsets registered to the base.


Auto Answer

You can answer a call by simply picking up the handset from the base, without pressing any key.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Handset}, then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Auto answer**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON" to activate this feature or choose "OFF" to deactivate it, press  beneath **Select**.

Package Contents


Once you have unpacked your phone, make sure that you have all of these parts. If any component is missing or broken, please call your dealer.

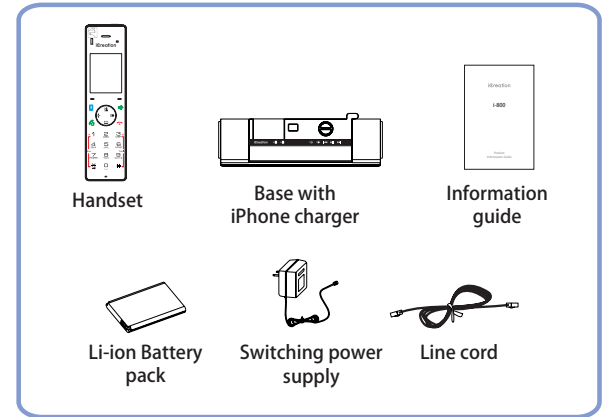

*The shapes of the plug varies according to each country's specification.

Connecting


- 1 Connect the plug of the power supply to the power jack of the base, and then plug the power supply into a standard AC wall outlet.
- 2 Connect one end of the phone line cord to the phone line jack on the base, and then connect the other end to a standard phone wall outlet.

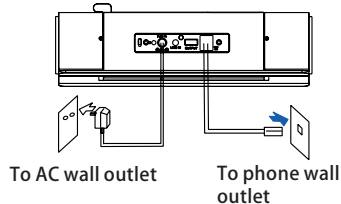

Installing the Battery

Rechargeable Li-ion battery pack (1000mAh) comes with your phone. Install the batteries before use.

- 1 **Break the battery cover off from the position indicated in the picture below.**
- 2 **Insert new battery as indicated.**
- 3 **Replace the battery cover and snap it into place.**

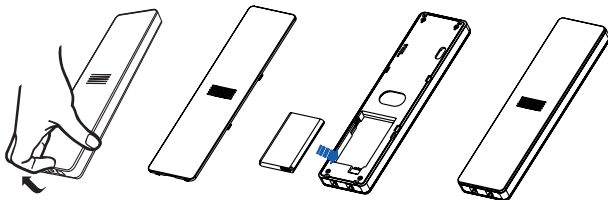










Resetting the Handset or the Base

If you reset the handset or the base, all of the user-selectable features restore to the factory settings: When resetting the handset, the incoming and outgoing lists will be erased, but the Contacts and Flash time do not reset.

The handset and base can be reset independently. It is useful for the following purposes:












- If you have made many wrong settings and you want to restore the handset to the factory presets.
- If the phone shows logical malfunctions (incorrect symbols on the display, incorrect behavior, etc.), the problem can be caused by a switching power supply noise or an electrostatic spike that can temporarily alter the memory of the internal microprocessor. Resetting could solve the problem.

Resetting the Handset

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose **Handset**, then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Reset handset**, then press  beneath **Select**.
- 4 The handset asks you to enter the current handset PIN code (the default PIN is **0000**). Use the numeric keys to enter and press  beneath **OK**. "**Reset ?**" appears. Press  beneath **OK** to confirm.
- 5 Press .

Selecting a Base

Your handset can be used with up to 4 base units, provided that it has been registered with them. This menu option enables you to select which base you want to use:

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Handset}, then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Select base**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to select the base, then press  beneath **Select**.
- 5 Press .

Notes:

- ✓ appears to the right of the selected base.
- If the selected base has not been registered with your handset, **"Not registered"** appears.
- At step 4, if you select **"Best base"**, handset finds the first available unit as you move around.

Notes:


- Do not insert or take out the battery when there is power supply connected.
- Replace battery if it doesn't recover its full storage capacity after recharging.

Charging


DECT Phone & iPhone

Before initial operation, fully charge the DECT phone for 15 hours or more.

To charge the DECT phone or iPhone, simply place it on the base.

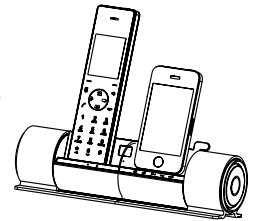

Notes:

- When charging, the bars in  scroll **and the charging indicator on the handset lights on**.
- You can adjust the visual angle of the iPhone according to your needs (from **70** degrees to **85** degrees). **Adjust the base bolt according to the thickness of your iPhone**.
- Nothing appears on the screen when the battery power is very low. Fully charge the handset before use.

Other Mobile Phones

To charge some other mobile phones, plug the connector in the USB port on the base, then plug the other connector in the port of your mobile phone.

Note:

- Please do not charge the iPhone and other mobile phone at the same time.

Turning On or Off the Phone


 








When you place the handset (DECT phone) on the base, it automatically turns on.

To turn on the handset (when it's off), press the Power on/off button on the top of the handset.










To turn off the handset, press and hold this button until **Power off?** appears. Then press **OK** to confirm, **Goodbye!** appears.

Registering a New Handset

To share your phone line with other people, you can register up to 5 handsets to your base. To do this, assign a new number to each handset that you register. The supplied handset is already registered with the number 1, appearing as 1. For security reasons, the registration procedure can only be performed by people who are close to your base and know the REGISTER PIN. Please note that this PIN cannot be modified.

- 1 On the base, press and hold  on the rear of the base for about three seconds, and then release the button.
- 2 Press  beneath **Menu** to display the main menu items.
- 3 Press  to choose  , and then press  beneath **Select**.
- 4 Press **Down**  to choose **Register**, then press  beneath **Select**.
- 5 Press **Up**  or **Down**  to choose the base number that you want. Press  beneath **Select** to search the base. The display shows a series of characters.

Base PIN









- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  , then press  beneath **Select**.
- 3 The handset prompts you to enter the current base PIN code (the default PIN is **0000**). Use the numeric keys to enter the code and press  beneath **OK**.
- 4 Press **Up**  or **Down**  to choose **Change PIN**, then press beneath **Select**.
- 5 Enter the new four-digit PIN, and press  beneath **OK**.
- 6 Enter the new PIN code again to confirm it, then press  beneath **OK** to save the setting.

Chapter 7: Settings

Changing the Handset & Base PIN



Base and handset PINs are required to protect your phone against unauthorized use. They are set to **0000** at the factory. You can change the PINs as follows:

Handset PIN

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Handset}, then press  beneath **Select**.
- 3 Press  beneath **Select** to choose **PIN code**.
- 4 Enter the current PIN code, then press  beneath **OK**.
- 5 Enter the new four-digit PIN, and press  beneath **OK**.
- 6 Enter the new PIN code again to confirm it, then press  beneath **OK** to save the setting.

Note:

- At step 4, if you enter the wrong PIN, your phone generates a warning sound.










- 6 Press  beneath **Select** to confirm. The display asks you to enter the AC (the authentication code is **0000**). Enter this code and press  beneath **Select**.
- 7 If the registration is successful, a confirm tone occurs and the new handset shows the handset number (e.g. **1**).

Note:

- To extend radio coverage, a handset can be registered to up to 4 different base units. A base can be used with up to 5 handsets, and one base can connect to only one handset at a time.







 



Deactivating a Handset

If necessary, you can clear a handset's registration, but you cannot deactivate the handset that you are using.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Base}, then press  beneath **Select**.
- 3 Enter the current base PIN (the default is **0000**) and press  beneath **OK**.
- 4 Press **Up**  or **Down**  to choose **Release handset**, then press  beneath **Select**. "H Desub ?" appears. Use the keypad to press the handset number for which you want to clear the registration, then press  beneath **OK**. A confirm tone occurs, and the handset cannot be used anymore with the base.

Choosing the Dialing Mode







Your phone can be set to pulse dialing (rotary), or tone dialing (DTMF). To change the dialing mode:




- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Base}, then press  beneath **Select**.
- 3 Enter the current base PIN (the default is **0000**) and press  beneath **OK**.
- 4 Press  to choose **Dial mode**, then press  beneath **Select**. The current setting appears.
- 5 Press  or  to choose **DTMF** or **PULSE**, then press  beneath **Save** to confirm.

Setting Date & Time

Your phone can display the current date and time.








You must set the correct date and time to indicate when calls or messages are received.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Date and time}, then press  beneath **Select**.
- 3 Press  beneath **Select** to choose **Set Clock**. The current settings are displayed:
- 4 Using the keypad, enter the current date and time (four digits for each, as explained below in the notes).
- 5 Press  beneath **Select** to save the setting.

- 3 Press  beneath **Select** to display the option menus.
- 4 Press  or  to choose the desired option:
 - **Edit** - allows you to edit the selected entry.
 - **Delete** - deletes the selected entry.
 - **Delete all** - deletes all of the contact entries.

Download Phonebook from the iPhone

Up to 2 cell phonebooks can be downloaded to your DECT phone via Bluetooth wireless technology. Each downloaded phonebook can store up to 500 entries. You can access any phonebook entry and use it to make a call on the landline or either of two iPhones.

- 1 Make sure that the iPhone is already connected to the DECT phone with Bluetooth, and place your iPhone next to the telephone base during the downloading.
- 2 Press  beneath **Menu** to display the main menu items.
- 3 Press  beneath **Select** to choose  ^{Contacts}, then press  or  to choose **Cell 1** or **Cell 2**.
- 4 If available, press  to choose **Update**, then press  beneath **Select**. The contacts from the iPhone is updated on the DECT phone.
- 5 After that, you can review the iPhone's contacts via your DECT phone.















Important Note:

Since the speed of Bluetooth transmission is limited, the process of contacts downloading may last for several minutes. If there is an incoming call when contacts downloading is in progress, the downloading is terminated. You have to repeat above operations.



Speed Dial

You can store up to 9 speed dial numbers on the numeric keypad (1~9), so you can easily dial the numbers by pressing and holding the associated numeric key.

Storing Speed Dial Numbers


- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  beneath **Select** to choose  , then press  beneath **Select** to choose **Home**.
- 3 Press **Up**  or **Down**  to choose **Speed dial**, then press  beneath **Select**.
- 4 Repeatedly press **Up**  or **Down**  to select the desired location (**KEY 1~KEY 9**), and then press  beneath **Modify**.
- 5 You can press **Up**  or **Down**  to scroll to the desired entries, and then press  beneath **Select**.
- 6 Press  beneath **Select** again to confirm.

Dialing a Speed Dial Number





Press and hold the numeric key (1~9), then press  to dial the number through your landline or dial it through your iPhone using .

Editing or Deleting Contacts

You can edit or delete a number in the contacts, as follows:

- 1 Find the desired number in the contacts.
- 2 Press  beneath **Select** to view the details of the selected entry.





Notes:

- If you selected **12-HOUR** in the **Time format** menu, enter the time in 12h format and use **Up**  or **Down**  to select **AM** or **PM**.
- When setting the month, you can enter 1 digit or 2 digits at a time, but it is displayed in 2-digit format. (For example: For August, you can enter 8 or 08 in the month field, but the display shows "08".)
- After the time setting, press  beneath **Select** to set the date. During the date setting, press **Left**  to switch to time setting.
- If your service uses the FSK standard, the date and time is automatically set when you receive a call to this unit.

Chapter 2: Bluetooth and Remote Control

Pairing with an iPhone

To use an iPhone with your DECT phone, you must first pair and connect the iPhone with the DECT phone.

- 1 Turn on the Bluetooth feature of your iPhone. Click **Settings**, **General**, **Bluetooth** and **OFF**, then the iPhone searches for available devices.
- 2 Press  beneath **Menu** to display the main menu items.
- 3 Press  to choose , then press  beneath **Select**.
- 4 Press  beneath **Select** to choose **Add device**. The LCD shows **Please wait...**, and the Bluetooth LED flashes.
- 5 When the iPhone finds **i-800**, click **Not Paired** to connect it with the base. When the iPhone is successfully connected, **Connected** displays.

Connecting an iPhone

All Bluetooth-paired devices are stored in the Device list, and only devices in the list can establish a Bluetooth connection with the DECT phone. Although seven iPhones can be paired with the DECT phone, only two iPhones can be connected to the base and be engaged in a call at one time.









Method 1: Using the iPhone

- 1 Click **Settings**, **General**, **Bluetooth**. If the Bluetooth feature is switched off, click **OFF** to switch it on.
- 2 Click **Not Connected** to the right of **i-800** to connect the iPhone to the DECT phone. When the connection is successful, **Connected** appears.







Reviewing or Dialing a Number in Contacts

You can search stored contacts by entering the first characters of their names (alphabetic search). You can also scroll through the entire list without accessing the **Contacts** menu.


Method 1: Alphabetic Search

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  beneath **Select** to choose  ^{Contacts}, then press  beneath **Select** to choose **Home**.
- 3 Press  beneath **Select** to access **View**.
- 4 Enter the first few letters of the name by using the alphanumeric keys, and press  beneath **Select**. The details appear.
- 5 Press  to dial the number through your landline or dial it through your iPhone with .

Method 2: Searching by Scrolling the Contacts List

- 1 Press  beneath **Contacts**. The entire list appears in alphabetical order.
- 2 Repeatedly press **Up**  or **Down**  to scroll to the desired entry.
- 3 Press  beneath **Select** to view the details of the selected entry.
- 4 Press  to dial the number through your landline or dial it through your iPhone with .

Method 2: In Standby Mode


 
- 1 Enter a phone number, then press  beneath **Save**.
- 2 Complete storage by starting from Step 4 in the last paragraph of **Method 1**.

Character Map











To enter a specific alphanumeric character, press the relevant key according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order	
0	(spc) 0 € £ \$ ¥ ì ï ð	
1	1 . , ; ? ! - * # ì & / : () "	
2	A B C 2 Ä Ç	a b c 2 ä à ç á
3	D E F 3 É	d e f 3 è é
4	G H I 4 Ğ ì	g h i 4 ı ğ ì í
5	J K L 5	j k l 5
6	M N O 6 Ñ Ö	m n o 6 ñ ö ò ó
7	P Q R S 7 Ş	p q r s 7 ş ß
8	T U V 8 Ü	t u v 8 ü ù ú
9	W X Y Z 9 Æ Ø Å	w x y z 9 æ ø å




 
Notes:

- To delete letters, use  beneath **Delete**.
- If you want to shift the case while entering letter, press .
- When entering the same letter twice or a different letter on the same key, wait for a few seconds for the cursor to move automatically, and then select the next letter.

Method 2: Using the DECT Phone Menu

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Bluetooth}, then press  beneath **Select**.
- 3 Press **Down**  to choose **Device list**, press  beneath **Select**.
- 4 The display shows all devices that have been paired before. Press **Up**  or **Down**  to choose the desired device, press  beneath **Select**.
- 5 Press  beneath **Select** to choose **Connect**. When the connection is successful, **Connected** appears to the right of **i-800** on the iPhone screen.











Method 3: Quick Connection

- 1 When no device is connected with the DECT phone, press  on the DECT phone.
- 2 The display shows all devices that have been paired before. Press **Up**  or **Down**  to choose the desired device, press  beneath **Select** to complete the connection.
- 3 When the connection is successful, **Connected** appears to the right of **i-800** on the iPhone screen.

Notes:

- If you switch off the Bluetooth function on the iPhone then switch on, you must connect it again.
- To ensure your calling quality, you are recommended to use the iPhone within a distance of 3 meters with the DECT base.

Disconnecting an iPhone








 
 





- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Bluetooth}, then press  beneath **Select**.
- 3 Press **Down**  to choose **Device list**, press  beneath **Select**.
- 4 The display shows all devices that have been paired before. Press **Up**  or **Down**  to choose the desired device, press  beneath **Select**.
- 5 Press  beneath **Select** to choose **Disconnect**. Then a prompt tone occurs and **Not Connected** appears to the right of **i-800** on the iPhone screen.

Chapter 6: Contacts








You can store frequently used numbers so that you can easily make a call without having to remember or enter the phone number. You can store up to 200 entries in your contact list.

Storing Contact Entries

Method 1: Using the Contacts Menu


















- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  beneath **Select** to choose  ^{Contacts}, then press  beneath **Select** to choose **Home**.
- 3 Press **Up**  or **Down**  to choose **New number**, then press  beneath **Select**.
- 4 Enter a name. For additional details, please see the "Character Map".
- 5 Press **Down**  to move the cursor to the number field, then enter the appropriate phone number (up to 16 digits). Press and hold  to insert a pause if necessary.
- 6 Press **Down**  to highlight the ring type number at the right of , then press **Left**  or **Right**  to select a ring to associate with the number.
- 7 Use the same method to associate a picture with this number, press  beneath **Save** to confirm.

Notes:

- At step 5,  or  changes to . This indicates that you can only enter digits.
- If you make a mistake while entering a number or name, press  beneath **Delete** to clear the last character. You can also use **Left**  or **Right**  to navigate to incorrect characters, then press  beneath **Delete** to clear them.

Dialed Calls List

The last 20 dialed calls are stored in the **Dialed Calls** list. You can review, redial, delete and save these numbers.














- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Call logs}, then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Dialed calls**, then press  beneath **Select**. The last dialed number appears on the screen.
- 4 Press **Up**  or **Down**  to find the desired number, press  beneath **Select**.
Press  to dial it via your landline or dial it via your iPhone using .
- 5 Press  beneath **Select** to display the option menus.
- 6 Press **Up**  or **Down**  to choose the desired option:
 - **Add to contacts** - allows you to save the number in the contacts list. If the number is longer than 16 digits, only the first 16 digits are stored.
 - **Delete** - deletes the selected number.
 - **Delete all** - allows you to delete the entire dialed calls list (a prompt confirms your intent). Press  beneath **Select** to confirm or  beneath **Cancel** to exit without deleting the entries.

Note:

- At step 3, if the list is empty, "**No record.**" appears.

Removing a Paired iPhone

If you already have the maximum of seven paired iPhones in the Device list and you want to add another iPhone, you must first delete a paired iPhone.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Bluetooth}, then press  beneath **Select**.
- 3 Press **Down**  to choose **Device list**, and then press  beneath **Select**.
- 4 The display shows all devices that have been paired. Press **Up**  or **Down**  to choose the one you want to remove, and then press  beneath **Select**.
- 5 Press **Down**  to choose **Remove**, and then press  beneath **Select**. The display shows **Remove ? iPhone**. Press  beneath **Select** to confirm. After successful operation, a confirm tone occurs.
- 6 In your iPhone, delete the DECT Bluetooth information. Click  on the right side of **i-800**, then click **Forget this Device**. **Forget Device** appears. Click it to delete.

Reminder





Some of Instant Messenger, such as Viber, Skype, Fring, Im+, Nettek..... may not well support Bluetooth protocol, please check with relevant providers and update the software to use i-800 properly.

Thanks!

Remote Control for Music


This feature allows you to control iPhone music playing via your handset or base.

 Method 1: Using the Handset

- 1 Insert your iPhone on the charging cradle of the base, then use it to play music.
- 2 Press  beneath **Menu** to display the main menu items.
- 3 Press  to choose  , then press  beneath **Select** to enter the following interface.





LCD display

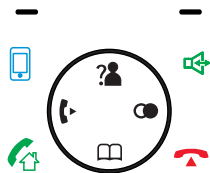





Corresponding keys

 

Press  to play, press it again to pause.

Press **Up**  or **Down**  to adjust the volume.

Furthermore, press  or  to adjust the bass volume.

Press  or  to adjust the treble volume.

During the playing, press **Left**  to replay the current track, press it twice to play the previous track, press **Right**  to get the next one.

When the playlist appears on the iPhone screen, use  and  to scroll up and down and select the track.





 
 
Press  to exit.

Notes:

- At step 3, if the list is empty, "**No record.**" appears.
- When "**Missed calls xx**" appears, you can press the **OK** key to access the Incoming Calls list.
- If the caller has specified that his name and number not be sent, "**Private**" appears on the screen and in the list.
- "**Out of area**" appears and is stored in the incoming call list when someone calls from an area where the telephone company does not offer identification services or name and number delivery to your region.


Incoming Calls Options

You can save or delete a number in the missed calls list, as follows:

- 1 Find the desired number in the incoming calls list.
- 2 Press  beneath **Select** to display the call information.
- 3 Press  beneath **Select** to display the option menus.
- 4 Press **Up**  or **Down**  to choose the desired option:
 - **Add to contacts** - allows you to save the number in the contacts list. If the number is longer than 16 digits, you can store only first 16 digits of the number.
 - **Delete** - deletes the selected number.
 - **Delete all** - allows you to delete the whole incoming calls list (a prompt confirms your intent). Press  beneath **Select** to confirm or  beneath **Cancel** to exit without deleting the entries.













Chapter 5: Call Logs

Incoming Calls

When you receive a call and you subscribe to your network provider's caller ID service, if the caller's information is transmitted from the network on which the call was made (and the caller doesn't hide it), the caller's phone number is displayed. Additionally, you miss calls "**Missed calls**" followed by the number of missed calls (01, 02, etc.) and the icon  appears.

The last 30 received (or missed) calls are stored in the **Answered calls** list (or **Missed calls** list), and you can call back the numbers, delete them or store them in the contacts list. To view the numbers, you can access the **Answered calls** list (or **Missed calls** list).


Reviewing or Dialing a Number in the Incoming Calls List



- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  Call logs, then press  beneath **Select**.
- 3 Press  beneath **Select** to access **Incoming calls**. The list of incoming calls appears. Numbers received via a landline appear with , and numbers received via cellphone line appear with .
- 4 Scroll through the relevant calls list using **Up**  or **Down**  until you find the desired number, and then press  beneath **Select**. The **date and time** that you received the call appear.
- 5 To dial a number through your landline, press  or dial it through your iPhone using .

Method 2: Using the Base

Insert your iPhone on the charging cradle of the base, then use it to play music.

Press  to play, press it again to pause.

During the music playing, press  and  to adjust the volume.

During the playing, press  to replay the current track, press it twice to play the previous track, press  to get the next one.

Notes:

- iPod player on your iPhone is necessary to support this feature.
- To control the music playing, Bluetooth is unnecessary.
- **When the base is connecting an audio cable with other mobile phone to play music, please remove your iPhone from the charging cradle.**




Chapter 3: Basic Functions

Making a Call

When you dial, up to 25 digits appear on the screen.

 


You can place your calls in two ways:


Traditional Mode

- 1 Pick up the handset and press  to engage the line. You hear a dial tone, and  appears.
- 2 Dial a telephone number. The number appears on the screen. When you hear your called party, speak with a normal voice.
- 3 To end the call, press  or place the handset on the base.

High-featured Mode

This procedure is more convenient and reliable, because you can check the number as you enter it:










 
- 1 Enter a telephone number. Press and hold  to insert a pause if necessary. Check the number on the display.
- 2 If you make a mistake, correct it by using  beneath **Delete**.
- 3 When the number correctly appears, press  to dial it out through a landline.

Or press  to dial through your iPhone.

Note: The DECT phone must first be connected to the iPhone via Bluetooth. For more details please refer to **Bluetooth** section.

Charging Tone

Every time you place the handset on the base, a tone occurs. This tone confirms that the handset is charging. You can switch the tone **ON** or **OFF**.











- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Sound}, then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Charging tone**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON" to activate this feature or choose "OFF" to deactivate it, and then press  beneath **Select**.

Note:

- For normal use, we recommend that you leave the charging tone enabled. This makes the phone easier to use and avoids the risk improper placement in the charging cradle. In this case, the handset would not charge and it might go unnoticed.

Key Tone

Every time that you press a key, your handset acknowledges it with a key tone. You can disable the key tones.











- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  , then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Key tone**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON" to activate this feature or choose "OFF" to deactivate it, press  beneath **Select**.

Note:

- For normal use, we recommend that you leave the key tones enabled. This makes the phone easier to use.


 
 
Power Off Tone

When you turn off the handset, it generates a tone. You can disable the tone.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press the navigation keys  to choose  , then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Power off tone**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON" to activate this feature or choose "OFF" to deactivate it, and then press  beneath **Select**.

Call Switching between the DECT Phone and an iPhone


During a call, you can switch between your DECT phone and your iPhone.

- 1 During a cell line call using the DECT phone, click  on the display of the iPhone, then click  . The call switches to the iPhone.
- 2 To switch back, click  on the iPhone. The call switches back to the DECT phone.



Note:



- To use this feature, the DECT phone must be paired and connected to the iPhone beforehand. For more details, please refer to **Bluetooth** section.

Options during a call

During a call, you can press  beneath **Option**, and then select **Hold** to put the call on hold, or select **Contacts** to enter the Contacts list.

Receiving a Call

When a call is received, the phone rings and "Incoming Call" appears on the screen.  indicates a landline call or  indicates a cellphone line call. If the incoming call can be identified (i.e. The caller's information is transmitted) you also see the caller's number.

Press  to answer a landline call or press  to answer a cell line call when your iPhone is charging. Or if the handset is on the base and you have activated the "Auto Answer" function (See page 51 for details), simply pick it up to answer the call. During conversation, the screen shows the elapsed time.



















To end the call, press  or replace the handset on the base.

Note:


- The caller is identified only if your telephone network and the caller's network supports the service. However, a caller can still hide his/her number.

Ring Setting














You can select unique cell, landline and internal call ring tones and volumes. There are 15 ringtones, and four volume levels. You can also turn off the ringer.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  , then press  beneath **Select**.
- 3 Press  beneath **Select** to choose **Cell ringtone**, or press **Up**  or **Down**  to choose **PSTN ringtone** or **INT ringtone**, then press  beneath **Select**.
- 4 Press **Left**  or **Right**  to select the ring tone that you like. Each time you press **Left**  or **Right**  , the handset sounds with the selected ring.
- 5 Press  beneath **Select** to save the ring tone setting and enter the ring volume setting.
- 6 Press **Left**  or **Right**  to choose the volume level that you want. Each time you press **Left**  or **Right**  , the handset sounds with the selected volume.
- 7 Press  beneath **Select** to save the settings and return to the previous menu.

Notes:



- If you turn off the ringer, when a call comes in, only the incoming call message appears on the display.
- You can also turn the PSTN ring off/on by long pressing  when the line is not engaged.



Handset Name

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  , then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Handset name**, then press  beneath **Select**.
- 4 Press **Up**  or **Down**  to choose "ON", press  beneath **Select**.
- 5 Enter the name, up to **11** characters long that you want to assign to the handset, and then press  beneath **Save**.
- 6 Press  . The handset name appears.
- 7 To deactivate this feature, access the **Handset name** menu and choose "OFF", press  beneath **Select**.


Using the Speakerphone

During a call, you can turn on the speakerphone that is built into the handset. You can simply put your handset on a surface (e.g. a desk) and enjoy the comfort of a handsfree conversation.

To turn on the speakerphone, press  during a call.  appears.

To turn off the speakerphone, press  .  disappears.

Adjusting the Volume



During a conversation, press the **Up** or **Down** key to adjust the earpiece volume (or the handsfree speakerphone volume). There are five levels, which are shown by the bars of  .

When the last bar is red, the volume is at its maximum level.

Muting a Call

During a conversation, you can temporarily mute the microphone so that the party on the other end of the line cannot hear you. You can still hear the other party. This enables you to converse privately with someone near you.

To mute your microphone, press the **Right**  during the conversation:  appears.



To unmute the microphone, press the **Right**  :  disappears.


Last Number Redial

Your phone allows you to quickly redial the last dialed number.

Pick up the handset and press  to engage the line. Then press  beneath **Redial** to dial the last-dialed number.



Flash Signal

If your phone service includes call waiting or conference call services, you can use  to initiate these functions. For further details please contact your telephone company. Additionally, if you are connected to an extension line (PABX), you can use  to transfer a call to another extension.

To initiate any of these functions, press  while the line is engaged.

Using a Pause








A pause is useful when you access an interactive voice response system, such as an automated banking system. A pause provides a delay of 3 seconds.

After you dial a number and press , if you need to insert a 3-second pause, press  beneath **Pause**.










Chapter 4: Display and Sound

Brightness

This adjustment enables you to optimize the visibility of the display by changing its brightness according to environmental conditions.

- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Display}, then press  beneath **Select**.
- 3 Press  beneath **Select** again to choose **Brightness**. The current setting appears.
- 4 Press  repeatedly to choose among the **14** available levels, then press  beneath **Select**.

Wallpaper



- 1 Press  beneath **Menu** to display the main menu items.
- 2 Press  to choose  ^{Display}, then press  beneath **Select**.
- 3 Press **Up**  or **Down**  to choose **Wallpaper**, then press  beneath **Select**. The current setting appears on the display.
- 4 Press  to choose among **4** pre-defined wall paper images, then press  beneath **OK**.

Three-way Conference Calling



When you have an external call and an intercom call in progress, you can set up a three-way conference call, like this:



Press  beneath **Confer** to set up a three-way conference call.



Out of Range Indicator

The bars to the right of  show the signal strength received from the base. If you are too far from the base, the radio signal might become too weak for the phone to access the telephone line. In these conditions you can't make or receive phone calls, and  turns red and **"Searching..."** appears.

Locking the Keypad

This function is useful to avoid accidentally pressing keys when you are carrying your handset. If you activate keylock, all keys are inhibited except  and .


In this condition, when a call comes in, you can answer the call by pressing  or . When the call ends, the keys are locked again.


To lock the keys, press and hold  until  appears.

To unlock the keys, **press the power on button on the top of the handset or press and hold  again, then  disappears from the display.**

Paging

You can page the handset from the base by making the handset ring with a special ring. It's useful to locate a lost handset or call the user who currently has the handset.

To send the paging signal, briefly press  , located on the base. All handsets registered with the base ring for 15 seconds.



To stop the paging signal before 15 seconds have passed, press  or any keys on the handset.

Note:

- If a call comes in while the handset is being paged, the handset stops the paging operation and starts ringing normally.




Temporary Tone-Dial Switchover

If you are using pulse dialing because your telephone line doesn't support tone dialing, you might not be able to access certain external services (e.g. automatic call centers, voice mailboxes, interactive telephone systems etc.), because they need tone dialing. You can avoid this limitation and access them anyway by doing this:

- 1 Pick up the handset and press  to engage the line.
- 2 Press and hold  until "-" is displayed: your DECT phone is temporarily in the tone dial mode.
- 3 Enter the number of the service that you need to access.
- 4 When you hang up, the phone automatically returns to the pulse mode.




Intercom

If you connected more than one handset to a base (you can connect up to 5 handsets to the same base), you can have a conversation between two people using two different handsets.

- 1 Pick up the handset and press **Left**  . The screen display shows "INT x ->" (x is your handset number).
- 2 Press the number of the handset that you want to contact (from 1 to 5). The called handset starts to ring.
- 3 If the called party can answer your call, he/she can press  and start talking. You can see the handset number of the called party on your screen.
- 4 At the end of the conversation, press .

Transferring Calls between Handsets

If you have more than one handset registered to the same base, you can transfer an outside call between the handsets.

- 1 When you are connected to an external call, press **Left**  and the number of the handset that you want to contact (from 1 to 5).
- 2 If the called party can answer your call, he/she can press  and start talking.
- 3 If you want to cancel the transfer before the called party answers, press **Left**  . The call transfer is cancelled.

Important Warning:**FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this telephone!

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. For Base unit it should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Customer Information

1. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
2. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with

the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

3. If this equipment [US: 6NYW400BI800] causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
4. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
5. If trouble is experienced with this equipment [US: 6NYW400BI800], for repair or warranty information, Service can be facilitated through our office at:

Company Name: ClearSounds Communications, Inc

Address: 1743 Quincy Avenue #155, Naperville, IL 60540

USA

TEL: +630-654-9200

FAX: +630-654-9219

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

6. Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified. For repair procedures, follow the instructions outlined under the limited warranty.
7. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
8. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this [US: 6NYW400BI800] does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
9. If the telephone company requests information on what equipment is connected to their lines, inform them of:
 - a) The ringer equivalence number [0.0]
 - b) The USOC jack required [RJ11C]
 - c) Facility Interface Codes ("FIC") [02LS2]

d) Service Order Codes ("SOC") [9.0Y]

e) The FCC Registration Number [US: 6NYW400BI800]

10. The REN is used to determine the number of devices that may be connected to a telephone. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that. For this product the FCC Registration number is [US: 6NYW400BI800] indicates the REN would be 0.0. has the format US: A A EQ # # TX X X X. The digits represented by # are the REN without a decimal point.

11. This product is equipped with a cordless handset, it is hearing aid compatible.

IC Warning

This product meets the applicable Industry Canada technical specifications.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.line.

This product meets the applicable Industry Canada technical specifications. /
L e pré sent maté riel est conforme aux spécifications techniques applicables
d'Industrie Canada.

The Ringer Equivalence Number (REN) is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five. / L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas cinq.