


Nokia 6265 and Nokia 6265i User Guide

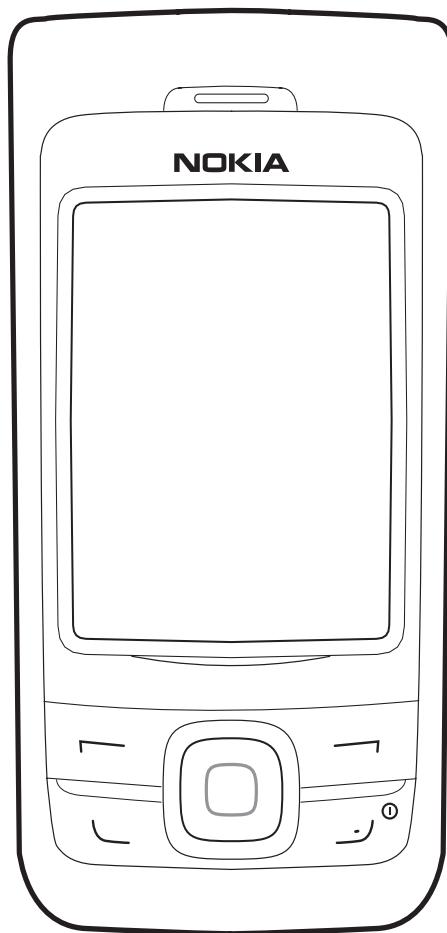

Part No. 9243340, Issue No. 1

Copyright ©2005 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 6265 or Nokia 6265i, Pop-Port, and the Nokia Original Enhancements logos are trademarks or registered trademarks of Nokia Corporation. Other company and product names mentioned herein may be trademarks or trade names of their respective owners.

US Patent No 5818437 and other pending patents. T9 text input software Copyright ©1999-2005. Tegic Communications, Inc. All rights reserved.



Bluetooth wireless technology is a registered trademark of Bluetooth SIG, Inc.



miniSD is a registered trademark of the SD Card Association.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

The information contained in this user guide was written for the Nokia 6265 or Nokia 6265i product. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This device may contain commodities, technology, or software subject to export laws and regulations from the U.S. and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference,

and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Contents

For your safety	7
1. Phone at a glance	11
2. Set up your phone	17
3. Text entry.....	25
4. Messaging	28
5. Log.....	45
6. Contacts	49
7. Camera	58
8. Gallery	64
9. Media.....	67
10. Settings	73
11. Organizer	100
12. Mobile web.....	113
13. Extras.....	116
14. PC connectivity	117
15. Enhancements.....	118
16. Reference information.....	120
Care and maintenance.....	123
Additional safety information.....	124

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.
Read the complete user guide for further information.

Switch on safely



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Road safety comes first



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

Interference



All wireless phones may be susceptible to interference, which could affect performance.

Switch off in hospitals



Follow any restrictions. Switch the phone off near medical equipment.

Switch off in aircraft



Follow any restrictions. Wireless devices can cause interference in aircraft.

Switch off when refueling



Do not use the phone at a refueling point. Do not use near fuel or chemicals.

Switch off near blasting



Follow any restrictions. Do not use the phone where blasting is in progress.

Use sensibly



Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.

Qualified service



Only qualified personnel may install or repair this product.

For your safety



Enhancements and batteries

Use only approved enhancements and batteries. Do not connect incompatible products.



Water-resistance

Your phone is not water-resistant. Keep it dry.



Backup copies

Remember to make back-up copies or keep a written record of all important information stored in your phone.



Connecting to other devices

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



Emergency calls

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

About your device

The wireless device described in this guide is approved for use on the CDMA 800 and 1900, AMPS 800, and GPS networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect privacy and legitimate rights of others.

When taking and using images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks

may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as *Mobile web* require network support for these technologies.

Shared memory

The following features in this device may share memory: *Messaging*, *Contacts*, *Gallery*, *Organizer*, and *Extras*. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many photos to the *Gallery* may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as *Messaging* and *Contacts*, may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

Welcome

Congratulations on your purchase of the Nokia 6265 or Nokia 6265i mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, video recorder, and more. Your phone can also connect to a PC, laptop, or other device using a USB data cable, Bluetooth wireless technology, or infrared.

■ Register your phone


Make sure to register your phone at www.warranty.nokiausa.com or call 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you should call a customer center or to have your phone repaired.

■ Getting help

Find your phone label

If you need help, the Nokia Care Contact Center is available for assistance. Before calling, we recommend that you write down the following information and have it available:

- Electronic serial number (ESN)
- Your zip code (only in the US)

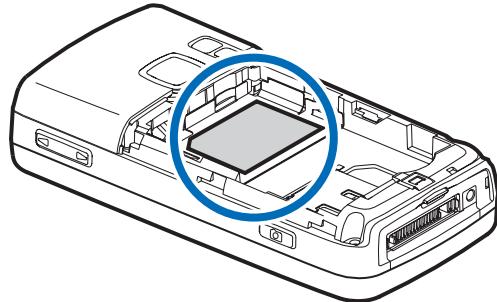


The ESN is found on the type label, which is located beneath the battery on the back of the phone. See "Remove the back cover," p. 18 and "Remove the battery," p. 18 for more information.

Accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information visit the Web site at www.nokiaaccessibility.com.

1. Phone at a glance

■ Keys and parts

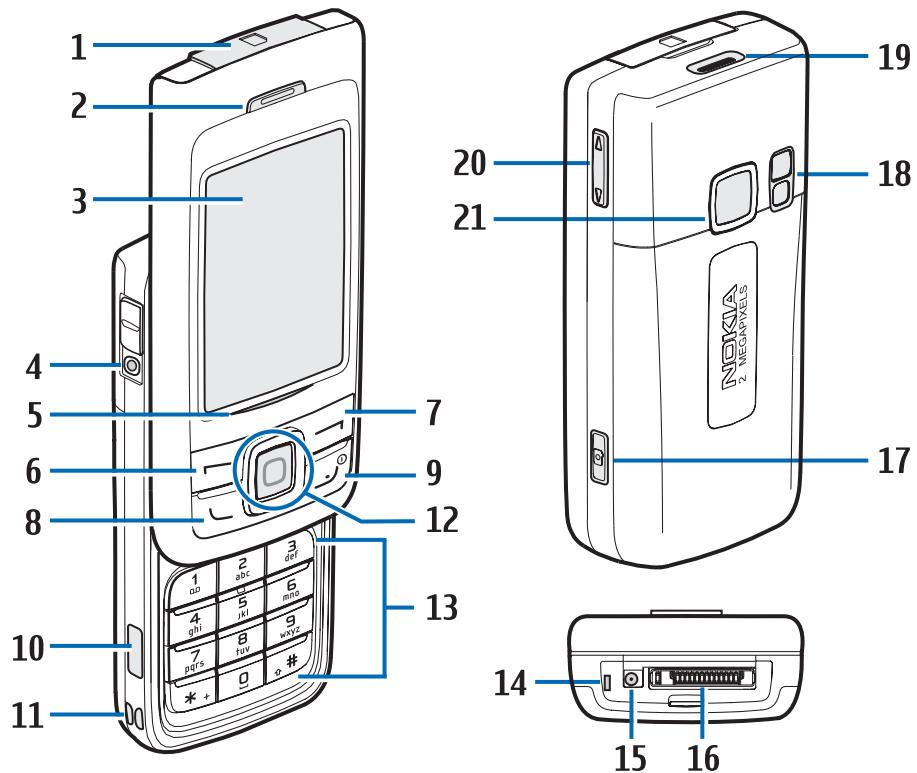

miniSD card slot (1)
 Earpiece (2)
 Display (3)
 Headset connector (4)
 LED indicator (5)
 Left selection key (6)
 Right selection key (7)
 Call key (8)
 End and power key (9)
 Infrared (10)
 Strap holder (11)

Center selection and scroll key (12)
 Keypad (13)
 Microphone (14)
 Charger port (15)
 Pop-Port™ connector (16)
 Camera key (17)
 Camera flash and self-portrait mirror (18)
 Loudspeaker (19)
 Volume key (20)
 Camera lens (21)

■ Standby mode

Depending on your wireless service provider and the model number of your phone, some or all of the following selection keys may appear in the standby mode.

The standby mode indicates your phone is idle.


Signal strength (1)—More bars indicate a stronger network signal.

Menu (2)—Press the center selection key to select this option.

Go to (3)—Press the left selection key to select this option.

Names or **network operator menu** (4)—Press the right selection key to select this option.

Battery level (5)—A filled in battery indicates more power.

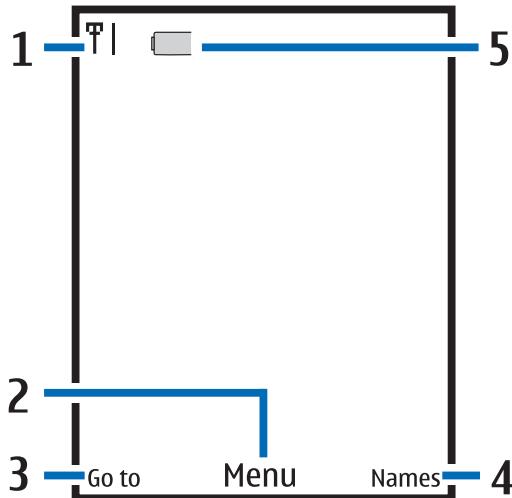

■ Quick keys

Depending on your wireless service provider and the model number of your phone, some or all of the following scroll key shortcuts may be available in the standby mode.

In the standby mode, the four-way scroll and center selection keys instantly take you to frequently-accessed menus:

Scroll up key—Go to the contacts list or **network operator menu**.

Scroll right key—View the calendar.

 
Scroll down key—Go to the contacts list.

Scroll left key—Create a text message.

Center selection key—Displays available applications or selects highlighted menus and submenus.

■ Indicators and icons

Depending on your wireless service provider and the model number of your phone, some or all of the following indicators and icons may appear on the start screen.

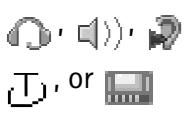Icon	Indicates...
	You have one or more text or picture messages. See "Read and reply to text messages," p. 30.
	You have one or more voice messages. See "Voice messages," p. 42.
	Your phone keypad is locked. See "Keyguard," p. 24.
	Your phone is set to the silent profile. See "Profiles," p. 73.
	The alarm clock is on. See "Alarm clock," p. 100.
	The countdown timer is running. See "Countdown timer," p. 109.
	The stopwatch timing is running in the background. See "Stopwatch," p. 110.
	Integrated hands free or loudspeaker is active.
	The timed profile is selected. See "Profiles," p. 73.
	Phone can be connected to a Bluetooth wireless technology device. See "Bluetooth connectivity," p. 86.
	An enhancement, such as headset, handsfree, hearing aid, TTY/TTD, or loopset is active or connected. See "Enhancement settings," p. 91.
 or 	Voice privacy encryption is active or inactive in the network.
	Phone is roaming outside of your home network.
	Phone is in a digital network. See "Network services," p. 8.

Icon	Indicates...
	Phone is in a 1XRTT network. See "Network services," p. 8.

■ Phone menus

Phone features are grouped according to function and are accessed through the main menus. Each main menu contains submenus and lists from which you can select or view items and customize your phone features. You can access these menus and submenus by using the scroll method or by using a shortcut.



Note: Some features may not be available, depending on your network.
For more information, contact your wireless provider.

Scroll method

1. In the standby mode, select *Menu* using the center selection key. Scroll through the main menu using the scroll key.
On the right side of the screen, a scroll bar is displayed with a tab that moves up or down as you move through the menus.
This provides a visual representation of your current position in the menu structure.
2. When you arrive at a menu, press *Select* (the center selection key) to enter submenus.
Select *Back* from the submenu level to return to the previous menu.
Press the end key to return to the standby mode from any menu or submenu.



Main menu display

You can control whether your phone main menu is displayed as a *List*, *Grid* or *Grid with labels*. By default, the main menu displays in *Grid with labels* format.

In the standby mode, select *Menu* > *Options* > *Main menu view* > *List*, *Grid*, or *Grid with labels*.

If supported by your wireless service provider, you can also change the order of menus in your main menu.

In the standby mode, select *Menu* > *Options* > *Organize*. Highlight a menu, select *Move*. Use the scroll key to move the menu to a new location, select *OK*. You can repeat this procedure to customize your main menu.

Select *Done* > *Yes* to save the changes.

In-phone help

Many features have brief descriptions (help text) that can be viewed on the display. To view these descriptions, scroll to a feature, and wait for about 15 seconds. Scroll down to view all of the description, or select *Back* to exit.

In order to view the descriptions, you must activate help text.

In the standby mode, select *Menu* > *Settings* > *Phone* > *Help text activation* > *On* or *Off*.

Security functions

The security feature protects your device from unauthorized outgoing calls or denies access to the stored information with a lock or security code. The lock code is a four-digit number, while the security code is a five-digit number. By default, the security feature uses the lock code (defaulted to the last four digits of your phone number), instead of the security code to protect your phone.

You must enter your lock code to access the *Security* menu.

To access the *Security* menu, do the following:

1. In the standby mode, select *Menu* > *Settings* > *Security*.
2. Enter the lock code, and select *OK*. See "Security," p. 93 for more information.



Note: Depending on your wireless service provider, the preset lock code may be 1234 or 0000 instead of the last four digits of your phone number. If none of these work, contact your wireless service provider for more help.

To enter the lock code to restore the factory settings, do the following:

1. In the standby mode, select *Menu* > *Settings* > *Restore factory sett.*
2. Enter the lock code, and select *OK*.



Note: Depending on your wireless service provider, your phone may ask for the security code (defaulted to 12345) instead of the lock code.



Note: If you enter the wrong lock code five times in succession, your phone will not accept your current lock code for 5 minutes. This occurs even if when you power down the phone between incorrect attempts.

■ Go to functions

The *Go to* menu allows you to change the function of the left selection key on your phone so that your most frequently used functions can be quickly accessed from the *Go to* menu in the standby mode.

Select options

1. In the standby mode, select *Go to* > *Options* > *Select options*.
2. Scroll to the options you want to add.
3. Select *Mark* to add an option or *Unmark* to remove an option.
4. Select *Done* when you have added all desired options.
5. Select *Yes* to save the changes.
6. In the standby mode, select *Go to* to display a list of the options that you selected in step 3.

Organize functions

In the standby mode, select *Go to* > *Options* > *Organize*. Highlight an option, and select *Move*. Scroll to move the option to a new location, and select *OK*. You can repeat this procedure to customize your *Go to* menu.


Select *Done* > *Yes* to save the changes.

2. Set up your phone

■ Antenna

Your device has an internal antenna.

Hold the device as you would any other telephone with the antenna area pointed up and over your shoulder.

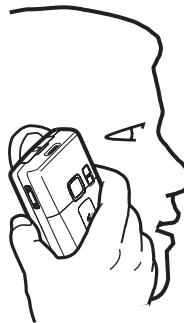

Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.



■ Battery


Always switch off the power and disconnect the charger before removing the battery.

Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.

Prolonged, continuous use of your device may increase the device temperature. The increased temperature is a normal function of this product and does not pose a safety concern for you or the device. If the temperature is uncomfortable to you, use a headset or allow your device to return to room temperature before your next call.


Remove the back cover

1. With the back of the phone facing you, press down and hold the back cover latch.
2. Slide the back cover toward the bottom of the phone, lift up and remove.

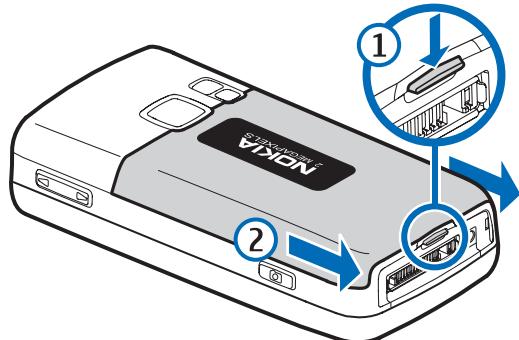

Remove the battery

After you have removed the back cover, insert your finger into the finger grip, and lift the battery from its compartment.

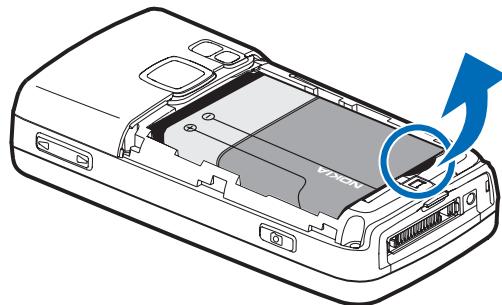


UIM (CDMA SIM) card slot

Your phone has a UIM card slot built into the mechanics. However, the UIM is not functional in this phone model. Avoid placing anything into the UIM card slot.


Replace the battery

1. Insert the battery, gold-colored contact end first, into the battery slot.
2. Push down on the other end of the battery to snap the battery into place.

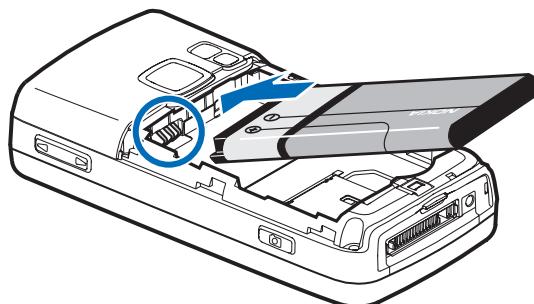

Replace the back cover

1. Set the back cover on the phone with the cover tabs aligned with the slots in the phone.
2. Press the back cover latch down and slide the back cover toward the top of phone.
3. Make sure back cover latch is secure.


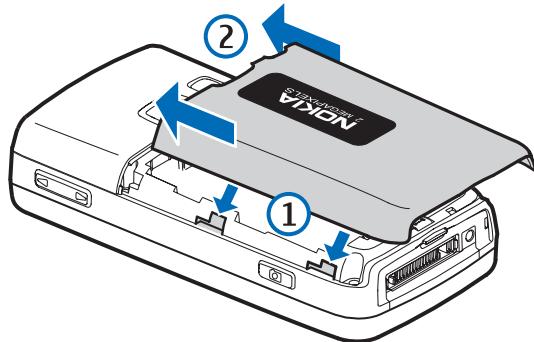


Charge the battery

1. Plug the charger transformer into a standard ac outlet.
2. Insert the charger output plug into the round jack at the bottom end of the phone.

If necessary, you can use a CA-44 adapter cable (1) to connect a charger and the phone.

After a few seconds, the battery indicator in the display scrolls. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

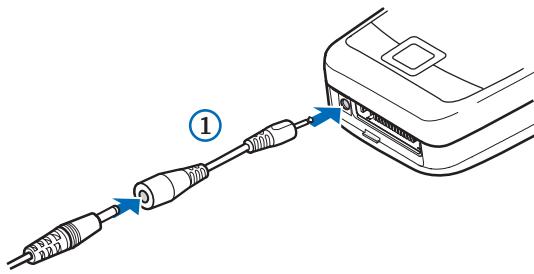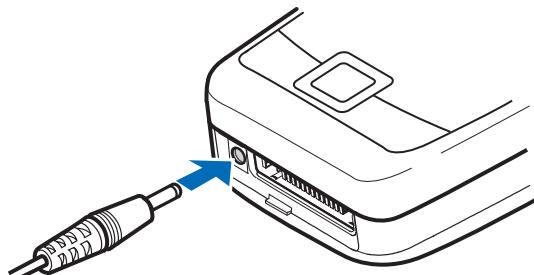


■ MiniSD card

To insert the miniSD, complete the following steps.

1. Slide open the phone and lift open the miniSD slot cover.
2. Insert card firmly as shown in the illustration.
The card clicks into place.

To remove miniSD card, firmly press the card until it releases from card slot and slides out.

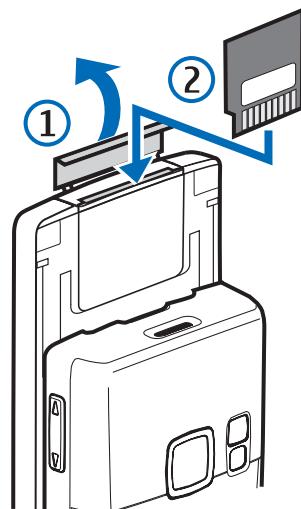


Important: Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or the phone.



Note: Use only miniSD cards approved by Nokia for use with this device. Nokia utilizes the approved industry standards for memory cards but not all other brands may function correctly or be fully compatible with this device.

■ Turn your phone on or off


1. To turn your phone on or off, press and hold the end key for at least 3 seconds.
2. Enter the lock code, if necessary, and select **OK**.

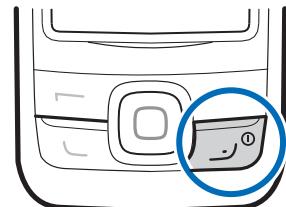

■ Connect the headset

A compatible headset, such as HS-5, may be purchased with your phone or separately as an enhancement. See "Enhancement settings," p. 91 for information.

1. Plug the headset connector into the Pop-Port™ connector at the bottom end of your phone.  appears on the display.
2. Position the headset on your ear.

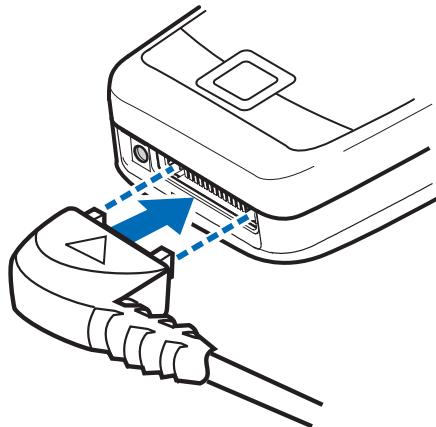

With the headset connected, you can make, answer, and end calls as usual.

- Use the keypad to enter numbers.
- Press the call key to place a call.
- Press the end key to end a call.

You can also plug a compatible headset, such as the HS-9 Universal Headset, into the 2.5 mm stereo headset jack on the side of your phone to allow hands-free operation. See "Enhancement settings," p. 91.



Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

■ Make calls

Using the keypad

1. Enter the phone number (including the area code), and press the call key. To delete a character to the left of the cursor, select *Clear*.
2. To end the call, press the end key. To cancel the call attempt, select *End call*.

Use the save contact option

1. In the standby mode, enter the phone number (including the area code) and select *Save*, enter a name for the contact, and select *OK*.

Set up your phone

2. To make the call, press the call key. To return to standby mode, select *Done*.

Use the contacts list

1. In the standby mode, scroll down to display your contacts.
2. Scroll to the contact you wish to dial, press the call key. To view details of the entry, select *Details*.

Use the last dialed number

1. In the standby mode, press the call key to display the last 30 numbers dialed.
2. Scroll to the number or name you wish to redial, and press the call key.

Make a conference call

Conference calling is a network service that allows you to take part in a conference call with two other participants.

1. Make a call to the first participant.
2. With the first participant on the line, select *Options* > *New call*.
3. Enter the phone number of the second participant; or, to retrieve a number from your contacts, select *Search* and the number you want to call.
4. Press the call key. The first participant is put on hold.
5. When the second participant picks up, press the call key to connect the calls.
6. To end the conference call, select *Options* > *End all calls*, or press the end key.

■ Answer calls

Answer or silence an incoming call

1. To answer the call, press the call key or select *Answer*.
2. To reject the call, press the end key.

Select *Silence* to mute the ringing tone. Select *Dismiss* or do nothing, and the call is eventually forwarded to voice mail.

If your phone is set to *Silent* in the *Profiles* menu, select *Dismiss*, and the call is forwarded to voice mail.

Adjust the earpiece volume

Press the up arrow or down arrow on the volume key located on the right side of your phone to adjust the volume of the earpiece.

When adjusting the volume, a bar chart appears in the display indicating the volume level.

Answer a call with the keypad locked

To answer a call with the keypad locked, simply press the call key or select *Answer*.

During the call, all features function as normal. When you end or reject the call, the keypad automatically relocks. See "Keyguard," p. 24 for details.

When the device is locked, calls may be possible to the official emergency number programmed into your device.

Use the loudspeaker



Warning: Do not hold the device near your ear when the loudspeaker is in use because the volume may be extremely loud.

You can use your phone loudspeaker during a call:

- To activate the loudspeaker, select *Loudsp.*
- To deactivate the loudspeaker, select *Handset*.

The loudspeaker is deactivated automatically when a call or a call attempt ends or when certain enhancements are connected.

Mute phone during call

To mute your phone during a call, select *Mute*; to unmute the phone, select *Unmute*.

Options during a call

Many of the options that you can use during a call, are network services. Check with your wireless service provider for more information.

During a call, select *Options* and one of the following:

Loudspeaker or *Handset*—Activate or deactivate the loudspeaker while in a call.

Set up your phone

New call—Initiate a conference call. See "Make a conference call," p. 22 for information.

Save—Save a number entered during a call.

Add to contact—Add a number entered during a call to a contact in your list.

End all calls—Disconnect from all active calls.

Touch tones—Enter the numbers, and select *Tones* to send the numbers as tones.

Contacts—View the contacts list.

Menu—View the phone menu.

■ Keyguard

With keyguard, you can lock the keypad to prevent keys from being pressed accidentally. Remember to lock your phone keypad to prevent accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call, the lock automatically reactivates.

When the keyguard is on, calls may be possible to the official emergency number programmed into your device.

- To lock the keypad when the phone slide is open, select *Menu*, and press * within 2 seconds.
To lock the keypad when the phone slide is closed, open the slide, close it, and select *Lock*.
- To unlock the keypad when the phone slide is open, select *Unlock*, and press * within 2 seconds.
To unlock the keypad when the phone slide is closed, open the slide or select *Unlock* > *OK*.

3. Text entry

You can use two methods for entering text and numbers: standard mode and predictive text mode.

■ Standard mode

Standard mode is the only way to enter text into the contacts list, and to rename caller groups.

Text (Abc)

- Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your phone awaits the next entry.
- Press 0 to enter a space, thereby accepting a completed word.
- Press 1 as many times as necessary to scroll through a list of commonly used characters.
- Press * to display a complete list of special characters.
- Press and hold # to open *Editor settings* > *Number mode*, *Dictionary on* or *Dictionary off*, or *Writing language*.

Numbers (123)

To switch to 123 mode from Abc mode, press and hold # at any message entry screen to bring up the *Editor settings* menu list of *Number mode*, *Dictionary on* or *Dictionary off*, and *Writing language*. Select *Number mode*, and the device returns to the message entry screen and switches the ABC icon in the upper left corner of the display to the 123 icon (or back). To return to Abc mode, press and hold #.

Change language

To change the language, do the following:

1. Press and hold #.
2. At the *Editor settings* menu list, select *Writing language*, and the new language.

Text entry

The phone will return to the message entry screen, and you can compose in the new language.

Punctuation and special characters

While at any text entry screen, press * to display special characters (press and hold * if predictive text is on). Press * again to cycle through all available characters. Scroll to navigate through the list of special characters. Once a character is highlighted, select *Insert* to insert the character into your message.

Predictive text mode


Predictive text input allows you to write messages quickly using your keypad and the built-in dictionary. It is much faster than the standard mode method, because for each letter, you only press the corresponding key on your keypad once.

Activate and deactivate

At any text entry screen, select and hold *Options* to turn predictive text on or off depending on previous mode; or, select *Options* > *Dictionary on* or *Dictionary off*. Press # twice to change from predictive text mode to standard mode and back.

Enter text

The illustration below simulates your display each time a key is pressed. For example, to write Nokia with predictive text on and with the English dictionary selected, press each of the following keys once:

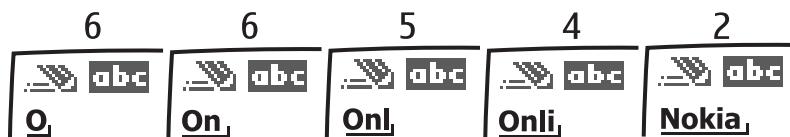

- Press 0 to enter a space and begin writing the next word.
- If a displayed word is not correct, press * to see other matches. To return to the previous word in the list of matches, select *Previous*.
- If ? appears after a word, it is not in the dictionary. Select *Spell* to add the word to the dictionary.
- Press 1 to insert a period into your message.

- Press and hold * to display special characters. Press * again to cycle through all available characters.
- Press and hold the specific number key to enter a number.
- Press and hold # to bring up the *Editor settings* menu list of *Number mode*, *Dictionary on* or *Dictionary off*, and *Writing language*.

■ Change case and mode

Press # to switch between uppercase, lowercase, and sentence case, as well as standard and predictive text modes. Case and mode are indicated by the following icons that appear in the upper left of the display screen.



Uppercase text: standard mode is on.



Lowercase text: standard mode is on.



Sentence case text: standard mode is on. Only available at the beginning of a sentence.



Uppercase text: predictive text is on.



Lowercase text: predictive text is on.



Sentence case text: predictive text is on. Only available at the beginning of a sentence.

■ Delete text

To delete text, use one of the following options:

- Select *Clear* to backspace the cursor and delete a character.
- Select and hold *Clear* to backspace continuously and delete characters.

4. Messaging



Your phone is capable of creating and receiving text, multimedia, voice and minibrowser messages. Check with your service provider to see what messaging is available for you.

■ Text messages

Text messaging is a network service. See "Network services," p. 8 for more information. If your wireless service provider supports this feature, you can send and receive text messages to compatible phones that are also subscribed to the service.

When composing text messages, check the number of characters allowed in the top right corner of the message. Using special (unicode) characters takes up more space. If there are special characters in your message, the indicator may not show the message length correctly. Before the message is sent, the phone will tell you if the message exceeds the maximum length allowed for one message. Also, you can make distribution lists that contain phone numbers and names from your contact list. See "Distribution lists," p. 41 for more information.



Note: When sending messages, your device may display *Message sent*. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

Text message folders and options

In the standby mode, select *Menu* > *Messaging* > *Text messages* and from the following:

Create message—Create and send messages.

Inbox—Check for received text messages. Text messages are automatically stored in the *Inbox* when they are received. A notification appears when a message arrives in the *Inbox*.

Outbox—Check for outgoing text messages. Text messages are automatically stored in the *Outbox* as they are sent. If your service is interrupted while sending, the text message is stored in the *Outbox* until another delivery attempt is made.

Sent items—Sent text messages are stored in *Sent items*.

Drafts—Save incomplete text messages in a draft. Store drafts of text messages in *Drafts* to be completed at a later time.

Archive—Save text messages in *Archive*.

Templates—Select from a collection of prewritten *Templates*, when creating text messages. Preloaded *Templates* can be edited and customized.

My folders—Create and name personal folders.

Delete messages—Delete messages from a selected folder or all folders.

Message settings—Change settings for reading, writing, and sending text messages.

Send numeric page—Send a numeric page.

Add-ins—Add a sound, animation, or picture object.

Styles—Change font appearance and size, and text alignment.

Write and send text messages

1. In the standby mode, select *Menu* > *Messaging* > *Text messages* > *Create message*.
To go quickly to the *Create message* screen, scroll left in the standby mode.
2. Compose a text message using the keypad. See "Choose a text message option," p. 30 for composing options.
3. Select *Send to* > *Recently used*, *Send to number*, *Send to e-mail*, *Send to many*, or *Send to distribution list* (if you have created one).
4. Select a number or distribution list, enter the recipient's phone number or e-mail address, or select *Search* to retrieve a number or e-mail address from your contacts list; select *Send*.



Note: Shortcut keys such as scroll left may be changed by your service provider.



Use a template

Templates are short, prewritten messages that can be retrieved and inserted into new text messages.

1. In the standby mode, select *Menu* > *Messaging* > *Text messages* > *Create message* > *Options* > *Use template*.
2. Select one of the available templates and complete the text message using the keypad.

Read and reply to text messages

When you receive a text message, a notification appears and the unopened letter icon (✉) is displayed.

1. Select *Show* to read the text message or *Exit* to dismiss the notification.

Scroll to view the whole message, if necessary.

When unopened messages are in your inbox, ✉ is shown in the upper left corner during standby mode as a reminder.

2. Select *Reply* > *Empty screen*, *Original text*, *Template*, or one of the predefined answers provided.
3. Compose your reply with the keypad, and select *Send*.

Choose a text message option

Create message options

When you create or reply to a text message, depending on the mode of text input you are using and the features supported by your wireless service provider, some or all of the following are available:

Sending options—Mark or Unmark a message as *Urgent*, *Delivery note*, *Callback number*, or *Signature*.

Clear text—Erases all text from your message.

Insert contact—Insert detail from your contacts list into your message.

Insert number—Insert a phone number or find a phone number in the contacts list.

Save—Save the message in *Drafts*.

Exit editor—Exits the message editor.

Use template—Insert a predefined template.

Insert smiley—Insert a smiley.

Insert word or *Edit word*—Enter or edit the text of a new word that might not appear in the predictive text dictionary. This displays only when predictive text is on.

Insert symbol—Insert a special character. This displays only when predictive text is on.

Writing language—Choose the language you want to use.

Dictionary on or *Dictionary off*—Turn predictive text on or off.

Matches—View matches found in the predictive text dictionary for the word you want to use. This displays only when predictive text is on.

Read message options

When you read a text message, the following options are available:

Delete—Discard the text message.

Message details—View the details of the text message.

Use detail > *Number, E-mail address*, or *Web address*—Select *Save* to create a new contact; select *Options* > *Add to contact*, *Send message*, or *Call* for other options.

Move—Save the message to *Archive*, *Templates*, or a folder you have created.

Forward—Forward the text message to another phone number.

Lock or *Unlock*—Lock or unlock the text message. The appropriate option appears.

Rename—Edit the title of the text message.

Use custom folders

Your phone has a folder system that saves and stores text messages. Additionally you can create custom folders.

Create a custom folder

To organize your messages, create custom folders, and save messages you want to keep there.

1. In the standby mode, select *Menu* > *Messaging* > *Text messages* > *My folders* > *Add fldr*. to create your initial custom folder.

Select *Menu* > *Messaging* > *Text messages* > *My folders* > *Options* > *Add folder* to create an additional custom folder.

2. Enter a name for the new folder, and select *OK*.

Rename a custom folder

1. In the standby mode, select *Menu* > *Messaging* > *Text messages* > *My folders*.
2. Folders you have created appear in the display. Scroll to the folder you wish to rename, and select *Options* > *Rename folder*.
3. Select and hold *Clear* to delete the existing entry; enter a new name for the folder; select *OK* to confirm or *Back* to exit.

Delete a custom folder

Only folders in *My folders* can be deleted. The *Inbox*, *Outbox*, *Sent items*, *Drafts*, *Archive*, and *Templates* folders are protected. When you delete a folder, all messages in the folder are also deleted.

1. In the standby mode, select *Menu* > *Messaging* > *Text messages* > *My folders*.
2. Scroll to the folder you wish to delete, and select *Options* > *Delete folder*.
3. Select *Yes* to delete or *No* to exit.

Delete text messages

If your message memory is full and you have more text messages waiting at the network,  blinks in the standby mode. You can do the following:

- Read some of the unread text messages, and delete them.
- Delete text messages from some of your folders.

Delete a single text message

To delete a single text message, you need to open it first.

1. In the standby mode, select *Menu* > *Messaging* > *Text messages*.
2. Select the folder containing the text message you wish to delete.
3. Select the message you wish to delete and *Options* > *Delete*.
4. Select *Yes* to delete the message or *No* to exit.

Delete all messages in a folder

1. In the standby mode, select *Menu* > *Messaging* > *Text messages* > *Delete messages* and one of the following:
All—Deletes all text messages in the folder.

All read—Deletes only the read text messages in the folder.

All unread—Deletes all unread text messages in the *Inbox*.

2. If you select *All* or *All read*, select *Mark* or *Unmark* to choose the folders from which to delete text messages. Select *Options* > *Mark all* to choose all folders.
3. Select *Done* after choosing the folders.
4. Select *Yes* to delete the message or *No* to exit.

Text message settings

Sending options

In the standby mode, select *Menu* > *Messaging* > *Text messages* > *Message settings* > *Sending options* and the setting you wish to change:

Priority > *Normal* or *Urgent*—Select the priority of the message.

Delivery note—Select *On* to receive a note confirming delivery of a text message.

Send callback number—Select *On* to send your default phone to the recipient.

Signature—Select *On* to append a signature to an outgoing text message. If you have not created a signature, select *On*; enter a signature, and select *OK*.

Other settings

In the standby mode, select *Menu* > *Messaging* > *Text messages* > *Message settings* > *Other settings* and the setting you wish to change:

Message font size—Select the desired font size for the display.

Message overwriting > *Sent items only*, *Inbox only*, *Sent items & Inbox*, or *Off*—

Set your phone to automatically replace old messages in *Inbox* or *Sent items* when new ones arrive. When the message memory is full, your phone cannot send or receive any new messages.

Save sent messages—Select *Always save* or *Always prompt* to save sent text messages to *Sent items*. Select *Off* to not save messages.

Auto-playback of sounds—If you have enhanced text messaging, select *On* or *Off* to control sound clips.

Queue msgs. if no digital—Select *On* or *On prompt* to store text messages in the *Outbox* until they can be sent with a digital service. Select *Off* to not store messages.

■ Multimedia messages

Multimedia messaging is a network service. See "Network services," p. 8 for more information. If your wireless service provider supports this feature, you can send and receive multimedia messages to compatible phones that are also subscribed to the service.

A multimedia message can contain text, sound, a picture, or a video clip. Your phone supports multimedia messages that are up to 600 KB. If the maximum size is exceeded, the phone may not be able to receive the message.



Note: Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

Depending upon your network, you may receive a message that includes an Internet address where you can go to view the multimedia message. Pictures are scaled to fit the display area of the phone. Your phone has a multimedia message viewer for playing messages and a multimedia inbox for storing saved messages. Once you save the multimedia message, you can use the image as a screen saver or the sound as a ringing tone.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Multimedia messaging only supports the following formats:

- Picture: JPEG, GIF, animated GIF, WBMP, BMP, and PNG
- Sound: MP3, AAC, AAC+, eAAC+, SP-MIDI, AMR audio, QCELP, and monophonic ringing tones
- Video: clips in MPEG4, H.263, and H.264 format with QCIF image size

You cannot receive multimedia messages if you have a call in progress, games or other applications running, or an active browsing session. Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.

Multimedia message folders and options

In the standby mode, select *Menu* > *Messaging* > *Multimedia msgs.* and from the following:

Create message—Create and send multimedia messages.

Inbox—Check for received multimedia messages. Multimedia messages are automatically stored in the ***Inbox*** when they are received. You receive a notification when a message arrives in your ***Inbox***.

Outbox—Check for outgoing multimedia messages. Multimedia messages are automatically stored in the ***Outbox*** as they are sent. If your service is interrupted while sending, then messages are stored in the ***Outbox*** until another delivery attempt is made.

Sent items—Sent multimedia messages are stored in ***Sent items***.

Saved items—Save multimedia messages for later use in ***Saved items***.

Delete messages—Delete multimedia messages from the ***Inbox***, ***Outbox***, ***Sent items***, or ***Saved items***.

Message settings—Change the settings for multimedia messages.

Write and send multimedia messages

1. In the standby mode, select **Menu** > **Messaging** > **Multimedia msgs.** > **Create message**.
2. Compose a message using the keypad. See "Choose a multimedia message option," p. 37 for composing options.
3. Select **Send to** > **Recently used**, **To phone number**, **To e-mail address**, **To many**, or **Distribution lists**.
4. Select a number or distribution list, and enter the recipient's phone number or e-mail address; or select **Search** to retrieve a number or e-mail address from your contacts list.
5. Select **Send**.



The multimedia message is moved to the ***Outbox*** for sending.

The wireless network may limit the size of multimedia messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by multimedia messaging.

It takes more time to send a multimedia message than to send a text message. While the multimedia message is being sent, the animated indicator  is

Messaging

displayed and you can use other functions on the phone. If there is an interruption while the message is being sent, the phone automatically tries to resend it a few times. If this fails, the message remains in the *Outbox* and you can try to manually resend it later. Check your *Outbox* for unsent messages.



Note: When sending messages, your device may display the words *Multimedia message sent*. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

Messages that you send are saved in *Sent items* if the setting *Save sent messages* is set to *Yes*. See "Multimedia message settings," p. 40. This is not an indication that the message has been received at the intended destination.

Read and reply to multimedia messages

When a multimedia message is received,  appears in the display along with the percentage display indicating the download progress. Once the message has been fully downloaded,  and a notification appears in the display.

1. To view the multimedia message immediately, select *Show*.

To save the message to the inbox for later viewing, select *Exit*.

To view a saved message, select *Menu* > *Messaging* > *Multimedia msgs.* > *Inbox* and the message you want to view.

While viewing a message, select *Play* to play the entire message

2. Select *Reply* or *Options* > *Reply to all*, and compose your reply.

3. Select *Send*.

If  blinks and *Multimedia memory full. View waiting message.* appears, the memory for multimedia messages is full. To view the waiting message, select *Show*. Before you can save the message, you need to delete some of your old messages. See "Delete multimedia messages," p. 39 for more information.



Important: Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

Choose a multimedia message option

Create message options

When you create or reply to a multimedia message, depending on the mode of text input you are using and the features supported by your wireless service provider, some or all of the following options are available:

Send to album—Send message to an online album. This is an online network service. Check with your service provider for more information.

Insert > Image, Sound clip, or Video clip—Insert an image, sound clip, or video clip file from your *Gallery*. Open the desired folder, and select the file and *Options > Insert*.

Copyright protections may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Insert > New image—Opens the camera to create a new image that you attach to the message.

Insert > New sound clip—Opens the voice recorder to create a new sound clip that you attach to the message.

Insert > Slide—Insert a slide into your message. Each slide can contain text, business card, calendar note, one image, and one sound clip.

Insert > Business card—Insert contact as a business card.

Insert > Calendar note—Insert a calendar note.

Delete > Image, Sound clip, or Video clip—Delete an image, sound clip, or video clip file from your message. Only appears when your message has a file attachment.

Delete > Slide—Delete the current slide from your message.

Edit subject—Edit the subject heading.

Clear text—Erases all text from the current slide in your message.

Preview—Preview the message or slide presentation before sending it. Select *Stop* to end the preview. Select *Play* to start the preview again or *Back* to return to the list of options.

Previous slide—Move to the previous slide. Option only appears if there is a previous slide.

Next slide—Move to the next slide. Option only appears if there is next slide.

Slide list—Shows a list of all slides. Select the slide you wish to edit.

Messaging

Slide timing—Set the timing interval for each slide. By default, each slide appears for 12 seconds.

Place text first or *Place text last*—Move text to the top or bottom of the slide. By default, the text appears at the bottom or last.

Save—Saves the message to *Saved items*.

More options > Insert contact—Insert a name from your contacts list into your message.

More options > Insert number—Insert a phone number or find a phone number in the contacts list.

More options > Message details—Shows the details of your multimedia message.

Exit editor—Exits the message editor.

Insert smiley—Insert a smiley.

Insert word or *Edit word*—Enter or edit the text of a new word that might not appear in the predictive text dictionary. This appears only when predictive text is on.

Insert symbol—Insert a special character. This appears only when predictive text is on.

Writing language—Choose the language you want to use.

Dictionary on or *Dictionary off*—Turn predictive text on or off.

Matches—View matches found in the predictive text dictionary for the word you want to use. This appears only when predictive text is on.

Read message options

When you read a multimedia message, the following options are available:

Set contrast—Adjust the contrast of an image. This option is only available when viewing an image.

Details—Displays the details of a highlighted file attachment.

Save image, *Save sound clip*, or *Save video clip*—Save the corresponding file to the *Gallery*. Images, sound clips, and video clips must be opened before you can save them.

Save link—Save the corresponding Web link. This appears only when a Web link is highlighted.

View text—View only the text included in the message.

Activate image, *Activate tone*, or *Activate video clip*—View or listen to the corresponding file.

Open business card—Open an attached business card.

Open calendar note—Open an attached calendar note.

Delete—Delete the message you are viewing.

Reply or *Reply to all*—Enter a reply and send it to the original sender and any other recipients of the message.

Use detail—Use a corresponding number or e-mail address. The number or e-mail address must be highlighted

Send to number, *Send to e-mail*, or *Send to many*—Forward the message to a phone number, to an e-mail address, or to multiple recipients.

Album—Forward the message to an online album. This is an online network service. Check with your service provider for more information.

Message details—View the sender's name and phone number, the message center used, reception date and time, message size and type.

Delete multimedia messages

If your message memory is full and you have more multimedia messages waiting at the network,  blinks in the standby mode. You can do the following:

- Read some of the unread multimedia messages, and delete them.
- Delete multimedia messages from some of your folders.

Delete a single multimedia message

To delete a single multimedia message, you need to open it first.

1. In the standby mode, select *Menu* > *Messaging* > *Multimedia msgs*.
2. Select the folder containing the multimedia message you wish to delete.
3. Select the message you wish to delete and *Options* > *Delete*.
4. Select *Yes* to delete or *No* to exit.

Delete all multimedia messages in a folder

1. In the standby mode, select *Menu* > *Messaging* > *Multimedia msgs*. > *Delete messages* > *Inbox*, *Outbox*, *Sent items*, or *Saved items*.
2. Select *Yes* to delete the all messages in the folder or *No* to exit.

Multimedia message settings

Save sent messages

You can save the multimedia messages that you send to the *Sent items* folder.

In the standby mode, select *Menu > Messaging > Multimedia msgs. > Message settings > Save sent messages > No* or *Yes*.

Delivery reports

You can request delivery reports to inform you if a message is delivered.

In the standby mode, select *Menu > Messaging > Multimedia msgs. > Message settings > Delivery reports > On* or *Off*

Scale image down

You can request for images to be automatically scaled down.

In the standby mode, select *Menu > Messaging > Multimedia msgs. > Message settings > Scale image down > Yes* or *No*.

Default slide timing

You can set the default time in *mm:ss* for the slides of a multimedia message.

In the standby mode, select *Menu > Messaging > Multimedia msgs. > Message settings > Default slide timing*, enter a slide time, and select *OK*.

Allow multimedia reception

Before you can use the multimedia message feature, you must specify whether you want to receive message at all times or only if you are in the service provider's home system. This is a network service. Check with your service provider for more information.

The default setting of the multimedia message service is generally on. The appearance of a multimedia message may vary depending on the receiving device.

You can choose to receive all messages, to block all messages, or to receive messages only when you are in the service provider's home network.

In the standby mode, select *Menu > Messaging > Multimedia msgs. > Message settings > Allow multimedia recept.* and one of the following:

Yes—Allow all incoming messages.

In home network—Allow incoming messages only if you are in the service provider's home system. This is a network service. Check with your service provider for more information.

No—Block all incoming messages.

Incoming multimedia messages

You can set how your phone retrieves incoming multimedia messages.

In the standby mode, select *Menu* > *Messaging* > *Multimedia msgs.* > *Message settings* > *Incoming multim. msgs.* and one of the following:

Retrieve—Sets the phone to automatically retrieve all multimedia messages.

When new messages arrive, you are notified that a multimedia message is received. If you choose to automatically retrieve messages, you can select *Show* to read the multimedia message or *Exit* to view them in your inbox later.

Retrieve manually—Choose the messages you wish to retrieve. When new messages arrive, you are notified that a multimedia message is available for retrieval. If you select to manually retrieve messages, select *Show* to open the message notification, then *Retrieve*. Select *Exit* to save the notification to your inbox, and retrieve the message later.

Reject—Sets the phone to reject multimedia messages.

Allow or block advertisements

Allows you to block advertisements. This setting is not available if multimedia reception is blocked.

From the start screen, select *Menu* > *Messaging* > *Multimedia msgs.* > *Message settings* > *Allow advertisements* > *Yes* or *No*.

This is a network service. Check with your service provider for more information.

■ Distribution lists

Distribution lists allow you to send text or multimedia messages to a designated group of people.

Create distribution lists

1. In the standby mode, select *Menu* > *Messaging* > *Distribution lists* > *New list*. If you create a second distribution list, select *Menu* > *Messaging* > *Distribution lists* > *Options* > *Create new list*.
2. Enter a name for the list, and select *OK*.
3. To add a contact to this list, select *Add new*, and add the contacts one by one.

A distribution list only contains phone numbers of recipients.

Add and remove contacts

To add contacts, select *Menu* > *Messaging* > *Distribution lists* > the list > *Add new*. Add the contacts one by one.

To remove contacts, select *Menu* > *Messaging* > *Distribution lists* > the list > *Options* > remove contact name.

Use distribution lists

1. In the standby mode, select *Menu* > *Messaging* > *Distribution lists*.
2. Lists you create are displayed. Scroll to the list you wish to modify; select *Options* and one of the following:
 - Create new list*—Create a new distribution list.
 - Send message*—Send message to the distribution list.
 - Rename list*—Rename the distribution list.
 - Clear list*—Clear the distribution list of all current contacts.
 - Delete list*—Delete the distribution list.

Voice messages

If you subscribe to voice mail, your wireless provider will furnish you with a voice mailbox number. You need to save this number to your phone to use voice mail. When you receive a voice message, your phone will beep, displaying a message, or both. If you receive more than one message, your phone shows the number of messages received.

Save voice mailbox number

Your wireless provider may have already saved your voice mailbox number to your phone. If so, the number will appear in the display in step 2. Select *OK* to leave the number unchanged.

1. In the standby mode, select *Menu* > *Messaging* > *Voice messages* > *Voice mailbox number*.
2. If the number is not displayed or incorrect, enter your voice mailbox area code and number.
3. Select *OK*.

Call and set up your voice mail

1. After you save the voice mailbox, in the standby mode, press and hold 1.
2. When you connect to voice mail and the prerecorded greeting begins, follow the automated instructions to set up your voice mail.

Listen to your voice mail

After you set up voice mail, you can dial the number in one of four ways:

- Dial the number using the keypad.
- Press and hold 1.
- Select *Listen* if there is a notification on the display.
- In the standby mode, select *Menu* > *Messaging* > *Voice messages* > *Listen to voice messages*.

When you connect and the prerecorded greeting begins, follow the automated instructions to listen to your voice messages.

Automate voice mail

Voice mail services vary by service provider. The following instructions are examples of common operations. Please check with your service provider for specific instructions for using your voice mail service.

Write down number and process

1. Write down your voice mailbox number.
2. Call and check your voice mail as you normally would.
3. Write down your interaction with the recorded prompts step-by-step. Note that each voice mail service may vary. Your steps may resemble the following:

Dial 2145551212, pause 5 seconds, press 1, pause 2 seconds, press 1234, and press *.

Be precise; you will need this information in "Set up voice mail with dialing codes," p. 43.

Set up voice mail with dialing codes

1. In the standby mode, select *Menu* > *Contacts* > *1-touch dialing*.
2. Scroll to an empty 1-touch dialing slot, and select *Assign*.

Messaging

3. Enter your voice mailbox number, including the area code.
4. Refer to dialing codes, and enter any codes as necessary using the information that you saved from "Write down number and process," p. 43.

For example, if you pause for 5 seconds after connecting to voice mail, enter p twice after the voice mailbox number, for example, 2145551212pp. For more information on dialing codes see "Insert dialing codes," p. 50.

5. Enter any remaining pauses or other information that allows you to listen to your messages, and select *OK*.
6. Enter a name (such as voice mail), and select *OK*.

To dial and listen to your voice mail, press and hold the assigned 1-touch dialing key in the standby mode.

■ Minibrowser messages

Minibrowser messaging is a network service. See "Network services," p. 8 for more information.

If your wireless service provider supports this feature, you can check for e-mail messages using the minibrowser. In the standby mode, select *Menu* > *Messaging* > *Minibrowser msgs.* > *Connect*.

See "Mobile web," p. 113 for more information on using your phone to access web pages.

5. Log



Log stores information about the last 30 missed, 30 received, or 30 dialed calls. It also adds the total duration of all calls. When the number of calls exceed the maximum, the most recent call replaces the oldest.

Whether viewing missed, received, or dialed calls, the menu options are the same:

Time of call—Display the date and time of the call.

Send message—Send a message to the number.

Use number—Edit the number and associate a name with the number.

Save—Enter a name for the number and save it to your contacts list.

Add to contact—Add the number to an existing name in your contacts list, if the number is not associated with a name.

Delete—Clear the number from memory.

Call—Call the number.

■ View missed calls

The missed calls feature does not function when your phone is switched off. Missed calls are calls that were never answered.

1. In the standby mode, select *Menu* > *Log* > *Missed calls*; if a missed call notification appears, select *List*.
2. Scroll to a name or number, select *Options*, and a menu option.

■ View received calls

Received calls are calls that have been answered.

1. In the standby mode, select *Menu* > *Log* > *Received calls*.
2. Scroll to a name or number, select *Options*, and a menu option.

■ View dialed numbers

Dialed calls are numbers you have previously dialed from your phone:

Log

1. In the standby mode, press the call key; or select *Menu > Log > Dialed numbers*.
2. Scroll to a name or number, select *Options*, and a menu option.

■ Time of call

You can make or receive up to five calls to or from the same number and view the time each call occurred. Your clock must be set for this feature to work accurately.

1. While viewing a missed, received, or dialed call, select *Options > Time of call*.
2. Scroll down to view the most recent call times from this number.
3. Select *Back* to return to the options list.

■ Clear log lists

You can delete any missed, dialed, or received calls from phone memory.

In the standby mode, select *Menu > Log > Clear log lists > All call lists, Missed calls, Received calls, Dialed numbers*, or *Message recipients*.

■ Call timers



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes and so forth.

You can view the duration of your calls.

In the standby mode, select *Menu > Log > Call timers* and one of the following options:

Last call duration—Check the time of your last call.

Dialed calls' duration—Check the combined time of calls you dialed for either *Home* or *Roaming*.

Received calls' duration—Check the combined time of calls you received for either *Home* or *Roaming*.

All calls' duration—Check the combined time of all calls.

Life timer—Check the total airtime minutes logged on your phone.

Clear timers—Enter your lock code, and select *OK* to clear all timers on your phone.



Note: Some timers, including the life timer, may be reset during service or software upgrades.

■ Duration of data or fax calls

Data/fax calls are a network service. See "Network services," p. 8 for more information. If your wireless service provider supports this feature, you can view the size or duration of sent or received data and fax calls.



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes and so forth.

In the standby mode, select *Menu > Log > Data/fax calls* and one of the following options:

Last sent data/fax—View the size (KB) of the last sent data or fax call.

Last received data/fax—View the size (KB) of the last received data or fax call.

All sent data/fax—View the size (KB) of all sent data and fax calls.

All received data/fax—View the size (KB) of all received data and fax calls.

Last data/fax's duration—View the duration time of the last data or fax call.

All data/fax calls' duration—View the duration time of all calls.

Clear all data/fax logs—Select *Yes* to clear all data and fax logs.

■ Duration of minibrowser calls

Minibrowser is a network service. See "Network services," p. 8, for more information. If your wireless service provider supports this feature, you can view the size or duration of sent or received data from the minibrowser.



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes and so forth.

In the standby mode, select *Menu > Log > Minibrowser calls* and one of the following options:

Last sent browser data—View the size (KB) of the last send browser data.

Last rcvd. browser data—View the size (KB) of the last received data.

All sent browser data—View the size (KB) of all sent browser data.

All received browser data—View the size (KB) of all received browser data.

Last browser session—View the duration time of the last browser session.

Log

All browser sessions—View the duration time of all browser sessions.

Clear all browser logs—Select *OK* > *Yes* to clear all browser logs.

6. Contacts



The contacts list can hold up to 500 contacts with multiple numbers and text notes for each contact. The amount of numbers and text entries that you can save may vary, depending on length and the total number of entries in the contacts list.

In the standby mode, select *Menu* > *Contacts* and from the following options:

Names—List of contacts currently on your phone.

Settings—Change your contact settings.

Caller groups—Assign contacts to caller groups.

Voice tags—Assign voice commands to phone numbers.

1-touch dialing—Assign specific keys to phone numbers.

My number—Shows the current number assigned to the phone.

Delete all contacts—Delete all contacts on your phone.

To quickly access your contacts scroll up or down while in the standby mode.

■ View contacts

In the standby mode, select *Menu* > *Contacts* > *Names* or scroll down to see your current list of contacts. While viewing your contact list, you can select *Details* for the contact information or *Options* and one of the following:

Search—Search your contacts.

Add new—Add a new contact.

Delete contact—Delete the highlighted contact.

To make a call, highlight a contact, and select *Call*.

■ Search contacts

In the standby mode, select *Menu* > *Contacts* > *Names* > *Options* > *Search*.

Enter the first character of the contact name, and highlight the contact you wish to view.



Note: If the right selection key on your phone is *Names*, you can select *Names* > *Options* > *Search* in standby mode.

■ Add new contacts

Save a name and number

1. In the standby mode, enter the phone number you wish to save.
2. Select *Save*.
3. Enter the name, and select *OK* > *Done*.

When you enter a number, you can select *Options* > *Insert pause ('p')* to insert a pause code or *Options* > *Insert wait ('w')* to insert a wait code.

Save a number (only)

1. In the standby mode, enter the phone number you wish to save.
2. Select and hold *Options*.

Save a contact

1. In the standby mode, select *Menu* > *Contacts* > *Names* > *Options* > *Add new*.
2. Enter the name, and select *OK*.
3. Enter the phone number, and select *OK*.

Insert dialing codes

You can insert special characters called dialing codes into phone numbers such as voice mail, and save the number to a speed dial location. Dialing codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialing string.

You can automate voice mail with dialing codes. For more information, see "Automate voice mail," p. 43.

Press * repeatedly to cycle through dialing codes. When the desired code appears in the display, pause briefly and the code is inserted into the dialing string.

The following dialing codes are available:

Dialing code	Indicates...
*	Bypasses a set of instructions.
+	Causes the international access code to be replaced by +.

Dialing code	Indicates...
p	Pauses for 2.5 seconds before sending any numbers that follow.
w	Waits for you to press the call key before sending the numbers or codes that follow.

Save multiple numbers

You can save different types of phone numbers per contact. The first number you save for any entry is automatically set as the default, but the default number can always be changed.

1. In the standby mode, scroll down to display your list of contacts.
2. Select the contact to which you want to add a phone number.
3. Select *Details* > *Options* > *Add detail* > *Number* > *General*, *Mobile*, *Home*, *Work*, or *Fax*.
4. Enter the phone number, and select *OK*.

If you want to change the number type, highlight the number and select *Details* > *Options* > *Change type* > *General*, *Mobile*, *Home*, *Work*, or *Fax*.

Save other details

To add an address or note an existing contact, do the following:

1. In the standby mode, scroll down to display your list of contacts.
2. Scroll to the contact to which you want to add an address or note.
3. Select *Details* > *Options* > *Add detail* > *E-mail address*, *Web address*, *Street address*, or *Note*.
4. Enter the text for the note or address, and select *OK*.

To associate an image or tone to an existing contact, do the following:

1. In the standby mode, scroll down to display your list of contacts.
2. Scroll to the contact to which you want to add an address or note.
3. Select *Details* > *Options* > *Add detail* > *Image* to save an image from the Gallery or to save a new image with the camera function, or *Tone* to select the default tone or a new tone from the Gallery.

Change default number

To change the default number for an existing contact.

1. In the standby mode, scroll down to display your list of contacts.
2. Select the contact for which you want to change the default number and *Details*.
3. Highlight the new default number, and select *Options* > *Set as default*.

Send business cards

You can send a business card to a compatible phone or other handheld device.

1. In the standby mode, scroll down to display your list of contacts.
2. Select the contact to which you want send as a business card and *Details*.
3. Select the number to use and *Options* > *Send business card* > *Via multimedia*, *Via text message*, *Via infrared*, or *Via Bluetooth*.
4. Select *Primary number* or *All details*.
5. Enter the number for your recipient, or select *Search* to retrieve a number from your contacts; select *OK*.

Edit contacts

1. In the standby mode, scroll down to display your list of contacts.
2. Highlight a contact, select *Details*.
3. Highlight the name, number, detail, or image you wish to edit and select *Options*. The type of detail you highlight determines your selection of options. Choose one of the following options:

View—View the phone number of the contact.

Add detail > *Name*—Add a name to the contact. This option appears only if the contact does not have a name.

Add detail > *Number* > *General*, *Mobile*, *Home*, *Work*, or *Fax*—Add a number to the contact.

Add detail > *E-mail address*, *Web address*, *Street address*, *Note*, *Image*, or *Tone*—Add an additional detail to the contact.

Edit name, *Edit number*, or *Edit detail*—Edit the detail of the contact.

Change image—Change the image associated with the contact.

Delete contact—Delete the entire contact entry from your contacts.

Delete—Delete the detail from this contact.

Send message—Create and send a text message to the contact.

Use number—Display the phone number, ready for use.

Set as default—Make the number the default for the contact.

Change type > *General*, *Mobile*, *Home*, *Work*, or *Fax*—Change the number type.

Add voice tag—Add a voice tag to the contact.

Save to gallery—Save the image to your *Gallery*.

Send business card > *Via infrared*, *Via text message*, *Via Bluetooth*, or *Via multimedia*—Send the contact as a business card to another phone.

Caller groups > Select *No group* to remove the contact from a caller group or *Family*, *VIP*, *Friends*, *Business*, or *Other* to add the contact to an existing caller group.

1-touch dialing—Assign the contact to your 1-touch dialing list.

■ Modify contact settings

In the standby mode, select *Menu* > *Contacts* > *Settings* and the setting you wish to change:

Scrolling view—Select *Normal name list*, *Name and number*, *Large name list*, or *Name and image* view.

Memory status—View the amount of phone memory used as well as the amount of phone memory available.

■ Set up caller groups

You can add contacts to any of five caller groups, and assign a unique ringing tone or graphic to that group. This enables you to identify callers from the group by their unique ringing tone or graphic.

Set up a caller group

1. In the standby mode, scroll down to display your list of contacts.

Contacts

2. Highlight a contact, select *Details*.
3. Highlight a number, select *Options* > *Caller groups* and the select the caller group you wish to add the number to.

Modify a caller group

In the standby mode, select *Menu* > *Contacts* > *Caller groups* > *Family, VIP, Friends, Business*, or *Other* and one of the following options:

Rename group—Rename the group to your preference.

Group ringing tone—Set the ringing tone for the group.

Group logo—Turn the graphic for the caller group on or off.

Group members—Add or remove members from the caller group.

Set up voice tags

Before using voice tags, note the following:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags, and use them in a quiet environment.
- Very short names are not accepted. Use long names, and avoid similar names for different numbers.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

Assign a voice tag

To use voice dialing, you must first assign a voice tag to a number.

1. In the standby mode, scroll down to display your list of contacts.
2. Highlight a contact, select *Details*.
3. Highlight the number you want to assign a voice tag, select *Options* > *Add voice tag*.

4. Select *Start*, then speak clearly into the microphone. Do not select *Quit* unless you want to cancel the recording.
5. After you finish speaking, the phone automatically stops recording, saves, and replays the voice tag.

 appears next to the phone numbers which have voice tags assigned.

Use a voice tag

1. In the standby mode, select and hold *Names*.
2. When you hear several beeps and *Speak now* appears, release the key.
3. Pronounce the voice tag clearly into the microphone.

When the phone finds the voice tag, a notification appears, and the phone automatically dials the number. If the phone does not locate a number or recognize the voice tag, *No match found* appears.

Play back a voice tag

1. In the standby mode, select *Menu* > *Contacts* > *Voice tags*.
2. Scroll to the voice tag you want to play back, and select *Playback*.

Modify a voice tag

1. In the standby mode, select *Menu* > *Contacts* > *Voice tags*.
2. Scroll to the voice tag you want to change, and select *Change*.
3. Select *Start*, and speak clearly into the microphone. The phone repeats your voice tag, and *Voice tag changed* appears.

Delete a voice tag

1. In the standby mode, select *Menu* > *Contacts* > *Voice tags*.
2. Scroll to the voice tag you want to delete, and select *Delete*. *Delete voice tag?* appears.
3. Select *Yes* to erase the voice tag.

■ Set up 1-touch dialing

You can associate any entry in your contacts with a key from 2–9; to dial those entries, press and hold the assigned key.

Assign a key to 1-touch dialing

1. In the standby mode, select *Menu* > *Contacts* > *1-touch dialing*.
2. Scroll to any empty slot, and select *Assign*.
3. Enter the number (including the area code), and select *OK*; or select *Search* to retrieve a number from your contacts.
4. If necessary, enter the contact name for the number, and select *OK*.

If *1-touch dialing* is off, the phone displays a prompt asking if you want to activate *1-touch dialing*. Select *Yes* to activate *1-touch dialing*.

Change 1-touch dialing numbers

1. In the standby mode, select *Menu* > *Contacts* > *1-touch dialing*.
2. Scroll to the *1-touch dialing* entry you wish to change, and select *Options* > *Change*.
3. Enter the new number, or select *Search* to retrieve a number from your contacts; select *OK*.
4. If necessary, enter the contact name for the number, and select *OK* to change the key assignment.

Delete 1-touch dialing numbers

1. In the standby mode, select *Menu* > *Contacts* > *1-touch dialing*.
2. Scroll to the *1-touch dialing* location you wish to delete.
3. Select *Options* > *Delete* > *Yes* to delete the key assignment.

■ Display phone number

In the standby mode, select *Menu* > *Contacts* > *My number* to display your phone number.

■ Delete contacts

Delete individual contacts

1. In the standby mode, scroll down to display your list of contacts.
2. Highlight a contact, and select *Options* > *Delete contact* > *Yes* or *No*.

Delete all contacts

1. In the standby mode, select *Menu* > *Contacts* > *Delete all contacts* > *Yes*.
2. Enter your lock code, and press *OK*. See "Security," p. 93 for more information.

7. Camera



You can take photos and record video clips with the built-in camera and adjust its settings. The camera lens is on the back of the phone.

The camera produces photos in JPEG format and video clips in H.263 (QCIF) format. After you take a picture or video, you can attach it to a multimedia message, send it as a multimedia message, save it as a wallpaper, save it to a compatible PC using Nokia PC Suite software, and upload it to a Web address with the content image uploader. When you attach a picture to a contact, the picture is displayed when the contact calls you.

If there is not enough memory to take a new photo, delete old photos or other files in the *Gallery*, or move photos onto your miniSD card. See "MiniSD card," p. 20.

This device supports an image capture resolution of 1600 x 1200 pixels and displays a 320 x 240 pixel resolution on the display. The image resolutions in these materials may appear different.


Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

When the phone is in camera mode, the interface will switch from portrait to landscape. Turn the phone on its side to use the camera and view the available options.


■ Take a photo

You can use your camera to take photographs. To take a picture, complete the following steps:

1. In the standby mode, press the camera key or select *Menu* > *Camera*. This activates the camera. The display is now landscape. If you are in *Video* mode, select *Options* > *Still image* to switch to *Still image* mode.

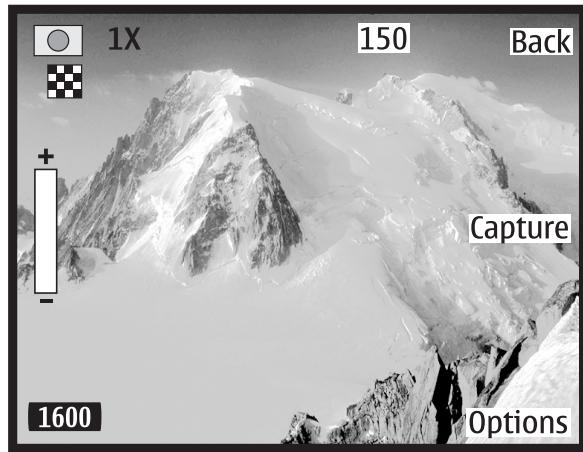

2. To take a picture, press the camera key or select *Capture* to take the photo. Press the volume key displayed here or the scroll keys to zoom in and out. When taking a photo, a shutter sound is heard. The phone saves the photo in the *Images* folder of the *Gallery* menu. The saved photo is shown on the display. Pictures can be saved directly to the miniSD. See "Image storage," p. 63.
3. Select *Back* to take another photo, *Delete* to erase the photo, or *Options* and one of the following:
 - Zoom*—Zoom in on a captured photo; scroll to navigate around the photo.
 - New image*—Returns to camera mode.
 - Send* > *Via multimedia*, *Via Bluetooth*, or *Via infrared*—Send a photo to a compatible phone or PC.
 - Attach to contact*—Attach the photo to a contact.
 - Rename*—Edit the name of the photo.
 - Open Gallery*—Open the *Gallery*, where photos are saved.
 - Set contrast*—Scroll to adjust the contrast of the photo.
 - Edit image*—Opens the photo for editing.
 - Use image* > *Set as wallpaper*, *Set as screen saver*, or *Set as contact image*—Use the photo.

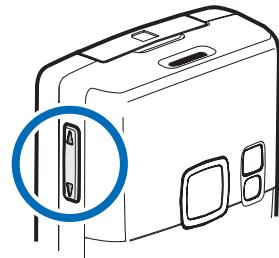

[Details](#) > View details of the photo.

■ Use the self-timer

You can use the camera self-timer to delay taking a photo for approximately 10 seconds.

1. In the standby mode, select [Menu](#) > [Camera](#) > [Options](#) > [Self-timer on](#).
2. Select [Start](#).

A beep sounds while the self-timer is running, and beeps faster when the camera is about to capture the photo. After the time-out, the camera takes the photo and saves it to the [Images](#) folder of the [Gallery](#) menu.

■ Take a sequence of photos

You can use the camera image sequence option to take up to four photos in quick succession.

1. In the standby mode, select [Menu](#) > [Camera](#) > [Options](#) > [Img. sequence on](#).
2. Select [Sequence](#).

The camera takes five photos in sequence. After the photos are taken, the camera saves them to a folder in the [Images](#) folder of the [Gallery](#) menu.

■ Record a video

1. In the standby mode, press the camera key or select [Menu](#) > [Camera](#). This activates the camera. The display is now landscape.

If you are in [Still image](#) mode, select [Options](#) > [Video](#) to switch to [Video](#) mode.

2. Select [Record](#) to begin recording the video clip.

While you are recording, the indicator and the remaining recording time are shown at the top of the display.

3. Select [Pause](#) to pause the recording, [Continue](#) to resume the recording, or [Stop](#) to stop the recording.

The phone saves the video clip in the [Video clips](#) folder of the [Gallery](#) menu.

4. Select [Back](#) to take another video clip, [Play](#) to play the video clip, or [Options](#) and one of the following.

Delete—Delete the video clip from the *Gallery*.

New video clip—Returns to video mode.

Send > *Via multimedia*, *Via infrared*, or *Via Bluetooth*—Send the video clip to a compatible phone or PC.

Rename—Edit the name of the video clip.

Open Gallery—Opens the *Gallery*, where video clips are saved.

Mute audio or *Unmute audio*—Turn the video clip sound on or off.

Set contrast—Use the scroll keys to adjust the contrast of the video clip.

Use video clip > *Set as screen saver*—Use the video clip.

Details—View details of the video clip.

■ Camera options

In the standby mode, select *Menu* > *Camera* > *Options* and from the following:

Still image or *Video*—Choose camera mode to take a picture or record a video.

Mute audio or *Unmute audio*—Turn the sound on or off for the video clip. Option only appears when camera is in video mode.

Night mode on or *Night mode off*—Switches the camera night mode on and off.

Flash on or *Flash off*—Turns the camera flash on and off.

Self-timer on or *Self-timer off*—Turns the self-timer on and off. This option only appears in still image mode.

Img. sequence on or *Img. sequence off*—Turns image sequencing on or off. The pictures are then saved to the gallery. This option only appears in still image mode.

View previous—View the previous photo or video taken. This option only appears when a photo has been taken during that session.

Open Gallery—Open the *Gallery* to view saved images, videos, and recordings.

Settings—Change the settings for the phone camera.

■ Modify camera settings

Image quality

Define file compression when saving the image. High-quality images have less file compression and provide the best image quality, but take more memory.

In the standby mode, select *Menu > Camera > Options > Settings > Image quality > High, Normal, or Basic.*

Image size

Set the size of an image when taking a picture. A larger image has better resolution, but takes more memory.

In the standby mode, select *Menu > Camera > Options > Settings > Image size* and a resolution size.

Video clip quality

Define file compression when saving the video clip. High-quality video clips have less file compression and provide the best image quality, but take more memory.

In the standby mode, select *Menu > Camera > Options > Settings > Video clip quality > High, Medium, or Low.*

Video clip length

You can change the maximum length of a video clip. The maximum size of a video clip can be 600 KB. A recording will stop once it reaches the maximum size, even if the maximum length is set longer. Only video clips that are default length or shorter can be sent in a multimedia message.

In the standby mode, select *Menu > Camera > Options > Settings > Video clip length > Default or Maximum.*

Camera sounds

You can turn off the camera sounds that happen when a picture is taken or video recorded.

In the standby mode, select *Menu > Camera > Options > Settings > Camera sounds > On or Off.*

Self-timer lights

You can turn off the self-timer lights that appear when a picture is taken.

In the standby mode, select *Menu* > *Camera* > *Options* > *Settings* > *Self-timer lights* > *On* or *Off*.

Default title

You can change the default title your phone uses to assign names to new photos and video clips.

In the standby mode, select *Menu* > *Camera* > *Options* > *Settings* > *Default title* > *Automatic* or *My title*. If you select *My title*, enter new text upon which filenames the phone creates are based on.

Image storage

You can change where your phone camera stores files.

In the standby mode, select *Menu* > *Camera* > *Options* > *Settings* > *Image and video storage* > *Default folder* or *Other folder*. If you select *Other folder*, locate the new your new location. This setting in only available when you are using a miniSD card.

Default mode

You can change the default mode of your phone camera.

In the standby mode, select *Menu* > *Camera* > *Options* > *Settings* > *Default mode* > *Standard photo* or *Video*.

8. Gallery



You can save pictures, video clips, recordings, music files, and ringing tones to folders in the *Gallery*, and add new folders to the ones already there. You can download images and tones using multimedia messaging, text messaging, mobile Internet sites, or Nokia PC Suite.

Your phone supports a digital rights management system to protect content that you have acquired. A piece of content, such as a ringing tone, can be protected and associated with certain usage rules, for example, the number of usage times or a certain usage period. The rules are defined in the content activation key that can be delivered with the content or separately, depending on the service provider. You may be able to update these activation keys. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protection may prevent some images, ringing tones, and other content from being copied, modified, transferred, or forwarded.

Your phone has about 20 MB of memory for storing files in the *Gallery*. This memory is not shared with other functions, such as contacts. If the phone displays a message that the memory is full, delete some existing files before proceeding. You can also use a compatible miniSD cards to add memory.



Warning: Use only compatible miniSD cards with this device. Other memory cards, such as multimedia cards, do not fit in the miniSD card slot and are not compatible with this device. Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted.

■ Open a folder

In the standby mode, select *Menu > Gallery* to view the folder system. The phone folder system includes:

Memory card—If there is a miniSD card in the phone, the miniSD name is displayed below the signal strength indicator. You can access your miniSD card folder system.

Images—By default, camera photos are saved to this folder.

Video clips—By default, camera video clips are saved to this folder.

Music files—By default, music files are saved to this folder.

Themes—A set of themes included with your phone are stored here.

Graphics—A set of graphics included with your phone are stored here.

Tones—A set of ring tones included with your phone are stored here.

Recordings—By default, voice recordings are saved to this folder.

Received files—Files sent directly to your phone are stored here.

Your folders—Folders you create appear after the preset folders.

To open a folder, highlight the folder and select *Open*. Once you open the folder list and highlight a file, you can access the file or the options associated with that specific file type.

■ **Gallery options**

In the standby mode, select *Menu* > *Gallery* > *Options* and one of the following:

Set password—Create a password (1–8 characters) for the miniSD card, to protect it against unauthorized use. This option is available only for the miniSD card folder.

Change password—Change the miniSD card password that you have created. This option is available only for the miniSD card folder and if you have created a password.

Delete password—Delete the miniSD card password that you have created. This option is available only for the miniSD card folder.

Rename memory card—Enter a name for the miniSD card. This option is available only for the miniSD card folder.

Format memory card—Delete all files and folders stored on the miniSD card. This option is available only for the miniSD card folder.

Delete folder—Delete a folder you have created. You cannot delete a preset folder.

Move—Move the selected folder into another folder. After selecting *Move*, highlight another folder, and select *Move to*. You cannot move a preset folder.

Rename folder—Rename a folder you have created. You cannot rename a preset folder.

Details—Show the name, size, and date of creation of the selected folder.

Type of view—Choose whether to view the folders as a list with details, list only or a grid.

Sort—Sort the contents of the selected folder by name, date, format, or size.

Gallery

Add folder—Create a new folder.

Memory status—Check the available memory for the phone handset or the miniSD card.

Activation key list—View the list of available activation keys. You can delete activation keys if desired.

Mark or *Mark all*—Allows you to mark Gallery folders to be moved into another folder. This function only applies to folders you have created.

Other options appear depending on the type of files that exist in the folders.

9. Media



■ Media player

With *Media player* you can download, view, and play compatible images, audio and video files, and animated images from a variety of sources. *Media player* plays streaming videos and audio from a network server. Streaming functionality is a network service and requires network support. Check the availability of these services, pricing, and tariffs with your network operator or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

In the standby mode, select *Menu* > *Media* > *Media player* and one of the following:

Online media—Connects to the operator's network. This is a network service. Check with your service provider for pricing and information.

Open Gallery—Open the *Gallery*. From the *Gallery*, you can play stored audio and video files. See "Gallery," p. 64.

Go to address—Enter the address of a mobile Internet service, and select *OK*.

FF/Rew interval—Choose the interval at which a video clip will fast forward or rewind.

■ Music player

Your phone includes a *Music player* for listening to music or other tracks in MP3 or AAC format. You can transfer files from a PC to your phone using a USB data cable, an infrared, or a Bluetooth wireless technology connection. To transfer music tracks from a compatible PC and manage the music tracks and track lists, see the instructions for the Nokia Audio Manager application in the Nokia PC Suite online help. See "Data cable transfer," p. 89; "Infrared connectivity," p. 89; and "Bluetooth connectivity," p. 86 for more information on transferring music tracks to your phone.

Music files stored in the *Music files* folder of the *Gallery* are automatically detected and added to the default playlist. Music files stored elsewhere, such as in a miniSD card folder, must be defined in a track list before you can listen to them.

You can listen to the sound files through a compatible headset or the phone loudspeaker.

You can make or answer a call while using *Music player*. During a call, the playback is paused. When the call ends, *Music player* restarts where it left off.

Play music tracks

In the standby mode, select *Menu > Media > Music player*. If there are no music files in the *Music files* folder, you can select another folder before entering the *Music player*. The details of the first track on the default track list are shown.

To use the graphical keys,  ,  ,  , or  , on the display, scroll left or right to the desired key, and select it.

Play track—To play a track, select  .

Adjust volume—To adjust the volume level, use either the volume key or the left and right selection keys.


Stop track—To stop the playing, select  or press and hold the end key.

Skip tracks—To skip to the beginning of the next track, select  . To skip to the beginning of the previous track, select  twice.

Rewind or fast forward—To rewind the current track, select and hold  . To fast forward the current track, select and hold  . Release the key at the position you want.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

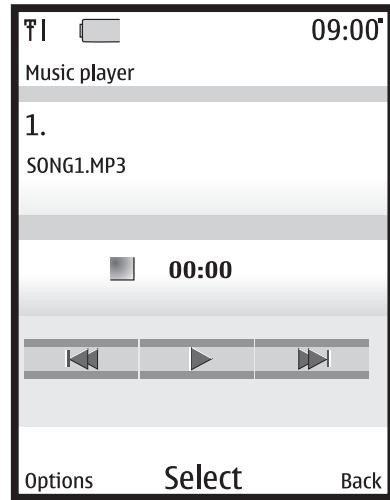

Music player options

Select *Music files* or other music folder and *Options* and one of the following:

Play via Bluetooth—Make a connection to an audio enhancement using Bluetooth connectivity.

Track list—View all the tracks available on a track list. To play a track, highlight the track, and select *Play*. Select *Options > Send* to send the music file. Select *Options > Refresh all tracks* to refresh the track list (for example, after adding new tracks to the list). Select *Options > Change track list* to change the track list that is shown when you open the *Music player* menu, if several track lists are available in the phone.

Play options—Select *Random* to play the tracks on the track list in random order. Select *Repeat* to play the current track or the entire track list repeatedly.

Media equalizer—The equalizer enhances the sound quality when using a headset (only) with the *Music player* by amplifying or attenuating frequency bands. There are five preset equalizer settings (*Normal*, *Pop*, *Rock*, *Jazz*, and *Classical*) and two customizable settings.

Headset or **Loudspeaker**—With the headset attached you can toggle between listening to the *Music player* through a headset or the loudspeaker. When using a compatible headset, you can skip to the next track by pressing the headset key quickly. To stop the playing, press and hold the headset key.



Warning: When using the stereo headset your ability to hear outside sounds may be affected. Do not use the stereo headset where it can endanger your safety.

Send > *Via multimedia*, *Via infrared*, or *Via Bluetooth*—Send music files to a compatible device.

Memory status—View used and free memory of *Handset* and *Memory card*.

■ Radio

Your phone has an FM radio that also functions as an alarm clock radio. You can listen to the FM radio on your phone through the hands-free speaker enhancement or with a headset. For FM stereo, connect a compatible music stand or stereo headset to the connector on the bottom of the phone or connect a 2.5 mm headset to the headset port on the side of the phone.

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or enhancement needs to be attached to the device for the FM radio to function properly.

The quality of a radio broadcast depends on coverage of the radio station in that particular area.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

Play radio

In the standby mode, with an enhancement or headset connected, select **Menu** > **Media** > **Radio**. The *Radio* turns on and plays the last radio frequency you used.

To use the graphical keys, , , , or , on the display, scroll left or right to the desired key, and select it.

Media

Channel search—To start a channel search, select and hold **◀◀** or **▶▶**. To change the radio frequency in 0.1 MHz steps, briefly press **◀◀** or **▶▶**.

Switch off—Press and hold the end key to turn off the radio.

Adjust volume—To adjust the volume level, use the volume key.


Save channel—To save the channel to a memory location 1 to 9, press and hold the corresponding number key. To save a channel to a memory location 10 to 20, briefly press 1 or 2, then press and hold desired number.

Enter the name of the channel, select **OK**.

Select channel—To select to a channel, select **▲** or **▼**. To go directly to a saved channel, briefly press the corresponding number keys.

When an application using a browser connection is sending or receiving data, it may interfere with the radio.

When you place or receive a call, the radio automatically mutes. Once the call is ended, the radio switches back on.

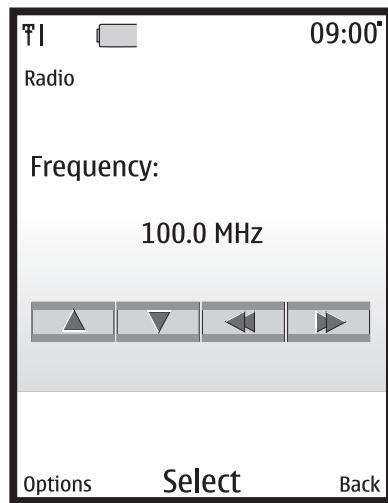

Radio options

In the standby mode, select **Menu > Media > Radio**. The radio turns on. Select **Options** and one of the following:

Turn off—Turns off the radio.

Save station—Enter a name for the channel, and select **OK**. Select one of 20 locations to save the channel location.

Stations—Select from list of current saved channels on your phone. Use **Options > Delete station** to clear channels or **Options > Rename** to rename channels.

Mono output or **Stereo output**—Listen to the radio in monaural mode or in stereo (default). Stereo output is available through a stereo enhancement.

Headset or **Loudspeaker**—With the headset attached, listen to the radio through a headset or the loudspeaker.

Set frequency—Manually enter the frequency of a known radio station, and select **OK**. You can also press * to set a frequency.

■ Voice recorder

Voice recorder allows you to make a short (up to 3 minutes) recording and save it to the *Recordings* folder or another folder in the *Gallery*. The recorder cannot be used when a data call is active.

Record speech or sound

1. In the standby mode, select *Menu* > *Media* > *Voice recorder*.
2. To start the recording, select record virtual button.
3. Hold the phone in the normal position near your ear, and record your message.
4. When you are finished recording, select stop virtual button.

The recording is given a default name and saved to the *Recordings list*. The default location of the *Recordings list* is the *Recordings* folder in the *Gallery*.

After you have made a recording you can select *Play last recorded* to replay the recording and *Send last recorded* > *Via infrared*, *Via Bluetooth*, or *Via multimedia* to send the recording to a compatible phone. These options are only available during the current recording session.

Recording list

1. In the standby mode, select *Menu* > *Media* > *Voice recorder* > *Recordings list*.
2. Navigate through the *Recordings* folder, and select a recording you want to modify.
3. Select *Open* to open and play the recording or *Options* to use the *Gallery* options.

Change the storage folder

You can select a folder other than *Recordings* as the default folder to store your voice recordings.

1. In the standby mode, select *Menu* > *Media* > *Voice recorder* > *Select memory*.
2. Highlight the new location, and select *Set*.

■ Equalizer

The equalizer enhances the sound quality when using *Music player* by amplifying or attenuating frequency bands. There are five preset equalizer settings (*Normal*, *Pop*, *Rock*, *Jazz*, and *Classical*) and two customizable settings.

Activate an equalizer set

In the standby mode, select *Menu* > *Media* > *Equalizer*, and highlight the desired equalizer setting, and select *Activate*. Select *Options* > *View* to display the equalizer settings.

Create a custom equalizer set

1. In the standby mode, select *Menu* > *Media* > *Equalizer*.
2. Highlight a customizable setting, and select *Options* > *Edit*.

The selected set appears in the display with the bar on the far left highlighted. The bars adjust frequencies, from the lowest (the far left bar) to the highest (the far right bar). The higher the indicator on a particular bar, the more that frequency is amplified.

3. To adjust the lowest frequency, scroll up and down to move the indicator on the bar.
4. To adjust other frequencies, scroll right and left to move to the other bars.
5. Repeat steps 3 and 4 to adjust the setting for each frequency.
6. When you are finished, select *Save*.
7. To rename the setting, select *Options* > *Rename*, enter a new name, and select *OK*.
8. To activate the setting, select *Activate*.



10. Settings

Use the *Settings* menu to change profiles, display settings, themes, tone settings, time and date settings, call settings, phone settings, voice commands, connectivity, enhancements, security settings, application settings, network settings, network services, restore factory settings, and view phone details.

■ Profiles

Profiles define how your phone reacts when you receive a call or message, how your keypad sounds when you press a key, and more. Ringing options, keypad tones, and other settings for each of the available profiles can be left at their default setting, or customized to suit your needs. The following profiles are available: *Normal*, *Silent*, *Meeting*, *Outdoor*, and two customizable profiles.

Profiles are also available for enhancements such as a headset and car kit. See "Enhancement settings," p. 91.

Activate a profile

In the standby mode, select *Menu* > *Settings* > *Profiles* > *Normal*, *Silent*, *Meeting*, *Outdoor*, or custom profile > *Activate*.

Customize a profile

To modify a profile, do the following:

In the standby mode, select *Menu* > *Settings* > *Profiles* > *Normal*, *Silent*, *Meeting*, *Outdoor*, *Pager*, or custom profile > *Customize* > and a profile option. You cannot rename the *Normal* profile. To customize profile tones, see "Tones," p. 75.

Set a timed profile

Timed profiles can be used to prevent missed calls. For example, suppose you attend an event that requires your phone be set to *Silent* before the event starts, but you forget to return it to *Normal* until long after the event. A timed profile can prevent missed calls by returning your phone to the default profile at a time you specify.

To set a timed profile, do the following:

Settings

1. In the standby mode, select *Menu* > *Settings* > *Profiles* > *Normal, Silent, Meeting, Outdoor*, or custom profile > *Timed*.
2. Enter the time for the profile to expire, and select *OK*.

Timed profiles can be set up to 24 hours in advance.

■ Display

Standby mode settings

Wallpaper

You can set either an *Image* or a folder of images (*Slide set*) as wallpaper for the phone display.

In the standby mode, select *Menu* > *Settings* > *Display* > *Standby mode settings* > *Wallpaper* and one of the following:

On—Active wallpaper on your phone.

Off—Deactivate wallpaper on your phone.

Image—Choose an image from the *Gallery* for wallpaper. Select *Open* to browse the *Graphics* folder. Select the image of your choice for the wallpaper.

Slide set—Select a folder in your *Gallery* to act as a slide show for the wallpaper.

Font color

You can set font color of your phone when in standby mode.

1. In the standby mode, select *Menu* > *Settings* > *Display* > *Standby mode settings* > *Idle state font color*.
2. Scroll to select a color from the color grid.

Banner

Banner is a network service. See "Network services," p. 8 for more information.

If your wireless service provider supports this feature, you can choose whether the display shows the operator logo or a custom banner, when the phone is in the standby mode.

In the standby mode, select *Menu* > *Settings* > *Display* > *Banner* > *Default* or *Customize*.

Screen saver

You can choose a screen saver for the phone display. In the standby mode, select *Menu* > *Settings* > *Display* > *Screen saver* and one of the following:

On—Active screen saver on your phone.

Off—Deactivate screen saver on your phone.

Screen savers > *Image*, *Slide set*, *Video Clip*, *Digital clock*, or *Open Camera*—

Choose an image, video clip or other option to act as your screen saver.

Time-out > Modify the idle time before the screen saver activates.



Note: Power saver is automatically activated following screen saver time-out to optimize battery life.

Sleep mode

Sleep mode is a power-saving feature that turns the phone display off during inactivity. You can activate the sleep mode feature on your phone. In the standby mode, select *Menu* > *Settings* > *Display* > *Sleep mode* > *On* or *Off*.

When *Sleep mode* is activated the display is completely blank. A blinking LED indicator shows that the phone is still on.

Backlight time-out

You can control the time-out of the backlight on your phone.

In the standby mode, select *Menu* > *Settings* > *Display* > *Backlight time-out* > *Default* (15 seconds). To change the time-out between 15 seconds and 5 minutes, select *Customize*.

■ Themes

Themes allows you to personalize the ringtone, screensaver and background on your phone.

In the standby mode, select *Menu* > *Settings* > *Themes* > *Select theme* and a theme of your choice.

■ Tones

You can adjust the ringing volume, keypad tones, and more for the active profile.

In the standby mode, select *Menu* > *Settings* > *Tones* and one of the following:

Settings

Incoming call alert—Select how your phone will alert you when there is an incoming call: *Ringing, Ascending, Ring once, Beep once, Off*.

Ringing tone—Select *Open Gallery > Tones* to select the ringing tone for incoming calls.

Ringing volume—Use the left and right scroll keys to set the volume of your ringing tone.

Vibrating alert—Activate the vibrating call alert. Select *On* to activate the vibrating alert.

Message alert tone—Select the alert tone for incoming messages: *Off, Standard, Special, Beep once, Long & loud, Ringing tone*.

Keypad tones—Use the left and right scroll keys to set the volume of your keypad tones (or turn them off).

Warning tones—Turn warning and confirmation tones on or off

Alert for—Set the phone to alert only when a member of a selected caller group calls. See "Set up caller groups," p. 53 for more information.

■ Time and date

Clock

Show or hide the clock

In the standby mode, select *Menu > Settings > Time and date > Clock > Show clock* or *Hide clock*.

Set the time

1. In the standby mode, select *Menu > Settings > Time and date > Clock > Set the time*.
2. Enter the time (in *hh:mm* format), and select *OK*.
3. Select *am* or *pm* (this option displays only when 12-hour format is in use).

Change the time zone

In the standby mode, select *Menu > Settings > Time and date > Clock > Time zone* and your time zone based on Greenwich Mean Time (GMT), plus or minus hours in your time zone.

For example, GMT-8 is US Pacific time in Los Angeles, CA. GMT does not include Daylight savings time, so add or subtract accordingly.

Change the format

In the standby mode, select *Menu* > *Settings* > *Time and date* > *Clock* > *Time format* > *24-hour* or *12-hour*.

Date

Show or hide the date

In the standby mode, select *Menu* > *Settings* > *Time and date* > *Date* > *Show date* or *Hide date*.

Set the date

In the standby mode, select *Menu* > *Settings* > *Time and date* > *Date* > *Set the date*, enter the date, and select *OK*.

Change the format

1. In the standby mode, select *Menu* > *Settings* > *Time and date* > *Date* > *Date format* and the format of your choice.
2. With *Date* on the display, select *Date separator*, and the separator of your choice.

Set the auto-update of date and time

Auto-update is a network service. See "Network services," p. 8 for more information.

If your wireless service provider supports this feature, you can allow the digital network to set the clock, which is useful when you are out of your home area (for example, when you have traveled to another network or time zone).

In the standby mode, select *Menu* > *Settings* > *Time and date* > *Auto-update of date/time* > *On, Confirm first*, or *Off*.

If you use the *Auto-update of date/time* option while outside your digital network, you may be prompted to enter the time manually. Network time will replace the time and date when you reenter your digital network.

If your battery has been removed or has discharged outside the digital network, you may be prompted to enter the time manually (once the battery is replaced or recharged, and you are still outside of the digital network).

■ Call

Location info sharing

Location info sharing sets whether your GPS signal is always on or only in the case of an emergency call.

In the standby mode, select *Menu > Settings > Call > Location info sharing > Emergency* or *On*.

GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver.

This feature is not designed to support positioning requests for related calls. Contact your service provider for more information about how your phone complies with government regulations on location based emergency calling services.

Anykey answer

When *Anykey answer* is on, briefly press any key except the right selection or end key to answer a call.

In the standby mode, select *Menu > Settings > Call > Anykey answer > On* or *Off*.

Automatic redial

Occasionally, your network may experience heavy traffic, resulting in a fast busy signal when you dial. With automatic redial activated, your phone redials the number, and notifies you once the network is available.

In the standby mode, select *Menu > Settings > Call > Automatic redial > On* or *Off*.

1-touch dialing

To activate or deactivate *1-touch dialing*, do the following:

In the standby mode, select *Menu > Settings > Call > 1-touch dialing > On* or *Off*. For more information on *1-touch dialing*, see "Set up 1-touch dialing," p. 56.

Answer when slide opened

Set your phone to answer a call when you open the slide. If the setting is off, you must press the call key after you open the slide.

In the standby mode, select *Menu* > *Settings* > *Call* > *Answ. when slide opened* > *On* or *Off*.

End call when slide closed

Set your phone to end a call when you close the slide. If the setting is off, you must press the end key after you close the slide.

In the standby mode, select *Menu* > *Settings* > *Call* > *End call when slide closed* > *On* or *Off*.

Automatic update of service

If supported by your wireless service provider, this feature allows you to set your phone to automatically receive updates from your network that may improve service and coverage.

In the standby mode, select *Menu* > *Settings* > *Call* > *Automatic update of service* > *On* or *Off*.

Calling card

If you use a calling card for long distance calls, you can save the calling card numbers in your phone. Your phone can store up to four calling cards.

Save information

1. In the standby mode, select *Menu* > *Settings* > *Call* > *Calling card*.
2. Enter your security code or lock code, and select *OK*. (See "Security," p. 93.)
3. Scroll to one of the four memory locations, and select *Options* > *Edit* > *OK* > *Dialing sequence*.
4. Select one of the following sequence types:

Access + phone + card—Dial the access number, the phone number, the card number and PIN, if required.

Access + card + phone—Dial the access number, the card number and PIN, if required, then phone number.

Prefix+ phone + card—Dial the prefix (numbers that must precede the phone number) and phone number you want to dial, then card number and PIN, if required.

Settings

5. Enter the required information (access number or prefix and card number), and select *OK* to confirm your entries.
6. Select *Card name*.
7. Enter the card name, and select *OK*.

Contact your calling card company for more information.

Make calls

After you have saved your calling card information in your phone, you can make a call using your calling card.

1. In the standby mode, select *Menu* > *Settings* > *Call* > *Calling card*.
2. Enter your security code or lock code, and select *OK*.
3. Scroll to the calling card of your choice, and select *OK*.
4. Press the end key to return to standby mode; then enter the phone number, including any prefix (such as 0 or 1) that your calling card may require when you make a calling card call. See your calling card for instructions.
5. Press and hold the call key for a few seconds until *Card call* is displayed.
6. When you hear the tone or system message, select *OK*.

Abbreviated dialing

If supported by your wireless service provider, you can create 4-5 digit numbers sequences for your contacts when *Abbreviated dialing* is activated.

In the standby mode, select *Menu* > *Settings* > *Call* > *Abbreviated dialing* > *On* or *Off*.

International prefix

If supported by your service provider, you can store an international prefix into your phone. When you enter + at the beginning of a phone number, your phone automatically inserts the international prefix that you have stored.

1. In the standby mode, select *Menu* > *Settings* > *Call* > *International prefix*.
2. Enter the international prefix (for example, 0011), and select *OK*.
3. In the standby mode, enter + and the phone number you want to call. For example, +3546789.

The phone dials the international prefix you have stored in your phone and the phone number you have entered. For example, the phone dials 0011354789.

Data and fax calls

Receive data or fax calls

Data/fax calls is a network service. See "Network services," p. 8 for more information.

If your wireless service provider supports this feature, you can set up the phone to send or receive data or fax calls when a terminal, such as a PDA or PC, is connected.

For better performance during data calls, place the phone on a stationary surface. Do not move the phone by holding it in your hand during a data call.

For more information on connectivity, refer to the PC/PDA Connectivity Guide. The PC/PDA Connectivity Guide can be downloaded from the Nokia website at www.nokiausa.com.

1. In the standby mode, select *Menu* > *Settings* > *Call* > *Data/fax calls* > *Incoming data/fax call* and one of the following:
 - Normal*—The phone receives incoming calls as usual.
 - Data calls only*—The phone receives only data calls.
 - Fax calls only*—The phone receives only fax calls.
2. Select *Data calls only* or *Fax calls only*.
3. When you are finished receiving the fax or data call, repeat steps 1 and 2, and select *Normal*.

View data transfer

You can view the transmission speed when sending or receiving data or fax calls.

In the standby mode, select *Menu* > *Settings* > *Call* > *Data/fax calls* > *Data rate display* > *Graphic* or *Off*.

Call summary

Your phone can display the time spent on a call when you hang up.

In the standby mode, select *Menu* > *Settings* > *Call* > *Call summary* > *On* or *Off*.

Settings

Show call time on display

Your phone can display the call time during the phone call.

In the standby mode, select *Menu* > *Settings* > *Call* > *Show call time on display* > *On* or *Off*.

Ringing tone for no caller ID

You can select a different ringing tone for calls received with no caller ID.

In the standby mode, select *Menu* > *Settings* > *Call* > *Ring. tone for no caller ID* > *On* or *Off*. See "Customize a profile," p. 73 for more information on selecting a ringing tone.

■ Phone language

Language settings

Phone language allows you to set the language of the display text seen on the phone. In the standby mode, select *Menu* > *Settings* > *Phone* > *Phone language* and the language of your choice.

Automatic keyguard

Automatic keyguard allows you to automatically lock your phone after a defined time.

In the standby mode, select *Menu* > *Settings* > *Phone* > *Automatic keyguard* > *On* or *Off*.

Navigation key

If supported by your wireless service provider, you can set the features that are activated when you press the scroll key.

1. In the standby mode, select *Menu* > *Settings* > *Phone* > *Navigation key*.
2. Highlight the scroll up, scroll down, scroll right, or scroll left arrow; select *Change*.
3. Select a function to assign to the action.

Memory status

You can view the memory usage of your phone or miniSD card. If you do not have a miniSD card, you will only see the options for your phone memory. Some or all of the following options are available on your phone.

Phone memory

In the standby mode, select *Menu* > *Settings* > *Phone* > *Memory status* > *Phone* and one of the following possible options.

Free memory—Shows the amount of phone memory available for file storage.

Contacts—Shows the amount of phone memory currently used for Contacts.

Text messages—Shows the amount of phone memory currently used for Text messages.

Gallery—Shows the amount of phone memory currently used for Gallery.

Organizer—Shows the amount of phone memory currently used for Organizer.

Applications—Shows the amount of phone memory currently used for Applications.

Multimedia msgs.—Shows the amount of phone memory currently used for Multimedia messages.

Card memory

In the standby mode, select *Menu* > *Settings* > *Phone* > *Memory status* > *Card name* and one of the following:

Free memory—Shows the amount of phone memory available for file storage.

Used memory—Shows the amount of phone memory currently used for file storage.

Size—Shows the total amount of phone memory you can use for file storage.

Security keyguard

If supported by your wireless service provider, *Automatic keyguard* controls whether the security keyguard is on or off.

In the standby mode, select *Menu* > *Settings* > *Phone* > *Automatic keyguard* > *On* or *Off*.

Touch tones

Touch tones are the tones that sound when you press the keys on your phone keypad. You can use *Touch tones* for many automated dial-up services such as banking and airlines or for entering your voice mailbox number and password.

Touch tones are sent during an active call. You can send them manually from your phone keypad, or send them automatically by saving them in your phone.

Set type

In the standby mode, select *Menu > Settings > Phone > Touch tones > Manual touch tones* and one of the following:

Continuous—The tone sounds for as long as you press and hold a key.

Fixed—Used to send tones of the duration you specify in the *Touch tone length* option.

Off—Used to turn off tones. No tones are sent when you press a key.

Set length

You can also specify touch tone length when using the *Fixed* option.

In the standby mode, select *Menu > Settings > Phone > Touch tones > Touch tone length > Short* (0.1 seconds) or *Long* (0.5 seconds).

Start-up tone

If the *Start-up tone* is activated, the tone sounds when you turn on your phone.

In the standby mode, select *Menu > Settings > Phone > Start-up tone > On* or *Off*.

Help text activation

Your phone displays brief descriptions for most menu items. When you arrive at a feature or menu, pause for about 15 seconds and wait for the help text to display. Scroll to page through the full help text, if necessary.

The default setting for help text is on. However, you can turn help text on or off.

In the standby mode, select *Menu > Settings > Phone > Help text activation > On* or *Off*.

Voice commands

You can set up to five *Voice commands*, which allow hands-free operation of certain phone features.

Add a voice tag

Before using *Voice commands*, you must first add a voice tag to the phone function.

1. In the standby mode, select *Menu* > *Settings* > *Voice commands*.
2. Select a function option you wish to tag, and select *Add*.
3. Select *Start*, and speak the voice tag clearly into the microphone.

Do not select *Quit* unless you want to cancel the recording.

The phone replays then saves the recorded tag.  appears next to the function option for which you add a voice tag.

Activate a voice command

After you have associated a voice command tag with a phone function, you can issue a command by speaking the voice command tag.

1. In the standby mode, select and hold *Names*.
2. When *Speak now* appears, pronounce the voice tag clearly into the microphone.

When the phone finds the voice command tag, *Found*: appears, and the phone plays the recognized voice command tag through the earpiece. The function you requested is activated.

Voice command options

You can modify voice command tags. In the standby mode, select *Menu* > *Settings* > *Voice commands*, highlight the voice command tag, and select one of the following options:

Play—Listen to the voice command tag.

Options > *Change*—Change the voice command tag.

Options > *Delete*—Erase the voice command tag.

Connectivity

You can connect the phone to a compatible device using an IR connection. You can also connect the phone to a compatible PC using IR or a USB data cable; and use the phone as a modem to enable connectivity from the PC.

Settings

For more information, see the Nokia PC Suite online help. Nokia PC Suite and all related software can be downloaded from the U.S. Mobile Phone products section of www.nokiausa.com/pcsuite.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

Bluetooth connectivity

Bluetooth technology connectivity enables cost-free wireless connections between electronic devices and can be used to send and receive images, texts, gallery files, voice recordings, video clips, notes, business cards, and calendar notes. It can also be used to connect wirelessly to products that use Bluetooth wireless technology, such as computers. You can synchronize your phone and your PC using Bluetooth connectivity.

Since devices with Bluetooth connectivity communicate using radio waves, your phone and the other device do not need to be in direct line-of-sight.

The two devices only need to be within a maximum of 30 feet (10 meters) of each other. The connection can be subject to interference from obstructions such as walls or other electronic devices.

The Bluetooth wireless technology application whether used actively or in the background, consumes the battery and reduces the operating time of the phone.

This device is compliant with Bluetooth Specification 1.2 and supports the following profiles:

- Object push profile (OPP)
- File transfer profile (FTP)
- Dial-up networking profile (DUN)
- Generic object exchange profile (GOEP)
- Headset profile (HSP)
- Hands-free profile (HFP)
- Generic access profile (GAP)
- Serial port profile (SPP)

To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider. If you want more information on this function, visit the Bluetooth Technology organization website: <https://www.bluetooth.org/>.

Pairing

You can set up a permanent association (pairing) between your phone and another device with Bluetooth technology. Some devices may require pairing before data transfer can take place.

To pair with a device, you and the owner of the other device must agree on a pass code of 1–16 numeric characters. The first time you try to connect the devices, you must each enter the same pass code. Once the devices are paired, you will not need to use the pass code again, so there is no need to remember it.

Paired devices are placed in your paired device list. You can view the list even when Bluetooth connectivity is not active or when the devices in the list are not available for connection.

In the standby mode, select *Menu* > *Settings* > *Connectivity* > *Bluetooth* > *Paired devices* > *Options* and one of the following:

Assign short name—Give a nickname to the selected device (visible to you only).

Request conn. authorization—Select *No* if you want the phone to connect to the selected device automatically or *Yes* if you want the phone to ask for your permission first.

Delete pairing—Delete the pairing to the selected device.

Pair new device—Search for active devices with Bluetooth technology within range, scroll to the desired device, and select *Pair* to establish pairing with that device. Do not accept Bluetooth connectivity from sources you do not trust.

Bluetooth connectivity settings

You can define how your phone is shown to other devices with Bluetooth connectivity.

In the standby mode, select *Menu* > *Settings* > *Connectivity* > *Bluetooth* > *Bluetooth settings* and one of the following:

My phone's visibility—Select *Shown to all* to show the phone to all other devices with Bluetooth connectivity or *Hidden* to show the phone only to the paired devices. Operating the phone in hidden mode is a safer way to avoid malicious software.

My phone's name—Change your phone name that is seen by other users.

Settings

Set up a connection

1. In the standby mode, select *Menu* > *Settings* > *Connectivity* > *Bluetooth* > *On*. The active Bluetooth technology connection is indicated by  at the top of the display.
2. Select *Search for audio enhancements* to search for compatible devices with Bluetooth connectivity. The list of found devices appears in the display.
3. Select the desired device. If required, enter the Bluetooth connectivity pass code of the device to complete the pairing.
4. If required, enter the Bluetooth connectivity pass code of the device to pair with the device.

Your phone connects to the device. You can start data transfer.

To view the device you are connected to, select *Menu* > *Settings* > *Connectivity* > *Bluetooth* > *Active device*.

To deactivate Bluetooth connectivity, select *Menu* > *Settings* > *Connectivity* > *Bluetooth* > *Off*. Deactivation of the Bluetooth technology connection will not affect other functions of the phone.

Send data

Instead of using the *Connectivity* menu, you can use other phone menus to send various types of data to other devices with Bluetooth connectivity. For example, you can send a video clip from the *Video clips* folder of the *Gallery* menu. See the appropriate sections of the user guide for information about sending different types of data.

Receive a data transfer

When a Bluetooth technology connection is active in your phone, you can receive notes, business cards, video clips, and other types of data transfers from another device with Bluetooth connectivity. When you receive a data transfer, an alarm sounds, and a message appears in the start screen.

To view the transferred item immediately from standby mode, select *Show*. To view the item at a later time, select *Exit*.

Depending on the nature of the item, it is saved in the appropriate menu in your phone. For example, a business card would be saved in *Contacts*, and a calendar note would be saved in *Calendar*.

Infrared connectivity

You can set up the phone to receive data through its infrared (IR) port. To use an IR connection, transmission and reception must be to or from an IR compatible phone or device.



Warning: Do not point the IR beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 laser product.

Send and receive data

1. Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices.
The preferable distance between the two devices in an IR connection is from 3 inches to 3 feet.
2. To activate IR in your phone, select *Menu* > *Settings* > *Connectivity* > *Infrared*.
3. The user of the other device should activate IR as well.

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is cancelled and must be restarted.

Connection indicator

- When  is shown continuously, the IR connection is activated and your phone is ready to send or receive data using its IR port.
- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

Data cable transfer

You can transfer data from your phone to a compatible PC, or from a compatible PC to your phone using a CA-53 USB data cable.



Important: Disconnect the USB data cable from the phone to make a call.

Enable default mode connection

Connect to your PC in *Default mode* to transfer phone data and files between your phone and PC using Nokia's PC Suite.

1. Connect your PC and your phone with a CA-53 USB data cable. A notification appears on the display that asking which mode you want to select.

Settings

2. Select *OK > Default mode*. A notification appears on the display stating a connection is active.

You can now use PC Suite to connect to your phone.

Enable data storage connection

Connect to your PC in *Data storage* mode to transfer music, photo, and video files to the phone miniSD card, and from the phone miniSD to your PC with Windows Explorer.

1. Connect your PC and your phone with a CA-53 USB data cable. A notification appears on the display that asking which mode you want to select.
2. Select *OK > Data storage*. The notification *Data storage mode* displays while the phone is in data transfer mode.
3. Open Windows Explorer. Your phone miniSD card will appear as a local drive (named by Nokia 6265 or Nokia 6265i), and with a drive letter assigned to it.
4. Click on the folders to display a window that shows the contents of the folder on the phone miniSD card.
5. Open a second instance of Windows Explorer and display the contents of the folder on your PC where you have MP3 files, photo files, or video files stored.
6. Select the files on your PC that you wish to transfer to the phone.
7. Drag and drop the files from the second window into the first window and place in a folder.
8. The files are transferred to the phone and can be played by the *Music player*, or accessed by the *Media player*.

If you selected a file or files that require more memory than can fit on the available phone memory, you will get an error note. Deselect some of your selected files until the required memory is less than or equal to the available memory on your phone..

Disable data storage connection

1. To disable the USB data cable, double-click the green arrow on the task bar at the bottom of your PC screen.

A window pops up that shows **Unplug or Eject Hardware**.

2. Click on **USB Device** in the **Hardware devices** window.

A popup window shows **Stop a Hardware device**.

3. Highlight **USB device**, and click **OK**.

The popup window **Safe to Remove Hardware** is shown with the message
"The 'USB Device' device can now be safely removed from the system.

4. Click **OK**.



Important: To ensure that all memory card operations are completed in a controlled way, do not unplug the connectivity cable until Windows notifies you that it is safe to do so. Uncontrolled completion or unexpected disruptions of the memory card operations may cause the memory card and the information stored on it to become corrupted. A corrupted memory card may have to be formatted before it can be used again. When a memory card is formatted, all information on the card is permanently lost.

Data and fax transfer

You can make data and fax transfers during a phone call. For more information, see "Data and fax calls," p. 81.

Enhancement settings

The *Enhancement settings* menu displays the hearing aid compliant option by default, but shows other options only if the phone is or has been connected to a compatible enhancement type.

Headset

In the standby mode, select *Menu* > *Settings* > *Enhancements* > *Headset* and one of the following:

Default profile—Choose the profile you wish to be automatically activated when a headset is connected.

Automatic answer—Calls are answered automatically after one ring when a headset is connected. Select *On* or *Off*.

Handsfree

In the standby mode, select *Menu* > *Settings* > *Enhancements* > *Handsfree* and one of the following:

Default profile—Choose the profile you wish to be automatically activated when a car kit is connected.

Settings

Automatic answer—Calls are answered automatically after one ring when a car kit is connected. Select *On* or *Off*.

Lights—Choose to keep the phone lights always on, or to shut off automatically after several seconds. Select *On* or *Automatic*.

Loopset

A LPS-4 Loopset accessory allows your device to optimise sound quality when coupled with a hearing aid that is set to T-coil mode.

In the standby mode, select *Menu > Settings > Enhancements > Loopset > Default profile, Automatic answer*.

If the *Loopset* is connected and recognised through the Pop-Port™ connector, the phone automatically uses the *Loopset*.

TTY/TDD

Check with the manufacturer of the TTY/TDD device for a connecting cable that is compatible with your phone.

TTY/TDD communications depend on network availability. Check with your service provider for availability and description of services.

In the standby mode, select *Menu > Settings > Enhancements > TTY/TDD > Use TTY > Yes* or *No*.

Charger

In the standby mode, select *Menu > Settings > Enhancements > Charger* and one of the following:

Default profile—Select the profile you want to automatically activate when your phone is connected to the charger.

Lights— Select *On* or *Automatic* to keep the phone lights always on or to shut off automatically after several seconds.

Hearing aid

To optimize sound quality, you can set your phone to couple to a T-coil-equipped hearing aid.

In the standby mode, select *Menu > Settings > Enhancements > Hearing aid > T-coil hearing aid mode*. Select *On* to activate the HAC. Verify that the hearing aid is set to T-coil mode, and hold the phone against the ear.

Only activate the *T-coil hearing aid mode* when using your device with a hearing aid or it may impact the audio performance of the device.

■ Security

To access *Security* for the first time, you must enter the preset lock code. By default, the preset lock code is the last four digits of your phone number.

Depending on your wireless service provider, the preset lock code may be a four digit number such as 1234 or 0000. If none of these work, contact your wireless service provider for help.

Phone lock

The phone lock feature protects your phone from unauthorized outgoing calls or unauthorized access to information stored in the phone. When phone lock is activated, *Phone locked* is displayed each time you turn your phone on.

When the device is locked, you can still call the official emergency number programmed into your phone.

1. In the standby mode, select *Menu* > *Settings* > *Security*.

2. Enter the lock code, and select *OK*.

3. Select *Phone lock* and one of the following:

Off—Immediately turns off the phone lock feature.

Lock now—Immediately turns on the phone lock feature.

On power-up—Turns on the phone lock feature the next time you turn the phone on.

If you select *Lock now*, you must enter your lock code before the phone will function normally. After the lock code is accepted, your phone functions normally.

Call not allowed appears if you attempt to place a call while your phone is locked.

To answer a call with phone lock on, select *Answer*, or press the call key.



Note: Depending on your wireless service provider, your phone may ask for the security code (defaulted to 12345) instead of the lock code.

Allowed number if lock active

With phone lock on, the only outgoing calls you can make are to the emergency number programmed into your phone (for example, 911) and the numbers stored in the *Allowed no. if lock active* location.

1. In the standby mode, select *Menu* > *Settings* > *Security*.
2. Enter the lock code, and select *OK*.
3. Select *Allowed no. if lock active* > *Assign*.
4. Enter the phone number, or select *Search* to retrieve the number from the phone book; select *OK*.

To place a call to an allowed number when the phone is locked, enter the allowed number and press the call key.

Change lock code

When changing the lock code, avoid using codes similar to emergency numbers such as 911 to prevent accidental dialing of an emergency number.

By default, the preset lock code is the last four digits of your phone number. Depending on your wireless service provider, the preset lock code may be a four-digit number such as 1234 or 0000. If none of these work, contact your wireless service provider for help.

If you enter an incorrect lock code five times in a row, your phone may ask you for the security code. By default, the security code is the five-digit number, 12345.



Note: If you enter the wrong lock code five times in succession, your phone will not accept your current lock code for 5 minutes. This occurs even if when you power down the phone between incorrect attempts.

To change the phone lock code, do the following:

1. In the standby mode, select *Menu* > *Settings* > *Security*.
2. Enter the current lock code, and select *OK*.
3. Select *Change lock code*.
4. Enter the new lock code (only 4 characters), and select *OK*.
5. Enter the new lock code again for verification, and select *OK*.

When you change your lock code, make sure to remember it. If necessary, write it down and store it in a safe place away from your phone. Avoid entering a lock code similar to emergency numbers to prevent accidental emergency calls.

Call restrictions

Call restrictions allows you to block or allow numbers for incoming or outgoing calls.

1. In the standby mode, select *Menu* > *Settings* > *Security*.

2. Enter the lock code, and select *OK*.

3. Select *Call restrictions* and the type of calls you wish to restrict:

Restrict outgoing calls—Set restrictions on making calls.

Restrict incoming calls—Set restrictions on receiving calls.

4. Select whether to block or allow numbers:

Blocked numbers—Set numbers that are blocked on incoming calls, allowing all other numbers. When a number is blocked, the call is sent to voice mail.

Allowed numbers—Set numbers that are allowed, blocking all other numbers.

5. To modify the restriction list, select from the following options:

Select—Add numbers to the restriction list.

Add restriction—Add a restriction to a number (unavailable if memory is full).

Edit—Edit a restriction on a number.

Delete—Delete a number from restriction list.

When calls are restricted, calls may be possible to the official emergency number programmed into your device.

Voice privacy

Voice privacy is a network service, and its function depends on a variety of services. Contact your service provider for more information.

If your wireless service provider supports this feature, the voice privacy feature protects the privacy of your current phone conversation from other callers placing phone calls on your same network.

1. In the standby mode, select *Menu* > *Settings* > *Security*.

2. Enter the lock code, and select *OK*.

3. Select *Voice privacy* > *On* or *Off*.

■ Application settings

The *Application settings* menu changes game and application settings.

In the standby mode, select *Menu* > *Settings* > *Application settings* and one of the following:

Application sounds > *On* or *Off*—Play sounds during an application.

Application lights > *Application defined* or *Default*—Play lights during an application.

Application vibration > *On* or *Off*—Vibrate phone during an application.

■ Network

The menu options you see in your phone are based on your service provider's network. The network determines which options actually appear in the phone menu. Check with your service provider for more information.

The *Network* menu customizes the way your phone chooses a network in which to operate while you are within or outside of your primary or home system. Your phone is set to search for the most cost-effective network. If your phone cannot find a preferred network, it selects a network automatically based on the option you choose in the *Network* menu.

Roaming options

If supported by your wireless service provider, you can select which roaming option you wish to use. In the standby mode, select *Menu* > *Settings* > *Network* > *Roaming options* and one of the following.

Home only—You can make and receive calls in your home area only.

Automatic—The phone automatically searches for service in another digital network. If one is not found, the phone uses analog service. The roaming rate applies when not in the home service area.

Automatic A—The phone automatically searches for service in another digital network. The roaming rate applies when not in the home service area.

Automatic B—The phone automatically searches for service in another digital network. If one is not found, the phone uses analog service. The roaming rate applies when not in the home service area.

Mode

If supported by your wireless service provider, you can choose whether your phone will use digital or analog service. In the standby mode, select *Menu* > *Settings* > *Network* > *Mode* and one of the following.

Digital preferred—You prefer to make calls on a digital network, but will find another network, if necessary.

Analog only—You can make and receive calls on an analog network only.

Analog per call—You can select an analog network on a call to call basis.

IS-95 per call—You can select an IS-95 network on a call to call basis.

Digital only—You can make and receive calls on a digital network only.

■ Network services

The following features are network services. See also "Network services," p. 8.

Store a feature code

Network feature setting allows you to activate network services in your phone using feature codes received from your service provider.

1. In the standby mode, select *Menu* > *Settings* > *Network services* > *Network feature setting*.
2. Enter the feature code from your service provider (for example, *900 for activating *Forward if busy*), and select *OK*.
3. Select *Call forwarding*.
4. Scroll to the type of forwarding that matches the feature code you entered (for example, *Forward if busy*), select *Activate*.

The activated feature code is now stored in your phone, and you are returned to the *Feature code:* prompt. Continue entering other feature codes (for example, *900 to cancel *Forward if busy*), or press the end key to return to standby mode.

When you enter a network feature code successfully the feature becomes visible in the *Network services* menu.

Call forwarding

Call forwarding tells your network to redirect incoming calls to another number. *Call forwarding* is a network service and may not work the same in all networks, so contact your wireless provider for availability and information.

Settings

To activate, do the following:

1. In the standby mode, select *Menu* > *Settings* > *Network services* > *Call forwarding* and one of the following:

Forward all calls—Forwards all calls to the number you specify.

Forward if busy—Forward incoming calls when you are in a call.

Forward if not answered—Forward incoming calls to another number if you are unable to answer. You can set a delay before forwarding takes place.

Forward if out of reach—Forward incoming calls when your phone is off.

2. Select *Activate*.
3. Enter the number to which your calls, data, or other information are forwarded, and select *OK*.

To cancel, in the standby mode, select *Menu* > *Settings* > *Network services* > *Call forwarding* > *Cancel all call forwarding*.

Cancel all call forwarding may affect your ability to receive voice mail messages. Contact your wireless provider for specific details.

Call waiting

Call If your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can accept, reject, or ignore the incoming call.

To activate, in the standby mode, select *Menu* > *Settings* > *Network services* > *Call waiting* > *Activate*.

During a call, select *Answer* or press the call key to answer the waiting call. The first call is put on hold. Press the end key to end the active call.

To cancel, in the standby mode, select *Menu* > *Settings* > *Network services* > *Call waiting* > *Cancel*.

Send my caller ID

If your wireless service provider supports this feature, you can prevent your number from appearing on the receiving party's caller ID.

In the standby mode, select *Menu* > *Settings* > *Network services* > *Send my caller ID* > *Yes* or *No*.

My number selection

In the standby mode, select *Menu* > *Settings* > *Network services* > *My number selection*. This feature is carrier dependent.

■ **Restore factory settings**

You can reset some of the menu settings to their original values. Data that you have entered or downloaded is not deleted (for example, entries in your contacts list are not affected).

1. In the standby mode, select *Menu* > *Settings* > *Restore factory sett.*
2. Enter the lock code, and select *OK*.



Note: Depending on your wireless service provider, your device may request the security code (defaulted to 12345) instead of the lock code.

■ **Phone details**

You can view the current details of your phone. In the standby mode, select *Menu* > *Settings* > *Phone details* and one of the following options:

User details—Shows the phone's current number details.

Version details—Shows the hardware, software and browser version information for the phone.

System details—Shows the digital network the phone is on.

Icon details—Shows the icons used.

11. Organizer



Your phone contains features to help organize your everyday life, including an alarm clock, calendar, calculator, countdown timer, and stopwatch.

■ Alarm clock

Set an alarm

The alarm clock is based on the phone clock. It sounds an alert any time you specify and even works if the phone is turned off.

1. In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Alarm time*.
2. Enter the time for the alarm in *hh:mm* format, and select *OK*.
3. Select *am* or *pm* if 12-hour clock format is on.

Alarm on appears briefly in the display, and  appears in the standby mode.

If you need to reset the alarm select *Menu* > *Organizer* > *Alarm clock* > *Alarm time* > *On* from the standby mode.

To turn off the alarm, select *Menu* > *Organizer* > *Alarm clock* > *Alarm time* > *Off* from the standby mode.

Repeat alarm

You can set the alarm to repeat every day or only on certain days of the week.

1. In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Repeat alarm* > *On*.
2. Check the day or days of the week you wish to repeat the alarm, and select *Mark*. Select *Unmark* to remove a day.
3. Select *Done* when you have added all desired days.

If you need to revise the days for a repeated alarm, select *Menu* > *Organizer* > *Alarm clock* > *Repeat alarm* > *Repetition days* from the standby mode.

If you need to stop a repeated alarm, select *Menu* > *Organizer* > *Alarm clock* > *Repeat alarm* > *Off* in the standby mode.

Set the alarm tone

You can set which tone is played when the alarm sounds.

In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Alarm tone* and one of the following:

Standard—Select the default alarm.

Radio—Select the radio as the alarm.

Open Gallery—Select a tone from the *Gallery* as the alarm.

Set the snooze time-out

You can set the *Snooze time-out* for the alarm.

In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Snooze time-out* and choose a snooze time.

When the alarm sounds, your phone beeps, vibrates (if vibrate alert is on in the currently active profile), and lights up.

With the phone on, select *Stop* to shut the alarm off or *Snooze*. If you select *Snooze*, the alarm stops for 10 minutes.

If you do not press a key, the alarm stops (snoozes) for the *Snooze time-out*, then sounds again.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you select *Stop*, the device asks whether you want to activate the phone for calls. Select *No* to switch off the device or *Yes* to make and receive calls. Do not select *Yes* when wireless phone use may cause interference or danger.

Turn an alarm off

In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Alarm time* > *Off*.

Calendar

The calendar keeps track of reminders, calls you need to make, meetings, memo, and birthdays. It can even sound an alarm for any of these events.

Monthly view provides an overview of the selected month and weeks. You can also jump to a specific date. Any days or dates that appear in bold font contain calendar notes such as a meeting or reminder. A short summary of notes for the day appear at the bottom of the screen.

Open calendar

In the standby mode, select *Menu* > *Organizer* > *Calendar*.

Scroll to move the cursor in the calendar view.

Calendar options

In the standby mode, select *Menu* > *Organizer* > *Calendar* > *Options* and one of the following:

Week view—View your calendar by weeks. To return to month view select *Back*, while in the *Week view*.

Make a note—Create a note on the selected date.

Go to date—Jump to a specific date. Enter the date (for example, 15/07/2005), and select *OK*.

Go to today—Jump to the current date.

Settings—Modify the calendar settings.

Go to to-do list—Go directly to your to-do list.

Delete all notes—Delete all calendar notes.

Make a calendar note

You can make a calendar note for a specific date. You can choose from five types of notes. Your phone asks for further information depending on which note you select. You can also set an alarm for your note.

1. In the standby mode, select *Menu* > *Organizer* > *Calendar*.
2. Highlight the date for which you want to make a note. Scroll or select *Options* > *Go to date*.
3. Select *Options* > *Make a note* and one of the following

Meeting—Enter the subject, and select *Save*. Enter a location, and select *Save*. Enter a start and end time. Choose an alarm option.

Call—Enter the phone number, and select *Save*. Enter a name, and select *Save*. Enter a time. Choose an alarm option. You can also select *Options* > *Find* to search your contacts.

Birthday—Enter the person's name, and select *Save*. Enter the year of birth. Choose an alarm option.

Memo—Enter the subject, and select *Save*. Enter an start and end date.

Choose an alarm option.

Reminder—Enter the reminder, and select *Save*. Choose an alarm option.

View calendar notes (day view)

You can view the calendar notes for a day.

1. In the standby mode, select *Menu* > *Organizer* > *Calendar*.
2. Scroll to the date you want to view or select *Options* > *Go to date*. Days with notes appear in bold type.
3. Select *View* to see the list of notes for that day.

To view a specific note, highlight the note, and select *View* again. If there are no notes for that date, select *Add* to create a new calendar note.

Options while viewing a day

When viewing a day's list of note, you can highlight a note, select *Options* and one of the following:

Make a note—Create a new note for the selected date.

Delete—Delete the note.

Edit—Edit the note.

Use detail—Use a detail contained in the note.

Move—Move the note to another date on your calendar.

Repeat—Enable the note to recur on a regular basis (daily, weekly, biweekly, monthly, and yearly). *Repeat* is not available for *Birthday* note.

Go to date—Jump to another date on your calendar.

Go to today—Return to the current date.

Send note > *Send as message*, *Via calendar*, *Via infrared*, or *Via Bluetooth*—Send a calendar note in calendar format (vCal), in a text message, in a multimedia message, or directly to another device.

Copy—Copy the note. You can paste the note to another date.

Settings—Modify the calendar settings.

Go to to-do list—Go directly to your to-do list.

Send a calendar note

1. In the standby mode, select *Menu* > *Organizer* > *Calendar*.
2. Highlight the note you wish to send, and select *Options* > *Send note* > *Send as message*, *Via calendar*, *Via infrared*, or *Via Bluetooth* to send the calendar note in calendar format (vCal), in a text message, in a multimedia message, or directly to another device.

Receive a note in calendar format (vCal)

When you receive a calendar note in calendar-to-calendar format (vCal), your phone displays *Calendar note received*.

Select *Show* to view the calendar note. Select *Save* to save the note to your calendar or *Options* > *Discard* to discard the note.

Modify calendar settings

In the standby mode, select *Menu* > *Organizer* > *Calendar* > *Options* > *Settings* and one of the following:

Set the date—Enter the current date, and select *OK*.

Set the time—Enter the current time, and select *OK*.

Time zone—Select your current time zone.

Date format—Select your preferred date format.

Date separator—Select your preferred date separator.

Time format—Select your preferred time format.

Default view—Select a monthly or weekly view.

Week starts—Select the day the week starts.

Auto-delete notes—Select when to delete past notes.

Notes

You can write text notes with the *Notes*. You can also send notes using text message, IR, or Bluetooth connectivity.

Open notes

In the standby mode, select *Menu* > *Organizer* > *Notes*. You see your current list of notes.

If there are no notes, select *Add* to create your first note. If there are existing notes, highlight a note, and select *View*.

Make a note

Initial note

In the standby mode, select *Menu* > *Organizer* > *Notes* > *Add*. Create your note, and select *Save*.

Additional notes

In the standby mode, select *Menu* > *Organizer* > *Notes* > *Options* > *Make a note*. Create your note, and select *Save*.

Create note options

When you create a note, the following options are available:

Insert time and date—Adds the time and date to your note.

Close—Returns you to the notes list.

Insert smiley—Inserts a smiley into your message.

Insert word or *Edit word*—Enter or edit the text of a new word that might not appear in the predictive text dictionary. Option only appears when predictive text is on.

Insert symbol—Inserts a special character into your message. Option only appears when predictive text is on.

Writing language—Choose the language you want to use.

Dictionary on or *Dictionary off*—Turn predictive text on or off.

Matches—View matches found in the predictive text dictionary for the word you want to use. This displays only when predictive text is on.

Send a note

1. In the standby mode, select *Menu* > *Organizer* > *Notes*.
2. Highlight the note you wish to send, and select *Options* > *Send note* > *Send as message*, *Via infrared*, or *Via Bluetooth* to send the note in a text message, in a multimedia message, or directly to another device.

Notes options

In the standby mode, select *Menu > Organizer > Notes > Options* and one of the following:

Make a note—Create a new note.

Delete—Delete the note you selected.

Edit—Edit the note you selected.

Use detail—Use a detail contained in the note.

Send note > Send as message, Via infrared, or Via Bluetooth—Send a note in a text message, in a multimedia message, or directly to another device.

Delete all notes—Delete all notes.

The note options appear only when you have created one or more notes.

To-do list

Use the *To-do list* feature to keep track of your tasks. You can save a task or errand as a to-do list note, select a priority level for the to-do list note, and mark it as done when you have completed it. You can sort the to-do list notes by priority or by date.

Open to-do list

In the standby mode, select *Menu > Organizer > To-do list*. You see your current to-do list.

If there are no to-do tasks, select *Add* to create your first to-do list note. If there are existing to-do list notes, highlight a to-do list note, and select *View*.

Make a to-do list note

Initial to-do list note

In the standby mode, select *Menu > Organizer > To-do list > Add*. Enter the subject, and select *Save > High, Medium, or Low*.

Additional to-do list notes

In the standby mode, select *Menu > Organizer > To-do list > Options > Add*. Enter the subject, and select *Save > High, Medium, or Low*.

Create to-do list note options

When you create a to-do list note, the following options are available:

Insert smiley—Insert a smiley into your message.

Insert word or *Edit word*—Enter or edit the text of a new word that might not appear in the predictive text dictionary. This displays only when predictive text is on.

Insert symbol—Insert a special character into your message. This displays only when predictive text is on.

Writing language—Choose the language you want to use.

Dictionary on or *Dictionary off*—Turn predictive text on or off.

Matches—View matches found in the predictive text dictionary for the word you want to use. This displays only when predictive text is on.

Edit to-do list notes

In the standby mode, select *Menu* > *Organizer* > *To-do list* > *View* > *Edit*. Edit the subject, select *Save*.

View to-do list notes

In the standby mode, select *Menu* > *Organizer* > *To-do list* > *View*.

Deadline—Change the deadline of the to-do list note.

Mark note as done or *Mark as not done*—Indicate whether the to-do list note is completed or not.

Delete—Delete the to-do list note.

Use detail—Use a detail contained in the note.

Edit priority—Change the priority to *High*, *Medium*, or *Low*.

Send > *Send as message*, *Via calendar*, *Via infrared*, or *Via Bluetooth*—Send the to-do list note in calendar format (vCal), in a text message, in a multimedia message, or directly to another device.

Go to calendar—Leave the to-do list, and go to the calendar.

Save to calendar—Save the to-do list note to your calendar.

Send a to-do list note

1. In the standby mode, select *Menu* > *Organizer* > *To-do list*.
2. Highlight the note you wish to send, and select *Options* > *Send* > *Send as message*, *Via calendar*, *Via infrared*, or *Via Bluetooth* to send the to-do list

Organizer

note in calendar format (vCal), in a text message, in a multimedia message, or directly to another device.

To-do list options

In the standby mode, select *Menu > Organizer > To-do list > Options* and one of the following:

Add—Create a new to-do list note.

Delete—Delete the to-do list note you selected.

Mark note as done or *Mark as not done*—Indicate whether the to-do list note is completed or not.

Use detail—Use a detail contained in the note.

Sort by deadline or *Sort by priority*—Sort the to-do list by either date or priority.

Send > Send as message, Via calendar, Via infrared, or Via Bluetooth—Send the to-do list note in calendar format (vCal), in a text message, in a multimedia message, or directly to another device.

Go to calendar—Leave the to-do list, and go to the calendar.

Save to calendar—Save the to-do list note you selected to your calendar.

Delete done notes—Delete the to-do list note you selected to your calendar.

Delete all notes—Delete all to-do list notes.

The to-do list options appear only when you have created one or more notes.

Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root, changes the sign of the number entered, and converts currency values.



Note: This calculator has a limited accuracy and is designed for simple calculations.

Use calculator

1. In the standby mode, select *Menu > Organizer > Calculator*.
2. Enter the first number in the calculation.

Press # for a decimal point if necessary.

Press the scroll key up or down to change the sign of your number or value.

Press * to cycle through the add (+), subtract (-), multiply (*), and divide (/) characters. Pause briefly to select the displayed character.

3. Enter the second number in your calculation.
4. Select *Equals*.

To perform a square or square root calculation, select *Options* > *Square* or *Square root*.

Currency converter

You can convert foreign currency to domestic, or vice versa, directly from the standby mode or from the *Calculator* menu.



Note: When you change base currency, you must enter the new rates because all previously set exchange rates are set to zero.

1. In the standby mode, select *Menu* > *Organizer* > *Calculator* > *Options* > *Exchange rate* > *Foreign units in home* or *Home units in foreign*.
 - Foreign units in home*—The number of home units it takes to make one unit of foreign currency.
 - Home units in foreign*—The number of foreign units it takes to make one unit of your home currency.
2. Enter the exchange rate (press # to insert a decimal), and select *OK*.
3. Select *Back* to return to the *Calculator* screen, and enter the currency amount to convert.
4. Select *Options* > *To home* or *To foreign*.
 - To home*—converts foreign currency to domestic currency.
 - To foreign*—converts domestic currency to foreign currency.
5. If you have not already entered an exchange rate, the device prompts you to enter it. Select *OK*. You can edit the exchange rate at any time.

■ Countdown timer

The countdown timer in your device enables you to enter a specific time (up to 99 hours, 59 minutes, and 59 seconds). When the time runs out, your device sounds an alarm.

Organizer

The countdown timer only works when the phone is on. Once you turn off your phone, the timer is no longer active.

Set the normal timer

1. In the standby mode, select *Menu* > *Organizer* > *Countdown timer*.
2. Enter the time (in *hh:mm:ss* format), and select *OK*.
3. Enter a note for the timer, and select *Start*.

 and the timer (in *hh:mm:ss* format) appear in the standby mode when the countdown timer is running.

When the time runs out, your phone sounds an alarm, vibrates, and flashes its lights. If you are in standby mode, select *Restart* or *Exit*. If you are not in the standby mode, press any key during the alarm to stop the timer.

After 60 seconds the timer alert expires automatically. Select *Exit* or press the end key to clear the timer note.

Change the timer

After you have set a timer, you can change the time.

1. In the standby mode, select *Menu* > *Organizer* > *Countdown timer* > *Change time*.
2. Enter the new time, and select *OK*.
3. Leave the note as it was, or enter a new note, and select *Start*.

Stop the timer before the alarm sounds

After you have set the timer, you can stop the timer.

In the standby mode, select *Menu* > *Organizer* > *Countdown timer* > *Stop timer*.

Stopwatch

Your phone has a stopwatch that can be used to track time. The stopwatch displays time in hours, minutes, seconds, and fractions of a second in *hh:mm:ss.ss* format.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Measure split or lap time

Use the split time or lap time functions for activities where you need to pace yourself.

1. In the standby mode, select *Menu* > *Organizer* > *Stopwatch* > *Split timing* or *Lap timing* > *Start*.

Split timing—Use the split time function for such activities as a long distance race when you need to pace yourself. Select *Split* to note the lapsed time. The timer continues to run and the split time appears below the running time. Each time you select *Split*, the new measured time appears at the beginning of the list. The maximum number of splits is 20.

Lap timing—Use the lap time function when you want to track how long it takes to complete each cycle or lap. Select *Lap* to note the lap time. The clock stops, then immediately restarts from zero. The lap time appears below the running time. Each time you select *Lap*, the new measured time appears at the beginning of the list. The maximum number of laps is 20.

2. Select *Stop* to end timing and display total time.

Save a time

To save a time while the clock is running, select *Stop* > *Save*, enter a name for the measurement, and select *OK*. If you do not enter a name, the total time is used as the default title for the lap or split time.

Stopwatch options

In the standby mode, select *Menu* > *Organizer* > *Stopwatch* and one of the following:

Continue—Continues to measure time. Only appears if clock is running and you are returning to stopwatch screen.

Show last time—View the last measured time.

Split timing—Use the split time function.

Lap timing—Use the lap time function.

View times—Browse saved times.

Delete times > *One by one* or *Delete all*—Delete saved times.

Operation note

If you press the end key and return to the standby mode, the clock continues to run in the background, and  appears at the top of the screen.

To return to the *Stopwatch* screen, do the following:

1. In the standby mode, select *Menu* > *Organizer* > *Stopwatch* > *Continue*.
2. To stop the clock, select *Stop*.

12. Mobile web



Mobile web is a network service. See "Network services," p. 8, for more information.

Your phone has a built-in browser you can use to connect to selected services on the mobile Internet. If your wireless service provider supports this feature, you can view weather reports, check news or flight times, view financial information, and much more. The Web browser on your phone can display WAP-based content.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

If the security indicator () is displayed during a connection, the data transmission between the device and the Internet gateway or server is encrypted. The service provider secures the data transmission between the gateway and the content server.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

■ Mobile Internet access

Because mobile Internet content is designed to be viewed from your phone, your wireless provider is now your mobile Internet service provider as well.

Your wireless provider has created a home page and set up your browser to go to this page when you log on to the mobile Internet. Once at your service provider's home page, you may find links to a number of other sites.

It should not be necessary to manually configure the browser on your phone. Normally this is done by your wireless provider when you subscribe to the feature. Contact your wireless provider if you have problems using the browser.

■ Sign on to the mobile Internet

In the standby mode, select *Menu* > *Mobile web*.

After a brief pause, your phone attempts to connect to your wireless provider's home page. If you receive an error message, your phone may not be set up for

browsing. Contact your wireless provider to make sure that your phone is configured properly.

■ **Navigate the mobile Internet**

Since your phone screen is much smaller than a computer screen, mobile Internet content is displayed differently than you may be accustomed to seeing. This section contains guidelines for using phone keys to navigate a WAP site.

Phone keys

- To browse the WAP site, scroll up or down.
- Select a highlighted item.
- To enter text, press # to switch text input modes, and then press 0-9.
- To enter special characters, press *.

Receive a call while online

Depending on your wireless service provider, you may still be able to receive a voice call while using the WAP browser.

- To answer the incoming call, press the call key.
- To reject the incoming call, press the end key.

After you end your voice call, the mobile Internet connection automatically resumes.

If your wireless service provider does not support incoming calls while browsing, incoming calls are automatically forwarded to voice mail.

Make an emergency call while online

You can end your data connection and make an emergency call.

1. To close your mobile Internet connection, press the end key.
2. Press the end key as many times as needed to clear the display and ready the phone for calls.
3. Enter the emergency number for your present location (for example, 911). Emergency numbers vary by location.
4. Press the call key.

Clear the cache and disconnect

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed are stored in the cache. To empty the cache while in the browser menu, select **Navigate > Advanced > Clear**. Highlight and select **Cache > Clear**. The cache also clears when you press and hold the end key to power off your device.

To close your mobile Internet connection while browsing, press the end key.

13. Extras



■ Games

Depending on your service provider, games and other applications may be preloaded on your phone.

Select games

In the standby mode, select *Menu* > *Extras* > *Games* to display the games on your device.

Memory status

You can view the memory available for game installations. In the standby mode, select *Menu* > *Extras* > *Games* > *Options* > *Memory status*.

■ Collection

Select application

In the standby mode, select *Menu* > *Extras* > *Collection* > *Select application*. Scroll to an application and select *Open*, or press the call key.

An application may require a few seconds to load. When you open an application, wait for the launch screen to disappear. At that point, the application is ready.

Leaving applications running in the background increases the demand on battery power and reduces the battery life.



Note: Only install applications from sources that offer adequate protection against harmful software.

Memory status

You can view the memory available for application installations. in the standby mode, select *Menu* > *Extras* > *Collection* > *Options* > *Memory status*.

14. PC connectivity

■ PC data transfer

You can transfer data, such as music, photos, and videos, from your device to a compatible PC or from a compatible PC to your device using Bluetooth connectivity. For more information, see "Bluetooth connectivity," p. 86.

You can transfer data, such as music, photos, and videos, from your device to a compatible PC or from a compatible PC to your device using an IR connection. For more information, see "Infrared connectivity," p. 89.

■ Nokia PC Suite

Nokia PC Suite software is available for this phone. Nokia PC Suite is a collection of powerful tools that you can use to manage your phone features and data. Each component is a separate program that includes online helps.

Nokia PC Suite software, installation instructions, and other documentation is provided free of charge and can be downloaded from the software downloads of the Nokia web site: www.nokiausa.com/pcsuite.

Some of the features in your phone require network support. Contact your service provider for availability and configuration instructions.

15. Enhancements

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the AC-3 or AC-4 charger.



Warning: Use only batteries, chargers and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Power

- Standard 1150 mAh Li-Ion Battery (BL-6C)
- Compact Charger (AC-3)
- Travel Charger (AC-4)
- Mobile Charger (DC-4)
- Charger Adapter (CA-44)

Use the CA-44 charger adapter to connect the phone with Nokia chargers with a larger barrel size, including ACP-7, ACP-8, ACP-9, ACP-12, AC-1 (retractable charger), and LCH-12 (mobile charger).

USB data cable

- Connectivity Cable (CA-53)

Handsfree

- Headrest Handsfree (BHF-3)
- CDMA Headrest Handsfree (BHF-4)
- Easy to Use Car Handsfree (HF-3)
- Advanced Plug-in Car Handsfree (HF-6)
- Wireless Plug-in Car Handsfree (HF-6W)

Headsets

- Mono Headsets (HDB-4, HS-5, HS-6, HS-8, HS-9)
- Stereo Headsets (HDS-3, HS-3, HS-23)
- Wireless Mono Headsets (HDW-3, HS-4W, HS-11W, HS-21W, HS-36W)

Miscellaneous

- Inductive Loopset (LPS-4)
- TTY Adapter (HDA-10)
- Advanced Car Kit (CK-1W)
- Audio Adapter (AD-15)
- Music Stand (MD-1)

16. Reference information

This section provides information about your phone batteries, enhancements, chargers, safety guidelines, and technical information. Be aware that the information in this section is subject to change as batteries, chargers, and enhancements change.

■ **Batteries and chargers**

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to start the charging.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot

or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.


Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

■ Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging and inspect the hologram label using the following steps:

Successful completion of the three steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.


Authenticate hologram

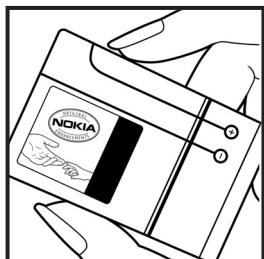

1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.

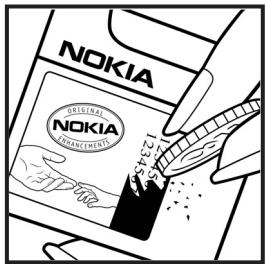

3. Scratch the side of the label to reveal a 20-digit code, for example 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row. Confirm that the 20-digit code is valid by following the instructions at www.nokia.com/batterycheck.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokia.com/battery.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses, such as camera, proximity sensor, and light sensor lenses.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes, before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

In order to transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with a hearing aid should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and

recommendations of Wireless Technology Research. Persons with pacemakers should:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker;
- Not carry the device in a breast pocket; and
- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device and move the device away.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.

Emergency calls



Important: Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength.
2. Press the end key as many times as needed to clear the display and ready the phone for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless phone may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

Certification information (SAR)

THE MODEL PHONE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines (ICNIRP). These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards and guidelines include a substantial safety margin designed to assure the safety of

the public, regardless of age and health and to account for any variations in measurements.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the international guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be well below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value when tested according to international testing procedures for use at the ear is 0.78 W/kg.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values. Additional SAR information may be provided under product information at www.nokia.com.

USA and Canada: The SAR limit of USA (FCC) and Canada (IC) is 1.6 W/kg averaged over 1 gram of tissue. This device model has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.17 W/kg and when properly worn on the body is 1.05 W/kg. Information about this device can be found on the FCC's website at www.fcc.gov/oet/fccid by searching the equipment authorization system using FCC ID: QMNRM-66.

Hearing aid compatibility (HAC)

For hearing aid compatibility, you must turn off Bluetooth connectivity.

Your mobile device model complies with FCC rules governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M-value, shown on the device box, refers to lower radio frequency (RF) emissions. A higher M-value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids. Some hearing aids are more immune than others are to interference. Please consult your hearing health professional to determine the M-rating of your hearing aid and whether your hearing aid will work with this device. More information on accessibility can be found at www.nokiaaccessibility.com.

■ Technical information

Feature	Specification
Dimensions	Width, 48 mm; length, 98 mm; depth, 22 mm
Weight	124 g with BL-6C Li-Ion Battery
Wireless networks	CDMA 800 and 1900 MHz 1xRTT, AMPS, GPS (for Nokia 6265i only), and Bluetooth wireless technology
Volume	87 cc
Frequency range (Tx)	AMPS: 824.04–848.97 MHz PCS: 1851.25–1908.75 MHz Cellular: 824.70–848.37 MHz
Frequency range (Rx)	AMPS: 869.04–893.97 MHz PCS: 1931.25–1988.75 MHz Cellular: 869.70–893.37 MHz
GPS frequency (Nokia 6265i only)	1575.42 MHz

■ Battery information

This section provides information about battery charging times with the Compact Charger (AC-3), the Travel Charger (AC-4), talk-times, and standby times. Be aware that the information in this section is subject to change. For more information, contact your service provider.

Charging times

The following charging times are approximate with the BL-6C 1150 mAh Li-Ion battery:

Travel Charger (AC-4): up to 1 hour 45 minutes

Compact Charger (AC-3): up to 3 hours

Talk and standby times

Operation times are estimates only and depend on signal strength, phone use, network conditions, features used, battery age and condition (including charging habits), temperatures to which the battery is exposed, and many other factors.

Talk time: 3 to 4 hours (digital)

Standby time: 8 to 12 days

Index

NUMERICS

1-touch dialing 57, 79

A

abbreviated dialing 81
 active profile 74
 alarm clock 102
 repeating 102
 setting 102
 tone 103
 turning off 103
 allowed number if lock active 95
 analog service 98
 answer calls 22
 when slide opened 79
 antenna 17
 anykey answer 79
 applications
 collection 118
 settings 97
 automatic
 keyguard 83
 redial 79
 update of service 80
 update of time and date 78
 voice mail 44

B

back cover
 removing 18
 replacing 19
 backlight time-out 76
 banner 75
 battery 17, 122, 130
 authentication guidelines 123
 charging 19
 charging times 130
 removing 18
 replacing 18
 talk and standby times 130
 Bluetooth connection 87
 paired devices 89
 setting up 88
 settings 89

business cards 53

C

calculator 110
 currency converter 111
 using 110
 calendar 103
 making notes 104
 opening 104
 options 104
 receiving notes 106
 sending notes 106
 settings 106
 viewing 105
 call forwarding 99
 call log, *see logs*
 call register, *see logs*
 call settings 79
 call summary 83
 call time 47
 call timers 47
 call waiting 100
 caller
 groups 54
 ID, send my 100
 calling cards 80
 calls
 answering 22
 conference 21
 duration of 47
 making 21
 mute phone during 23
 options during 23
 restrictions 96
 show times on display 83
 silencing 22
 camera 59
 changing options 62
 photo sequence 61
 recording videos 61
 settings 62
 taking photos 59
 using self-timer 60
 carrier selection provisioning 22
 certification information (SAR) 128
 change lock code 96
 charger 94, 122
 connecting 19
 times 130

Index

clock settings, *see time and date*
color schemes 76
conference calls 21
confirmation tones 77
connectivity 87
contacts 50
 adding 51
 deleting 58
 editing 53
 searching 50
 settings 54
 viewing 50
countdown timer 112
 changing 112
 normal 112
 stopping 112
CSP, *see carrier selection provisioning*
currency converter 111
custom profile 74
customer support, *see Nokia Care*

D

data
 cable, *see USB data connection*
calls 82
 duration of 48
 transfer 119
date settings, *see time and date*
dialed numbers 46
dialing codes 51
digital service 98
display
 main menu 14
 settings 75
distribution lists 42
 creating 42
 managing 42
DTMF tones, *see touch tones*

E

electronic serial number 9
emergency calls 116, 128
end calls 22
 when slide closed 80

enhancements 93
 approved 120
equalizer 73
 activating 73
 creating custom 73
ESN, *see electronic serial number*
exchange rate 111
extras 118

F

fax calls 82
 duration of 48
FCC information 129
feature codes 99
file transfer 92
FM radio, *see radio*
folders, *see gallery*

G

gallery 65
 opening folders 65
 options 66
games 118
global positioning system 79
go to functions 15
 organize 16
 select 16

H

HAC, *see hearing aid compatibility*
handsfree settings 93
headset
 connecting 20
 settings 93
hearing aid compatibility 129
hearing aid settings 94
help
 getting 9
 in-phone 15
 text activation 15, 85

I

indicators and icons 13
 infrared connection 90
 international prefix 81
 Internet, *see wireless Internet*

K

keyguard
 automatic 83
 lock and unlock 24
 security 85
 keypad tones 77

L

language
 phone 83
 settings 83
 voice playback 83
 lap time 113
 listen to voice mail 43
 location information sharing 79
 lock code
 changing 96
 preset 95
 logs 46
 clearing 47
 dialed numbers 46
 missed calls 46
 received calls 46
 loopset settings 94
 loudspeaker 23

M

main menu display 14
 maintenance services 10
 make calls 21
 making calls
 calling cards 81
 media player 68
 memory
 card 84
 checking status 84

phone 84
 messages
 minibrowser, *see minibrowser*
 messages
 multimedia, *see multimedia*
 messages
 text, *see test messages*
 voice, *see voice messages*
 mini SD card 20
 memory 84
 minibrowser
 calls, duration of 48
 messages 45
 missed calls 46
 mobile web 115
 multimedia messages 34
 creating 36, 37
 deleting 40
 folders 35
 reading 37
 replying 37
 sending 36
 settings 40
 music player 68
 options 69
 play tracks 69
 mute phone 23
 my phone number, display 57

N

navigation key 84
 network
 approved for 7
 services 7, 99
 settings 98
 no caller IDs 83
 Nokia Care 9, 10
 Nokia PC Suite 119
 Nokia Web site 10
 notes 106
 making 107
 opening 107
 options 108
 sending 107

O

organizer 102

P

pairing 89
PC connectivity 119
phone
 care and maintenance 125
 details 101
 keys and parts 11
 language 83
 locking 95
 memory 84
 set up your 17
 settings 83
photographs 59
PictBridge 91
play
 music tracks 69
 radio 70
power saver 76
predictive text 26
preferred carrier 82
profiles 74
 activating 74
 customizing 74
 timed 74

Q

quick keys 12

R

radio 70
 options 71
 play 70
received calls 46
recording sound 72
register your phone 9
repeating alarm 102
restore factory settings 100
ring
 tone for no caller ID 83
 volume 77

roaming options 98

S

safety information 6, 126
 battery 130
 certification 128
 explosive environments 127
 hearing aids 127
 operating environment 126
 pacemakers 126
 vehicles 127
SAR, *see specific absorption rate*
screen saver 76
scroll method 14
security 15
 keyguard 85
 settings 95
self-timer, camera 60
send my caller ID 100
sequence of photos 61
set
 alarm 102
 date 78
 time 77
settings 74
shared memory 8
show call time on display 83
sleep mode 76
slide
 answer calls 79
 end calls 80
snooze time-out 103
specific absorption rate 129
speed dials, *see 1-touch dialing*
split time 113
standby mode 12
 font color 75
 settings 75
standby time 130
start-up tone 85
stopwatch 113
 lap timing 113
 options 113
 saving times 113
 split timing 113

switch off tone 86

T

talk time 130
 T-coil mode 94
 text entry 25
 changing language 25
 predictive 26
 standard 25
 text messages 28
 creating 29, 30
 deleting 33
 folders 28
 reading 30
 replying 30
 sending 29
 settings 33
 templates 30
 theme 76
 time and date 77
 timed profiles 74
 to-do list 108
 editing 109
 making 108
 opening 108
 options 110
 sending 109
 viewing 109
 tones 77
 start-up 85
 switch off 86
 touch 85
 touch tones 85
 transfer files 92
 TTY/TDD settings 94
 turn phone on or off 20

U

update service, automatic 80
 USB data connection 91
 data storage 92

default mode 91
 printing 91

V

vibrating alert 77
 videos 61
 voice
 commands 86
 playback language 83
 privacy 97
 recorder 72
 voice messages 43
 automating 44
 listening 43
 mailbox number 43
 setting up mailbox 43
 voice tags 55
 assigning 55
 deleting 56
 modifying 56
 using 56
 volume
 adjusting 23
 using loudspeaker 23

W

wallpaper 75
 warning tones 77
 wireless Internet
 access 115
 clear cache 117
 disconnect 117
 make emergency call while
 online 116
 receive call while online 116
 sign on 115

I n d e x