

## Setting the Operating Time

Press the OFF button to call up the next operating time.

To store the setting:

- do not actuate any button for 10 seconds, or
- actuate the ON button.



## Returning to the Default Setting

Press the ON and OFF buttons simultaneously for approx. 10 seconds until the LED extinguishes.



Default setting: heating mode, 30 minutes.

## Checking the Batteries

Press the ON or OFF button.

or



| Batteries  | LED   | Action  |
|------------|---|---|
| okay       | after 1 sec.<br>lights up for<br>0.5 sec.         |   |
| low charge | after 1 sec. flashes<br>in orange for 3 sec.      | - Warm up batteries to above 0°C<br>- Replace batteries at the next opportunity |
| discharged | after 1 sec.<br>lights up for<br>5 sec. in orange | - Warm up batteries to above 0°C<br>- Replace batteries                         |

## CAUTION

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: QNFT70-USA-RX  
FCC ID: QNFT70-USA-TX


This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interferences, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Operating Instructions

### Telestart T70

**Webasto**

Webasto Thermosysteme GmbH  
Postfach 80 - D-82132 Stockdorf - Hotline (01805) 93 22 78  
Hotfax (0395) 55 92-353 - <http://www.webasto.de>

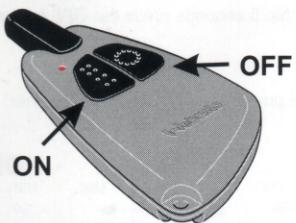

## General

The wireless Webasto Telestart T70 enables Webasto heating units

- Thermo Top, Thermo Top T, Thermo Top Z/C and Thermo Top E -  
or the vehicle fan to be switched on and off from a distance of up to 600 m.  
To switch on the vehicle fan for ventilating the vehicle interior requires a mode change on  
the transmitter to be carried out.

The receiver limits the operating time once the heater has been switched on by the  
transmitter. The maximum range can be achieved in open country. In built-in areas the  
range is likely to be reduced.



### NOTE:

A minimum distance of 2 m must be maintained between the Telestart  
hand-held transmitter and the antenna in the vehicle in the following  
cases:

- teaching the codes of the Telestart hand-held transmitter
- switching the heater on and off
- switching the vehicle fan on and off.

Or else, cover the antenna at the hand-held transmitter with your hand  
during the transmitting operation.

Stet 60/0012

3.0003

Ident-Nr. 670778B

