

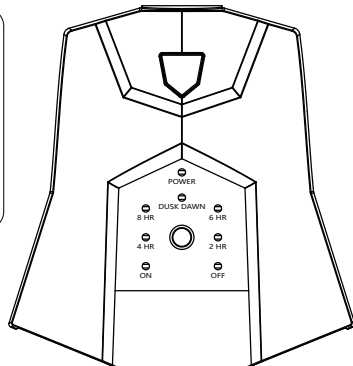 
 
DEFIANT®

Home power

NOA0039R

READ IT OR WATCH IT

Read instructions or watch easy-to-follow video.
Scan QR code or visit <https://byjasco.com/448731>



FCC STATEMENT:
Suppliers Declaration of Conformity | Model #: NOA0039R |
Jasco Products Co., 10E Memorial Rd., Oklahoma City, OK
73114, www.byjasco.com

FCC Warning:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

⚠ WARNING

RISK OF ELECTRIC SHOCK:

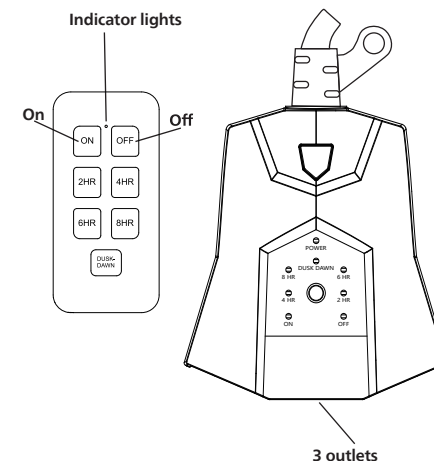 
- FULLY INSERT THE PLUG INTO A GFCI CONTROLLED RECEPTACLE
- KEEP CHILDREN AWAY
- DO NOT USE WITH EXTENSION CORDS
- INSTALL TIMER AS FAR ABOVE GROUND LEVEL AS POSSIBLE WITH THE RECEPTACLE FACING DOWNWARD
- NOT FOR WATER IMMERSION OR FOR USE WHERE DIRECTLY EXPOSED TO DRIPPING OR SPLASHING WATER
- UNPLUG BEFORE CLEANING

RISK OF FIRE:

- DO NOT EXCEED ELECTRICAL RATINGS
- DO NOT USE TO CONTROL APPLIANCES THAT CONTAIN HEATING ELEMENTS (COOKING APPLIANCES, HEATERS, IRONS, ETC)

BATTERY WARNING:

- BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY OR PRODUCT DAMAGE
- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES
- REPLACE ALL BATTERIES AT THE SAME TIME
- REPLACE FULLY DISCHARGED BATTERIES IMMEDIATELY
- REMOVE BATTERIES IF PRODUCT IS TO BE UNUSED FOR AN EXTENDED PERIOD OF TIME

Product description

RECEIVER
Functional Range Up to 80 ft.
Maximum Tungsten Load 1000 W, 8 A
Maximum Resistive Load 1875 W, 15 A
Rating 125 VAC/60 Hz

TRANSMITTER
Functional Range Up to 80 ft.
Battery Type Use only CR2032 battery

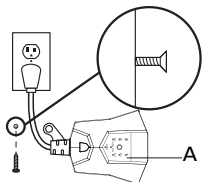 
Functional range may be adversely affected by one or more of the following factors: weather, radio frequency interference, low transmitter battery, and obstructions between the transmitter and receiver.

A. Outdoor timer
Plug the device(s) to be controlled into the grounded outlet(s) on the bottom of the outdoor timer.

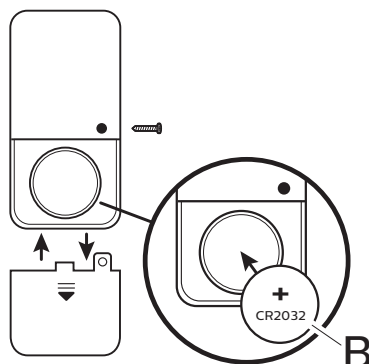 
B. Wireless remote transmitter
Press the ON button on the remote to turn on the lamp(s) or device(s) plugged into the timer. Press the OFF button to turn fixture(s) off.
See installation instructions.

Installation instructions

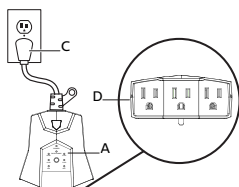 
- 1. Mounting the timer**
- Mount the timer (A) onto a wall near a GFCI outlet.
 - Install a nail or screw (not included) into a wall. The nail or screw must extend at least 7/8in. from the wall and allow the timer to be above ground level as far as possible.



- 2. Preparing the remote:**
- Pull the plastic tab on the remote to activate battery.
- 3. Plug in the timer and press the remote's ON button. The timer should turn on.**
- 4. Pairing remote and timer:**
Timer should be paired to the remote, but if it does not work:
- Plug in the timer, press the button three times quickly, and the red LED flashes.
 - Press any button on the remote. The red indicator light on the timer stops flashing when pairing is successful.
- 5. Changing the battery (B):**
- Remove the Phillips screw and slide the battery cover from the remote.
 - Remove the battery and insert a new CR2032 battery — note polarity.
 - Replace the cover and screw.



- Hang the timer (A) from the eyelet on the top left of the unit with the receptacles (D) facing downward so moisture does not accumulate.
- Plug the grounded power cord (C) into a GFCI outlet.
- Plug the device you wish to control into either receptacle (D).

**Troubleshooting**

- 1. If the indicator light is not activated by pressing the button, check the following:**
- Ensure the button is pressed and held for at least one second.
 - Verify the battery orientation, noting the polarity.
 - Replace the battery. Use only CR2032.
- 2. The device does not turn on**
- Ensure the lamp or electronic device plugged into the timer is turned ON.
 - Ensure the AC power cord is securely plugged into an AC power outlet.



MADE IN VIETNAM
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Jasco Products Company, and Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product.

This product has a 1-year limited warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320, M-F, 7AM-8PM Central Time.

For product patent information, visit www.byjasco.com/patents.



Intertek
5023165

byjasco.com/recycle
paper made from 25% post consumer waste

DEFIANT®

Home power

NOA0039R

DECLARACIÓN DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC):

Declaración de conformidad del proveedor | Modelo # NOA0039R | Jasco Products Co., 10 E. Memorial Rd., Oklahoma City, OK 73114, www.byjasco.com

ISED Statement

English: This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES 3 (B) /NMB 3(B).

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) L'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'empêcher le fonctionnement.

L'appareil numérique du ciem conforme canadien peut 3 (b) / nmb 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

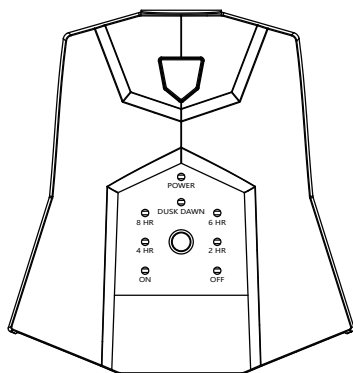 
 
Cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec une distance minimale de 0 cm entre le radiateur et votre corps.

**ADVERTENCIA****RIESGO DE DESCARGA ELÉCTRICA:**

- INTRODUZCA COMPLETAMENTE EL ENCHUFE EN UN RECEPTÁCULO CONTROLADO POR GFCI
- MANTENGA FUERA DEL ALCANCE DE LOS NIÑOS
- NO USAR CON CABLES DE EXTENSIÓN
- INSTALE EL TEMPORIZADOR LO MÁS ARRIBA POSIBLE DEL NIVEL DEL SUELO CON EL RECEPTÁCULO ORIENTADO HACIA ABAJO
- NO DEBE SUMERGIRSE EN AGUA NI UTILIZARSE EN LUGARES EXPUESTOS DIRECTAMENTE A GOTEOS O SALPICADURAS DE AGUA
- DESCONECTE ANTES DE LIMPIARLO

RIESGO DE INCENDIO:

- NO SUPERE LAS ESPECIFICACIONES ELÉCTRICAS NOMINALES
- NO UTILICE PARA CONTROLAR APARATOS QUE INCLUYAN ELEMENTOS CALORÍFICOS (COCINAS, CALEFACTORES, PLANCHAS, ETC)

ADVERTENCIAS SOBRE LAS PILAS:

- LAS PILAS PUEDEN PERDER LÍQUIDOS PERJUDICIALES O MATERIALES INFLAMABLES, O BIEN EXPLOTAR Y CAUSAR LESIONES CORPORALES O DAÑOS EN LOS PRODUCTOS
- NO COMBINE PILAS VIEJAS Y NUEVAS, NI TIPOS DE PILAS DISTINTAS
- REEMPLACE TODAS LAS PILAS AL MISMO TIEMPO
- CAMBIE DE INMEDIATO LAS PILAS TOTALMENTE DESCARGADAS
- QUITE LAS PILAS SI NO USA EL PRODUCTO DURANTE PERIODOS PROLONGADOS

RECEPTOR

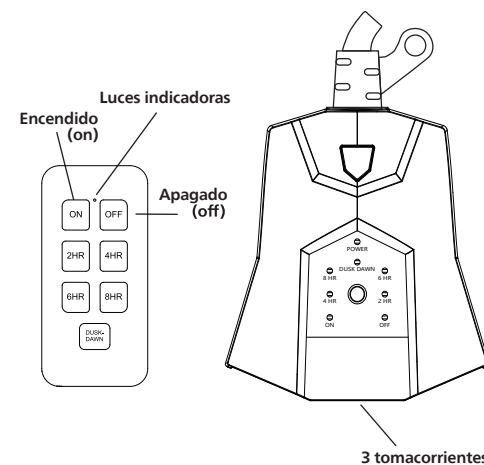 
Rango funcional.....Hasta 80 ft.
Carga tungsteno máxima.....1000 W, 8A

Carga resistiva máxima.....1875 W, 15 A
Valor nominal.....125 VAC/60 Hz

TRANSMISOR

Rango funcional.....Hasta 80 ft.

Tipo de pilas Use solo pilas CR2032 El rango de funcionamiento podría verse afectado por uno o más de los siguientes factores: clima, interferencia de frecuencia radial, pila baja del transmisor y bloqueos entre el transmisor y el receptor.

Descripción del producto**A. Temporizador de exteriores:**

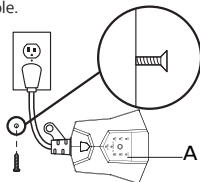 
Enchufe el o los aparatos que desea controlar en los tomacorrientes con conexión a tierra ubicados en la parte inferior del temporizador de exteriores.

B. Transmisor remoto inalámbrico:

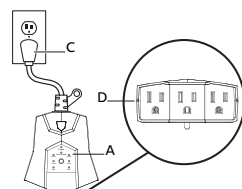 
Presione el botón de encendido en el control remoto para activar las lámparas o aparatos enchufados al temporizador. Presione el botón de apagado para apagar el aparato. Consulte las instrucciones de instalación.

Instrucciones de instalación**1. Instalación del temporizador**

- Instale el temporizador (A) en una pared con un tomacorriente protegido por un interruptor de circuito con conexión a tierra (GFCI).
- Clave un tornillo o clavo (no incluido) en la pared. El clavo o tornillo debe sobresalir al menos 7/8 pulg. de la pared y permitir que el programador quede por encima del nivel del suelo en la medida de lo posible.



- Cuelgue el temporizador (A) por el aro del lado superior izquierdo de la unidad con los tomacorrientes (D) mirando hacia abajo para que no acumulen humedad.
- Enchufe el cable de conexión a tierra (C) a un tomacorriente GFCI.
- Enchufe el aparato que desea conectar al control de iluminación en uno de los dos tomacorrientes (D).

**2. Preparación del mando a distancia:**

- Tire de la lengüeta de plástico del mando para activar la batería.

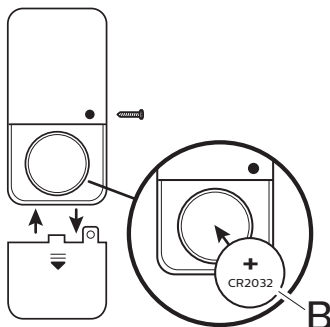 
3. Enchufe el temporizador y pulse el botón ON del mando a distancia. El temporizador debería encenderse.**4. Emparejamiento del mando a distancia y el temporizador:**

El temporizador debe estar emparejado con el mando a distancia, pero si no funciona:

- Enchufe el temporizador y, presione el botón tres veces rápidamente. El LED rojo parpadea.
- Pulse cualquier botón del mando a distancia. La luz indicadora roja del programador dejará de parpadear cuando el emparejamiento se haya realizado correctamente.

5. Cambiar la batería (B):

- Retire el tornillo Philips y deslice la tapa de las pilas del mando a distancia.
- Retire la pila e inserte una nueva pila CR2032 — tenga en cuenta la polaridad.
- Vuelva a colocar la tapa y el tornillo.

**Resolución de problemas****1. Si la luz del indicador no se activa al presionar el botón, compruebe lo siguiente:**

- Asegúrese de mantener pulsado el botón durante al menos un segundo.
- Verifique la orientación de la pila, teniendo en cuenta la polaridad.
- Cambie la pila Use solo pilas CR2032.

2. El aparato no se enciende.

- Asegúrese de que la lámpara o el dispositivo electrónico enchufado al temporizador está encendido.
- Asegúrese de que el cable de alimentación de CA esté bien enchufado en un tomacorriente de CA.

**HECHO EN VIETNAM**

Philips y el emblema de escudo Philips son marcas registradas de Koninklijke Philips N.V. y se usan bajo licencia. Este producto ha sido fabricado y se comercializa bajo responsabilidad de Jasco Products Company y Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 es el garante en relación a este producto.

Este producto tiene una garantía limitada de 1 año. Visite www.philips.com/support para conocer los detalles de la garantía.

¿Tiene preguntas? Comuníquese con nuestro servicio de atención al consumidor de EE. UU. al 1-844-816-0320, de lunes a viernes, de 7AM a 8PM (hora central).

Visite www.byjasco.com/patents para información sobre la patente del producto.



byjasco.com/recycle
paper made from 25%
post consumer waste



Intertek
5023165