



Questions? Contact us at 1-800-654-8483
between 7:00AM—8:00PM CST.

www.enbrightenme.com

Congratulations on your recent purchase of Enbrighten Season Landscape Lights. Enbrighten Landscape Lights are designed to provide lighting for life with no bulbs to replace ever again!

IMPORTANT: Before installation, please read all the warning statements included at the bottom of these instructions.

In order to ensure proper installation, please follow each step below:

Step 1 - INITIAL SETUP

- 1 - Carefully unpack Enbrighten Season Landscape Lights from box. Remove and dispose of the wire ties and plastic bag (see warning on bottom).
- 2 - Locate remote control and install 2 AAA batteries (included).
- 3 - When installing landscape lights outside, a Ground Fault Circuit Interrupter (GFCI) receptacle must be used. Before installing, plug the landscape lights into the GFCI receptacle to ensure all lights work properly.

IMPORTANT: Unplug the landscape lights prior to installation.

Step 2 - INSTALLING LANDSCAPE LIGHTS

Each landscape light is designed with two universal keyholes for mounting the included stakes (one per light) or for use in mounting on a flat surface (see below instructions).

Ground Mounting

1. Carefully plan out your installation by laying out the landscape lighting system.

Start with the GFCI receptacle and mounting of controller. Placement for the first light can be up to 20' away from the controller. Each subsequent light can be placed up to 10' from the previous light.

2. Mount the controller within an appropriate distance for the polarized plug to reach the receptacle. The controller can be mounted using the keyhole on the rear of the controller or the keyhole ear tabs (See figure A). Do not lay the controller directly on the ground or where standing water may accumulate (See figure B).

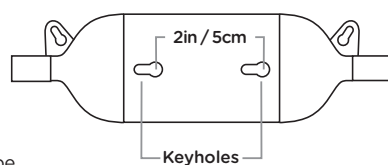 


Figure A

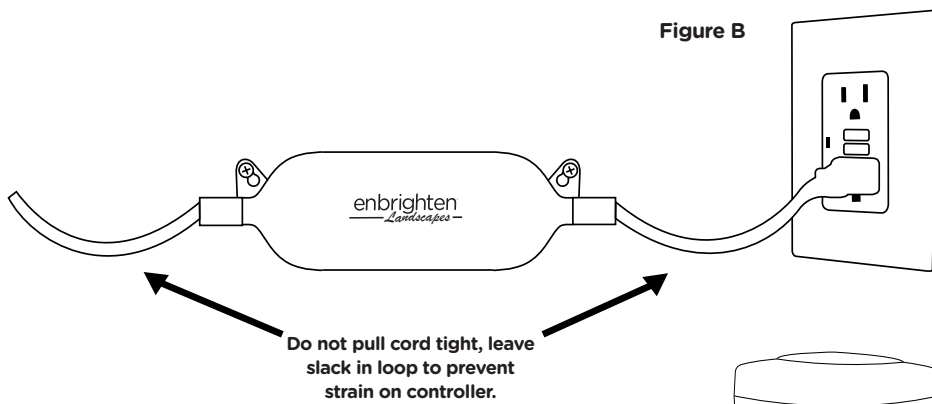 


Figure B

3. Ground mounting has two options for installation.

- a) Place light directly on ground or garden bedding.
- b) Using provided mount stake. You have been provided 1 stake per puck. The stake can be inserted into either keyhole mounting slot located on the bottom of the puck. Firmly insert the mounting stake into the keyhole slot ensure both tabs lock into place. The stake can then be inserted into the soil or mulch at the desired angle. The stake has been design to be durable in outdoor applications, however if the stake requires more than a firm push to be inserted into the ground, please loosen soil or remove obstacles such as rocks to ensure the stake is not damaged. The stakes have cord management features on the sides allowing you to position the cord close to the stake (See figure C).
- c) Cord management - Your Enbrighten landscape lights feature burial-grade cable. This allows you to conceal excess cable by directly burying it in the soil or covering it with garden bedding.


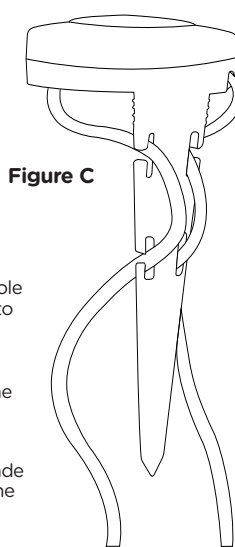 


Figure C

Flat surface mounting

Lay out the landscape system in the manner in which you plan to mount it. Only mount lights to a solid support structure such as joist, beams, studs or other solid mounting surfaces. Use two #6 pan head screws (not included) of an appropriate length for the surface that you are mounting them (See figure D) to properly mount the lights. Use mounting template on back side for easy mounting.

 Figure D

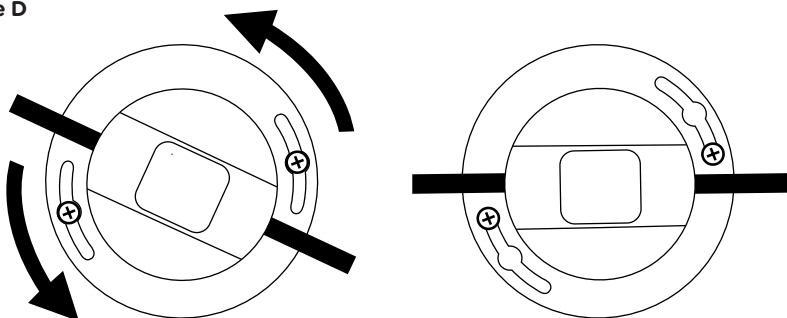

USING THE REMOTE

To power on or off your lights, press the red ON/OFF button located at the top of the remote.

NOTE: Keep remote indoors when not being used. Remote is not waterproof.

Now that your lights are installed and powered on, take time to explore the following settings that are programmable via your remote.

Single-Color Selection Feature

Find your favorite color on the remote's color pad and simply push that button to set all of the lights the same color.

NOTE: Within this feature, you can also press the dimming button to adjust from 10 different light levels. The dimming option is only available for single- and dual-color selection.

Dual-Color Selection Feature

- a) Press Color 1, then select a color from the color pad to set the color of every other light starting with the first light.
- b) Press Color 2, then select a color from the color pad to set the color of every other light starting with the second light.
- c) During the selection feature, press the dimming button to choose one of 10 different light levels.

Tunable White Color Selection Feature

By pressing the white button, you can cycle through white selections — 2200K, 2700K and 5000K.

Strobe Selection Feature

By pressing the Strobe button, the lights will strobe through all of the colors in a random pattern.

Fade Selection Feature

By pressing the Fade button, the lights will fade in and out through all of the colors in a random pattern.

Modes Selection Feature

Press the "modes" button repeatedly to cycle through the following preset modes:

- Twinkle •Multi Fade •Christmas •St. Patrick's Day
- Red, white and blue •Fall •Spring •Multi-Colors

NOTE: Your landscape lights will automatically remember the last customized settings and will turn back on in the same mode and/or color scheme.

Timer Selection Feature

- By pressing the 2 hour timer button, you will activate a two-hour countdown until lights turn off.
- By pressing the 4 hour timer button, you will activate a four-hour countdown until lights turn off.

Pair your remote with additional lights

Your Enbrighten Seasons Landscape Lights come with a remote that can be paired to additional sets of landscape lights. Additionally, your remote can be paired with Enbrighten Lights to allow totally customizable Enbrighten Cafe Lighting.

To pair an Enbrighten pairable remote with a Landscape light or pairable Enbrighten Season Café Light, follow the below instructions:

- 1) Plug in (or supply power) to the lights and within 8 seconds press and hold the ON/OFF button. The lights will turn white, blink once and remain white. Your remote and lights are now paired.
 - a) Please note you can pair a remote with as many Enbrighten Seasons Lights as you desire
 - b) Multiple strings can be paired at one time with one remote, by supplying power to multiple strings at once, then pressing and holding the on/off button within 8 seconds of power on, per the above instructions.
- 2) Lights can be paired with up to 8 remotes. If you wish you remove a remote control from memory of a light (unpair) follow the below instructions:
 - a) Plug in (or supply power) to the lights and within 8 seconds, press and hold the yellow button (in bottom left corner). The lights will turn white, blink twice and remain white. Your remote and lights are now unpaired.
 - b) Multiple lights can be unpaired at one time from one remote by supplying power to multiple lights at once, then pressing and holding the yellow button within 8 seconds of powering on.

Electrical Ratings
Input: 120 V, 50/60 Hz

Model No.	Input watt, Max.	Location Use
RGBLL / 72 / 6 / 18 / 2	26W	WET
RGBLL / 102 / 9 / 18 / 2	36W	
RGBLL / 132 / 12 / 18 / 2	48W	

Important — please read:

Refer to the manual or visit www.byjasco.com for limitations and restrictions on warranties and the product registration information.

WARNING: When using outdoors use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and personal injury, including the following:

Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.

WARNING: Keep these bags away from babies and children. Do not use in cribs, beds, carriages, or playpens. The thin film may cling to nose and mouth and prevent breathing.

Warranty Information: This Jasco product is warranted for three (3) years with a limited-lifetime replacement warranty on Enbrighten LED light source only.

MADE IN CHINA
Distributed by Jasco Products Company LLC,
10 E. Memorial Rd., Oklahoma City, OK 73114.
This Jasco product comes with a 3-year limited warranty.
Visit www.byjasco.com for warranty details.
Questions? Contact us at 1-800-654-8483 between 7:00AM—8:00PM CST.
Patents pending | www.enbrightenme.com



Version 1
3/5/18

⚠ WARNING

RISK OF ELECTRIC SHOCK

- RECEPTACLE OUTLETS USED FOR POWERING LANDSCAPE LIGHTS SHALL COMPLY WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES. CONSULT LOCAL ELECTRICIAN IF UNSURE OF COMPLIANCE REQUIREMENTS.
- FOR USE ONLY ON GFCI PROTECTED CIRCUITS.
- DO NOT SUBMERSE.
- DO NOT USE AROUND AQUARIUMS.
- LANDSCAPE LIGHTS ARE A WET LOCATION PRODUCT AND HAVE NO SERVICEABLE PARTS.
- DO NOT USE WITH EXTENSION CORD NEAR WATER OR WHERE WATER MAY ACCUMULATE.
- KEEP LAMPS AT LEAST 16 FEET FROM POOLS AND SPAS.
- KEEP PLUGS AND RECEPTACLES DRY.
- AVOID DAMAGE TO THE CORDS AND LAMP ASSEMBLIES DURING INSTALLATION. PERIODICALLY INSPECT THE LANDSCAPE LIGHTS FOR PHYSICAL DAMAGE OR OTHER DAMAGE CAUSED BY OUTDOOR EXPOSURE TO THE ELEMENTS.

- REPLACE ANY DAMAGED LANDSCAPE LIGHTS.
- DO NOT INSTALL IN LOCATIONS WHERE LANDSCAPE LIGHTS CAN BE STEPPED ON.
- ENSURE LANDSCAPE LIGHTS ARE UNPLUGGED FROM POWER DURING INSTALLATION.
- CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH LANDSCAPE LIGHTS.
- UL RECOMMENDS TESTING GFCI CIRCUITS AND RECEPTACLES EVERY MONTH TO ENSURE PROPER OPERATION.

RISK OF FIRE

- LANDSCAPE LIGHTS ARE DESIGNED TO BE MOUNTED WITH THEIR INDIVIDUAL KEYHOLE MOUNTING FEATURE. DO NOT MOUNT LANDSCAPE LIGHTS BY USING THE MAIN ELECTRICAL CORD OR THE INDIVIDUAL DROP CORDS.
- NOT INTENDED FOR INSTALLATION IN CEILING, SOFFITS, CABINETS, ATTICS, OR OTHER ENCLOSED SPACES.

enbrighten® Landscapes



Simplify your enbrighten® experience by automating on and off light times

We recommend the following models, available at select retailers or at www.enbrightenme.com

myTouchSmart Outdoor/Indoor Plug-in Timer
Model #26898



Heavy duty and weather resistant with two grounded outlets. Fully customizable time settings.

myTouchSmart In-Wall Digital Timer
Model #41431



Easy-to-program custom settings, presets and countdown options. On/off switch opens to reveal program buttons.

myTouchSmart Sunsmart™ In-Wall Digital Timer
Model #33861



Easy-to-program custom settings, presets and countdown options. Self-adjusts to sunset/sunrise times throughout the year. On/off switch opens to reveal program buttons.

myTouchSmart Outdoor/Indoor Wifi Smart Plug
Model #39845



Schedule and control outdoor lighting from any mobile or voice-controlled device.



For additional stakes and accessories, visit www.enbrightenme.com or call 1-800-654-8483

enbrighten® café

Multiple lengths and styles available now at www.enbrightenme.com



WARM WHITE LIGHT 2700K | **LINKABLE UP TO 750ft.**

WARM VINTAGE LIGHT 2200K | **LINKABLE UP TO 750ft.**

WARM VINTAGE LIGHT 2200K | **ANY 2 COLOR COMBINATIONS** | **LINKABLE UP TO 750ft.**
PRESET COLOR & EFFECT MODES | **DIMMABLE** | **2 OR 4 HOUR TIMERS**

Black cord:	White cord:
31660 12' / 6 Bulbs	35604 12' / 6 Bulbs
33307 18' / 9 Bulbs	36803 24' / 12 Bulbs
31662 24' / 12 Bulbs	35608 48' / 24 Bulbs
31663 36' / 18 Bulbs	
31664 48' / 24 Bulbs	


Black cord:	White cord:
35626 12' / 6 Bulbs	35643 12' / 6 Bulbs
35629 24' / 12 Bulbs	35646 24' / 12 Bulbs
35631 48' / 24 Bulbs	35648 48' / 24 Bulbs

Black cord:	White cord:
37791 24' / 12 Bulbs	39511 24' / 12 Bulbs
37790 48' / 24 Bulbs	39092 48' / 24 Bulbs

Mounting Template

Cut out mounting template and place template at your desired mounting location. Align line A parallel with edge of the mounting surface. Drill pilot holes on X locations and screw into the pilot holes. Place puck onto the keyholes, and twist to lock into place.

 * Pilot hole drill size for #6 pan head wood screw, soft wood 3/32", hard wood 9/64".

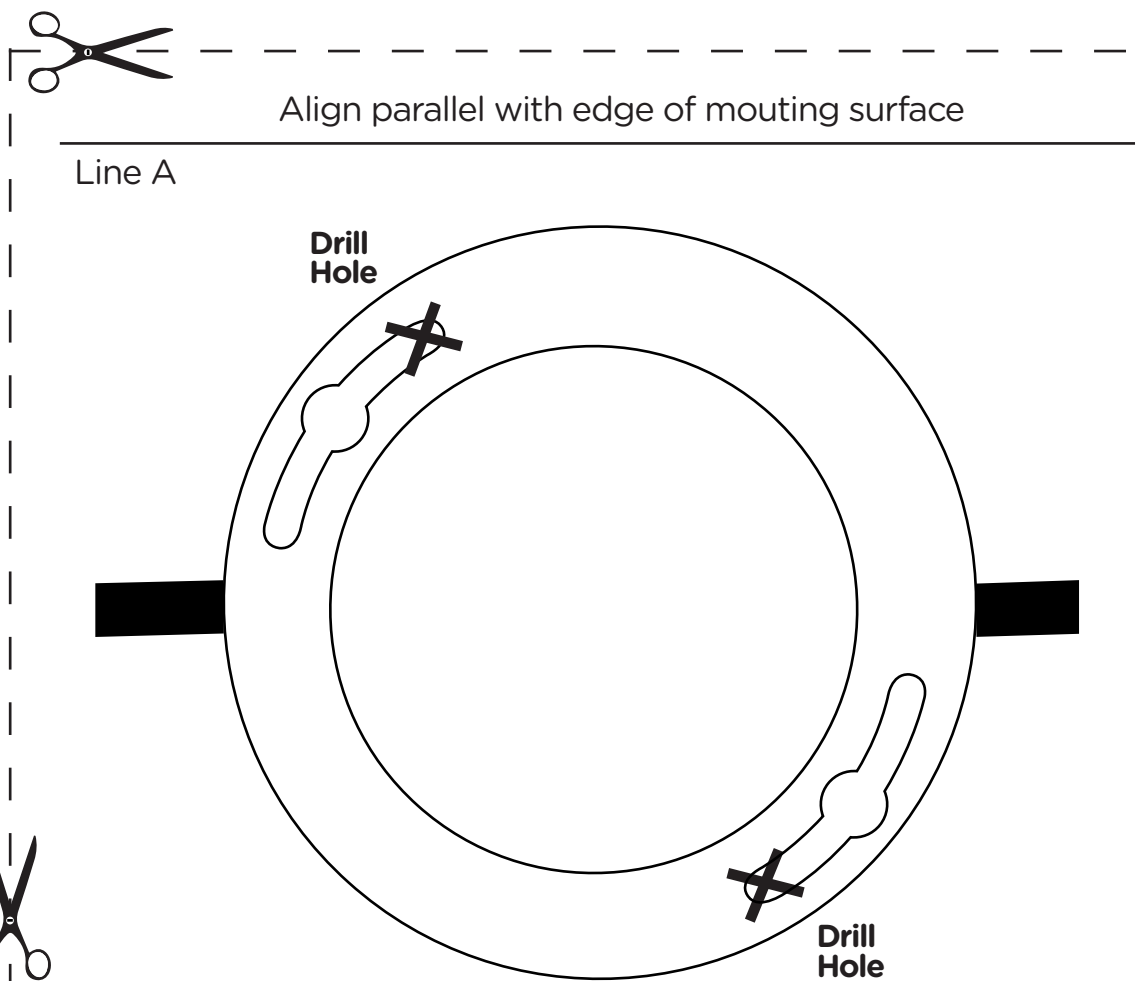

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.