

Photo 1 Inside of EUT (Antenna)



Photo 2 Inside of EUT (Antenna)



Photo 3 Inside of EUT (Antenna)

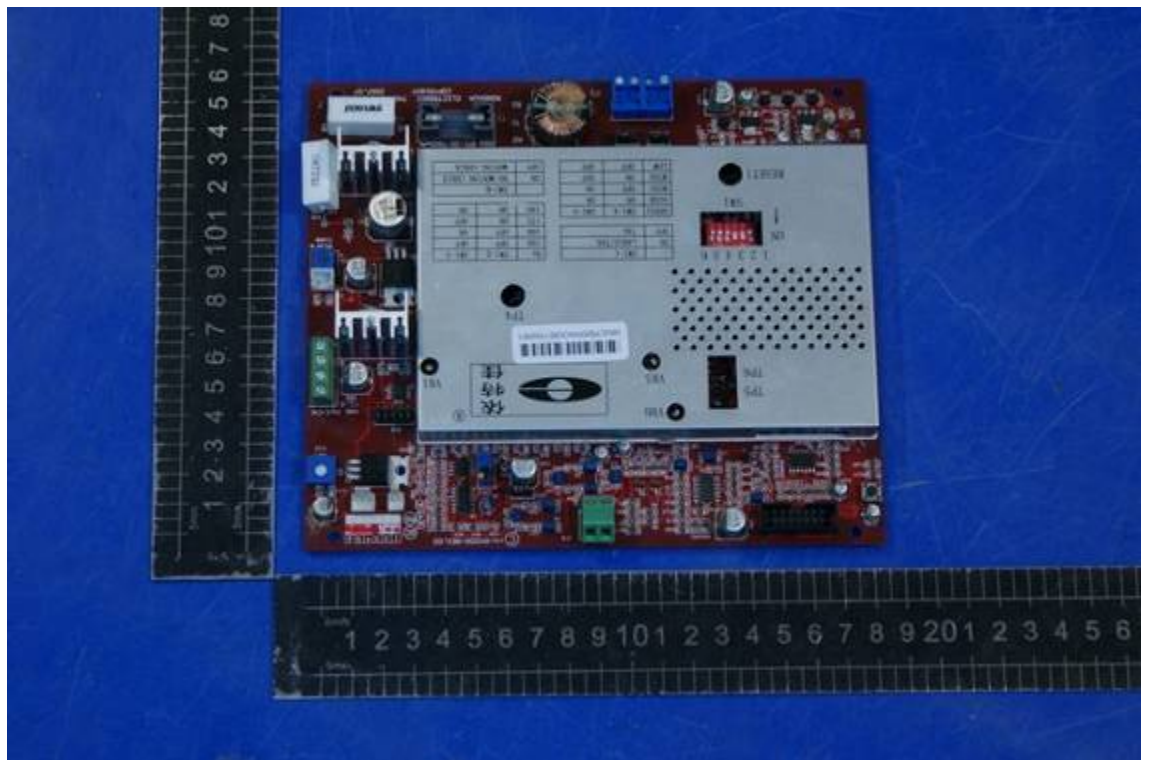


Photo 4 Inside of EUT (Antenna)

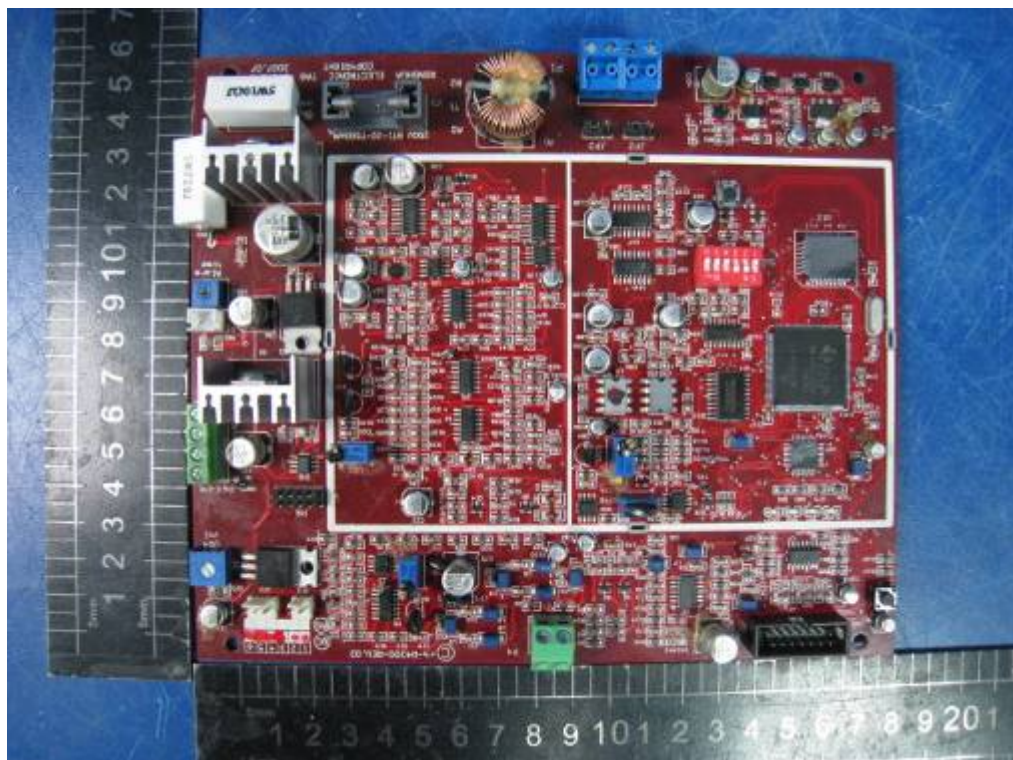


Photo 5 Inside of EUT (Antenna)



Photo 6 Inside of EUT (Antenna)

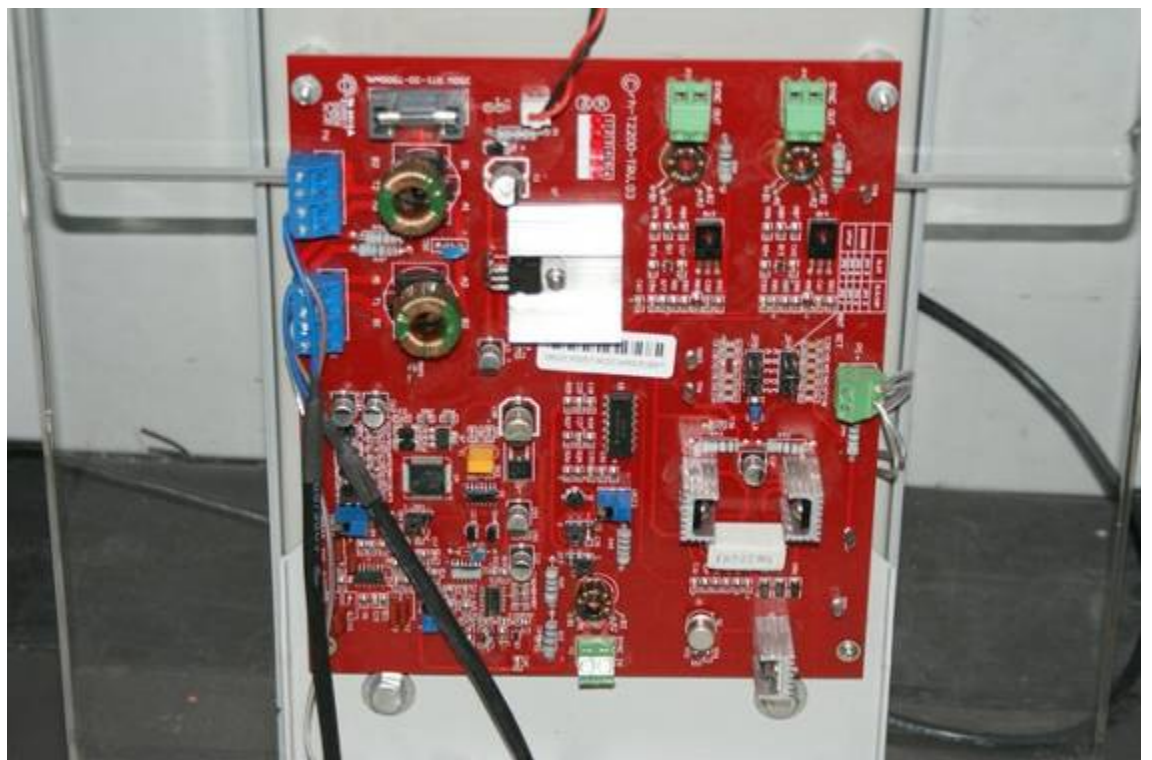


Photo 7 Inside of EUT (Antenna)



Photo 8 Inside of EUT (Antenna)

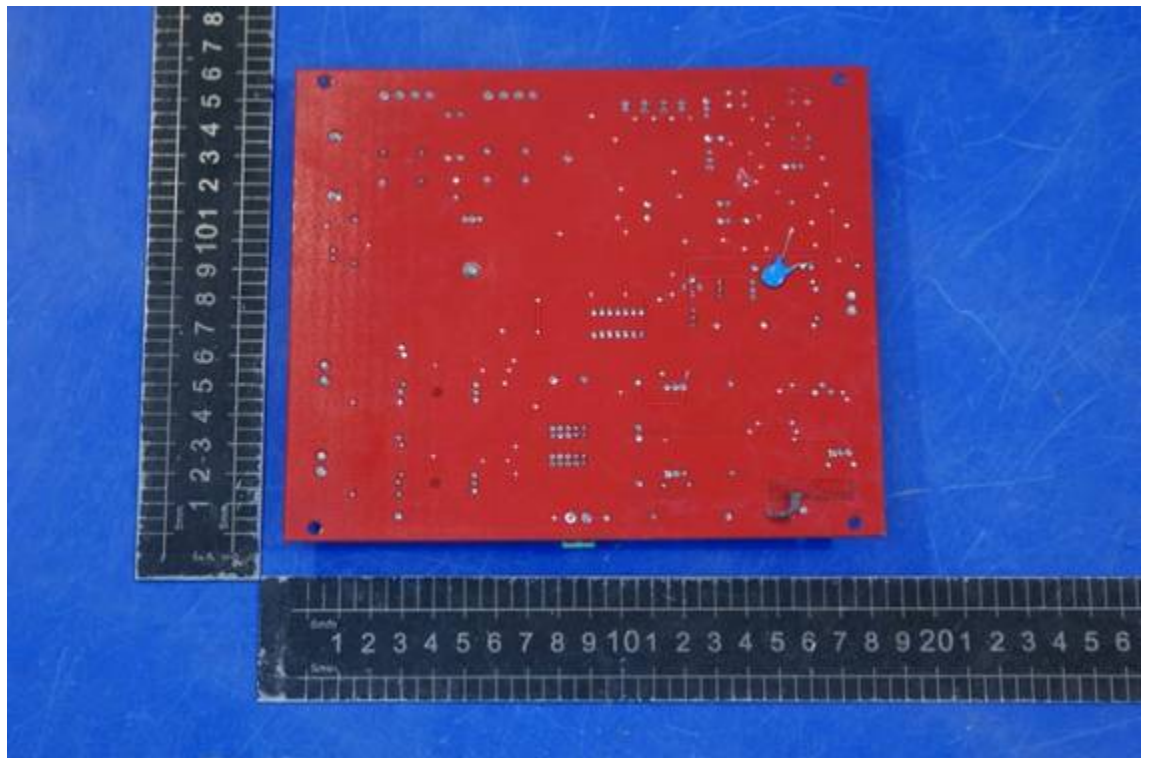


Photo 9 Inside of EUT (Switching power supply)



Photo 10 Inside of EUT (Switching power supply)

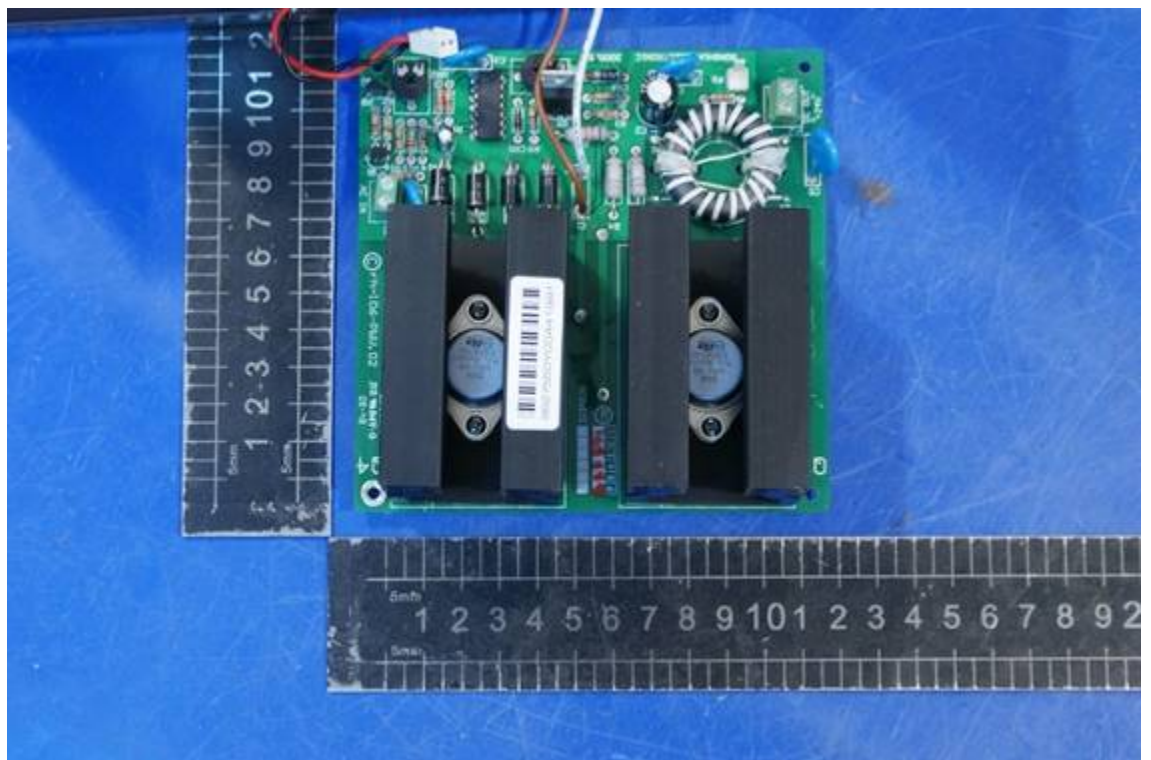


Photo 11 Inside of EUT (Switching power supply)

