

# Panasonic

Operating Instructions  
Digital Cellular Phone

EB-G60U

GSM<sup>®</sup>

*Before operating this equipment please read these instructions completely.*



# Important Information

We, Matsushita Mobile Communications Development of Europe Ltd, declare, that the EB-G60 conforms with the essential and other relevant requirements of the directive 1999/5/EC. A declaration of conformity to this effect can be found at <http://www.panasonicmobile.com/support>

## **Important Information**

**THIS PANASONIC PHONE (MODEL EB-G60U) MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio-frequency (RF) energy recommended by The Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 1.6 W/kg.\* Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The SAR value for this model phone, when tested for use at the ear, for compliance against the standard was 1.0 W/kg averaged over a 10g mass. While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

- \* The SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

## Important Information

**FCC RF Exposure Requirements: For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with COMPAL accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.**

**SAR standard limit is 1.6 W/kg**

### **RF exposure FCC**

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. (Body-worn measurements may differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

## **Important Information**

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only accessories that contain no metallic components and provide a separation distance of 15mm (0.6 inches) to the body. Use of other accessories may violate FCC RF exposure guidelines and should be avoided.

## **Health and Safety Information FCC**

### Exposure to Radio Frequency (RF) Signals

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies:

This EUT has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE Std. 1528-200X (Draft 6.5, January 2002).

Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg \*.

## Important Information

\* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

## Safety Considerations

The following information should be read and understood as it provides details which will enable you to operate your phone in a manner which is both safe to you and your environment, and conforms to any legal requirements regarding the use of cellular phones.



This equipment should only be charged with approved charging equipment. Other usage will invalidate any approval given to this apparatus and may be dangerous. The use of approved charging equipment is recommended to ensure optimum performance and avoid damage to your phone. Ensure the voltage rating of the Fast Travel Charger is compatible with the area of use when travelling abroad.



A Fast Travel Charger is supplied with the Main Kit. Other recommended equipment for charging - Car Charger.  
Switch off your cellular phone when in an aircraft. The use of cellular phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular phone services to the offender, or legal action or both.



Do not incinerate or dispose of the battery as ordinary rubbish. The battery must be disposed of in accordance with local legislation and may be recycled.

## Important Information



It is advised not to use the equipment at a refuelling point. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Never expose the battery to extreme temperatures (in excess of 60°C).



It is imperative that the driver exercises proper control of the vehicle at all times. Do not hold a phone while you are driving; find a safe place to stop first. Do not speak into a Handsfree microphone if it will take your mind off the road. Always acquaint yourself thoroughly with restrictions concerning the use of cellular phones within the area you are driving and observe them at all times.



Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



For most efficient use hold the phone as you would any normal phone. Your G60 cellular phone is fitted with an internal antenna, located in the upper portion of the phone, back of the display screen. To avoid deterioration of signal quality or antenna performance, do not touch or “cup” the antenna area while the phone is switched on.



Unauthorized modifications or attachments may damage the phone and violate applicable regulations. The use of an unapproved modification or attachment may result in the invalidation of your guarantee – this does not affect your statutory rights.

This Panasonic mobile phone is designed, manufactured and tested to ensure that it complies with the specifications covering RF exposure guidelines applicable at the time of manufacture, in accordance with EU, USA FCC, and Australian ACA regulations.

Please refer to our website for latest information/standards compliance in your country/region of use.

**<http://www.panasonicmobile.com/health.html>**



# Care and Maintenance



Pressing any of the keys may produce a loud tone. Avoid holding the phone close to the ear while pressing the keys.



Extreme temperatures may have a temporary effect on the operation of your phone. This is normal and does not indicate a fault.



Do not modify or disassemble the equipment. There are no user serviceable parts.



Do not subject the equipment to excessive vibration or shock.



Avoid contact with liquids. If the equipment becomes wet immediately remove the power and contact your dealer.



Do not leave the equipment in direct sunlight or a humid, dusty or hot area.



Keep metallic items that may accidentally touch the terminals away from the equipment.



Always charge the battery in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery if it is outside this temperature range.



When connecting the phone to an external source, read the operating instructions of the equipment for the correct connection and safety precautions. Ensure the phone is compatible with the product it is being connected to.



When disposing of any packing materials or old equipment check with your local authorities for information on recycling.

# Quick Reference



Press to select



Direction which the user can move around the display screen using the Navigation key

## Menu

Representation of screen menu option



Secondary Softkey



Negative soft key/Back-key



Numeric key pads



Answer a call or call a dialled number



Press to end a call or return to Idle screen.  
Press and hold to switch the phone on or off.




Indicates that a function is SIM Dependent



Indicates that a function is Network Dependent

# Contents

<b>Important Information .....</b>	<b>i</b>
Safety Considerations .....	iii
<b>Care and Maintenance .....</b>	<b>v</b>
<b>Quick Reference .....</b>	<b>vi</b>
<b>Getting to Know Your Phone .....</b>	<b>x</b>
Location of Controls .....	x
<b>Getting Started .....</b>	<b>1</b>
Fitting the SIM .....	2
Removing the SIM .....	2
Fitting the Battery .....	3
Removing the Battery .....	3
Charging the Battery .....	4
Operation of Battery Level Indicator .....	5
Low Battery Warning .....	5
Fitting Image-In .....	5
The Display .....	6
Menu System Overview .....	7
Selecting a Function .....	8
<b>Basic Operation .....</b>	<b>10</b>
Switching On & Off .....	10
Making a Call .....	10
International Dialling .....	11
Emergency Calls .....	11
Ending a Call .....	11
Answering a Call .....	11
Caller Identification .....	12
Volume Control .....	12
Locking the Phone .....	12
Using the PIN .....	13
Setting Ring Volume .....	14
Setting Quiet Mode .....	14
<b>Phonebook .....</b>	<b>15</b>
Browsing Phonebook .....	16
Retrieving a Number .....	16
Speed Dialling .....	17
Editing Phonebook Entries .....	18
Synchronizing Phonebooks .....	19
Review the Phonebook Status .....	19
Grouping Phonebook Entries .....	20
Info Dial and Service Dial .....	22
<b>My Numbers .....</b>	<b>23</b>
<b>Personalising Your Phone .....</b>	<b>24</b>
Changing the Language .....	24
Add a Start-up Greeting .....	24
Idle Screen Image .....	25
Changing Screen Saver Image .....	26

Turning Screen Saver On & Off .....	26
Colour Themes .....	27
Changing Sound Profiles .....	27
Editing Sound Profiles .....	28
Download Data (  ) .....	29
Media Folders .....	29
Composing a Melody .....	30
Setting the Backlight Time .....	31
Contrast .....	31
Operator Notice .....	32
Restoring the Default Phone Settings .....	32
<b>Phone Security .....</b>	<b>33</b>
Enabling Key Guard .....	34
Disabling Key Guard .....	34
Changing the Security Codes .....	35
Restricting Calls .....	35
<b>Applications .....</b>	<b>37</b>
Clock .....	37
Setting the Time .....	37
Setting the Alarm .....	38
Muting the Alarm .....	39
Setting a Power On / Off Time .....	39
Calculator .....	40
<b>Messaging .....</b>	<b>41</b>
SMS/EMS: Setting up the Phone .....	42
Creating a Text Message .....	44
Concatenated messages .....	46
Receiving Text Messages .....	46
Responding to Text Messages .....	47
Chat SMS .....	48
MMS: Setting Up the Phone .....	49
MMS Configuration .....	50
Creating an MMS Message .....	51
Managing Message Lists .....	53
Cell Broadcasts .....	54
<b>Call Information .....</b>	<b>56</b>
Recent Numbers .....	56
Call Duration .....	57
GPRS Call Duration .....	58
Call Charges .....	58
Setting the Unit Price .....	59
Setting the Maximum Unit Level .....	59
Call Identification .....	60
<b>Advanced Operation .....</b>	<b>61</b>
Diverting Calls .....	61
Holding Calls and Call Waiting .....	62
Making a Second Call .....	62
Receiving a Second Call .....	63
Accepting a Second Call .....	63
Rejecting a Second Call .....	63
Ending Current Call to Receive Another .....	63

Operation During Two Calls .....	63
Call Transfer .....	64
Multi-party Calls .....	64
Changing to a New Network .....	66
<b>Schedule .....</b>	<b>67</b>
Creating a Reminder .....	67
Viewing & Editing Reminders .....	68
<b>Games .....</b>	<b>69</b>
Embedded Games .....	69
Downloadable Games .....	69
Game Settings .....	70
<b>Managing Multimedia Files .....</b>	<b>71</b>
Displaying Pictures and Animations .....	71
Playing Melodies .....	72
Renaming Files .....	72
Creating Mail from Files .....	73
Deleting Files .....	73
Checking File Properties .....	73
Checking Folder Properties .....	74
<b>WAP Browser .....</b>	<b>75</b>
Browser Settings .....	75
Activating the Browser .....	78
Navigating Content .....	78
Browser Menu .....	79
Using Bookmarks .....	81
Deactivating the Browser .....	82
<b>Additional Features .....</b>	<b>83</b>
Voice Memo .....	83
DTMF Tones .....	85
Note Pad .....	85
Desktop Handsfree .....	86
Auto Answer .....	86
<b>Camera Accessory .....</b>	<b>87</b>
Taking a picture .....	87
<b>Camera Accessory .....</b>	<b>87</b>
Camera Options .....	88
<b>Text Entry .....</b>	<b>89</b>
T9® Text Input .....	90
Other Text Modes .....	90
Editing Text .....	90
<b>Trouble Shooting .....</b>	<b>91</b>
Important Error Messages .....	93
<b>Glossary of Terms .....</b>	<b>95</b>
<b>Specifications .....</b>	<b>97</b>
Phone (Including Battery) .....	97
<b>EU Warranty .....</b>	<b>98</b>
<b>Personal Settings .....</b>	<b>104</b>
<b>Menu Structure .....</b>	<b>105</b>
<b>Note .....</b>	<b>106</b>
<b>Licensing .....</b>	<b>107</b>
	xi

# Getting to Know Your Phone

## Location of Controls



# Getting Started

Thank you for purchasing this Panasonic digital cellular phone. This phone is designed to operate on GSM networks – GSM850, GSM1900. It also supports GPRS for packet data connections. Ensure the battery is fully charged before use.

*Before operating this phone please read the **Important Information** section - see page i.*

These operating instructions detail use of the equipment contained in the Main Kit.

 
Some services detailed are network dependent or may only be available on a subscription basis. Some functions are SIM dependent. For more information contact your Service Provider.

## Getting Started

# Fitting the SIM

The SIM is inserted into the back of the phone underneath the battery.


- 1 Remove the battery - see *Removing the Battery* page 3.
- 2 Unlock the SIM retainer by sliding it up towards the top of the phone (❶).
- 3 Gently raise the SIM retainer (❷).
- 4 Place the SIM into its recess, ensuring the bevelled corner is positioned in the top right corner (❸).
- 5 Move the SIM retainer back into position (❹) and secure by sliding downwards (❺). The SIM retainer is properly locked when it has clicked into position.

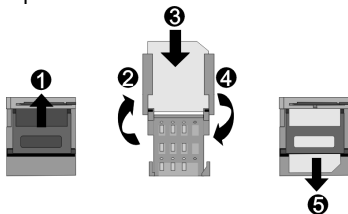

**Note:** Ensure the SIM retainer is properly locked into position. Failure to do so will inhibit the fitting of the battery and the battery cover.

# Removing the SIM

 
- 1 Unlock the SIM retainer by gently pushing towards the top of the phone (❶).
- 2 Gently raise the SIM retainer (❷) and remove the SIM (❸). Return the SIM retainer to its flat position (❹) and ensure it is correctly locked (❺) before refitting the battery and battery cover.

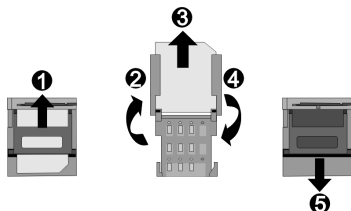




## Fitting the Battery

 - 1 Insert the battery bottom first so that the connectors touch those on the phone.
- 2 Press gently downwards and simultaneously slot the top of the battery into place.

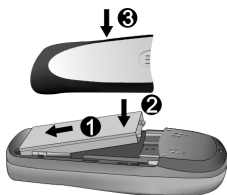

## Removing the Battery

 Ensure the phone is switched off and the charger is disconnected from the phone before removing the battery. Lever the battery out from the notch in the top edge.

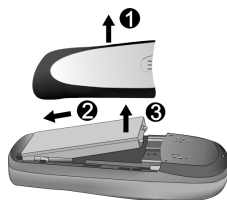


## Getting Started

# Charging the Battery

## Connecting the Fast Travel Charger

**The battery must be fitted in the phone before the charger is connected.**

 Insert the connector into the base of the phone, ensuring the arrow on the connector is to the front of the phone.

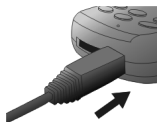


**Note: DO NOT** force the connector as this may damage the phone and /or the charger.




Connect the charger to the mains power supply. The battery level indicator will scroll right to left during charging.

## Disconnecting the Fast Travel Charger

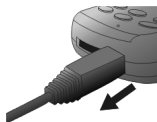 When charging is complete, disconnect the charger from the mains power supply.



## Operation of Battery Level Indicator

	While charging	Charging complete
Phone on		
Phone off		Charging indicator off


It is recommended that the battery is fully discharged between charges to maintain optimum battery life and performance.

## Low Battery Warning

When the battery power is low, the battery indicator will be coloured red. If battery power is critically low, a warning tone will sound, and a **BATTERY IS EMPTY!** message will be displayed. If this occurs during conversation, finish your call immediately. The power will automatically shut off after the warning tone. Fully recharge the battery. See *Charging the Battery*, page 4. Calls can be made and received while the phone is charging.

## Fitting Image-In

Customised image cards may be fitted to the rear of the phone, behind the transparent rear cover. An Image-In template is included with your phone.

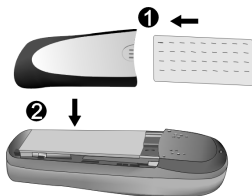 

## Getting Started









 








# The Display

Following some operations the display will automatically clear after three seconds or after pressing any key.

## Status Icons

 The status icons are displayed according to the currently activated functions. The Antenna, Signal and Battery icons are displayed when the handset is switched on and connected to a network.

 


-  Indicates **Battery Level**:  (green)- full,  (red) - low battery
-  Displayed when you are registered to a non-home network - **Roaming**
-  White icon indicates a new message has been received. Red icon indicates the message store is full.
-  Indicates **Alarm** is set
-  Indicates **Call Divert** is enabled
-  **Voicemail** activated
-  Indicates **Ringer** is enabled () = vibration mode /  = vibrate + ring /  = flashing mode)
-  Indicates GPRS service available
-  Indicates it is possible to make emergency calls only
-  GSM signal strength:  - weak signal,  - strong signal

# Menu System Overview

 The menu system provides the means for accessing all the functions that do not have their own dedicated buttons on the keypad. Each menu contains a list of options. Some menus have further submenus.



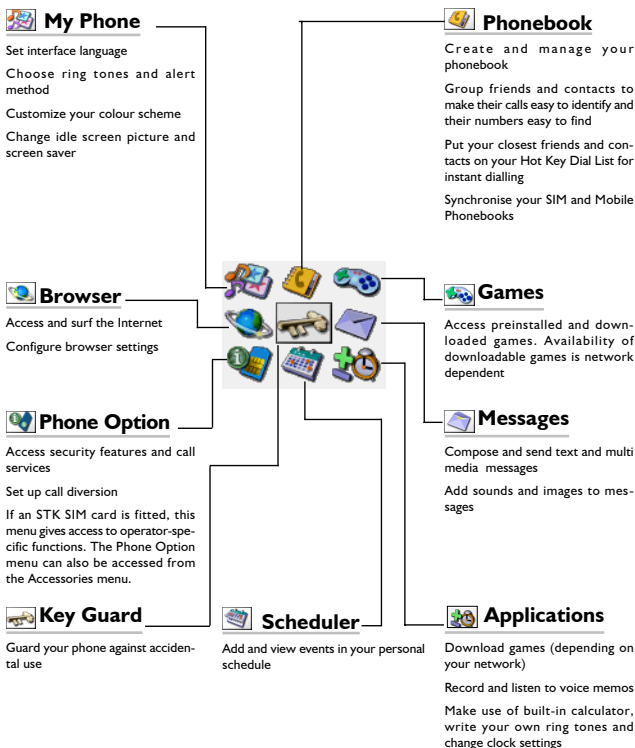


The submenus and functions are selected using the five-way **Navigation key** (⬅️⬆️⬇️➡️).

The diagram below gives an overview of the contents of the menus to help you find your way around. This is just a summary. Keep reading to discover everything your phone has to offer.











## Getting Started

# Selecting a Function


Use  and  to move between the icons on the screen. When a particular menu is highlighted, pressing  displays a submenu. From any submenu, use  until the required item is highlighted. Press  to select.

For example, to change Sound Setting (to switch ringtone):

- 1 From the **Idle** screen, press  to display the main menu
- 2 Use  to highlight the **My Phone** menu
- 3 Press  to enter the menu
- 4 Use  once to highlight the **Sound Settings** menu and press  to enter
- 5 Use  to highlight the mode you wish to set and press  to enter
- 6 Press  to activate your chosen mode

Following some operations the display will automatically clear after three seconds. If this is not the case press  to return to the idle screen.

## Shortcuts (☐)


When familiar with the layout of the menu, use the keypad to enter the Menu Number. This will allow the user to obtain the required function without having to navigate through the display menus. To change Sound Setting, for example, from the Idle screen, press  to display the main menu, then press 12 to enter the **Sound Settings** submenu.

# Basic Operation

This section contains the information you need for the most essential phone operations, including:

- ⇒ How to switch on and off
- ⇒ How to make and end a call
- ⇒ How to answer a call
- ⇒ How to change earpiece volume
- ⇒ How to lock the phone
- ⇒ How to protect the phone using a PIN
- ⇒ How to change ring volume


## Switching On & Off

To turn the phone on or off, press and hold down .

When the phone is switched on a greeting will be displayed and then the phone will go into Idle. The Greeting can be set in the My Phone > Display Settings > Greeting menu. See *Adding a Start-up Greeting*, page 24.

## Making a Call

 
Ensure that the phone is switched on, the network operator logo is displayed and the signal strength meter shows network coverage is available in the current area.

- 1 Enter area code and phone number
- 2 Press 



## International Dialling


The international code for the destination country / region should be entered , followed by the area code and phone number.

To enter the international code, select an international line by pressing  until + appears, then enter the country / region code (e.g. 44 for the UK; 81 for Japan).


**Note:** Many countries / regions include an initial “0” in the area code. This should, in most cases, be omitted when dialling international numbers. If you have difficulties making international calls, contact your Service Provider.

## Emergency Calls


To make an emergency call, the antenna symbol () must be present.


To made an emergency call, enter 112 then press 


## Ending a Call

To end a call, press 

## Answering a Call

To receive a call, the phone must be switched on and the signal strength meter  must be displayed.

Press any key except  to answer a call

Press  to reject a call



**Note:** If a call is not answered or is rejected, the number of incoming calls missed will be displayed. Press any key to clear the display.

## Basic Operation



# Caller Identification

The caller's phone number, and name if stored in the Phonebook, will be displayed during an incoming call.

**Note:** Caller Identification may not always be available.

# Volume Control





The volume level may be adjusted during a call:

Use  to decrease the volume; use  to increase the volume

**Note:** Volume control for the Personal Handsfree accessory is adjusted in the same manner.


# Locking the Phone

With the Phone Lock enabled you will be restricted to answering incoming calls only. The Phone Lock Code is factory set to **0000**.

- 1 From **Idle** press  and select (**Applications >**) **Phone Option > Security > Phone Lock**. Press 
- 2 From the submenu select **Status**
- 3 Select **On** and press 
- 4 Enter the 4-digit code and press 

The lock icon will be displayed in the primary selection area.







# Unlocking the Phone

Enter your Lock Code. The lock icon will be replaced by **OK**. Press  to confirm.

As long as the Phone Lock is enabled, whenever you turn on the phone, the Lock Code will need to be re-entered to activate the code.






## Changing Phone Lock Code

You should change your phone lock code to a 4-digit number of your own choice.

- 1 From **Idle** press  and select (**Applications >**) **Phone Option > Security > Phone Lock**. Press 
- 2 From the submenu select **Change Code** and press 
- 3 Enter the **Old Unlock Code** and press 
- 4 Enter a **New Unlock Code** and press 
- 5 Re-enter the **New Unlock Code** to confirm. Press  to complete the change.

## Disabling Phone Lock

The phone must be unlocked before the phone lock can be disabled.

- 1 From **Idle** press  select (**Applications >**) **Phone Option > Security > Phone Lock**. Press 
- 2 From the submenu select **Status** and press 
- 3 Select **Off** and press 
- 4 Enter the 4-digit code and press 

## Using the PIN

The PIN protects your SIM against unauthorized use. If you enable the PIN, every time the phone is turned on you will be prompted to enter the PIN.

PIN2 controls security for the Fixed Dial Store, Call Charge metering and Barred Dial list.




If either PIN/PIN2 is entered incorrectly 3 times the phone will be locked and the user will need to enter the PUK/PUK2 code.

Contact your service provider for the PUK/PUK2 code.

**Note:** If the PUK/PUK2 code is entered incorrectly 10 times, the SIM will cease to operate. All information stored in the SIM will be lost and the SIM will need to be replaced. Contact your service provider for more details.

## Basic Operation



### Enabling/Disabling the PIN

- 1 From **Idle** press , select **(Applications >) Phone Option > Security > PIN**. Press .
- 2 Select **Status**
- 3 Select **On** or **Off** from the submenu
- 4 You will be prompted to enter the PIN. On first use, enter PIN of your choice (Between 4 and 8 digits) and press .

## Setting Ring Volume

With the G60U, you can set up your phone in different modes depending on your environment, allowing different ring tones and volumes in different situations.


To change ring volume for any sound profile:

- 1 From **Idle** press , select **My Phone > Sound Settings**
- 2 Select the profile you wish to adjust then select **Edit > Ring Volume**
- 3 Use  to set the volume level

Turn to *Personalising Your Phone*, page 24, for more information on setting different ring modes.

## Setting Quiet Mode

You may wish to set at least one mode as a silent mode. To do this, set **Call Alert Method** for that mode to **Vibration**:

- 1 From **Idle** press , select **My Phone > Sound Settings**
- 2 Select the profile you wish to adjust then select **Edit > In-Call Alerting**
- 3 Select **Vibration**

**Note:** Once you have set the ring volume / type for a mode, you can make that the active mode at any time by selecting **My Phone > Sound Settings**, choosing the desired mode then choosing **Activate**. Turn to *Personalising Your Phone*, page 24, for more information on setting different ring modes.

# Phonebook

Phone numbers can be stored in two locations:

In the **SIM Phonebook** (☐), where the number of entries and lengths of names and numbers are SIM dependent.

In the **Mobile Phonebook**, where phonebook entries can be grouped together and additional data can be stored with numbers. This phonebook is retained even if you change your SIM.

This section tells you all you need to know about:

- ⇒ Managing your Phonebooks
- ⇒ Finding entries in your Phonebooks
- ⇒ Speed Dialling
- ⇒ Grouping Phonebook entries to make calls easier to identify and numbers easier to find

**Note:** See *Text Entry*, page 84, for information on text entry methods available for making Phonebook entries.









## To Store a Number in the SIM Phonebook

 
- 1 From **Idle** enter the phone number and press ☐
- 2 From the menu select **SIM Phonebook** and press ●
- 3 Select **Name**, press ● and enter identifying name. Press ●
- 4 Select **No.** and confirm the phone number. Press ●
- 5 Press ☐ to save



## Phonebook


 
### To Store a Number in the Mobile Phonebook

- 1 From **Idle** enter the phone number and press 
- 2 From the menu select **Mobile Phonebook** and press 
- 3 Select **Name**, press  and enter identifying name. Press 
- 4 Select **No.** and confirm the phone number. Press 
- 5 Select and enter **Email** address. Press  (optional)
- 6 Select a **Group** - see *Grouping Phonebook Entries* - into which to place the entry (optional)
- 7 Enter a **Hot Key Dial** number from  to  (optional)

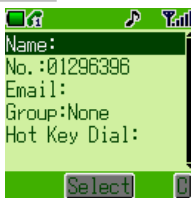


## Browsing Phonebook

You can browse both Phonebooks simultaneously by name. Use the direction keys to move through the contact list or press a lettered key to skip to the first entry starting with that letter.

- 1 From **Idle** press 
- 2 Use  (or the lettered keys) to select the entry you wish to browse

## Retrieving a Number

- 1 Browse to locate and highlight the desired number in the Phonebooks
- 2 Press  to dial the number

## Speed Dialling

### Last Number Called

From **Idle** press  twice




### Hot Key Dialling

From **Idle** press and hold the appropriate hot key number.

 
To view your hot key dial list, from **Idle** press , select **Phonebook > Hot Key Dial List**

### Assigning Hot Keys


To assign a hot key to a frequently used number:

- 1 Browse to locate and highlight the desired number in the Phonebooks. Press .
- 2 Select **Edit > Hot Key Dial**
- 3 Enter the Hot Key dial number (from  to ) for this entry

**Note:** If the Hot Key number is already taken, an **ID Used** message will appear.

**Note:** Some Hot Key Phone numbers may be reserved by the Service Provider. For example the first three Hot Key Phone numbers may be linked to Service Dial (.

### Info Numbers or Service Dial

 


Your Service Provider may program some special phone numbers into your SIM (). It is not possible to modify these:


- 1 Press and hold .
- 2 Use  to browse through the Service Dial list of phone numbers

# Editing Phonebook Entries

 
It is possible to view **Entry Details**, **Edit**, **Delete**, **Create** or **Copy Entry** information from the Phonebooks. To access any of these functions:

With a phone number or name highlighted:

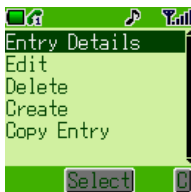

- 1 Press  to select the submenu
- 2 Use  to cycle through **Entry Details**, **Edit**, **Delete**, **Create** or **Copy Entry**
- 3 Press  to select an option



## Entry Details

Displays each element of the selected Phonebook entry: Name, number and location of entry (SIM or phone). Press  to edit the name or number.

## Edit

Displays the entry allowing you to make changes as required. Press  to save any changes and  when you have completed editing.

## Delete

Deletes the entry from the Phonebook. Press  to confirm deletion.

## Create

Creates a new entry in the Phonebooks. Select SIM Phonebook or Mobile Phonebook as entry location.





## Copy Entry

Use to copy an entry between Phonebooks.



## Synchronizing Phonebooks

Keep your SIM and Mobile Phonebooks in step by synchronizing their contents regularly. You can copy individual entries between phonebooks (see *Editing Phonebook Entries*, page 18) or simply copy the entire contents of one phonebook into the other. To do this:

- 1 From **Idle**, press  and select **Phonebook > Copy Entries**. Press .
- 2 Use  to either copies the entries of **SIM to Phone** or **Phone to SIM**. Press  to select



## Review the Phonebook Status

The Review function in the Phonebook menu shows how many locations are available in the two Phonebooks.

- 1 From **Idle** press , select **Phonebook > Review**
- 2 Use  to select **SIM Phonebook** or **Mobile Phonebook** and press .

A summary of the selected Phonebook will be displayed.





# Grouping Phonebook Entries

 
Groups are used to collect together types of Phonebook entries, for example business and personal. Each group can be suitably titled for quick access to the entries contained within.

An alert profile can be attributed to groups (or individual phone numbers) allowing incoming call alerts to be tailored to indicate the type of caller.





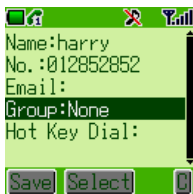


## Adding a Number to a Group

You can store numbers in up to 10 groups. To add a number from your Mobile Phonebook to a group:




 

- 1 From **Idle** press 
- 2 Use  (or the lettered keys) to select the entry you wish to add. Press  to reveal the submenu
- 3 Select **Edit**. If the entry is stored in the Mobile Phonebook, its group location will be shown (**Group: None** is displayed if the number does not belong to a group)
- 4 Select Group and press 
- 5 Scroll through the list of available groups and select whichever is appropriate




## Retrieving a Number from a Group

 - 1 From **Idle** press , select **Phonebook > Group Setting**
- 2 Use  to select the group
- 3 Press  to enter the submenu and press  again to **View** the contents of the group
- 3 Use  to select the desired entry
- 4 Press  to dial the number or  to edit the details of the entry



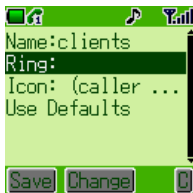


## Retitling Group Names

- 1 From **Idle** press , select **Phonebook > Group Setting**
- 2 Use  to select the group
- 3 Press  to enter the submenu, select **Edit** and press  again
- 4 Name is highlighted at the top of the submenu. Press  once to start editing the name and a second time to confirm



## Setting Group Ring Tones






Each group can be given a distinct Alert Profile so that incoming calls are recognizable from their ring tone. To set a group's ring tone:

- 1 From **Idle** press , select **Phonebook > Group Setting**
- 2 Use  to select the group, select **Edit** and press  again
- 3 Select **Ring** and press  again
- 4 Scroll through and select the desired ring tone. Press  to select

## Phonebook

### Setting Group Call Icons

You can also attach to a group an image that will display when a call is received. To add an image:

- 1 From **Idle** press , select **Phonebook** > **Group Setting**
- 2 Use  to select the group, select **Edit** and press  again
- 3 Select **Icon** and press  again
- 4 Scroll through and select the desired icon. Press  to select






### Info Dial and Service Dial ()

 

The Info Dial and Service Dial items on the Phonebook menu provide space for operators to include useful numbers. If your operator does not offer these services, these spaces will be blank.

# My Numbers

My Numbers is a convenient part of the Phonebook where your own voice, fax and data phone numbers can be stored and viewed (☐).







## Adding Numbers

- 1 From **Idle** press  and select **Phonebook** > **My Numbers**. Press 
- 2 Select an empty entry from the list of numbers. Press 
- 3 Select **Edit** and press 
- 4 Select and enter the **Name** (see *Text Entry*, page 84) and press  to save

**Note:** If using T9® text input (recommended) then move  before moving  otherwise an alternative word will be selected.

- 5 Select and enter the phone **No.** and press  twice

## Viewing Stored Numbers

- 1 From **Idle** press , select **Phonebook** > **My Numbers**. Press 
- 2 If more than one number is available then use  to cycle through the listed numbers. Press  to select
- 3 Select **Entry Details** to view entry. Press 
- 4 Press  again if you wish to edit the details

# Personalising Your Phone

This section contains all the information you need to adapt your phone to your needs and personality. You can:

- ⇒ Change the menu language
  - ⇒ Add a message to show at start-up
  - ⇒ Try a new idle screen image
  - ⇒ Change your screen saver image
  - ⇒ Use a different colour theme
  - ⇒ Switch between and edit different user profiles
  - ⇒ Make use of downloaded ring tones and images
  - ⇒ Compose your own ring tone
  - ⇒ Change the backlight and contrast settings
- ...and more!

## Changing the Language

 
It is possible to change the language the phone uses for display messages and /or text entry (⌘).

- 1 From **Idle**, press ⌘, select **My Phone > Language**
- 2 Use ⬇ to select the **Language** you wish to use
- 3 Press ⌘ to select the desired language

## Add a Start-up Greeting

A personalised greeting can be programmed for when the phone is switched on.



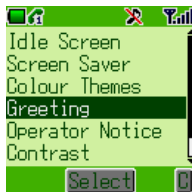


- 1 From **Idle** press ⌘, select **My Phone > Display Settings > Greeting**. Press ⌘.
- 2 Use the text entry facility to add a greeting (see *Text Entry*, page 84). Press ⌘ to confirm



## Idle Screen Image

The idle screen can be changed to a preinstalled or downloaded image.

To choose an image for the Idle screen:






- 1 From **Idle** press , select **My Phone** > **Display Settings** > **Idle Screen**. Press .
- 2 Several images are preinstalled on your phone in the **Fixed Data** folder. Downloaded images are stored in the **User Data** folder. Navigate to the appropriate folder and use  to select the required image
- 3 Use  to view image. Press any key to return
- 4 Highlight the image you want and press  to select

 


# Changing Screen Saver Image

The screen saver can also be changed to a preinstalled or downloaded image.

To choose an image for the screen saver:

- 1 From **Idle** press , select **My Phone** > **Display Settings** > **Screen Saver**. Press .
- 2 Several images are preinstalled on your phone in the **Fixed Data** folder. Downloaded images are stored in the **User Data** folder. Navigate to the appropriate folder and use  to select the required image
- 3 Use  to view image. Press any key to return
- 4 Highlight the image you want and press  to select

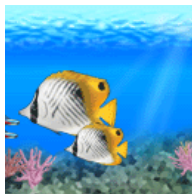

# Turning Screen Saver On & Off




Select **My Phone** > **Display Settings** > **Screen Saver** > **Setting** to turn the screen saver function **On** or **Off**, and to set the **Idle Time** (from 1 to 5 minutes) before the screen saver is launched.



## Colour Themes

Colour Themes provide alternative combinations of colours for the background and text.

To use or change a Colour Theme:

- 1 From **Idle** press  and select **My Phone > Display Settings > Colour Themes**
- 2 Use  to select the required Colour Theme. Press 

## Changing Sound Profiles



 
You can switch between six sound profiles on your phone each with a distinct combination of alert method, ring tone and type etc.

 
Profiles are set up for use in different environments - for instance you might want to create a silent profile, a discreet profile with ring tone appropriate for formal occasions and a party profile for loud environments.

Within each profile, distinct melodies can be set as incoming call and message alerts.

**Note:** Ring tones can also be used to identify incoming calls from members of groups. If a group member calls, the Group ring tone will sound, not the Sound Profile ring tone.





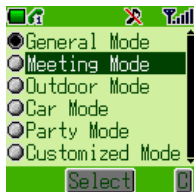To activate a Sound Profile:

- 1 From **Idle** press  select **My Phone > Sound Settings**
- 2 Select the Profile you wish to activate from the list. Press 
- 3 Press  again to activate that Profile








# Editing Sound Profiles

To edit a Profile:

- 1 From **Idle** press  and select **My Phone > Sound Settings**
- 2 Select the Profile you wish to edit from the list. Press 
- 3 Use  to select **Edit**. Press 



For each profile, you can set and edit the following:

- |                         |  |
|-------------------------|--|
| <b>Ring Type</b>        | Select a ring tone from the lists of preinstalled melodies ( <b>Fixed Data</b> ) or downloaded melodies / ring tones that you have written ( <b>User Data</b> ). Press  to preview the ring tone and  to confirm ring tone selection     |
| <b>In-Call Alerting</b> | Select from <b>Ringer / Vibration / Vibration and Ring / Flashing / Off</b>  |
| <b>Ring Pattern</b>     | Select either <b>Continuous</b> or <b>Once</b>   |
| <b>Ring Volume</b>      | Use  to set the volume level. To mute volume, use the In-call Alerting submenu  |
| <b>Message Type</b>     | Select the alert type for incoming message ( <b>Ringer / Vibrate and Ring / Off</b> )  |
| <b>Message Tone</b>     | Select a ring tone from the lists of preinstalled melodies ( <b>Fixed Data</b> ) or downloaded melodies / ring tones that you have written ( <b>User Data</b> ). Press  to preview the ring tone and  to confirm ring tone selection |
| <b>Keypad Tone</b>      | Turn keypad tones <b>On</b> or <b>Off</b>  |
| <b>Warning Tone</b>     | Turn warning tones (which sound if an inappropriate key stroke is made) <b>On</b> or <b>Off</b>  |

## Download Data (📶)

The Panasonic G60U is able to use various downloaded data. The downloaded data is stored in the Media Folder and can be acquired via MMS, EMS, SMS or WAP. Details of this service are available on our website.

Availability of this service is dependant on your country/region, or network.

For further information visit:





<http://www.panasonicbox.com>


## Media Folders

The Media Folder located at **My Phone > Media Folder** is the storage location for media files that have been downloaded from a third party source and are saved in the handset. Some of these can be used as ring tones, Idle screen images or attachments to text messages. See *Managing Multimedia Files*, page 69, for how to use these files.

**Note:** It is only possible to attach EMS format Animations/Pictures

Access these files from the Media Folder menu to rename, delete or edit them. To select an item from the Media Folder:

- 1 From **Idle**, press  select **My Phone > Media Folder** and press 
- 2 Use  to select the media type (either **Picture**, **Animation** or **Melody**)
- 3 Use  to select a file

 
Press  to view or play the selected file before making any changes to the file.







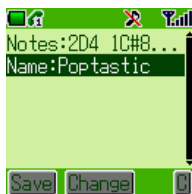


 


- 4 Press  and use  to select **Rename**, **Delete** or **Delete All**. Press 



## Composing a Melody

- 1 From **Idle**, press , select **Applications** > **Edit Ringtone**
- 2 Press  and then select **New Tone**.

 

Using the table below as reference, enter the notes, set the rhythm and octave for each and add rests to generate your composition.






<b>Key</b>							
<b>Note</b>	C	D	E	F	G	A	B
<b>Key</b>							
<b>Note</b>	Rest	Note Length	Set Octave	Dotted Note	Sharp		


- 3 Referring to the table above, use the keys  to  to enter notes.
- 4 The notes appear in the format 2C4 as shown on the right.






- ⇒ The first number (2) indicates the note octave. The default value is 2. Press  to change octave (range from 1 to 3).
- ⇒ The number of the right (4 in the first picture on the right) indicates the notes length. The default value is 1/4. Press  to change note length (range from 1 to 1/32).
- ⇒ In the second picture on the right, the octave has been left unchanged at 2 while the note length has been shorted to 1/32.

 




- ⇒ Indicate dotted notes (i.e. notes extended in length) by pressing .
- ⇒ Add sharp values to notes by pressing .
- ⇒ Enter rests by pressing .

**Note:** At any time during composing press  to play back the current melody.

- When the composition is complete, press  twice and enter the title. Press  to save the name and  to complete composing.




## Setting the Backlight Time

 The Backlight is illuminated when a key is pressed to make using your phone easier. You may wish to reduce backlight time to increase the time your phone will run between battery charges.

- From **Idle**, press , select **My Phone > Display Settings > Backlight Time**
- Use  to cycle through the times available (**Off / 10 seconds / 30 seconds / 60 seconds**)
- Press  to select the desired time


## Contrast

Screen contrast can be altered for viewing in different lighting conditions:

- From **Idle**, press , select **My Phone > Display Settings > Contrast**
- Use  to set the desired contrast level
- Press  to confirm selection





 
# Operator Notice

Operator notices appear if the phone has been left idle to remind users how to operate selected features. To enable and disable operator notices go to **My Phone > Display Settings > Operator Notice** and press .

# Restoring the Default Phone Settings

Any personal settings can be swiftly returned to their factory default, with the exception of some features, such as the Phone Lock code and the Language.

- 1 From **Idle**, press , select **My Phone > Defaults**
- 2 When prompted **Use Default Settings?** press  to confirm and restore the settings

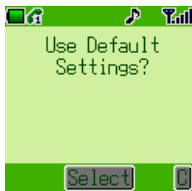

# Phone Security

Your phone has a number of security features that protect against unauthorized use and enable the user to restrict access to certain functions.

These include:

- ⇒ Phone Lock
- ⇒ PIN Protection
- ⇒ Key Guard
- ⇒ Call Barring
- ⇒ Fixed Dial

**Note:** For full details of the Phone Lock feature, turn to *Locking the Phone*, page 12.


 
**Note:** For full details of PIN Protection, turn to *Using the PIN*, page 13.


It is recommended that all security codes are memorized. If it is necessary to make a note of any security codes, never write them in a way that they can be recognized by another person. If forgotten, contact your dealer (for the Phone Lock Code) or Service Provider (for PIN and PIN2).


## Phone Security
 
### Enabling Key Guard

The Key Guard function is used to prevent any keys from being accidentally pressed, for instance when the phone is being carried.


From **Idle** press  twice to bring up the **Guard Keypad?** message and a third time to confirm. The Key Guard icon () will appear on the Idle screen

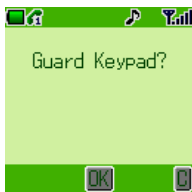


When a call is received, Key Guard will be disabled temporarily, allowing the user to press any key except  to answer the call. Emergency calls can still be made - see *Emergency Calls*, page 11.

 **Note:** When making emergency calls with the “Key Guard” enabled, there will be no audible or visual indication that the number is being dialled





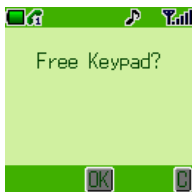


### Disabling Key Guard

Press  once to bring up the **Free Keypad?** message and a second time to confirm.





## Changing the Security Codes




- 1 From **Idle** press  and select (**Applications >**) **Phone Option > Security**
- 2 Use  to select **Phone Lock, PIN or PIN2**
- 3 Use  to select **Change Code** and press 
- 4 Enter the current code and press 
- 5 Enter the new code and press 
- 6 Verify the new code and press 

 


## Restricting Calls

### Call Barring

The Call Bar function is used to restrict certain outgoing and/or incoming calls. Call Barring is controlled by a security password that is supplied by the Service Provider (this password can be changed: see below). When updating or checking the status of Call Barring the phone must be registered with a network. Different Call Bar restrictions can be used for voice and data calls. Any combination of call restrictions can be set.

- 1 From **Idle** press  and select (**Applications >**) **Phone Option > Security > Call Bar**. Press 
- 2 Use  to select **Bar Voice** or **Bar Data**
- 3 Follow the submenus to set the desired restrictions

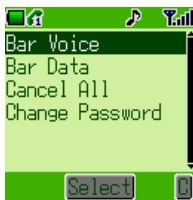

## Phone Security

### Outgoing Calls


Select from **All Calls / International Calls / International Calls Except Home / Off**

### Incoming Calls

Select from **Off / When Roaming / All Calls**

### Data Calls

Select from **All Calls / International Calls / International Calls Except Home / Off**

- 4 Enter Call Bar password and press 

**Note:** To change Call Barring password, go to (**Applications > Phone Option > Security > Change Password**)

You can change individual Call Barring settings following the instructions above or cancel all call barring settings by selecting (**Applications > Phone Option > Security > Cancel All**).



## Fixed Dial

The **Fixed Dial** Store is part of Phonebook (Phonebook > Fixed Dial), but with additional security.

When the security feature **Fixed Dial** is enabled in the security submenu it is only possible to make calls with phone numbers that are in the Fixed Dial Store. When **Fixed Dial** is enabled any manually dialled phone numbers must match a phone number in the **Fixed Dial** Store.

To store, edit or delete a phone number in the Fixed Dial Store the Fixed Dial function must be enabled. With Fixed Dial enabled, all phone numbers can be added, edited or deleted as normal, but you will be prompted for **PIN2**.

To enable Fixed Dial:

- 1 From **Idle** press  and select (**Applications > Phone Option > Security > Fixed Dial**). Press 
- 2 You will be prompted to enter SIM PIN2 before proceeding.

# Applications





 
This section introduces some of the applications you'll find installed on your phone. These include:


- ⇒ The clock
- ⇒ Alarms
- ⇒ Automated power on and power off
- ⇒ The calculator

## Clock

Your phone incorporates a clock with date/time, an alarm and an automatic power on/off feature.

## Setting the Time

 - 1 From **Idle** press  and select **Applications** > **Clock Function** > **Clock Set**
- 2 Press  to select the time entry
- 3 Use the numbered keys to enter the correct time (using the 24-hour clock) or use  to adjust the time displayed. Move between the hour and minute fields using 
- 4 When the time is entered correctly, press  to confirm

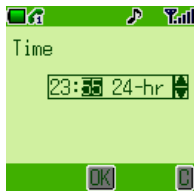





 
 

 



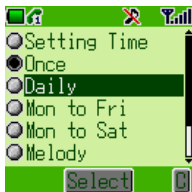 
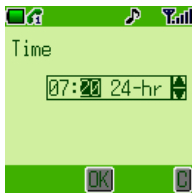 
# Setting the Alarm


Up to three separate alarms can be set. For each alarm, you can set different schedules (e.g. daily / weekdays only) and alarm tones as well as times.

If the clock hasn't been set, the user will be prompted to set it prior to setting the alarm.

To set an alarm

- 1 From **Idle** press  and select **Applications** > **Clock Function** > **Alarm Set**. Press 
- 2 Use  to select the alarm to be set (By default the alarms are named **Alarm1**, **Alarm2** and **Alarm3**. These names can be changed -- see *step 7 below*). Press 
- 3 First set the alarm time. Press  to enter **Setting Time**
- 4 Use the numbered keys to enter the correct alarm time (using the 24-hour clock) or use  to adjust the time displayed. Move between the hour and minute fields using  Press  when complete
- 5 Use  to highlight the desired schedule for the alarm and press  to select
- 6 Select **Melody** and highlight and select the desired alarm melody from the submenu. Press  to confirm
- 7 Select **Rename** and enter a name for the alarm setting



When the alarm has been set, and the clock is displayed,  will be displayed when the phone is in **Idle**.

**Note :** To disable an alarm setting, select **Applications** > **Clock Function** > **Alarm Set** > [**Alarm Name**] > **Cancel**

## Muting the Alarm

When an alarm goes off, the chosen melody will sound and the display will flash with an alarm message. The alarm will sound for 30 seconds. If the alarm is due during a call, it will activate a vibration alert.

### To end the alarm:






 
Press any key


## Adjusting the Alarm Time

To adjust an alarm time follow the steps in *Setting the Alarm*, page 38.

## Setting a Power On / Off Time

The phone can be set to turn itself on or off automatically at a specified time using the Power On / Off feature. To set the Power On and Off schedule:

 - 1 From **Idle** press  and select **Applications > Clock Function**
- 2 Select **Power On Time** or **Power Off Time**. Press 
- 3 Use the numbered keys to enter the correct Power On or Power Off time or use  to adjust the time displayed. Move between the hour and minute fields using  Press  when complete
- 4 The Power On / Power Off setting can be applied once when the set time is next reached (**Enable Once**) or until cancelled (**Enable Always**). Highlight the appropriate setting and press  to select is similar to that for setting the time on the clock. For either setting or adjusting the time needed to select **Power On Time** or **Power Off Time** in the Clock Function menu

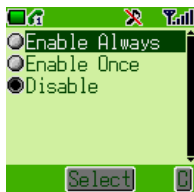






## Applications

**Caution:** Ensure that the setting of the Alarm or Power On function will not contravene any regulations whereby it may automatically power on when in an aircraft or medical facility etc. - see Important Information, page I.

**Note :** To disable a Power On or Power Off setting select **Applications > Clock Function > Power On Time / Power Off Time > Time (ignore) > Disable.**

## Calculator

The four function calculator will enable the user to perform simple arithmetic calculations (addition/subtraction/multiplication and division).

- 1 From **Idle** press  and select **Applications > Calculator**. Press 
- 2 Enter a number (maximum 8 digits) and it will be displayed on the upper right of the display. If a decimal point is required, press 
- 3 Use  to scroll through and select the arithmetic operation you wish to perform
- 4 Enter a second number (maximum 8 digits). It will be displayed next to the operation symbol
- 5 Press  to complete the calculation



# Messaging

Your phone has various messaging features including SMS, MMS and EMS.

**SMS/EMS** - Enter the recipient's phone number to send text and images.

**MMS** - Attach images and music to text messages.

This chapter is a full introduction to messaging including:

- ⇒ Setting up your phone to enable SMS/EMS and MMS messaging
- ⇒ Writing text messages
- ⇒ Sending Quick Notes
- ⇒ Adding attachments to text messages
- ⇒ Reading incoming messages
- ⇒ Managing messages in your Inbox and Outbox
- ⇒ Chatting with SMS contacts
- ⇒ Creating multimedia messages
- ⇒ Receiving message broadcasts on desired topics

## Messages

# SMS/EMS: Setting up the Phone

It is possible to receive, display, edit and/or send text messages of up to 459 characters (dependent upon the language being used) to mobile phones on your service provider's network or any network that has a roaming agreement (dependent on the recipient's phone parameters).

Before a text message can be sent, you must enter the Message Centre number into Options (your Service Provider will supply the Message Centre number). You should also select the protocol via which messages are sent, the storage time (lifetime) and pick a delivery confirmation setting.

The Message Centre number may have been pre-programmed on the SIM.

## Setting the Message Centre Number

From **Idle** press , select **Mes-**  
**sages > Options > SMS/EMS >**  
**Message Centre**. Press .

Include the international dialling code in the Message Centre number.



## Lifetime

The lifetime is the duration that your messages are stored at the Message Centre. Delivery attempts will be repeated until the message has been delivered or the Lifetime expires.

From **Idle** press , select **Mes-**  
**sages > Options > SMS/EMS >**  
**Lifetime**. Press .

 
Select from **1 hour**, **12 hours**, **1 day**, **1 week** or **Maximum** to set the time after which messages are automatically deleted.



## Messaging Protocol

From **Idle** press , select **Mes-**  
**sages > Options > SMS/EMS >**  
**Protocol.** Press .

 
Select the appropriate protocol for sending messages or maintain the **Default** setting.

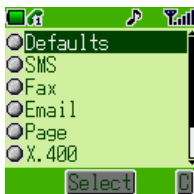







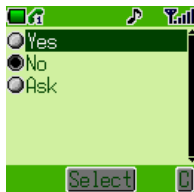


## Delivery Confirmation Setting


From **Idle** press , select **Mes-**  
**sages > Options > SMS/EMS >**  
**Report.** Press .

 Select **Yes** to enable delivery confirmation for your messages, **No** to disable the function and **Ask** to prompt the message recipient to acknowledge receipt.



# Creating a Text Message

 - 1 From **Idle** press , select **Mes-sages > Create > SMS/EMS**. Press 
- 2 Write text message. To change text input method (displayed in lower left corner of screen), press . See *Text Entry*, page 84, for details.  
Use  to navigate through the mes-sage and position the cursor to add text  
Use  to delete the character to the left of the cursor  
Press  to cancel the message
- 3 Press  when you have finished composing the message
- 4 The submenu that appears gives the options of **OK / Insert Media / User Msgs / Add Sig**. For informa-tion on adding attachments, see *Text Message Attachments* on the next page
- 5 Either browse the Phonebook to se-lect the number to send the mes-sage to, or choose **OK** and enter the destination phone number. Press 
- 6 You will be asked *Send Message Now?*  
Press 

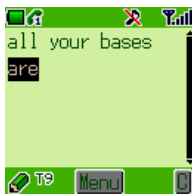

- 7 As the message is sent the sending message animation will display.







- 8 If Delivery Confirmation is enabled (see previous section) and the message is transmitted successfully, *Send Message Success* will appear.



## Sending Quick Note Messages

Your phone comes with several common message expressions preinstalled. To send a Quick Note:

- 1 From **Idle** press , select **Messages** > **Create** > **SMS/EMS**. Press .
- 2 Instead of writing the message content, press  and select **User Messages**. A list of the saved Quick Notes will be displayed.
- 3 Select the desired Quick Note and press .
- 4 Enter the phone number and send in the same way as for a standard text message.




**Note:** View your Quick Notes at any time by going to **My Phone** > **Quick Note**. You can also use this menu to compose new Quick Notes.

## Messages

### Text Attachments

When creating a text message, it is possible to include attachments (copyright permitting).


To include an attachment:

- 1 Follow the instructions above to write the text message then press . When the *OK / Insert Media / User Msgs / Select* submenu appears (see step 4 above), select **Insert Media**.
- 2 Use  to select the file to be inserted into the text body. Press .

### Concatenated messages




SMS messages can be made up text and attached pictures or icons to a maximum size of 160 characters. If you want to send a larger message, your phone will automatically configure your message as a string of smaller messages and send these simultaneously. Concatenated messages such as this appear to a user as a single message.

### Receiving Text Messages

When a Short Text Message is sent to your phone, the message **Received / New Message** and the message indicator () will flash in the display with an alert signal (this signal - an audible tone or vibration - is set in the My Phone > Sound Settings menu). This indicates that a new message has been received.

**Note:** If the message indicator shows red the message area is full and you will need to delete old messages in order to be able to receive new messages in the future.



## Reading immediately



When **Read** is displayed press  to read the message immediately. Use  to navigate through the message and to identify the sender and the time the message was sent. With the phone number shown in the *Sender* field, press  to dial the phone number.

## Reading later

Received messages are stored in the Inbox.



From **Idle**, press  and select **Messages > Inbox**

Use  to select a message to read (if there is more than one) and press  to view the message.

You can call the sender, or press  to view your other options (this submenu can also be viewed by pressing  when the message is highlighted in the Inbox).



## Responding to Text Messages

Press  when you have read a message to view response options. Alternatively, highlight the message in the Inbox (Messages > Inbox) and press . Choose to:

**Reply** to the message

**Call Back**

**Forward** the message

 
**Store** the number

**Delete** the message

**Delete All** messages or


**Extract Media**


(if any file is attached to the message)

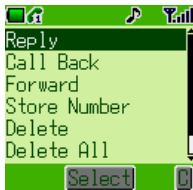


# Chat SMS

 
The Chat feature enables you to read sent and received messages on one screen when in **Chat SMS** mode with another party.

- 1 **Either:** When reading a previously sent or received message, press  and select **Chat** and/or enter your Nickname (up to 18 characters) - see *Text Entry*, page 84.

**Or:** Launch Chat SMS mode from **Idle** by pressing  and selecting **Messages > Chat SMS > Start Chat**. Enter your Nickname



It is now possible to chat with the other party, providing they have the chat SMS facility on their phone. Enter your message - see *Text Entry*, page 64. Press  and enter the destination phone number if necessary (or browse and select from Phonebook).

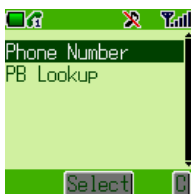


When receiving a message in chat mode, the text will appear automatically above your previous message.

- 2 Press , select **OK** to continue the chat

## Messages

If the phone is not in chat mode when receiving a reply to a chat message, the reply will be received as a normal SMS. If a voice call is received when in chat mode, the phone will allow the user to accept the incoming call and return to chat mode at the end of the call.

Chat conversations are stored and can be viewed in the **History** folder.

To open the folder from **Idle**, press  and select **Messages > Chat SMS > History**. Regular Chat users should clear the history regularly to free memory space.









 
## MMS: Setting Up the Phone

Multimedia Message Service (MMS) Configuration must be performed before you can send or receive an MMS message. You can create up to three server profiles on the phone.

**Note:** Your MMS settings may have been pre-configured by your service provider. Contact your service provider if you are unclear how to proceed.

# MMS Configuration

- 1 From **Idle** press , select **Messages** > **Options** > **MMS** > **Server List**. Press 
- 2 Select the server required and press 
- 3 Use  to select **Edit** and press 
- 4 Select **Bearer Type** or **WAP Setting** and press  to start configuring settings

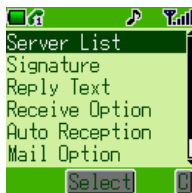

**Note:** Contact your service provider for advice on settings for MMS configuration.












**Note:** Use the Messages > Options > MMS menu to configure other MMS settings. Contact your service provider for details of required settings.

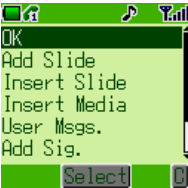

## Creating an MMS Message

 
Your phone supports **MMS** (Multimedia Messaging Service), which means you can send digital pictures to an MMS-enabled mobile or to an email address. Wherever you are, attach a photo, audio message or text, and send it immediately to your friends.

The following basic steps must be followed for all MMS messages. For information on multimedia additions, read the following section.

- 1 From **Idle** press  and select **Messages > Create > MMS**. Press .
  - 2 Compose the text part of the message (see *Text Entry*, page 84, for details of entry methods)
  - 3 When the message is complete press .
  - 4 To attach a media file, follow the instructions on the following page. To continue without attaching a media file, select **OK** from the submenu and press .
- 
- The screenshot shows a green-themed menu with the following options: OK, Add Slide, Insert Slide, Insert Media, User Msgs., and Add Sig. A 'Select' button is visible at the bottom right.
- 5 Select **To:**, press  and enter (or browse and select) the recipient's phone number or email address. Press  to confirm
  - 6 If desired, a message can be delivered as a copy to another recipient. To do this, use  to select **Cc:**. Press  and enter (or browse and select) the copy recipient's phone number or email address. Press  to confirm
  - 7 A **Bcc:** address or phone number is added in the same way. Bcc delivery differs from Cc delivery in that the original recipient (whose address is in the **To:** field) will not be informed of any copies sent to Bcc addresses
- 
- The screenshot shows the recipient fields: To:, Cc:, Bcc:, and Subj:. At the bottom, there are 'Menu' and 'Edit' buttons.

## Messages

- When the **To:** field has been filled and any required Cc or Bcc entries have been added, add the message subject heading. Use  $\odot$  to select **Subj:**, press  $\odot$  and enter the subject heading. Press  $\odot$  to confirm, then press  $\odot$
- Use  $\odot$  to select **Send** or **Save** as appropriate

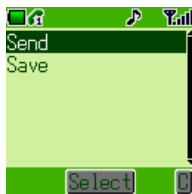

**Note:** Saved messages are stored in the Outbox and can be edited and sent in the future.

## Attaching Media Files

Media files such as voice files can easily be added to MMS messages.



- Compose a message following steps 1 to 3 on the previous page
- From the submenu select **Insert Media**
- Use  $\odot$  to browse and select media files available on your phone
- When you have selected files, press  $\odot$
- Send** or **Save** the message as instructed on the previous page

 
## Managing Message Lists



Messages, whether sent or received, are mostly stored in the SIM card until they are deleted. Selecting a stored message allows it to be read, replied to, edited or deleted.

### Inbox


Messages received are stored in the **Inbox** and tagged with icons:

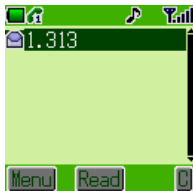-  indicates an unread SMS message
-  indicates an unread MMS message



 From the Inbox, select a message. Press  to read the message or  to view other options:

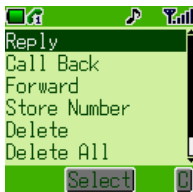


- Reply** to the message
- Call Back** the sender
- Forward** the message
- Store** the sender's number
- Delete** the message
- Delete All** messages from the Inbox
- Extract Media** files from the message
- Edit** the message content before forwarding or saving



## Messages







### Outbox

Messages sent or edited are stored in the Outbox and tagged with icons:


-  indicates an unsent SMS message
-  indicates an unsent MMS message
-  indicates an unsent EMS message

## Cell Broadcasts






You need to specify the topic(s) of information you wish to receive as broadcasts before they can be received.

- 1 From **Idle** press , select **Mes-sages > Broadcasts > Topics** and press 
- 2 Press  twice to insert a new topic
- 3 Use  to cycle through the available topics
- 4 Press  and select **RX On** from the pop up menu
- 5 Press  to insert the currently displayed topic into your broadcast list





When a low priority broadcast has been received,  will be displayed on the **Idle** screen. If a high priority broadcast is received, its text content will be displayed on the idle screen

## Enabling/Disabling Cell Broadcasts

- 1 From **Idle** press , select **Mes-**  
**sages > Broadcasts** and press 
- 2 Select **Receive** and press 
- 3 Use  to select **Enable** or **Disable**  
and press 



## Language

The language in which broadcast messages are displayed can be changed (). Go to **Messages > Broadcasts > Languages** and press 

# Call Information

This section explains how you can obtain more information about your calls, including:

- ⇒ Recent calls made, received and missed
- ⇒ Call duration
- ⇒ Call charges






## Recent Numbers

Recently dialled phone numbers are stored in **Last Dial**.


If Caller Identification is available, the caller's phone number for an answered call will be stored in the **Answered Call** menu and an unanswered call will be stored in the **Unanswered Call** menu.

If Caller Identification is not available then calls will still be stored but will have the date and time attributed to them.

When the store is full the next phone number will overwrite the oldest.

- 1 From **Idle** press 
- 2 Use  to select **Last Dial**, **Answered Call** or **Unanswered Call**.  
Press 
- 3 Use  to select the phone number (or name) you wish to redial.  
Press 

You can edit or delete the phone number before dialling – see *Editing Phonebook Entries*, page 18.

If you wish to store the selected number in Phonebook, press  while the number is displayed – see *Storing a Number in the SIM / Mobile Phonebook*, pages 15-16.

## Calling the Last Dialed Number



To redial your last called phone number press  twice.

## Returning an Unanswered Call


When the display shows that you have received calls but not answered them.


- 1 Press 



The last caller's phone number will be displayed if it is available.

- 2 Use  to select the phone number you wish to dial
- 3 Press 

## Call Duration

- 1 From **Idle** press , select (**Applications >**) **Phone Option > Call Services > Calls**. Press 

 
 
**Note:** The Calls feature is SIM dependent (). If the SIM does not support this function then items under Calls menu will be found directly under the Call Services menu.

- 2 Use  to select one of the features described below, and press 



**Last Call** displays the duration and call charge (if available) of the last call made.


Times are indicated as: hours (0-99), minutes (0-59), seconds (0-59) - HH:MM:SS.

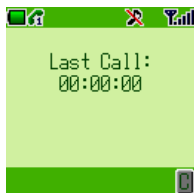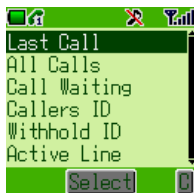**All Calls** displays the accumulated duration and call charge (if available) of Incoming and Outgoing calls. The lock code or PIN2 is required to reset the timer and call charge meter.



# GPRS Call Duration

 
- 1 From **Idle** press  and select (**Applications >**) **Phone Option > Call Services > Connections**. Press .

**Note:** The Connections function is SIM dependent (.


- 2 Use  to select one of the features described below, and press .

**Last Connection** displays the amount of data transferred during the last call.

**All Connections** displays the accumulated duration and amount of data transfer. The lock code or PIN2 is required to reset the timer.

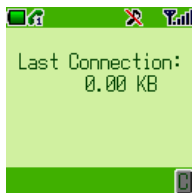




# Call Charges

 
To maintain control over the cost of calls that are made, the phone can be set to restrict use to a finite number of units overall (.






## Setting the Unit Price

Firstly, a price per unit must be entered. This is the cost that the Service Provider charges for one unit of call time (□).

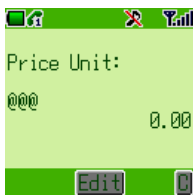- 1 From **Idle** press , select **(Applications >) Phone Option > Call Services > Service Charges > Price Unit**. Press 
- 2 Press  to edit the values






At this point you will be asked to enter your PIN2 or Lock code. Do so and press .

- 3 Enter a currency unit (up to three characters) e.g. GBP. Press  twice
- 4 Enter a price and press  twice



## Setting the Maximum Unit Level

This function allows the user to pre-determine the maximum cost of calls made (□).

- 1 From **Idle** press , select **(Applications >) Phone Option > Call Services > Service Charges > Max Cost**. Press 
- 2 Press  twice to edit the values




At this point you will be asked to enter your PIN2 or lock code. Do so and press

- 3  Enter a value (number of units) which is to be the maximum permitted, and the corresponding cost will be displayed
- 4 Press  twice to accept

## Call Information

**Note:** The duration of one unit may vary during the day, peak and off-peak times. Therefore, the call charge can be calculated accordingly. However, call charge information may not give an accurate reflection of the tariffs charged by your Service Provider.

## Call Identification

In the Call Services > Calls menu, the Caller's ID and Withhold ID functions allow you to check the status of whether a Caller's Identification is sent or can be received (Withhold ID )

**Note:** When checking the status the phone must be registered with a network.










# Advanced Operation

 
This section contains detailed information on call management including:

- ⇒ Call diversion
- ⇒ Call holding
- ⇒ Call waiting
- ⇒ Making and receiving a second call
- ⇒ Transferring calls
- ⇒ Multi-party calls
- ⇒ Changing network

## Diverting Calls

Voice, fax and data calls can be diverted according to different conditions and to different numbers. For example you may wish voice calls to be diverted to Voicemail when the phone is switched off. To enable call diversion:

- 1 From **Idle** press  and select (**Applications >**) **Phone Option > Call Divert**. Press .
- 2 Use  to select the type of call to divert (you can repeat this step as necessary). Press .
- 3 If diverting voice calls, use  to select circumstances in which to initiate the diversion. Press .
- 4 Enable the diversion by selecting **On** from the **Status** menu. Press .
- 5 Enter the phone number to divert to (or press  and select the number from your Phonebook). Press .

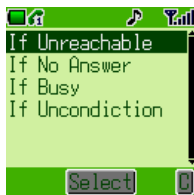

## Advanced Operation

**Note:** To edit a call diversion setting, follow the steps above and reset according to the new settings.

**Note:** To cancel a diversion setting, select **Off** in step 4 above. To cancel all diversion settings, go to (**Applications >**) **Phone Option > Call Divert > Cancel All**.

When a diversion is enabled the divert icon (📞) is displayed.

 
When updating or checking the status of **Call Divert** the phone must be registered with a network (📶).

## Holding Calls and Call Waiting

### Holding a Call

During a call press (📞). Alternatively:

- 1 Press (📞)
- 2 Use (📞) to select **Hold Active**.  
Press (📞)

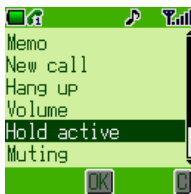

### Resuming a Call

- 1 Press (📞)
- 2 Use (📞) to select **Resume**. Press (📞)

## Making a Second Call




- 1 During an ongoing call, enter phone number (or recall from Phonebooks – see *Browsing the Phonebooks*)
- 2 Press (📞)

The first call will be placed on hold.

## Receiving a Second Call




A second call can be received, if Call Waiting is switched on. This is enabled from the (**Applications >**) **Phone Option > Call Services > Calls** menu. It is not possible to have more than one fax or data call. All voice calls must be ended before you can make or receive a fax or data call (☐).

## Accepting a Second Call




- 1 Press  when the second call is received
- 2 Use  to select **Accept**. Press .

The current call will be placed on hold.

## Rejecting a Second Call

- 1 Press  when the second call is received
- 2 Use  to select **Reject**. Press .

## Ending Current Call to Receive Another


- 1 Press  when the second call is received to end the current call
- 2 Press any key except  or  to receive the new call

## Operation During Two Calls

### Swapping Between Calls

- 1 Press 
- 2 Use  select **Swap**. Press .

### Ending Current Call

- 1 Press 
- 2 Use  to select **End**. Press .

The held call will remain held.

### Ending Both Calls

Press 

## Advanced Operation

### Call Transfer

With two calls connected, Call Transfer enables the user to connect them together ending your connection, leaving the other parties to talk together (☐).

When two calls are connected to your phone:

- 1 Press 
- 2 Use e to select **Trans.** Press 

The two calls will be connected to each other and your call will be ended.

**Note:** Two call transfer cannot be activated while in Multi-party mode.

### Multi-party Calls

A Multi-party call enables three to five people to be in conversation at the same time. It is possible to swap between a Multi-party call and another call in the same way as with two separate calls (☐).

#### Enabling Multi-party

With two calls connected (one active, one on hold):

- 1 Press 
- 2 Use  to select **Merge**. Press 

All three parties should now be able to talk to each other.








#### Adding to Multi-party

It is possible to add parties to the Multi-party call (up to a maximum of five) either by making a call or accepting an incoming call. The call can then be merged into the Multi-party.

**Note:** When making a call or accepting an incoming call the Multi-party call will be placed on hold. The callers in the Multi-party call can continue to communicate with each other while on hold.

## Splitting a Multi-party Call

The user can select an individual from the Multi-party and remove their connection. This enables you to talk privately without the participation of the rest of the Multi-party.

- 1 Press  during a Multi-party call
- 2 Use  to select **Option**. Press 
- 3 Use  to select a caller in the Multi-party
- 4 Press 
- 5 Use  to select **Split**. Press 







The selected caller will be split from the Multi-party call and the Multi-party call will be placed on hold (the remaining Multi-party callers can still communicate).

## Ending Multi-party Calls

The user can either select an individual in the Multi-party and end the call or end the entire Multi-party call. If a call is held, or an other call is incoming then an individual call cannot be ended.


## Ending a Single Connection

During a Multi-party call:

- 1 Press 
- 2 Use  to select **Option**. Press 
- 3 Use  to select a caller in the Multi-party
- 4 Press 
- 5 Use **e** to select **End**. Press 

## Ending all Connections





During a Multi-party call:

- Press  to end all the calls at once

# Changing to a New Network

When not in your home country / region, the user may use a network that is not directly subscribed to. This is called ROAMING. Legal restrictions may not permit roaming in your home region.

The **New Network** function is used to manually select a network that is available in your current location.

- 1 From **Idle** press , select **(Applications >) Phone Option > Network > New Network**. Press 
- 2 Your phone will search for available networks
- 3 Use  to select one from the list of available networks. Press 

If you cannot register with the selected network, that network will be greyed out.

When the **Search Mode** is set to **Automatic** the phone will automatically reselect a new network in order to maintain optimum network availability. With the **Search Mode** set to **Manual** the phone will only use a selected network. If coverage is lost another network should be selected.






 







# Schedule


The Scheduler can be used to register reminders for personal events as well as planning holiday periods.

**Caution:** Ensure that any settings made in the Scheduler will not contravene any regulations whereby the phone may automatically power on when in an aircraft or medical facility etc. - see *Important Information*, page i.
  
## Creating a Reminder



 
From **Idle**, press , select **Scheduler** and press  again.

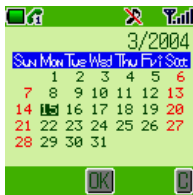- 1 Select **[New Event]** and press  to create a new schedule event. Use the Navigation key () to select the date for your reminder.
- 2 First move the cursor to the year entry and use  to adjust the entry if necessary.
- 4 Use  in the same way to adjust the month entry.
- 5 Use  to place the cursor over the appropriate date entry. Press  to select the date
- 6 Enter the time for the reminder. Use the numbered keys to enter the correct time (using the 24-hour clock) or use  to adjust the time displayed. Move between the hour and minute fields using .
- 7 When the time is entered correctly, press  to confirm
- 8 Enter a name to identify this schedule entry



## Schedule

# Viewing & Editing Reminders

Open the **Scheduler** menu. All scheduled reminders are listed. Use  to highlight the reminder you wish to view and press . The time, data and name of the reminder will be displayed. Press  to edit the details.

# Games

## Embedded Games

To enter the embedded games menu:


From **Idle**, press  and select **Games**. Use  to select a game and press  to launch.

Follow the prompts in the pop up menu for playing instructions and game options

## Downloadable Games

The downloadable games menu enables you to use one factory embedded game and download another game from the games catalogue.

To enter the Downloadable games menu:

From **Idle**, press  and select **Applications > Games**. Use  to select a game and press  to launch.
















**Note:** A downloaded game will overwrite the previously downloaded game.

Follow the on-screen instructions to play the game.

The game catalogue is renewed regularly and updates automatically when a game is downloaded.

# Game Settings

Use the **Applications > Games** menu to set your game nickname and set sound, backlight and vibration levels for gameplay.






- 1 From **Idle**, press , select **Applications > Games > Setting**
- 2 To enter a **Nickname** press . Enter the name and then press  to confirm
- 3 Use  to select **Sound**. Press 
- 4 Sound can be set to **Off, Low, Medium** or **High**. Use  to select the desired setting and then press  to confirm
- 5 Use  to select **Vibrations**. Press 
- 6 Vibration can be set to **Off** or **On**. Use  to select the desired setting and then press  to confirm
- 7 Use  to select **Back light**. Press 
- 8 The back light can be set to **Off, On 30s** (on for 30 seconds) or **Always on**. Use  to select the desired setting and then press  to confirm

# Managing Multimedia Files

The multimedia files saved in G60U are located in the Media Folder (My Phone > Media Folder). There are four predefined folders (Picture, Animation, Melody and Memory Status).





**Note:** Changing SIM does not affect the contents of stored data.

## Displaying Pictures and Animations

- 1 From **Idle**, press , select **My Phone > Media Folder > Pictures / Animation**. Press .
- 2 Use  to select a file to display. Press .
- 3 Select **View**. Press .

**Note:** The phone cannot display a file that is not in one of the supported formats.






### Playing Melodies

- 1 From **Idle**, press  and select **My Phone** > **Media Folder** > **Melody**. Press .
- 2 Use  to select a file to play. Press  to view

**Note:** You can compose your own melodies and ringtones. Turn to *Composing a Melody in Personalising Your Phone* for full instructions.

**Note:** You cannot edit polyphonic ring tones, music files or files that cannot be forwarded or saved.

### Renaming Files


- 1 From **Idle**, press , select **My Phone** > **Media Folder** and open the subfolder for the file you wish to rename. Press .
- 2 Use  to select the file to rename. Press .
- 3 Select **Rename**. Press .

**Note:** Do not use special characters in the new name.






## Creating Mail from Files

You can jump in one step from a file to the create mail screen with the file as an attachment.

The phone will display the 'Create Mail' screen.





**Note:** You **cannot** copy a file that cannot be forwarded or saved; You **can** press  to select **Create Mail** while the file is displayed.



## Deleting Files

- 1 From **Idle**, press , select **My Phone** > **Media Folder** and open the subfolder for the file you wish to delete. Press 
- 2 Use  to select the file to delete. Press 
- 3 Select **Delete**. Press 



## Checking File Properties

You can view the file name, date, file size, whether the file can be forwarded and whether it can be saved.

- 1 From **Idle**, press , select **My Phone** > **Media Folder** and open the subfolder for the file you wish to check. Press 
- 2 Use  to select the file. Press 
- 3 Select **Property**. Press 

**Note:** If there is not enough memory capacity in the folder when you try to save a file, the phone will display **Folder is Full. Delete Data?** Press  to keep file or  to delete file.

## Checking Folder Properties

To check the status of the Media Folder, from **Idle**, press , select **My Phone** > **Media Folder** > **Memory Status**. Press . A graphic display of free space in the folder will be displayed.







# WAP Browser

 
Your phone's WAP (Wireless Application Protocol) Browser enables the user to access Internet services supported by the network, such as news, weather reports and sport.

## Browser Settings

Before Internet services can be accessed, the SIM must be data enabled and the relevant configuration information, entered into the phone.

**Note:** The configuration information may have been pre-programmed by your service provider. Modifying these settings may cause failure of the Browser.

- 1 From **Idle** press , select **Browser** > **Browser Setting** > **Set Profile**. Use  to select a browser profile (you can configure up to five browser profiles). Press .
- 2 Select **Edit**. Press .

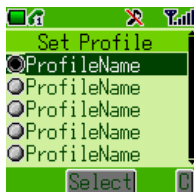

- 3 Select **WAP Setting**. Press .




## WAP Browser

 A list of configuration parameters will be displayed. Select each parameter in turn and enter the appropriate values (contact your service provider for details if necessary).


For each browser profile, set also the Bearer Type. Go to **Browser > Browser Setting > Set Profile > [Select Profile] > Edit > Bearer Type**.



To configure a GPRS browser, enter **User Name**, **Password** and **Apn** (Access Point Name).

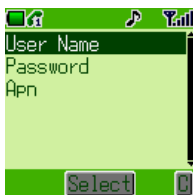

 To configure a CSD browser, enter **User Name**, **Password**, **Phone Number**, **Line Type** and **Transfer Rate**.

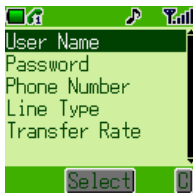


**Note:** Contact your service provider for setup values if you are unsure.

## WAP Browser

Record your WAP settings in the table at the rear of this booklet for easy reference.



When you have entered settings for a browser profile, you may wish to rename the profile to make it easier to remember. To rename a profile, go to **Browser > Browser Setting > Set Profile > [Select Profile] > Rename**. The current profile name will be displayed. Edit this name to rename the profile.



 
Since you can set up to five profiles, you should also select which is your active profile. To do so, go to **Browser > Browser Setting > Set Profile > [Select Profile] > Set As Active**. Press 

# Activating the Browser

To activate the Browser, either:


From **Idle**, press  and select **Browser > Start Browser**.  
Press 


 

The first time that the browser is activated there will be no content. Each time the browser is activated, the last page viewed from the previous WAP session will be recalled. At the start of a WAP session, the browser content may be retrieved from the cache (cache is the phone's memory that stores content downloaded in the past). At this stage the user will remain off line. When data is required from the WAP server, the user will be prompted to **Start data call?**

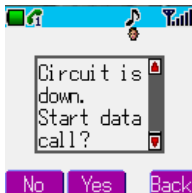


If **Yes** is selected, the phone will go on line and the browser will go to the home page.

# Navigating Content

Use the Navigation key () to scroll through the content on the screen as follows:

 
- Use  to scroll up/down on the current page
- Use  to return to the previous object/page
- Use  to return to the next selectable object/page

When linked text (underlined text) is highlighted, press  to load the page represented by the link.

## Browser Menu

The Browser contains its own menu which is applicable when content is currently being displayed (either on-line or off-line).

This menu is used as follows:

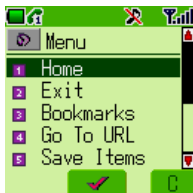

### Back

Returns the user to the Browser Start Up menu

### Home

Displays the Home URL content as defined by the network operator

### Exit

Deactivates the Browser

### Bookmarks

Use, view, add and delete bookmarks

### Go To URL

Enter URL to open

### Save Items

To save images or other items from the current page

### Snapshots

Take a snapshot of the current page

### Show URL

Display the current URL

### Reload

Reload and update the current page

## WAP Browser

### Settings

Allows the user to select and set:

#### **Homepage URL**

**Download** parameters (enable or disable the downloading of multimedia files)

#### **Restart Browser**

#### **Security** submenu






### About

Provides information about the type of browser and security options



## Using Bookmarks

Frequently accessed pages may be bookmarked to save time - you won't have to enter the URL each time you want to visit the page.



### Adding a Bookmark

- 1 While viewing the page, press 
- 2 Use  to select **Bookmark**
- 3 Use  to select either **Title** or **URL** as the Bookmark name



### Recalling Pages Using Bookmarks

Select **Bookmarks** from the Browser menu. Select **View** and use  to highlight the bookmark you want. Press .

### Renaming a Bookmark


Select **Bookmarks** from the Browser menu. Select **View** and use  to highlight the bookmark you want. Press  and select **Edit**.

### Deleting Bookmarks

Select **Bookmarks** from the Browser menu. Select **View** and use  to highlight the bookmark you want. Press  and select **Delete**.

## Deactivating the Browser

The Browser can be deactivated as follows:

When browsing on-line, press  to review cache off line.

When browsing off-line, press  to return to Idle mode.



# Additional Features

## Voice Memo

You can record a two-way conversation during a call and use the phone as a dictaphone. The maximum length of a recording is 16 seconds. Old recordings are overwritten; only one recording can be stored.

**Note:** If a different SIM is installed any voice memos will be lost.

**Caution:** Security of a recorded message is your responsibility. You **MUST** ask for the other party's consent before recording.

## Record a Voice Memo


From **Idle**, press  and select **Applications > Record**. Press .

The recording will stop automatically after 16 seconds.

## Recording a Call

During a call, press . Use  to select **Memo** Press .

A tone will sound when recording starts. When the recording stops a tone will sound.

If you press  while recording a call, recording will stop but no tone will sound to either party.

## Additional Features

### Play Back a Voice Memo

From **Idle**, press  and select **Applications > Voice Memo Play > Playback**.

Press .

To stop playing, press .



### Volume Control During Playback

While playing back use  to adjust the volume of the voice memo.

### Delete a Memo

From **Idle**, press  and select **Applications > Voice Memo Play > Delete**. Press .

## DTMF Tones

Dual Tone Multi-Frequency Tones (DTMF) tones can be sent during conversation. These are often used to access voice mail, paging and computerised home banking services. For example, you may need to input a number to remotely access voice mail messages. A phone number may be stored in the Phonebook with DTMF tones, allowing the number to be dialled upon recall and the DTMF number to be sent automatically.

### Sending DTMF Tones During a Call

Simply enter digits (0+, \*, # and \*) during the call.

### Pause Dial

Pause Dialling allows you to send DTMF tones automatically.

- 1 Enter phone number
- 2 Press and hold 0+ until a p is displayed at the end of the phone number entered
- 3 Enter DTMF digits after the pause, e.g. enter the number to access voice mail messages.
- 4 Press ↶

When the call is successful DTMF tones will be sent after 3 seconds or press ↶ to send the DTMF tones manually.

## Note Pad

During a call numbers can be entered which you may wish to dial when the call has ended.

During a call:

- 1 Enter phone number
- 2 When the call has ended press ↶ to call that number

To store the number in Phonebook, press ↶ while the number is displayed – see the instruction on storing numbers in the section *Phonebook*.

## Additional Features

# Desktop Handsfree

Desktop Handsfree enables you to hold a conversation without having to hold the phone to your ear.


**Note:** Do NOT hold the phone to your ear in Handsfree mode.

## Swapping Between Handsfree and Handheld Calls

During a Handheld call:

- 1 Press 
- 2 Use  to select **Handsfree**. Press 

During a Handsfree call:



Press  twice to revert for Handheld operation

## Answering a Call Handsfree:

To answer a call using Handsfree, press and hold .

# Auto Answer

When Auto Answer is switched on, and Personal Handsfree or a head set or car kit is connected, a call will be answered without pressing any keys. Any call waiting should be answered in the normal way.

 
To enable Auto Answer, from **Idle**, press  and select **My Phone > Auto Answer**. Choose **Enable** and press .

**Note:** Take care when Auto Answer is selected to ensure unauthorised listeners cannot overhear your phone conversations.

# Camera Accessory



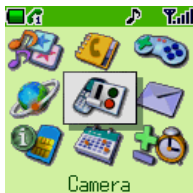


With the Panasonic camera accessory attached to your phone, you can take photos then save them or send them immediately in a MMS message. The camera accessory slots onto the accessory connector on the base of your phone.


When the camera accessory is plugged in, the main menu changes. The **Key Guard** icon is replaced by a **Camera** icon as shown. Select **Camera** for all related functions.






## Taking a picture

To take a picture, first ensure the camera accessory is plugged in. Then:

- 1 From **Idle**, press  and select **Camera**. Press .
- 2 Position the camera to frame the desired photo  
Use  to zoom in,  
 to zoom out and  
 to turn on the photo light

When you are ready, press  to capture the photo

- 3 The captured photo will be displayed. Press  to store the photo in your Media Folder or  to immediately attach the photo to a new MMS message ready for sending (see *Messaging* for details of how to compose and send MMS messages). Press  to delete the photo instead.




## Camera Accessory

# Camera Options

---

---

To take a picture, first ensure the camera accessory is plugged in. Then:

- 1 From **Idle**, press  and select **Camera**. Press .
- 2 Press  to open the **Options** menu. Select from the following options:

## Photo Resolution

Choose from **VGA (640 × 480)**, **QVGA (320 × 240)**, **QQVGA (160 × 120)** or **Screen Size (128 × 96)**.

**Note:** Higher resolution pictures are of better quality but occupy a larger share of your phone's memory. If you want to take several high resolution pictures, consider reducing the amount of memory taken up by other types of media file such as ring tones and downloaded games.

## Photo Light

Turn the built-in photo light **On** or **Off**.

## Self Timer

Turn the Self Timer **On** or **Off**. When the Self Timer is turned on, there is a delay after the capture button is pressed before the photo is taken.

## Shutter Sound

Select from three available shutter sounds.

# Text Entry

The phone provides a means for entering alphanumeric characters to enter details into the Phonebook, to create text etc. This section details the characters that can be entered and the relevant keys to press.

Key	Text Mode				
	T9®	Normal (ABC)	Greek (ΑΒΓ)	Extended (ΑΆΑ̂)	Numeric (0 - 9)
	Alternatives	+ _	+ _	+ _	0+P_
	Punctuation.	@/;:*#+-.,!?!_0□[]}'&%\^~ <>=_£\$¥€§			!
	abc	ABCabc	ΑΒΓ	ΑΆΑ̂/ΕΒCαάääàåàbc	2
	def	DEFdef	ΔΕΖ	ΔΕΈFdeééf	3
	ghi	GHIghi	ΗΘΙ	GHIghii	4
	jkl	JKLjkl	ΚΛΜ	JKLjkl	5
	mno	MNOmno	ΝΞΟ	MNŃOÓØmnñooøò	6
	pqrs	PQRSpqrs	ΠΡΣ	PQRSpqrsß	7
	tuv	TUVtuv	ΤΥΦ	TUÚVtuúv	8
	wxyz	WXYZwxyz	ΧΨΩ	WXYZwxyz	9
	Shift/Lock	Shift/Lock		Shift/Lock	*
	Space	Space	Space	Space	#

 
- \* Press once to enter a single capital letter (subsequent characters will be lower case). Pressing twice acts as a keyboard CAPS LOCK function and subsequent characters will be uppercase. Press a third time to return to lowercase character entry. Press to return to the message screen.

## Text Entry

# T9® Text Input


Using this mode of text entry dramatically reduces the number of key presses required:

Press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached; then check that the word has been typed correctly before continuing on to the next word.

If the combination of letters typed has produced a word which is not the one you require, press  repeatedly until the correct word is displayed. Continue to the next word.


If the word you require is not in the internal dictionary (i.e. it is a proper noun or a rarely used word) then it should be entered using the Normal (ABC) mode.



## Other Text Modes

To access any of the other text entry modes use  to cycle through until the desired mode is displayed in the left side of the display.

When using Normal (ABC), Greek (ABΓ) or Extended (AÄÅ) text entry modes, each time a key is pressed in quick succession it will display the next character available on that key. Releasing the key, or pressing another key will enter the currently displayed character and the cursor will move to the next position.

## Editing Text

Pressing  will move you up or down one text line.

Pressing  will move you left or right one character. When the cursor is moved over a character and another key pressed this will insert the new character immediately before the selected character. Pressing  will delete the character to the left of the cursor or delete the current line when pressed and held.



# Trouble Shooting

Should any problem persist contact your dealer.

Problem	Cause	Remedy
Phone will not switch on		Check that the battery is fully charged and correctly connected to the phone
Extremely short battery life for a new battery	The network you are using and the condition of the battery can affect battery life	
Short battery life for an old battery	The battery has worn out	Replace with a new fully charged battery
The charging indicator does not light, the battery level indicator does not appear and the phone cannot be switched on when charging	The battery is not attached to the phone or when the battery has been deeply discharged the phone will take a short time until the indicator lights	Leave the phone charging the battery for a few minutes before the indicator is lit and attempting to switch it on
Battery fails to charge	The battery is not attached to the phone	Ensure the battery is fitted to the phone prior to commencing charging.
	Battery has been connected to the phone after the Fast Travel Charger has been switched on	

## Trouble Shooting

Calls cannot be made	The phone is locked	Unlock the phone
	Outgoing calls are barred	Disable the outgoing call barring, or barred dial
	The phone is not registered to a network	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be made from Fixed Dial Store		Check your SIM supports Fixed Dial Check if the Fixed Dial is switched on Check the phone number is stored in the Fixed Dial
Calls cannot be received	The phone is not switched on	Switch the phone on
	Incoming calls are barred	Disable the incoming call barring
	The phone is not registered to a network	Move to a coverage area and operate your phone after it has registered with a network.
Emergency calls cannot be made	You are not in a GSM coverage area	Check that the antenna symbol S is displayed - move to a coverage area and operate your phone when the antenna symbol is displayed
Phone numbers cannot be recalled from Phonebook	The phone is locked	Unlock the phone
	Phone number has been restricted	Switch off restriction

## Important Error Messages

These are some of the most important error messages which may be displayed:

Area Not Allowed	Roaming in the selected area is not allowed
Network Not Allowed	Roaming with the selected network is not allowed
Security Failure	The network has detected an authentication failure because your SIM is not registered with that network - contact your Service Provider
SIM Blocked / Contact Service provider	The SIM is blocked because one of the PIN/PIN2 unblocking keys (PUK/PUK2) has been entered incorrectly ten times - contact your Service Provider
SIM Error	The phone has detected a problem with the SIM - switch the phone off and then back on; if the message is still displayed contact your Service Provider
SIM Invalid	The SIM has failed one or more of the SIM personalisation checks - contact your Service Provider
Function Unavailable	The selected feature is either not supported by the SIM or is not available with the current subscription - contact your Service Provider
PIN2 Invalidated	The PIN2 is blocked permanently because the wrong PUK2 has been entered ten times, services controlled by PIN2 cannot be used - contact your Service Provider
Message Rejected Store Full	A message has been received but the message store is full - to receive messages, delete some of the currently stored messages or set messages to Auto Delete
Phone Number Too Long (Max:20)	The edited or newly created Phonebook number is too long for the SIM
Warning Store Full Continue ?	The message area is full. Your messages cannot be stored until some of the currently stored messages are deleted

## Trouble Shooting

Verification Failure	On changing the phone lock code, verification of the new code is incorrect - retry changing the lock code with correct verification
Incorrect Lock Code	Disabling or enabling the lock code has failed due to incorrect entry of the lock code - re-enter lock code
Incorrect PIN / PIN2 / PUK / PUK2	The entered code is incorrect - re-enter code correctly
Auto Redial List	Redial list of unsuccessfully dialled numbers is full - switch the phone off and then on again

# Glossary of Terms

APN	Access Point Name. Directs the user to the gateway or the required service.
Cut	Permanently removes selected text from short text message
Copy	Copies selected text from short text message without removing it from the original message
CHAP	Challenge Handshake Authentication Protocol. A security feature for the GPRS network.
DTMF Tones	Dual Tone Multi-Frequency tones allow you to communicate with computerised phone systems, voice mailboxes etc.
EMS	Enhanced Message Service. Upgraded feature of Text Messages
GPRS	General Packet Radio Service. The Technology the phone uses.
GSM	Global System for Mobile Communications. The name given to the advanced digital technology that your phone uses.
Network Operator	The organization responsible for operating a GSM network.
PAP	Password Authentication Protocol. A security feature for the GPRS network.
Password	Used for the control of the Call Bar. Supplied by your Service Provider.
PIN	Personal Identification Number used for SIM security. Supplied by your Service Provider. If the PIN is entered incorrectly 3 times, the PIN will be blocked.
PIN2	Personal Identification Number used for the control of Fixed Dial Store and Call Charge metering. Supplied by your Service Provider. If the PIN2 is entered incorrectly 3 times, the PIN2 will be blocked.

## Glossary of Terms

PUK/PUK2	PIN/PIN2 Unblocking Key. Used to unblock the PIN/PIN2. Supplied by your Service Provider. If the PUK/PUK2 is entered incorrectly 10 times, the PUK/PUK2 will be blocked.
Registration	The act of locking on to a GSM/GPRS network. This is usually performed automatically by your phone.
Roaming	The ability to use your phone on networks other than your Home network.
Service Provider	The organization responsible for providing access to the GSM/GPRS network.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Phonebook and Short Messages. Supplied by your Service Provider.
WAP	Wireless Application Protocol. The communication standard which enables you to download resources from the Internet to your phone

# Specifications

## Phone (Including Battery)

Type	GSM850
	GSM1900
	GPRS Class 8
Temperature Range	
Charging	+5°C - +43°C
Storage	-20°C - +60°C
Weight	85g
Dimensions (mm) Height x Width x Depth	104 x 47 x 19.15
Supply Voltage	3.7V DC, 740mAh
Standby Time (hrs)	200 (approx.)
Talk Time (hrs)	2.5 (approx.)
Charge Time (Phone off)	Up to 120m
Antenna	Internal
SIM Type	1.8V/3V
Phonebook Memory	200 + SIM
Animation Themes	3
Voice Memo	1 x 16 seconds
Ring tones	20 fixed
Scheduler	Up to 10 Entries
Alarms	3

**Note:** Charge time will be longer when the phone is turned on. Battery life is affected by the network being used and the condition of the battery. Talk and standby time will be dependant upon network conditions, SIM, back light usage and battery condition.

# EU Warranty

EU/EEA - Wide guarantee is applicable in the EU/EEA and Switzerland.

## **Panasonic GSM European Service Guarantee Conditions Dear Customer,**

Thank you for buying this Panasonic digital cellular telephone. The Panasonic GSM European Service Guarantee only applies while traveling in countries other than where the product was purchased.

Your local guarantee is applicable in all other cases. If your Panasonic GSM telephone requires service while abroad, please contact the local service company shown on this document.

### **The Guarantee**

The applicable period of the European wide guarantee for GSM is generally 12 months for the main body and 3 months for the rechargeable battery. With respect to a product used in a country other than a country of purchase, notwithstanding what is stated in the conditions below, the customer will benefit, in that country of use, from these guarantee periods of, respectively, 12 and 3 months, if these conditions are more favorable to him than the local guarantee conditions applicable in such country of use.

### **Conditions of Guarantee**

When requesting guarantee service the purchaser should present the warranty card together with proof of purchase, to an authorized service centre.

The guarantee covers breakdowns due to manufacturing or design faults; it does not apply to other events such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorized by us.

Your sole and exclusive remedy under this guarantee against us is the repair, or at our option the replacement, of the product, or any defective part or parts. No other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.

This is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. This guarantee applies in countries shown on this document at the authorized service centres detailed for that country.



**UK**

Service Centres in England  
Tel. +44 (0) 8705 159159

**IRL**

Service Centres in Ireland  
Tel: +353 (0) 1 2898333

**D**

Panasonic Service Center Dresden  
SERKO GmbH  
Großenhainer Straße 163  
01129 Dresden  
Tel. +49 (0)351/ 85 88 477

Panasonic Service Center Cottbus  
Petsch Kundendienst GmbH  
Am Seegraben 21  
03058 Gross-Gaglow  
Tel. +49 (0)355/ 58 36 36

Panasonic Service Center Leipzig  
KES Keilitz-Electronic-Service GmbH  
Föppelstraße 19  
04347 Leipzig  
Tel. +49 (0)341/ 244 33 33

Panasonic Service Center Chemnitz  
WPS Rundfunk- u. Fernsehservice GmbH  
Fietenstraße 16  
09130 Chemnitz  
Tel. +49 (0)371/ 40 10 359

Panasonic Service Center Berlin  
SERKO GmbH  
Schwedter Straße 34a  
10435 Berlin  
Tel. +49 (0)30/ 44 30 3221

Panasonic Service Center Berlin  
RUJESS SYSTEMS  
Thrasoltstraße 11  
10585 Berlin  
Tel. +49 (0)30/ 342 2013

Panasonic Service Center Rostock  
warnow electronic service gmbh  
An der Jägerbäk 2  
18069 Rostock  
Tel. +49 (0)381/ 82 016

Panasonic Service Center Hamburg  
ELVICE Service GmbH  
Spaldingstraße 74  
20097 Hamburg  
Tel. +49 (0)40/ 23 08 07

Panasonic Service Center Rendsburg  
FERNSEH-DIENST B&W Service GmbH  
Kieler Straße 41  
24678 Rendsburg  
Tel. +49 (0)4331/ 14 11-0

Panasonic Service Center Bremen  
COM Elektronik Service GmbH  
Rübekamp 50  
28219 Bremen  
Tel. +49 (0)421/ 691 80 69

Panasonic Service Center Hannover  
COM Elektronik Service GmbH  
Vahrenwalder Straße 311  
30179 Hannover  
Tel. +49 (0)511/ 37 27 91

Panasonic Service Center Magdeburg  
SERKO GmbH  
Ebendorfer Chaussee 47  
39128 Magdeburg  
Tel. +49 (0)391/ 289 90 69

Panasonic Service Center Düsseldorf  
VTH GmbH  
Kölner Straße 147  
40227 Düsseldorf  
Tel. +49 (0)211/ 77 90 25

Panasonic Service Center Essen  
Bernd van Bevern GmbH  
Heinrich-Held-Straße 16  
45133 Essen  
Tel. +49 (0)201/ 84 20 220

Panasonic Service Center Osnabrück  
Petsch Kundendienst GmbH  
Pagenstecherstraße 75  
49090 Osnabrück  
Tel. +49 (0) 541/ 68 038

Panasonic Service Center Wiesbaden  
J. Hemmerling - VAD GmbH  
Ostring 7  
65205 Wiesbaden  
Tel. +49 (0)6122/ 90 91 10

Panasonic Service Center Mannheim  
N. Schaaf  
Reichenbachstraße 21-23  
68309 Mannheim  
Tel. +49 (0)621/ 72 787-0

Panasonic Service Center Stuttgart  
Hans Beck  
Friedrich-List-Straße 38  
70771 Leinfelden-Echterdingen  
Tel. +49 (0) 711/ 94 701-0

## EU Warranty

Panasonic Service Center Reutlingen  
Herbert Geissler  
Lichtensteinstraße 75  
72770 Reutlingen  
Tel. +49 (0)7072 / 92 96-0  
Panasonic Service Center München  
G.Berghofer & W.Kaller GmbH  
Helene-Wessel-Bogen 7  
80939 München  
Tel. +49 (0)89/ 318 907-0  
Panasonic Service Center Augsburg  
Klaus Bienek  
Affinger Straße 4  
86167 Augsburg  
Tel. +49 (0)821/ 70 70 75  
Panasonic Service Center Nürnberg  
Herbert Geissler GmbH  
Friedrich-Ebert-Straße 21  
90537 Feucht  
Tel. +49 (0)9128/ 70 67-0  
Panasonic Service Center Eisenach  
Blitz Electro-Electronic-GmbH  
Bahnhofstraße 17  
99817 Eisenach  
Tel. +49 (0)3691/ 29 29 42 8

### A

Service-Fentren in Österreich  
Funk Fuchs GmbH & CoKg Unterhart 90  
4642 Sattledt  
Tel. +43 7244 733  
Funktechnik Seissl  
Dorf 79  
6330 Schwoich  
Tel. +43 5372 8217  
Electro Oberndorfer  
Linzer Straße 2-4  
4840 Vöcklabruck  
Tel. +43 6772 72889  
Panasonic Austria Handelsges.mmbH  
Laxenburger  
Straße 252  
1232 Wien  
Tel. +43 222/61080

### FR

CETELEC  
Fl de la Delorme  
5 Avenue Paul hérout  
13015 MARSEILLE  
Tél. : 04 96 15 77 77

100

Tél. : 04 91 58 07 55  
CORDON Electronique  
BP 460  
Fl Taden  
22107 DINAN CEDEX  
Tél. : 02.96.85.82.20  
Fax : 02.96.85.82.21  
EASY REPAIR  
26 rue des Cosmonautes  
31400 Toulouse  
Tél. : 05.62.71.48.14  
Fax : 05.62.71.48.15  
EASY REPAIR  
22 boulevard des Brotteaux  
69006 Lyon  
Tél. : 04.72.83.02.02  
Fax : 04.78.52.40.38  
ELECTRONIQUE SERVICE  
Avenue Figuières  
FAC Font de la Banquière  
34970 LATTES  
Tél. : 04.67.15.96.30  
Fax : 04.67.20.04.72  
GENERAL ELECTRONIQUE  
16 rue Joseph Cugnot  
F.I. Bracheux  
60000 BEAUVAIS  
Tél. : 03.44.89.79.00  
Fax : 03.44.05.16.96  
Négoce Technique etMaintenance  
40 boulevard Bessières  
75017 PARIS  
Tél. : 01.44.85.21.66  
Fax : 01.42.29.60.05  
S.B.E.  
F.I. de la Liane  
BP 9  
62360 SAINT LEONARD  
Tél. : 03.21.10.10.21  
Fax : 03.21.80.20.10

### NL

Service-centra in  
Nederlands  
Panasonic-Centre Nederland  
(Servicom bv)  
P.O Box 16280  
2500 BG  
Den-Haag  
Nederland  
Tel. +31 703314314

Fonweg 60  
2516 BM  
Den-Haag  
Nederland  
Tel. +31 703314314

**I**

Per I Centri Assisitenza in Italia  
Servizio Clienti  
Tel. +39 02/ 67072556

**E**

Panasonic España, S.A.  
Servicio de Atención a Usuarios:  
Tel: 902 15 30 60

**DK**

For nærmeste servicecenter ring Panasonic  
Danmark  
Tel. +45 43 20 08 50

**S**

Firmor I Sverige  
Komrep  
Rosenlundsgatan 4  
411 20 Göteborg  
Tel. +46 031-173354  
Signalstyrkan  
Kungsholmstorg 4  
104 22 Stockholm  
Tel. +46 08-6542500  
CR service  
Industribyn 3  
232 37 Malmö  
Tel. +46 040-430030

**SF**

Huoltokeskukset Suomessa:  
KAUKOMARKKINAT OY  
PANASONIC-HUOLLOT Kutojantie 4  
02630 Espoo  
Puh. +358 09 521 5151 Huolto  
Puh. +358 09 521 5155 Varaosat Ja Tarvikkeet  
SETELE OY  
Vanha Viertotie 7  
00300 Helsinki  
Puh. +358 09 549100  
PLAY-SHOP SERVICE Keskuskatu 3  
00100 Helsinki  
Puh. +358 09 27053626

MEGAFIX KY  
Louhenkatu 9  
74100 Iisalmi  
Puh. +358 017 14631  
T: M.I.M.HAAPOJA  
Miilukatu 7  
40320 Jyväskylä  
Puh. +358 014 677121  
OUTOKUMMUN PUHELIN Pohjoisahonkatu 9  
83500 Outokumpu  
Puh. +358 013 562211  
SETELE OY  
Rengastie 31  
60100 Seinäjoki  
Puh. +358 06 4148344  
TURUN J-MARKKINAT OY Tuureporinkatu 6  
20100 Turku  
Puh. + 358 02 2332685

**N**

Servicesenter I Norge  
Norsk Elektronikkcenter  
Fetveien 1  
2007 Kjeller  
Tlf: +47 63 80 45 00  
Panasonic Norge AS  
Østre Aker vei 22  
0508 Oslo  
Tlf: +47 22 91 68 00

**GR**

Κέντρα τεχνικής υποστήριξης  
INTERTECH S.A.  
International Technologies  
Αφροδίτης 26, 167 77 Ελληνικό  
Ταχ. Θυρ.: 738 21, 167 10 ΕΛΛΗΝΙΚΟ  
Τηλ. Κέντρο: (01) 9692.300  
Υποκατάστημα Βόρειας Ελλάδας:  
Κ. Καραμανλή 11, 54638 ΘΕΣΣΑΛΟΝΙΚΗ  
Τηλ. Κέντρο: (031) 245.840-3

**P**

Centros de Assistência em Portugal  
PAPELACO, S.A.  
Vale Paraiso - Ferreiras  
8200 ALBUFEIRA  
ALGARVE  
Tel. +351 89 589960  
PAPELACO, S.A.  
Largo de Santos, 9  
1200 LISBOA

## EU Warranty

Tel. +351 1 3970539

PAPELACO, S.A.

Largo do Tribunal, Lote 11

2400 LEIRIA

Tel. +351 44 28071

PAPELACO, S.A.

Rua Cidade de Santos, 31R/C

9000 FUNCHAL

MADEIRA

Tel. +351 91 231523

PAPELACO, S.A.

Rua do Outeiro,

Lote 25 - Gemunde

4470 MAIA

PORTO

Tel. +351 2 944 0354/9

PAPELACO, S.A.

Rua Major Leopoldo da Silva,

Lote 3

3500 VISEU

Tel. +351 32 424771

## B

Centres de service après-vente en Belgique

BROOTHAERS

Hoevelei 167

2630 AARTSELAAR

Tel. +32 03/887 06 24

HENROTTE

Rue du Campinaire 154

6240 FARCIENNES

Tel. +32 071/39 62 90

PIXEL VIDEOTECH

Rue St Remy 7

4000 LIEGE

Tel. +32 041/23 46 26

DELTA ELECTRONICS

Rue P.d'Alouette 39

5100 NANINNE

Tel. +32 081/40 21 67

ELEKSERVICE FEYS Houthulstseweg 56

8920 POELKAPELLE

Tel. +32 057/48 96 37

AVS WAASLAND Lavendelstraat 113

9100 ST NIKLAAS

Tel. +32 03/777 99 64

A.V.T.C SA

Kleine Winkellaan 54

1853 STROMBEEK-BEVER Tel. +32 02/267

40 19

RADIO RESEARCH

Rue des Carmélites 123

1180 BRUXELLES

Tel. +32 02/345 68 56

VIDEO TECHNICAL SERVICE

Av. du Roi Albert 207

1080 BRUXELLES

Tel. +32 02/465 33 10

SERVICE CENTER Kapellestraat 95

9800 DEINFE

Tel. +32 09/386 67 67

TOP SERVICE

Westerloseweg 10

2440 GEEL

Tel. +32 014/54 67 24

TELECTRO SC

Quai des Ardennes 50

4020 Liège

Tel. +32 041/43 29 04

## L

Centres de service après-vente au Luxembourg

NOUVELLE CENTRAL RADIO

Rue des Jones 15

L - 1818 Howald

Luxembourg - Grand Duché

Tel. +32 40 40 78

## CH

Jonh Lay Electronics AG

Littauerboden

6014 Littau

Phone: +41 41 259 9090 Fax: +41 41 252

0202

## TR

TEKOFAKS ISTANBUL CENTRE OFFICE

KAĞITHANE CADDESI SEVİLEN SOKAK

NO. 58

80340 ÇAĞLAYAN-ISTANBUL

Tel: 90-212-220 60 70 / 14 Lines

Fax: 90-212-220-60 94

ANKARA BRANCH OFFICE

GÜVEN MAH.FARABI SOKAK NO: 38/6

06690

KAVAKLIDERE- ANKARA

Tel: 90-312-467 30 94/2 Lines pbx

Fax: 90-312 467 85 38

İSMİR BRANCH OFFICE

CUMHURİYET BULVARI NO:330 K.:6 D.:

608 SEVİL

İŞ MERKEFİ 35520 ALSANCAK-İFMİR

 
Tel: 90-232-464 29 01 pbx  
Fax: 90-232-422 67 44  
BURSA BRANCH OFFICE  
ŞEHREKÜSTÜ MAHLLESİ DURAK  
CADDESİ NO.:7  
BURSA  
Tel: 90-224-225 10 46 pbx  
Fax: 90-224-223 81 03  
ADANA BRANCH OFFICE  
REŞATBEY MAH.FUFULİ CAD.GÜLEK  
SITESİ A  
BLOK NO: 75b 01120 ADANA  
Tel: 90-322-458 39 52 pbx  
Fax: 90-322-453 21 32  
TRABFON BRANCH OFFICE  
MARAS CAD.MARAS APT.NO:51 D.:2  
61200  
TRABFON  
Tel: 90-462-321 33 08  
Fax: 90-462-326 37 78  
ANTALYA BRANCH OFFICE  
ALTINDAĞ MAH. 146 SOKAK ÖFKOÇ  
APT.NO:9/1-2A ANTALYA  
Tel: 90-242-243 23 70 / 3 Lines  
Fax: 90-242-243 23 72  
DİYARBAKIR BRANCH OFFICE  
LİSE CADDESİ GÖKALP APT.NO: 18/A  
DİYARBAKIR  
Tel: 90-412-228 73 00  
Fax: 90-412-223 59 00

# Personal Settings

Use the table below to record your GSM/GPRS WAP settings.

Item	Hint	Current Setting
Name		
Home URL		
Gateway IP		
<b>Primary IP</b>		
<b>Secondary IP</b>		
<b>Primary Port</b>		
<b>Secondary Port</b>		
CSD		
GPRS		
Line Type	Analogue / ISDN	
Digital Dial #		
Analogue Dial #		
User Name		
Password		
Transfer Rate		
<b>GPRS</b>		
Access Point Name		
User Name		
User Password		
Authentication	Normal/Encrypted/ None (PAP) (Chap)	

# Menu Structure

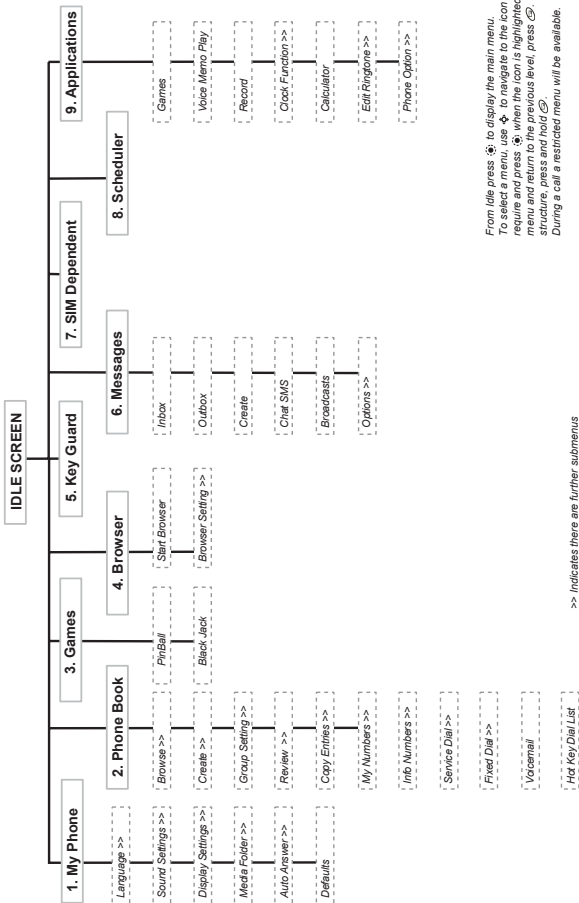

From Idle press **⌘** to display the main menu.  
 To select a menu, use **⬇** to navigate to the icon of the menu you require and press **⌘** when the icon is highlighted. To exit the current menu and return to the previous level, press **⬅**. To exit the menu structure, press and hold **⌘**.  
 During a call a restricted menu will be available.

>> Indicates there are further submenus

**Note**

**Note**



# Licensing

## Tegic

T9<sup>®</sup> is a trademark of Tegic Communications Inc. T9<sup>®</sup> Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953, 541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat.

No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT.ES, SE, GB; and additional patents are pending worldwide.

## CE0168

© Matsushita Mobile Communications Development of Europe Ltd 2003  
Information in this document is subject to change without notice. No part of these instructions may be reproduced or transmitted in any form or by any means without obtaining express permission from Matsushita Mobile Communications Development of Europe Ltd



The Serial Number can be found on the outside of the phone under the battery. For your convenience we recommend that you note the following details as a record of your purchase.

Part Number	
Serial Number	
Dealer Name	
Purchase Date	



3TR001142AAA

Matsushita Communication Industrial Corporation of the Philippines  
Laguna Technopark Sta. Rosa, Laguna, Philippines

Printed in Philippines

08.07.02